

AC ADAPTOR

CMA-D5

OPERATING INSTRUCTIONS page 2

Before operating the unit, please read this manual thoroughly and retain it for future reference.


MODE D'EMPLOI page 8

Avant de faire fonctionner cet appareil, prière de lire entièrement ce mode d'emploi et de le conserver à titre de référence ultérieure.

取扱説明書 14ページ

お買い上げいただき、ありがとうございます。

お使いになる前に、この取扱説明書をお読みください。お読みになったあとは、後日お役に立つこともありますので、必ず保存してください。

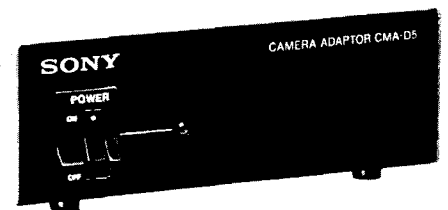

© 1986 by Sony Corporation

The CMA-D5 is an AC adaptor designed for use with the Sony AVC-D5 CCD video camera.

OWNER'S RECORD



The model and serial numbers are located on the bottom. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. CMA-D5

Serial No. _____

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

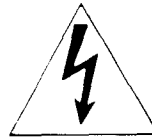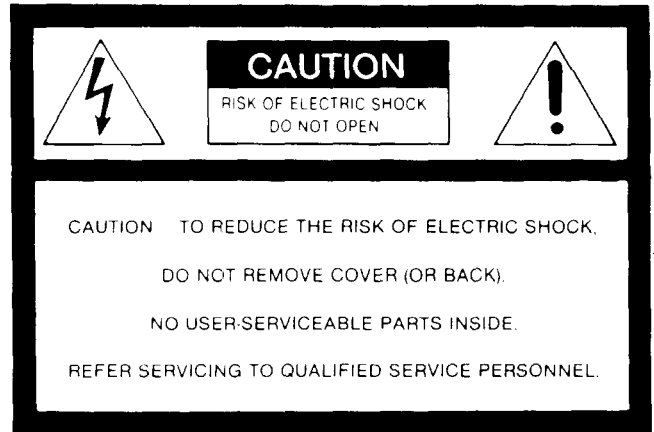

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

*The graphical symbols are on the bottom enclosure.

PRECAUTIONS

Safety

- Before operating, check that the operating voltage of the unit is identical with the voltage of your local power supply.
- Should any material, liquid or solid, fall into the cabinet, unplug the unit and have it checked by qualified personnel before operating it further.
- Unplug the unit from the wall outlet when it is not to be used for an extended period of time.
- To disconnect the cord, pull it out by the plug. Never pull it by the cord.

Installation

- Allow adequate air circulation to prevent internal heat buildup.
- Do not install the unit near heat sources such as radiators or air ducts or in a place subject to direct sunlight.

Cleaning

Clean the cabinet, panel and controls with a dry soft cloth or a soft cloth lightly moistened with a mild detergent solution. Do not clean the unit with any type of solvent, such as alcohol or benzine, since this may damage the finish.


Repacking

Do not discard the carton. It affords maximum protection whenever the unit is transported.

If you have any questions about this unit, contact your authorized Sony dealer.


LOCATION AND FUNCTION OF PARTS

Front panel

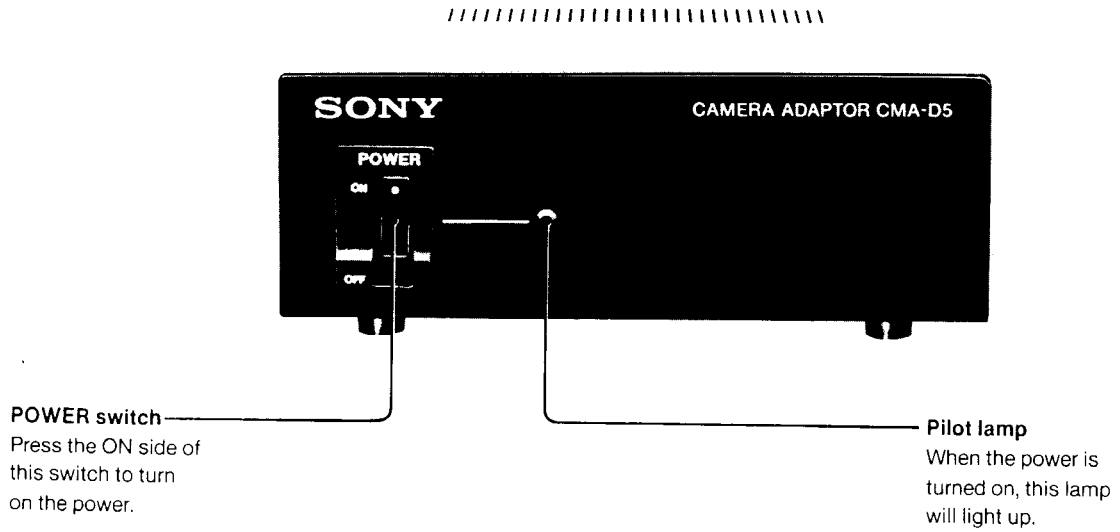

Rear panel

For details on the connection, refer to "CONNECTION EXAMPLE" on the next page.

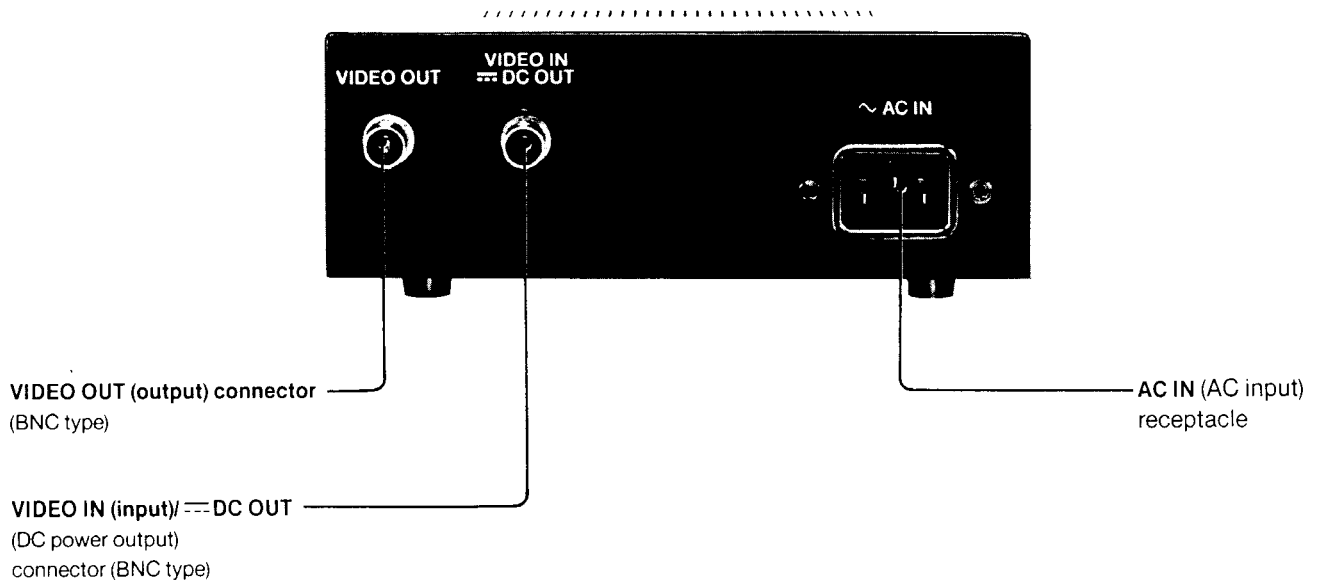

OPERATION

- 1 Turn the POWER switch on. The connected video camera will be turned on.
- 2 Turn on the connected video equipment (video monitor, switcher, etc.).


SPECIFICATIONS

| | |
|-----------------------|--|
| Power requirements | AC 120 V, 60 Hz |
| Power consumption | 16 W |
| Inputs and outputs | VIDEO OUT: BNC type Video 0.7 Vp-p, Sync 0.3 Vp-p, 75 ohms, unbalanced, sync negative VIDEO IN/DC OUT: BNC type DC 22V Video 0.7 Vp-p, Sync 0.3 Vp-p, 75 ohms, unbalanced, sync negative |
| Operating temperature | 0 °C to +40 °C (32 °F to 104 °F) |
| Storage temperature | -20 °C to +60 °C (-4 °F to +140 °F) |
| Dimensions | Approx. 171 x 65 x 129 mm (w/h/d) (6 3/4 x 2 5/8 x 5 1/8 inches) |
| Weight | Approx. 1.35 kg (3 lb) |
| Accessory supplied | AC power cord (1) |

Design and specifications subject to change without notice.

CONNECTION EXAMPLE

Required cable

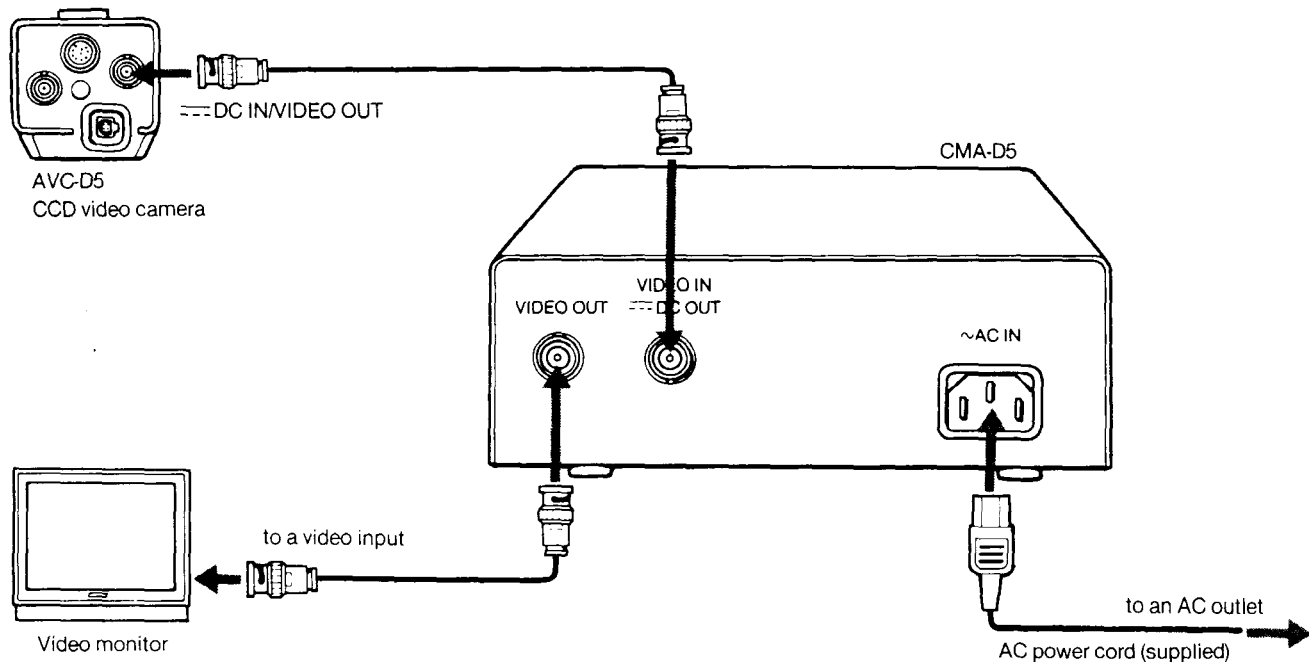

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>