

Active Speaker System


Operating Instructions
Mode d'emploi
Bedienungsanleitung
Manual de instrucciones
Gebruiksaanwijzing

Bruksanvisning
Istruzioni per l'uso
Manual de instruções
Käyttöohjeet
사용 설명서


SRS-Z30/Z31

© 2004 Sony Corporation Printed in Thailand


A

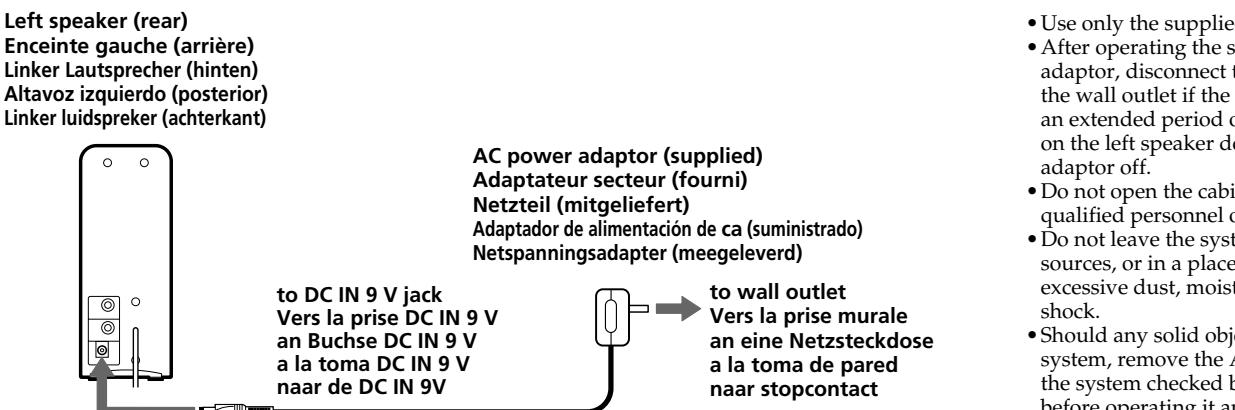

B

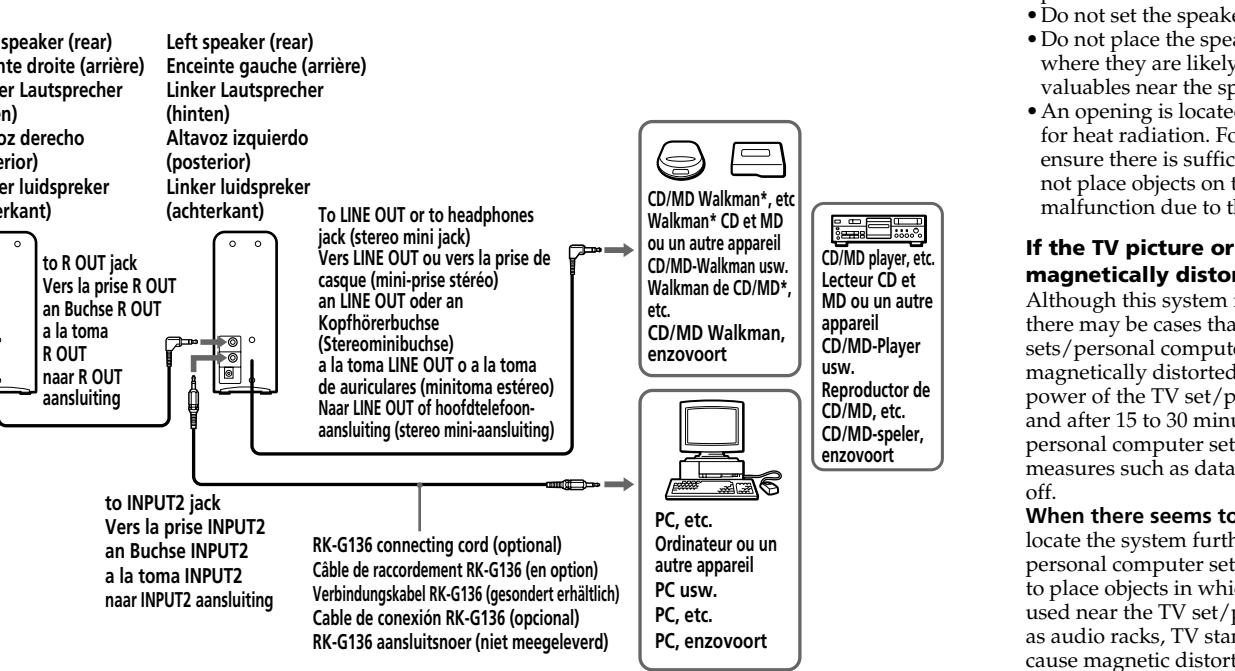

C

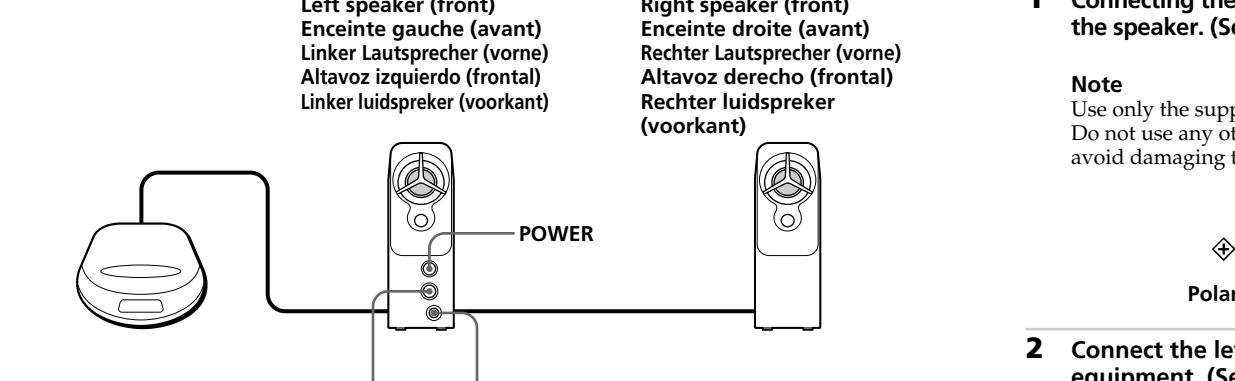

English

Before operating the unit, please read this manual thoroughly and retain it for future reference.

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.
To avoid electrical shock, do not open the cabinet. Refer to servicing to qualified personnel only.

To prevent fire, do not Cover the ventilation of the apparatus with papers, table-cloths, curtains, etc. Do not place lit candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

CAUTION

You are cautioned that any changes or modification not expressly approved in this manual could void your authority to operate this equipment.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Note

Turn off the MEGA BASS or BASS BOOST (Walkman, etc.) function as it may cause audible distortion.

3 Using the headphones/earphones

Connect headphones/earphones to the PHONES jack.

To connect to a stereo phone-type headphones jack

Use the optional PC-234S plug adaptor or RK-138 connecting cord.

Note

To switch INPUT1 and INPUT2, use ON/OFF of the device connected to the speakers.

Listening to the sound (see fig. C)

First, turn down the volume on the left speaker. Before connecting the speakers to the headphone output, reduce the volume of the connected component.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

CAUTION

You are cautioned that any changes or modification not expressly approved in this manual could void your authority to operate this equipment.

The validity of the CE marking is restricted to only those countries where it is legally enforced, mainly in the countries EEA (European Economic Area).

Note

Turn off the MEGA BASS or BASS BOOST (Walkman, etc.) function as it may cause audible distortion.

3 Using the headphones/earphones

Connect headphones/earphones to the PHONES jack.

Precautions

* Use only the supplied AC power adaptor.

* After operating the system with the AC power adaptor, disconnect the AC power adaptor from the wall outlet if the system is not to be used for an extended period of time. The POWER switch on the left speaker does not turn the AC power adaptor off.

* Do not open the cabinet. Refer servicing to qualified personnel only.

* Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.

* Should any solid object or liquid fall into the system, remove the AC power adaptor and have the system checked by a qualified personnel before operating it any further.

* Do not use alcohol, benzine, or thinner to clean the cabinet.

* Although this system is magnetically shielded, do not leave recorded tapes, watches, personal credit cards or floppy disks using magnetic coding in front of the system for an extended period of time.

* Do not set the speakers in an inclined position.

* Do not place the speakers in positions from which they are likely to fall. Do not keep any valuable items on the speakers.

* An opening is located on the back of the cabinet for heat radiation. For efficient heat radiation, ensure there is sufficient space to the rear and do not place objects on the unit. The unit may malfunction due to the heat.

* If the TV picture or monitor display is magnetically distorted

* The brightness of the POWER indicator is unstable.

The sound is distorted.

The sound has suddenly stopped.

The sound has suddenly stopped.

The sound is distorted.

The sound has suddenly stopped.

Vänster högtalare
(bakside)
Diffusore sinistro (retro)
Altifalante esquierdo
(parte posterior)
Vasen kaiutin (taka)
원쪽 스피커(앞면)



gelykstromringang
till likströmsuttaget DC IN 9V
à tomada DC IN 9V
DC IN 9 V -lättaän
DC IN 9V ፩

till ett vägguttag
alla presa di rete

pistoriasian
콘센트

PC

kontakten

polfordeling

Kontakten polfordeling

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>