

# *Micro HI-FI Component System*

---

Operating Instructions



**ATRAC**

**S-master**  
Digital Amplifier



**CMT-HX5BT**

© 2007 Sony Corporation

## WARNING

### To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

 
To reduce the risk of fire or electric shock, do not place objects filled with liquids, such as vases, on the apparatus.

Connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose the battery to excessive heat such as direct sunlight, fire or the like.

### Except for customers in the U.S.A. and Canada



This appliance is classified as a CLASS 1 LASER product. This marking is located on the rear exterior.

### Notice for the customer in the countries applying EU Directives

According to the EU Directive related to product safety, EMC and R&TTE, the manufacturer of this product is Sony Corporation, 1-7-1 Konan, Minato-ku, Tokyo, Japan.

The Authorized Representative is Sony Deutschland GmbH, Hedelfinger Strasse 61, 70327 Stuttgart, Germany.

For any service or guarantee matters please refer to the addresses given in separate service or guarantee documents.



Hereby, Sony Corp., declares that this equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. For details, please access the following URL: <http://www.compliance.sony.de/>

Use of this radio equipment is not allowed in the geographical area within radius of 20 km from the centre of Ny-Alesund, Svalbard in Norway.



**Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

Applicable accessories: Remote commander

### Note on DualDiscs

A DualDisc is a two sided disc product which mates DVD recorded material on one side with digital audio material on the other side. However, since the audio material side does not conform to the Compact Disc (CD) standard, playback on this product is not guaranteed.

## **Music discs encoded with copyright protection technologies**

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.

- The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.
- “WALKMAN” and “WALKMAN” logo are registered trademarks of Sony Corporation.
- MICROVAULT is a trademark of Sony Corporation.
- ATRAC, ATRAC3, ATRAC3plus and their logos are trademarks of Sony Corporation.
- U.S. and foreign patents licensed from Dolby Laboratories.
- MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

---

# Table of Contents

Guide to parts and controls .....	5
Information on the display .....	9

## Getting Started

Hooking up the system securely .....	10
Setting the clock .....	12

## Basic Operations

Playing a CD/MP3 disc .....	13
Listening to the radio .....	14
Using the Bluetooth function .....	15
Listening to music of an USB device .....	21
Using optional audio components .....	23
Adjusting the sound .....	23
Changing the display .....	24

## Other Operations

Creating your own program (Program Play) .....	25
Presetting radio stations .....	26
Using the Timers .....	27

## Others


Troubleshooting .....	28
Messages .....	32
Precautions .....	33
Specifications .....	35
Bluetooth wireless technology .....	36
Playable USB devices and Bluetooth devices .....	38

## Guide to parts and controls


This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.

### Unit (HCD-HX5/Compact Disc Receiver)

#### Front panel

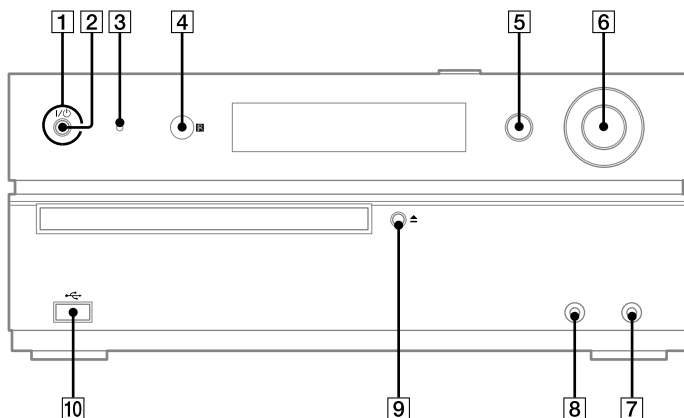


#### Top panel

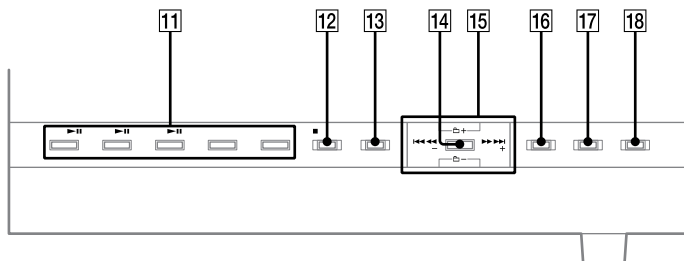

Continued

## Remote (RM-SCU35)

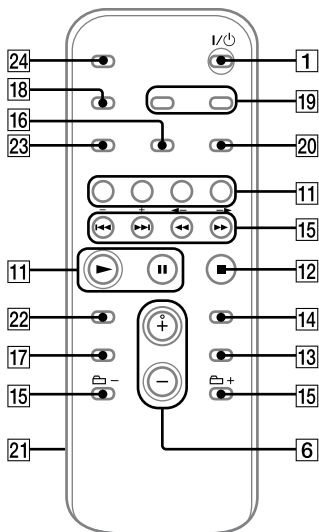

**1**  
**I/⏻ (power) button** (page 12, 27, 31, 32)

Press to turn on the system.

**2**  
**STANDBY indicator** (page 24, 28)  
Lights up when the system is turned off.

**3**  
**BLUETOOTH indicator** (page 19, 20)  
Lights up when the Bluetooth function is active.

**4**  
**Remote sensor** (page 28)

**5**  
**BLUETOOTH OPR button** (page 17, 19, 20)

Press to make a connection, disconnection, or pairing with a Bluetooth device.

**6**  
**Unit: VOLUME control** (page 13, 14, 17, 20, 21, 23)

**Remote: VOLUME +/- button** (page 13, 14, 17, 20, 21, 23)  
Turn or press to adjust the volume.

**7**  
**AUDIO IN jack** (page 23)  
Connect to an optional audio component.

**8**  
**PHONES jack**  
Connect the headphones.

**9**  
**▲ (open/close) button** (page 13)  
Press to open or close the disc tray.

**10**  
**↔ (USB) port** (page 21, 38)  
Connect to an optional USB device (Digital music player or USB storage media).

**11**

Playback buttons and function buttons

Unit: BLUETOOTH ►|| (play/pause) button (page 16, 17)

Press to select the Bluetooth function. Press to start or pause playback of the music on the Bluetooth device (Bluetooth mobile phone, etc.).

Unit: USB ►|| (play/pause) button (page 21)

Press to select the USB function. Press to start or pause playback of an optional USB device (Digital music player or USB storage media).

Remote: USB button (page 21)

Press to select the USB function.

Unit: CD ►|| (play/pause) button (page 13)

Press to select the CD function. Press to start or pause playback of a disc.

Remote: CD button (page 13)

Press to select the CD function.

Remote: ► (play) button, || (pause) button

Press to start or pause playback.

TUNER/BAND button (page 14)

Press to select the TUNER function. Press to select FM or AM reception mode.

Unit: AUDIO IN button (page 23)

Press to select the AUDIO IN function.

Remote: FUNCTION button (page 19, 20)

Press to select the function.

**12**

Unit: ■/CANCEL (stop/cancel) button (page 13, 14, 16, 17, 19, 22)

Remote: ■ (stop) button (page 13, 14, 16, 17, 19, 22)

Press to stop playback.

Press to cancel search.

**13**

SEARCH button (page 13, 22)

Press to enter or exit search mode.

**14**

ENTER button (page 12, 25, 26, 27)

Press to enter the settings.

**15**

◀◀/▶▶ (go back/go forward) button (page 13, 16, 17, 22, 25)

Press to select a track or file.

Unit: TUNE +/- (tuning) button (page 14)

Remote: +/- (tuning) button (page 14, 26)

Press to tune in the desired station.

📁 +/- (select folder) button (page 13, 22, 25)

Press to select a folder.

◀◀/▶▶ (rewind/fast forward) button (page 13, 16, 17, 22)

Press to find a point in a track or file.

Continued 

**16**

**PLAY MODE/TUNING MODE button** (page 13, 14, 22, 25, 26)

Press to select the play mode of a CD, MP3 disc or an optional USB device (Digital music player or USB storage media).

Press to select the tuning mode.

**17**

**Sound buttons** (page 23)

**Unit: DSGX button**

**Remote: EQ button**

Press to select the sound effect.

**18**

**DISPLAY button** (page 17, 24)

Press to change the information on the display.

**19**

**CLOCK/TIMER SELECT button**  
(page 27)

**CLOCK/TIMER SET button** (page 12, 27)

Press to set the clock and the Play Timer.

**20**

**REPEAT/FM MODE button** (page 13, 14, 22)

Press to listen to a disc, a single track or file repeatedly.

Press to select the FM reception mode (monaural or stereo).

**21**

**Battery compartment lid**  
(page 11)

**22**

**CLEAR button** (page 17, 19, 25)

Press to delete a pre-programmed track or file.

Press to erase the pairing registration information of the Bluetooth device.

**23**

**TUNER MEMORY button** (page 26)

Press to preset the radio station.


**24**

**SLEEP button** (page 27)

Press to set the Sleep Timer.



## Information on the display

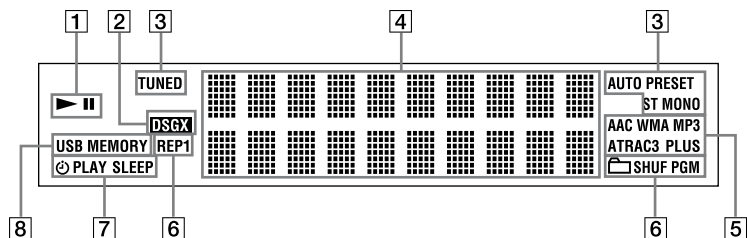

1

Play/Pause

2

DSGX (page 23)

3

Tuner reception mode (page 14)

Tuner reception (page 14)

4

Text information

5

Audio format

6

Play mode (page 13, 22)

7

Timer (page 27)


8

USB MEMORY

Lights up when an optional USB device is connected.

## Getting Started

### Hooking up the system securely

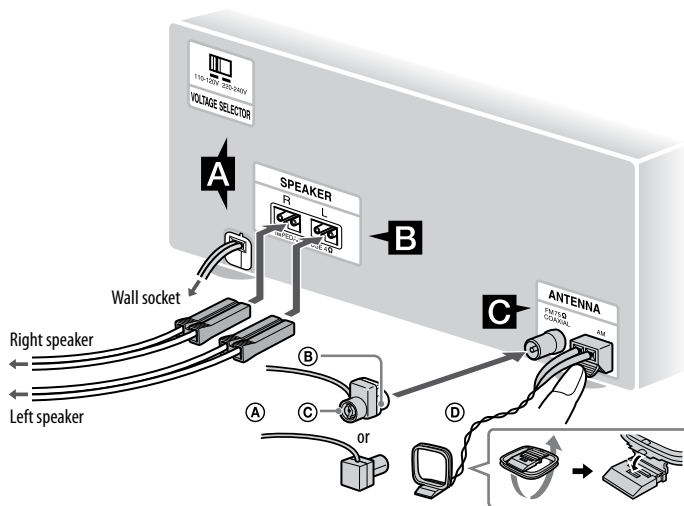

- (A) FM lead antenna (Extend it horizontally.)
- (B) White side for North American model
- (C) Brown side for other regions
- (D) AM loop antenna

#### **A** Power

For models with a voltage selector, set VOLTAGE SELECTOR to the local power line voltage.

Connect the power cord to a wall socket. If the plug does not fit the wall socket, detach the supplied plug adaptor (only for models equipped with an adaptor).

#### **B** Speakers

#### **C** Antennas

Find a location and an orientation that provide good reception, and then set up the antenna.


Keep the antennas away from the speaker cords, the power cord and the USB cable to avoid picking up noise.

## When carrying this system

- 1 Remove a disc to protect the CD mechanism.
- 2 Press CD **[11]** to select the CD function.
- 3 Hold down SEARCH **[13]** on the unit, and press I/⏻ **[1]** on the unit until "STANDBY" appears.
- 4 After "LOCK" appears, unplug the power cord.


## Speaker pads

Attach the supplied speaker pads to the bottom of the speakers to prevent slipping.

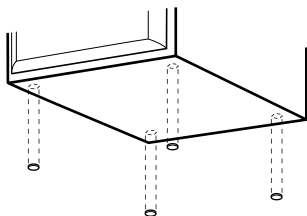

## To use the remote

Slide and remove the battery compartment lid **[21]**, and insert the two supplied R6 (size AA) batteries, **+** side first, matching the polarities shown below.

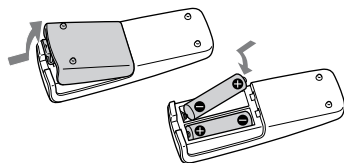

## Notes

- With normal use, the batteries should last for about six months.
- Do not mix an old battery with a new one or mix different types of batteries.
- If you do not use the remote for a long period of time, remove the batteries to avoid damage from battery leakage and corrosion.

---

## Setting the clock

Use buttons on the remote to set the clock.

- 1** Press I/⏻ [1] to turn on the system.
- 2** Press CLOCK/TIMER SET [19].  
If the current mode appears on the display, press I◀◀/▶▶ [15] repeatedly to select "CLOCK SET?" and then press ENTER [14].
- 3** Press I◀◀/▶▶ [15] repeatedly to set the hour, and then press ENTER [14].
- 4** Use the same procedure to set the minutes.  
The clock settings are lost when you disconnect the power cord or if a power failure occurs.


### **To display the clock when the system is off**

Press DISPLAY [18]. The clock is displayed for about 8 seconds.

## Basic Operations

### Playing a CD/MP3 disc

- 1 Select the CD function.  
Press CD [11].
- 2 Place a disc.  
Press ▲ [9] on the unit, and place a disc with the label side up on the disc tray.

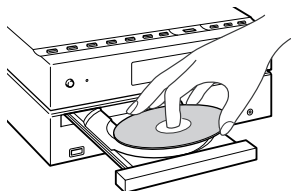

To close the disc tray, press ▲ [9] on the unit again.  
Do not force the disc tray closed with your finger, as this may damage the unit.

- 3 Start playback.  
Press ► (or CD ►|| on the unit) [11].
- 4 Adjust the volume.  
Press VOLUME +/- (or turn the VOLUME control on the unit) [6].

### Other operation

To	Press
Pause playback	(or CD ►   on the unit) [11]. To resume play, press the button again.
Stop playback	■ [12].
Select a folder on an MP3 disc	📁 +/- [15].
Select a track or file	◀◀/▶▶ [15].
Select a folder and file on an MP3 disc while viewing the display	SEARCH [13]. Press ◀◀/▶▶ [15] to select the desired folder, then press ENTER [14]. Press the folder and file names on the display ◀◀/▶▶ [15] to select the desired file, then press ENTER [14].
Find a point in a track or file	Hold down ◀◀/▶▶ [15] during playback, and release the button at the desired point.
Select Repeat Play	REPEAT [20] repeatedly until "REP" or "REP1" appears.

### To change the play mode

Press PLAY MODE [16] repeatedly while the player is stopped. You can select normal play ("📁\*" for all MP3 files in the folder on the disc), shuffle play ("SHUF" or 📁 SHUF\*), or program play ("PGM").

\* When playing a CD-DA disc, 📁 (SHUF) Play performs the same operation as normal (shuffle) play.

### Notes on Repeat Play

- All tracks or files on a disc are played repeatedly up to five times.
- "REP1" indicates that a single track or file is repeated until you stop it.

Continued ➡

## Notes on playing MP3 discs

 
- Do not save other types of files or unnecessary folders on a disc that has MP3 files.
- Folders that have no MP3 files are skipped.
- MP3 files are played back in the order that they are recorded onto the disc.
- The system can only play MP3 files that have a file extension of “.MP3”.
- If there are files on the disc that have the “.MP3” file extension, but that are not MP3 files, the unit may produce noise or may malfunction.
- The maximum number of:
  - folders is 255 (including the root folder).
  - MP3 files is 511.
  - MP3 files and folders that can be contained on a single disc is 512.
  - folder levels (the tree structure of files) is 8.
- Compatibility with all MP3 encoding/writing software, recording device, and recording media cannot be guaranteed. Incompatible MP3 discs may produce noise or interrupted audio or may not play at all.

## Notes on playing multisession discs

- If the disc begins with a CD-DA (or MP3) session, it is recognized as a CD-DA (or MP3) disc, and other sessions are not played back.
- A disc with a mixed CD format is recognized as a CD-DA (audio) disc.

# Listening to the radio

- 1 Select “FM” or “AM.”**  
Press TUNER/BAND **[11]** repeatedly.
- 2 Select the tuning mode.**  
Press TUNING MODE **[16]** repeatedly until “AUTO” appears.
- 3 Tune in the desired station.**  
Press +/- (or TUNE +/- on the unit) **[15]**. Scanning stops automatically when a station is tuned in, and then “TUNED” and “ST” (for stereo programs only) appear.



When you tune in a station that provides RDS services, the station name appears on the display (European model only).

- 4 Adjust the volume.**  
Press VOLUME +/- (or turn the VOLUME control on the unit) **[6]**.

## To stop automatic scanning

Press **■** **[12]**.

## To tune in a station with a weak signal

If “TUNED” does not appear and the scanning does not stop, press TUNING MODE **[16]** repeatedly until “AUTO” and “PRESET” disappear, and then press +/- (or TUNE +/- on the unit) **[15]** repeatedly to tune in the desired station.

## To reduce static noise on a weak FM stereo station

Press FM MODE **[20]** repeatedly until “MONO” appears to turn off stereo reception.

## Using the Bluetooth function

This system supports Bluetooth A2DP and AVRCP profiles. For details on Bluetooth wireless technology, see “Bluetooth wireless technology” (page 36).

Check the websites below for the latest information about compatible devices.

For customers in the U.S.A.:

<<http://www.sony.com/shelfsupport>>

For customers in Canada:

English <<http://www.sony.ca/ElectronicsSupport/>>

French <<http://fr.sony.ca/ElectronicsSupport/>>

For customers in Europe:

<<http://sonydigital-link.com/dna>>

For customers in Latin America:


<<http://www.sony-latin.com/pa/info>>

For customers in Asia and Oceania:

<<http://www.css.ap.sony.com/>>

## Listening to music of a Bluetooth mobile phone or Bluetooth device

You can listen to music from your Bluetooth mobile phone or Bluetooth device over a wireless connection.

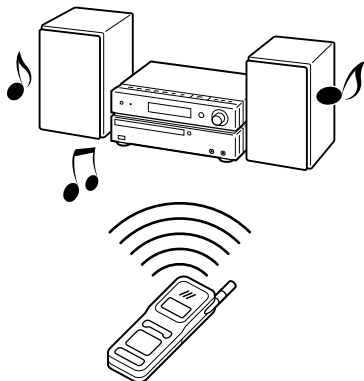

Follow the procedure below to listen to music from Bluetooth devices with this system.

Pairing this system with a Bluetooth device



Connecting to registered devices




Playing music of a Bluetooth device

For details about the operations of the Bluetooth device, also refer to the operation manual supplied with your Bluetooth device.

Continued

## Pairing this system with a Bluetooth device

Pairing is an operation where Bluetooth devices register with each other beforehand. Use the procedure below to pair the system with your Bluetooth device. Once a pairing operation is performed, it does not need to be performed again. If pairing is already completed, proceed to “Playing music of a Bluetooth device” (page 17).

- 1 Place the Bluetooth device to be connected to this system within 1 meter of the system.
- 2 Select the Bluetooth function.  
Press **BLUETOOTH**  **[11]** on the unit.
- 3 Operate the Bluetooth device and perform the pairing operation.

For details about the operations of the Bluetooth device, refer to the operation manual supplied with your Bluetooth device.

When searching for this system with the Bluetooth device, a list of the devices found may appear in the Bluetooth device display depending on the type of Bluetooth device. This system appears as “CMT-HX5BT.”


 
 






When establishing a connection with this system, select the audio profile (A2DP, AVRCP) at the Bluetooth device. If the Bluetooth device does not support the AVRCP profile, you cannot perform playback or other operations with the system (page 17).

## 4 Enter the passcode.

Passcode entry may be required depending on the type of Bluetooth device.

When “PIN?” and a countdown appear, enter the passcode at the system as follows:




Press   and   on the remote (or  +/- and     on the unit) **[15]** to enter the same passcode that was entered at the Bluetooth device, and then press **ENTER** **[14]**.

Once pairing is completed and the connection is established, the system display changes as follows:

“Connect” → Name of the Bluetooth device

## To cancel passcode entry partway

Press  **[12]**.

### Notes

- “Passcode” may be called “Passkey,” “PIN code,” “PIN number” or “Password,” etc. depending on the device.
- This system only supports numerical passcodes up to 4 digits.
- The pairing standby status of the system is cancelled after about 30 seconds. If pairing is not successful, redo the procedure from step 1.
- While connected to a Bluetooth device, this system cannot be detected and a connection cannot be established from another Bluetooth device.



## To erase all the pairing registration information

- 1 Press **BLUETOOTH** **[11]** on the unit.  
When the system is connected with a Bluetooth device (when the Bluetooth device name or other information appears in the system display), press and hold **BLUETOOTH OPR** **[5]** on the unit for about 2 seconds to put the system in Bluetooth standby mode.
- 2 Press **CLEAR** **[22]**.  
“Delete?” appears.
- 3 Press **ENTER** **[14]**.  
“Complete!” appears and all the pairing information is erased.

### Note

In order to connect with a Bluetooth device after performing this operation, you must enter the passcode again.

## Playing music of a Bluetooth device

You can operate a Bluetooth device by connecting the system and a Bluetooth device using AVRCP. If the system is not connected with a Bluetooth device using AVRCP, “Not in Use” appears when you operate the system.

- 1 Select the Bluetooth function.  
Press **BLUETOOTH** **[11]** on the unit.
- 2 Establish a connection from the Bluetooth device.  
For details about the operations of the Bluetooth device, refer to the operation manual supplied with your Bluetooth device.  
Once the connection is established, the system display changes as follows: “Connect” → Name of the Bluetooth device

- 3 Start playback.  
Press (or **BLUETOOTH** on the unit) **[11]**.  
Depending on the Bluetooth device, you may need to start up the AV software of the Bluetooth device beforehand.
- 4 Adjust the volume.  
Press **VOLUME +/-** (or turn the **VOLUME** control on the unit) **[6]**.

## To check the address of a connected Bluetooth device

Press **DISPLAY** **[18]** while the Bluetooth device name appears in the system display.  
The Bluetooth device address appears for 8 seconds.

## To cancel the connection with a Bluetooth device

Press and hold **BLUETOOTH OPR** **[5]** on the unit for about 2 seconds until “Disconnect” appears, or until the information on the display (device name, etc.) disappears.

## Other operation


 
To	Press
Pause playback	(or <b>BLUETOOTH</b> on the unit) <b>[11]</b> .
Stop playback	<b>[12]</b> .
Select a file	<b>[15]</b> .
Find a point in a file	Hold down <b>[15]</b> .

### Note

These operations may not be available for certain Bluetooth devices. In addition, the actual operations may differ depending on the connected Bluetooth device.


Continued

## Notes on connections with Bluetooth devices

- If you cannot connect with a paired Bluetooth device, perform the pairing operation between the system and the Bluetooth device again.
- Depending on the type of Bluetooth device, you can adjust the volume using the controls of the Bluetooth device.
- When **BLUETOOTH**   on the unit is pressed while connected to Bluetooth headphones, it may take some time until a connection is made to the system from another Bluetooth device.

## Listening to music on this system using Bluetooth headphones

You can listen to music played on this system using your Bluetooth headphones over a wireless connection.

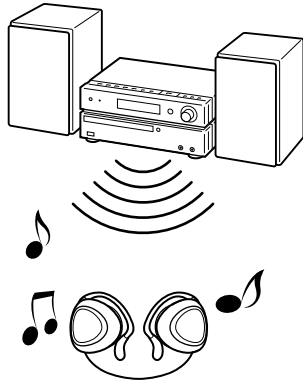

Follow the procedure below to listen to music on this system with Bluetooth headphones.

Pairing this system with Bluetooth headphones



Connecting to registered headphones



Playing music on this system

For details about the operations of the Bluetooth headphones, also refer to the operation manual supplied with your Bluetooth headphones.

## Pairing this system with Bluetooth headphones

Pairing is an operation where Bluetooth devices register with each other beforehand. Use the procedure below to pair the system with your Bluetooth headphones. Once a pairing operation is performed, it does not need to be performed again. If pairing is already completed, proceed to “Playing music on this system” (page 20).

### 1 Select a function other than the Bluetooth function.

Press FUNCTION **[1]** repeatedly.

### 2 Place the Bluetooth headphones to be connected to this system within 1 meter of the system.

### 3 Put the Bluetooth headphones in pairing mode.

For details about the operations of the Bluetooth headphones, refer to the operation manual supplied with your Bluetooth headphones.

### 4 Press and hold BLUETOOTH OPR **[5]** on the unit for about 7 seconds until the BLUETOOTH indicator **[3]** flashes.

Sound output from the speakers is stopped.

### 5 Enter the passcode.

Follow the same procedure as in step 4 of “Pairing this system with a Bluetooth device” (page 16).

Once pairing is completed and the connection is established, the system display changes as follows:  
“Connect” → Name of the Bluetooth device

## To cancel passcode entry partway

Press **[12]**.

### Notes

- “Passcode” may be called “Passkey,” “PIN code,” “PIN number” or “Password,” etc. depending on the device.
- This system only supports numerical passcodes up to 4 digits.
- The pairing standby status of the system is cancelled after about 30 seconds. If pairing is not successful, redo the procedure from step 1.
- While connected to a Bluetooth device, this system cannot be detected and a connection cannot be established from another Bluetooth device.
- Pairing may not be possible if other Bluetooth devices are present around the system. In this case, turn off the other Bluetooth devices.

## To erase all the pairing registration information

### 1 Press BLUETOOTH **[11]** on the unit.

When the system is connected with a Bluetooth device (when the Bluetooth device name or other information appears in the system display), press and hold BLUETOOTH OPR **[5]** on the unit for about 2 seconds to put the system in Bluetooth standby mode.

### 2 Press CLEAR **[22]**. “Delete?” appears.

### 3 Press ENTER **[14]**. “Complete!” appears and all the pairing information is erased.

### Note

To connect with Bluetooth headphones after performing this operation, you must enter the passcode again.

Continued 

## Playing music on this system

You can operate this system from Bluetooth headphones by connecting the system and Bluetooth headphones using AVRCP.

### 1 Select a function other than the Bluetooth function.

Press FUNCTION [1] repeatedly.

### 2 Establish a connection with the Bluetooth headphones.

Press and hold BLUETOOTH OPR [5] on the unit for about 2 seconds until the BLUETOOTH indicator [3] lights up, then release the button.

If more than one Bluetooth device that has been connected in the past is present around the system, the system attempts to connect with up to 3 most recently connected devices. (Connection is attempted with up to 3 devices in order from the most recently connected device, and the attempts end when a connection is established.)

Once the connection is established, the system display changes as follows: "Connect" → Name of the Bluetooth device

### 3 Start playback of the music for the function selected in step 1.

Depending on the type of Bluetooth headphones, you can operate this system (playback, volume control, etc.) using the headphone's controls.

For details about the operations of the Bluetooth headphones, refer to the operation manual supplied with your Bluetooth headphones.

### 4 Adjust the volume.

Press VOLUME +/- (or turn the VOLUME control on the unit) [6].


## To cancel the connection with Bluetooth headphones

Press and hold BLUETOOTH OPR [5] on the unit for about 2 seconds until the BLUETOOTH indicator [3] turns off.

### Notes

- If you cannot connect with paired Bluetooth headphones, perform the pairing operation between the system and the Bluetooth headphones again.
- When the system is changed to a function other than the Bluetooth function and BLUETOOTH OPR [5] on the unit is pressed while connected to a Bluetooth device, it may take some time until a connection is made with the Bluetooth headphones.
- This system stores separate volume settings for when listening through the speakers or PHONES jack [8] on the unit, or when listening through Bluetooth headphones.

 
## Listening to music of an USB device


You can connect an optional USB device (Digital music player or USB storage media) to the  (USB) port **[10]** on the unit and listen to music stored in the USB device. See "Playable USB devices and Bluetooth devices" (page 38) for a list of USB devices that can be connected to this system.

The audio formats that can be played back by this system are as follows:  
ATRAC/MP3\*/WMA\*/AAC\*

\* Files with copyright protection (Digital Rights Management) cannot be played by this system.

Files downloaded from an online music store may not be played by this system.

- 1 Select the USB function.  
Press USB **[11]**.
- 2 Connect an optional USB device (Digital music player or USB storage media) to the  (USB) port **[10]** as shown below.

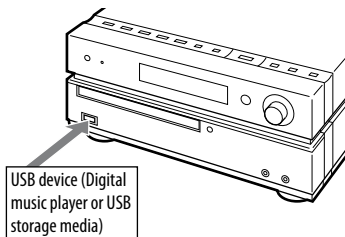

When USB cable connection is necessary, connect the USB cable supplied with the USB device to be connected.

See the operation manual supplied with the USB device to be connected for details on the operation method.



When the USB device is connected, the display changes as follows:  
"Reading" → "ATRAC AD<sup>1)</sup>" or "STORAGE DRIVE<sup>2)</sup>"

<sup>1)</sup> When connecting a digital music player.

<sup>2)</sup> When connecting USB storage media.  
The volume label is displayed next if recorded.

### Note

It may take about 10 seconds before "Reading" appears depending on the type of USB device connected.

- 3 Start playback.  
Press  (or USB  on the unit) **[11]**.
- 4 Adjust the volume.  
Press VOLUME +/- (or turn the VOLUME control on the unit) **[6]**.

Continued 

## Other operation

To	Press
Pause playback	<b>II</b> (or USB <b>▶II</b> on the unit) <b>[11]</b> . To resume play, press the button again.
Stop playback	<b>■</b> <b>[12]</b> .
Select a folder	<b>📁</b> <b>+/-</b> <b>[15]</b> .
Select a file	<b>◀◀/▶▶</b> <b>[15]</b> .
Select a folder and file while viewing the folder and file names on the system display*	<b>SEARCH</b> <b>[13]</b> . Press <b>◀◀/▶▶</b> <b>[15]</b> to select the desired folder, then press <b>ENTER</b> <b>[14]</b> . Press <b>◀◀/▶▶</b> <b>[15]</b> to select the desired file, then press <b>ENTER</b> <b>[14]</b> .
Find a point in a file	Hold down <b>◀◀/▶▶</b> <b>[15]</b> during playback, and release the button at the desired point.
Select Repeat Play	<b>REPEAT</b> <b>[20]</b> repeatedly until “REP” or “REP1” appears.
Remove the USB device	Hold down <b>■</b> <b>[12]</b> until “No Device” appears, then remove the USB device.

\* You can search by different information such as album or genre for digital music players.

## To change the play mode

Press **PLAY MODE** **[16]** repeatedly while the USB device is stopped. You can select normal play (“**📁**” for all files in the folder on the digital music player), shuffle play (“**SHUF**” or “**📁 SHUF**”), or program play (“**PGM**”).

## Notes on the USB device

- Do not connect the system and the USB device through a USB hub.
- With some connected USB devices, after an operation is performed, there may be a delay before it is performed by this system.
- This system does not necessarily support all the functions provided in a connected USB device.
- The playback order for the system may differ from the playback order of the connected USB device.
- Always hold down **■** **[12]** and make sure that “No Device” appears before removing the USB device. Removing the USB device while “No Device” is not displayed may corrupt the data on it or damage the USB device itself.
- Do not save other types of files or unnecessary folders on an USB device that has audio files.
- Folders that have no audio files are skipped.
- Files are played back in the order that they are transferred to the USB device.
- The maximum numbers of folders and files that can be contained on a single USB device are as follows:
  - Digital music player: 65,535 groups (maximum 999 tracks per group)
  - USB storage media: 999 filesThe maximum number of files and folders may vary depending on the file and folder structure.
- The audio formats that you can listen to with this system are as follows:
  - MP3: file extension “.mp3”
  - Windows Media Audio file: file extension “.wma”
  - AAC: file extension “.m4a”Note that even when file names have the above file extensions, if the actual file differs, the system may produce noise or may malfunction.
- Compatibility with all encoding/writing softwares, recording devices, and recording media cannot be guaranteed. Incompatible USB device may produce noise or interrupted audio or may not play at all.

## Using optional audio components

- 1** Connect additional audio component to the AUDIO IN jack [7] on the unit using an audio analog cord (not supplied).
- 2** Turn down the volume.  
Press VOLUME – (or turn the VOLUME control on the unit) [6].
- 3** Select the AUDIO IN function.  
Press AUDIO IN [11] on the unit.
- 4** Start playing the connected component.
- 5** Adjust the volume.  
Press VOLUME +/- (or turn the VOLUME control on the unit) [6].

## Adjusting the sound

### To add a sound effect

To	Press
Generate a more dynamic sound (Dynamic Sound Generator X-tra)	DSGX [17] on the unit.
Set the sound effect	EQ [17] repeatedly to select “BASS” or “TREBLE,” and then press +/- [15] repeatedly to adjust the level.

# Changing the display

To	Press
Change information on the display <sup>1)2)</sup>	DISPLAY [18] repeatedly when the system is on.
Check the clock when the system is off	DISPLAY [18] when the system is off <sup>3)</sup> . The clock is displayed for 8 seconds.

<sup>1)</sup> For example, you can view CD/MP3 disc information or the USB device information, such as the track or file number or folder name during normal play, or the total playing time while the player is stopped.

<sup>2)</sup> When the system and a Bluetooth device are connected using the Bluetooth function, you can view the Bluetooth device address.

<sup>3)</sup> The STANDBY indicator [2] on the unit lights up when the system is off.

## Notes on the display information

- Characters that cannot be displayed appear as “\_”.
- The following are not displayed:
  - total playing time for a CD-DA disc depending on the play mode.
  - total playing time and remaining playing time for an MP3 disc and USB device.
- The following are not displayed correctly:
  - folder and file names that do not follow either the ISO9660 Level 1, Level 2 or Joliet in the expansion format.
- The following are displayed:
  - ID3 tag information for MP3 files when ID3 version 1 and version 2 tags are used (up to 62 characters for an MP3 disc).
  - ID3 tag information for “ATRAC” files when ID3 version 2 tags are used.



## Other Operations

### Creating your own program

(Program Play)

- 1 Select the desired function.

#### CD

Press CD **[11]** to select the CD function.

#### USB

Press USB **[11]** to select the USB function.

- 2 Press PLAY MODE **[16]** repeatedly until "PGM" appears while the system is stopped.

- 3 Press **[Left]/[Right]** **[15]** repeatedly until the desired track or file number appears.

When programming files, press **[Folder]/[+/-]** **[15]** repeatedly to select the desired folder, and then select the desired file.

Example: When programming tracks on a CD



Selected track or file number

Total playing time of program (including selected track or file)

- 4 Press ENTER **[14]** to add the track or file to the program.

#### CD

"- .- -" appears when the total program time exceeds 100 minutes for a CD, or when you select a CD track whose number is 21 or over, or when you select an MP3 file.

#### USB

The total program time cannot be displayed, so "- .- -" appears.

- 5 Repeat steps 3 through 4 to program additional tracks or files, up to a total of 25 tracks or files.

- 6 To play your program of tracks or files, press **[▶]** **[11]**.

The program remains available until you open the disc tray or remove the USB device. To play the same program again, press **[▶]** **[11]**.

#### To cancel Program Play

Press PLAY MODE **[16]** repeatedly until "PGM" disappears while the system is stopped.

#### To delete the last track or file of the program

Press CLEAR **[22]** while the system is stopped.

 
## Presetting radio stations

You can preset your favorite radio stations and tune them in instantly by selecting the corresponding preset number.


Use buttons on the remote to preset stations.

**1** Tune in the desired station (see “Listening to the radio” (page 14)).

**2** Press TUNER MEMORY .



Preset number

 
 
**3** Press +/-  repeatedly to select your desired preset number.

If another station is already assigned to the selected preset number, the station is replaced by the new stations.

**4** Press ENTER .

**5** Repeat steps 1 through 4 to store other stations.

You can preset up to 20 FM and 10 AM stations. The preset stations are retained for about half a day even if you disconnect the power cord or if a power failure occurs.

**6** To call up a preset radio station, press TUNING MODE  repeatedly until “PRESET” appears, and then press +/-  repeatedly to select the desired preset number.

## Using the Timers

The system offers two timer functions. If you use the Play Timer with the Sleep Timer, the Sleep Timer has priority.

### Sleep Timer:

You can fall asleep to music. This function works even if the clock is not set.

Press SLEEP [24] repeatedly.

If you select "AUTO," the system automatically turns off after the current disc stops or in 100 minutes.

### Play Timer:

You can wake up to CD, tuner or optional USB device at a preset time.

Use buttons on the remote to control the Play Timer. Make sure you have set the clock.

- 1 Prepare the sound source.  
Prepare the sound source, and then press VOLUME +/- [6] to adjust the volume.  
To start from a specific track or file, create your own program (page 25).
- 2 Press CLOCK/TIMER SET [19].
- 3 Press ◀▶▶▶ [15] repeatedly to select "PLAY SET?," and then press ENTER [14].  
"ON TIME" appears, and the hour indication flashes.
- 4 Set the time to start playing.  
Press ◀▶▶▶ [15] repeatedly to set the hour, and then press ENTER [14].  
The minute indication flashes. Use the procedure above to set the minutes.
- 5 Use the same procedure as in step 4 to set the time to stop playing.

- 6 Select the sound source.  
Press ◀▶▶▶ [15] repeatedly until the desired sound source appears, and then press ENTER [14]. The display shows the timer settings.

- 7 Press I/⏻ [1] to turn off the system.

The system turns on 15 seconds before the preset time. If the system is on at the preset time, the Play Timer will not play.

### Note

Before the system is turned off, if a connection is made with the Bluetooth headphones, sounds played by the Play Timer may be output to the Bluetooth headphones.

### To activate or check the timer again

Press CLOCK/TIMER SELECT [19], press ◀▶▶▶ [15] repeatedly until "PLAY SEL?" appears, and then press ENTER [14].

### To cancel the timer

Repeat the same procedure as above until "TIMER OFF?" appears, and then press ENTER [14].

### To change the setting

Start over from step 1.

### Tip

The Play Timer setting remains as long as the setting is not canceled manually.

# Troubleshooting

- 1 Make sure the power cord and speaker cords are correctly and firmly connected.
- 2 Find your problem in the checklist below, and take the indicated corrective action.  
If the issue persists, contact your nearest Sony dealer.

### If the STANDBY indicator flashes

Immediately unplug the power cord, and check the following items.

- If your system has a voltage selector, is the voltage selector set to the correct voltage?
- Are you using only the supplied speakers?
- Is anything blocking the ventilation holes on the top or back of the system?

After the STANDBY indicator [2] stops flashing, reconnect the power cord, and turn on the system. If the issue persists, contact your nearest Sony dealer.

## General

### Sound comes from one channel, or the left and right volumes are unbalanced.

- Place the speakers as symmetrically as possible.
- Connect only the supplied speakers.

### Severe hum or noise.

- Move the system away from sources of noise.
- Connect the system to a different wall socket.
- Install a noise filter (available separately) to the power cord.

### There is no sound.

- If the BLUETOOTH indicator [3] is lit or flashing when a function other than the Bluetooth function is selected, no sound is heard through the speakers or PHONES jack [8]. Press and hold BLUETOOTH OPR [5] for about 2 seconds until the BLUETOOTH indicator [3] turns off.

### The remote does not function.

- Remove any obstacles between the remote and the remote sensor [4] on the unit, and position the unit away from fluorescent lights.
- Point the remote at the system's sensor.
- Move the remote closer to the system.

### The STANDBY indicator [2] remains lit after unplugging the power cord.

- The STANDBY indicator [2] may not turn off immediately after unplugging the power cord. This is not a malfunction. The indicator will turn off after about 40 seconds.

## CD/MP3 player

### The sound skips, or the disc will not play.

- Wipe the disc clean, and replace it.
- Move the system to a location away from vibration (for example, on top of a stable stand).
- Move the speakers away from the system, or place them on separate stands. At high volume, speaker vibration may cause the sound to skip.

**Play does not start from the first track.**

- Press PLAY MODE [16] repeatedly until both “PGM” and “SHUF” disappear to return to normal play.

**Starting playback takes more time than usual.**

- The following discs take a longer time to start playback.
  - a disc recorded with a complicated tree structure.
  - a disc recorded in multisession mode.
  - a disc that has not been finalized (a disc to which data can be added).
  - a disc that has many folders.

**Bluetooth device****Pairing cannot be done.**

- Move the Bluetooth device closer to the system.
- Pairing may not be possible if other Bluetooth devices are present around the system. In this case, turn off the other Bluetooth devices.

**Connection is not possible.**

- The Bluetooth device you attempted to connect does not support the A2DP and AVRCP profiles, and cannot be connected with the system.
- Enable the Bluetooth function of the Bluetooth device.
- The pairing registration information has been erased. Perform the pairing operation again.
- While connected to a Bluetooth device, this system cannot be detected and a connection cannot be established from another Bluetooth device.

**The sound skips or fluctuates, or the connection is lost.**

- The system and the Bluetooth device are too far apart.
- If there are obstacles between the system and your Bluetooth device, remove or avoid the obstacles.
- If there is equipment that generates electromagnetic radiation, such as a wireless LAN, other Bluetooth device, or a microwave oven nearby, move them away.

**The sound of your Bluetooth device cannot be heard on this system.**

- Turn up the volume on your Bluetooth device first, and then adjust the volume using VOLUME +/- [6].

**Severe hum or noise**

- If there are obstacles between the system and your Bluetooth device, remove or avoid the obstacles.
- If there is equipment that generates electromagnetic radiation, such as a wireless LAN, other Bluetooth device, or a microwave oven nearby, move them away.
- Turn down the volume of the connected Bluetooth device.

**The sound from the Bluetooth headphones is distorted.**

- Turn down the volume of the system using VOLUME - [6]. If your headphones have a volume control, also adjust the volume using the headphone's volume control.
- Press DSGX [17] on the unit repeatedly until “DSGX OFF” appears.
- Press EQ [17] repeatedly to select “BASS” or “TREBLE,” and then press - [15] repeatedly to turn down the level.

Continued 


 
 

## USB device

---

### Are you using a supported USB device?

- If you connect an unsupported USB device, the following problems may occur. See “Playable USB devices and Bluetooth devices” (page 38) for the supported device types.
  - The USB device is not recognized.
  - File or folder names are not displayed on this system.
  - Playback is not possible.
  - The sound skips.
  - There is noise.

### “Over Current” appears.

- A problem has been detected with the level of electrical current from the  (USB) port . Turn off the system and remove the USB device from the  (USB) port . Make sure there is no problem with the USB device. If this display pattern persists, contact your nearest Sony dealer.

### There is no sound.

- The USB device is not connected correctly. Turn off the system, then reconnect the USB device and check if “USB MEMORY” appears.

### The sound is distorted.

- The bit rate used when encoding the files was low. Send files encoded with higher bit rates to the USB device.

### There is noise or the sound skips.

- Turn off the system, then reconnect the USB device.
- The music data itself contains noise. Noise may have been introduced when creating music data due to the conditions of the computer. Create the music data again.
- When using the USB storage media, copy the files to your computer, format the USB storage media in FAT16 or FAT32 format, and copy the files to the USB storage media again.\*

### The USB device cannot be connected into the (USB) port .

- The USB device is being connected backwards. Connect the USB device in the correct orientation.

### The USB storage media which has been used on another device does not work.

- It may be recorded in an unsupported format. If so, first take the precaution of backing up important files on the USB storage media by copying them to your computer hard disk. Next, format the USB storage media with a FAT16 or FAT32 file system and transfer the backed-up audio files onto the USB storage media again.\*

### “Reading” is displayed for a long time.

- It may take a while to finish reading the USB device if there are many folders or files on it. Thus, we recommend following these guidelines.
  - Total folders on USB device: 100 or less
  - Total files per folder: 100 or less

### Erroneous display

- Send the music data to the USB device again, as the data stored in the USB device may have been corrupted.

### Play does not start.

- Turn off the system, then reconnect the USB device.
- Connect the USB device that this system can play.
- Press **▶** (or USB **▶||** on the unit) **[1]** to start play.

### Play does not start from the first track.

- Set the play mode to Normal Play mode.

### Files cannot be played back.

- USB storage media formatted with file systems other than FAT16 or FAT32 are unsupported.\*
- If you use partitioned USB storage media, only files on the first partition can be played.
- Files that are encrypted or protected by passwords, etc. cannot be played back.

\* This system supports FAT16 and FAT32, but some USB storage media may not support all of these FAT. For details, see the operation manual of each USB storage media or contact the manufacturer.

### Tuner

#### Severe hum or noise, or stations cannot be received. ("TUNED" or "ST" flashes on the display.)

- Connect the antenna properly.
- Find a location and an orientation that provide good reception, and then set up the antenna again.
- Keep the antennas away from the speaker cords, the power cord and the USB cable to avoid picking up noise.
- Connect a commercially available external antenna.
- Consult your nearest Sony dealer if the supplied AM antenna has come off the plastic stand.
- Turn off nearby electrical equipment.

#### To change the AM tuning interval

The AM tuning interval is factory-preset to 9 kHz (or 10 kHz, for some areas; this function is not available on the European model).

Use buttons on the unit to change the AM tuning interval.

- 1 Tune in any AM station, and then turn off the system.
- 2 While holding down TUNER/BAND **[1]**, press **I/⏻** **[1]**.  
All the AM preset stations are erased. To reset the interval to the factory preset, repeat the procedure.

Continued 

## To improve tuner reception

Turn off CD player power by using the CD power management function. By default, CD power is turned on.

- 1 Press FUNCTION **[11]** repeatedly to select the CD function, and then turn off the system.
- 2 After "STANDBY" stops flashing, press I/⏻ **[1]** on the unit while holding down ■/CANCEL **[12]** on the unit. "CD POWER OFF" appears. With CD player power turned off, disc access time is increased. To turn on CD player power, repeat the procedure until "CD POWER ON" appears.

## To reset the system to factory settings

If the system still does not operate properly, reset the system to factory settings.

Use buttons on the unit to reset the system to its factory default settings.

- 1 Disconnect and reconnect the power cord, and then turn on the system.
- 2 Press ■/CANCEL **[12]**, DSGX **[17]** and I/⏻ **[1]** at the same time. All user-configured settings, such as preset radio stations, timer, and the clock, are deleted.

---

# Messages

## CD/MP3 player, Tuner

**Complete!**: The preset operation ended normally.

**Invalid!**: You pressed an invalid button.

**LOCKED!**: The disc tray does not open. Contact your nearest Sony dealer.

**No Disc!**: There is no disc in the system, or you have loaded a disc that cannot be played.

**No Step!**: All of the programmed tracks or files have been erased.

**Over!**: You have reached the end of the disc while pressing ►► **[15]** during playback or pause.

**Push SELECT!**: You tried to set the clock or timer during timer operation.

**Push STOP!**: You pressed PLAY MODE **[16]** during playback.

**Reading!**: The system is reading information of the disc. Some buttons are not available.

**SET CLOCK!**: You tried to select the timer when the clock is not set.

**SET TIMER!**: You tried to select the timer when the Play Timer is not set.

**Step Full!**: You tried to program more than 26 tracks or files (steps).

**TIME NG!**: The Play Timer start and end times are set to the same time.

## Bluetooth device

**Connect!**: Bluetooth communication was established.

**Disconnect!**: Communication with a Bluetooth device was cut off for some reason, or Bluetooth communication was ended.

**No Device!**: A pairable Bluetooth device was not found, or connection was not possible.

**Not in Use!**: The system is not connected with a Bluetooth device using AVRCP.



**PIN?** The system is asking for the passcode. For details, see “Using the Bluetooth function” (page 15).

**Please Wait:** The system is readying for usage of a Bluetooth device.

## USB device

**ATRAC AD:** An ATRAC Audio Device is connected.

**Error:** The USB device could not be recognized or an unknown device is connected.

**Invalid:** You have made an invalid or currently prohibited operation.

**No Device:** No USB device is connected or the connected USB device has been stopped.

**No Step:** All of the programmed tracks or files have been erased.

**No Track:** No playable file is loaded in the system.

**Not Supported:** An unsupported USB device is connected.

**Please Wait:** The system is readying for usage of an USB device.

**Reading:** The system is recognizing the USB device.

**Removed:** The USB device has been removed.

**Step Full!** You tried to program more than 26 tracks or files (steps).

**STORAGE DRIVE:** USB storage media is connected.

## Precautions

### Discs that this system CAN play

- Audio CD
- CD-R/CD-RW (audio data/MP3 files)

### Discs that this system CANNOT play

- CD-ROM
- CD-R/CD-RW other than those recorded in music CD format or MP3 format conforming to ISO9660 Level 1/Level 2, Joliet or multisession
- CD-R/CD-RW recorded in multisession that have not ended by “closing the session”
- CD-R/CD-RW of poor recording quality, CD-R/CD-RW that have scratches or are dirty, or CD-R/CD-RW recorded with an incompatible recording device
- CD-R/CD-RW which is finalized incorrectly
- Discs containing files other than MPEG 1 Audio Layer-3 (MP3) files
- Discs of non-standard shape (for example, heart, square, star)
- Discs that have adhesive tape, paper, or sticker attached to them
- Rental or used discs with attached seals where the glue extends beyond the seal
- Discs that have labels printed using ink that feels tacky when touched

### Notes on discs

- Before playing, wipe the disc with a cleaning cloth from the center out to the edge.
- Do not clean discs with solvents, such as benzine thinner, or commercially available cleaners or anti-static spray intended for vinyl LPs.
- Do not expose discs to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight.

Continued 

### **On safety**

- Completely disconnect the power cord (mains lead) from the wall socket (mains) if it is not going to be used for an extended period of time. When unplugging the unit, always grip the plug. Never pull the cord itself.
- Should any solid object or liquid get into the system, unplug the system, and have it checked by qualified personnel before operating it again.
- The AC power cord can be changed only by a qualified service facility.

### **On placement**

- Do not place the system in an inclined position or in locations that are extremely hot, cold, dusty, dirty, or humid or lacking adequate ventilation, or subject to vibration, direct sunlight or a bright light.
- Be careful when placing the unit or speakers on surfaces that have been specially treated (for example, with wax, oil, polish) as staining or discoloration of the surface may result.
- If the system is brought directly from a cold to a warm location or is placed in a very damp room, moisture may condense on the lens inside the CD player, and cause the system to malfunction. In this situation, remove the disc, and leave the system turned on for about an hour until the moisture evaporates.

### **On heat buildup**

- Heat buildup on the unit during operation is normal and is not cause for alarm.
- Do not touch the cabinet if it has been used continuously at a high volume because the cabinet may have become hot.
- Do not obstruct the ventilation holes.

### **On the speaker system**

This speaker system is not magnetically shielded, and the picture on nearby TV sets may become magnetically distorted. In this situation, turn off the TV, wait 15 to 30 minutes, and turn it back on. If there is no improvement, move the speakers far away from the TV.

### **Cleaning the cabinet**

Clean this system with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder, or solvent, such as thinner, benzene, or alcohol.

# Specifications

## Main unit (HCD-HX5/Compact Disc Receiver)

### Amplifier section

DIN power output (rated):  
60 + 60 watts (4 ohms at 1 kHz, DIN)  
Continuous RMS power output  
(reference): 75 + 75 watts (4 ohms at  
1 kHz, 10% THD)  
Music power output (reference):  
75 + 75 watts (4 ohms at 1 kHz, 10%  
THD)

#### Inputs:

AUDIO IN (stereo mini jack):  
voltage 250 mV, impedance  
47 kilohms  
• (USB) port: Type A, maximum  
current 500 mA

#### Outputs:

PHONES (stereo mini jack): accepts  
headphones of 8 ohms or more  
SPEAKER: accepts impedance of  
4 ohms

### Bluetooth section

Communication system:

Bluetooth Standard version 2.0

Output:

Bluetooth Standard Power Class 2

Maximum communication range:

Line of sight approx. 10 m<sup>1)</sup>

Frequency band:

2.4 GHz band (2.4000 GHz –  
2.4835 GHz)

Modulation method:

FHSS

Compatible Bluetooth profiles<sup>2)</sup>:

A2DP (Advanced Audio Distribution  
Profile)

AVRCP (Audio Video Remote  
Control Profile)

Supported codecs:

Receive: SBC (Sub Band Codec), MP3  
Transmit: SBC (Sub Band Codec)

- <sup>1)</sup> The actual range will vary depending on factors such as obstacles between devices, magnetic fields around a microwave oven, static electricity, reception sensitivity, antenna's performance, operating system, software application, etc.
- <sup>2)</sup> Bluetooth standard profiles indicate the purpose of Bluetooth communication between devices.

### USB section

Supported bit rate

MP3 (MPEG 1 Audio Layer-3):  
32 – 320 kbps, VBR  
ATRAC: 48 – 352 kbps  
(ATRAC3plus), 66/105/132 kbps  
(ATRAC3)  
WMA: 32 – 192 kbps, VBR  
AAC: 48 – 320 kbps

Sampling frequencies

MP3 (MPEG 1 Audio Layer-3):  
32/44.1/48 kHz  
ATRAC: 44.1 kHz  
WMA: 44.1 kHz  
AAC: 44.1 kHz

### CD player section

System: Compact disc and digital audio  
system

Laser Diode Properties

Emission duration: continuous

Laser Output\*: Less than 44.6µW

\* This output is the value measurement  
at a distance of 200mm from the  
objective lens surface on the Optical  
Pick-up Block with 7mm aperture.

Frequency response: 20 Hz – 20 kHz

Signal-to-noise ratio: More than 90 dB

Dynamic range: More than 90 dB

Continued 

## Tuner section

FM stereo, FM/AM superheterodyne tuner

FM tuner section:

Tuning range: 87.5 — 108.0 MHz (50 kHz step)

Antenna: FM lead antenna

Antenna terminals: 75 ohms unbalanced

Intermediate frequency: 10.7 MHz

AM tuner section:

Tuning range: 531 — 1,602 kHz (with 9 kHz tuning interval)

Antenna: AM loop antenna, external antenna terminal

Intermediate frequency: 450 kHz

## Speaker (SS-CHX5)

Speaker system: 2-way, 3-unit, bass-reflex type

Speaker units: Woofer 10 cm × 2, cone type,

Tweeter 2.5 cm, soft dome type

Nominal impedance: 4 ohms

Dimensions (w/h/d): Approx. 145 × 300 × 200 mm

Mass: Approx. 2.6 kg net per speaker

## General

Power requirements: 220 — 240 V AC, 50/60 Hz

Power consumption: 50 watts

Dimensions (w/h/d) (excl. speakers):

Approx. 285 × 120 × 215 mm

Mass (excl. speakers): 2.7 kg

Supplied accessories: Remote Commander (RM-SCU35) (1), R6 (Size AA) batteries (2), AM loop antenna (1), FM lead antenna (1), Speaker pads (8)

Design and specifications are subject to change without notice.



- Standby power consumption: 0.5 W
- Halogenated flame retardants are not used in the certain printed wiring boards.
- Halogenated flame retardants are not used in cabinets.

# Bluetooth wireless technology

Bluetooth wireless technology is a short-range wireless technology linking digital devices, such as personal computers and digital still cameras. Using the Bluetooth wireless technology, you can operate the units involved within a range of about 10 meters.

The Bluetooth wireless technology is commonly used between two devices, but a single device can be connected to multiple devices.

You do not need wires to get connected as you do with a USB connection, and you do not need to place the devices face to face as you do with wireless infrared technology. You can use the technology with one Bluetooth device in your bag or pocket.

Bluetooth wireless technology is a global standard supported by thousands of companies. These companies produce products that meet the global standard.

## Supported Bluetooth version and profiles

Profile refers to a standard set of capabilities for various Bluetooth product capabilities. This system supports the following Bluetooth version and profiles.

Supported Bluetooth version:

Bluetooth Standard version 2.0

Supported Bluetooth profiles:

A2DP (Advanced Audio Distribution Profile)

AVRCP (Audio Video Remote Control Profile)

## Effective communication range

Bluetooth devices should be used within approximately 10 meters (unobstructed distance) of each other. The effective communication range may become shorter under the following conditions.

- When a person, metal object, wall or other obstruction is between the devices with a Bluetooth connection
- Locations where a wireless LAN is installed
- Around microwave ovens that are in use
- Locations where other electromagnetic waves occur

## Effects of other devices

Bluetooth devices and wireless LAN (IEEE 802.11b/g) use the same frequency band (2.4 GHz). When using your Bluetooth device near a device with wireless LAN capability, electromagnetic interference may occur. This could result in lower data transfer rates, noise, or inability to connect. If this happens, try the following remedies:

- Try connecting this system and Bluetooth mobile phone or Bluetooth device when you are at least 10 meters away from the wireless LAN equipment.
- Turn off the power to the wireless LAN equipment when using your Bluetooth device within 10 meters.

## Effects on other devices

The radio waves broadcast by this system may interfere with the operation of some medical devices. Since this interference may result in malfunction, always turn off the power on this system, Bluetooth mobile phone and Bluetooth device in the following locations:

- In hospitals, on trains, in airplanes, at gas stations, and any place where flammable gasses may be present
- Near automatic doors or fire alarms

## Notes

- This system supports security functions that comply with the Bluetooth specification as a means of ensuring security during communication using Bluetooth technology. However, this security may be insufficient depending on the setting contents and other factors, so always be careful when performing communication using Bluetooth technology.
- Sony cannot be held liable in any way for damages or other loss resulting from information leaks during communication using Bluetooth technology.
- Bluetooth communication is not necessarily guaranteed with all Bluetooth devices that have the same profile as this system.
- Bluetooth devices connected with this system must comply with the Bluetooth specification prescribed by the Bluetooth SIG, Inc., and must be certified to comply. However, even when a device complies with the Bluetooth specification, there may be cases where the characteristics or specifications of the Bluetooth device make it impossible to connect, or may result in different control methods, display or operation.
- Noise may occur or the audio may cut off depending on the Bluetooth device connected with this system, the communications environment, or surrounding conditions.

# Playable USB devices and Bluetooth devices

## USB devices

You can play back the following Sony USB devices on this system. Other USB devices cannot be played back on this system.

## Verified Sony digital music player (as of January 2007)

Product name	Model name
Walkman®	NW-E103 / E105 / E107
	NW-E205 / E207
	NW-E303 / E305 / E307
	NW-E403 / E405 / E407
	NW-E503 / E505 / E507
	NW-E002 / E002F / E003 / E003F / E005 / E005F
	NW-A605 / A607 / A608
	NW-A1000 / A1200 / A3000
	NW-HD5
	NW-S603 / S605 / S703F / S705F / S706F
	NW-S202 / S202F / S203F / S205F

## Verified Sony USB storage media (as of January 2007)

Product name	Model name
MICROVAULT	USM512EX / 1GEX / 2GEX
	USM128J / 256J / 512J / 1GJ / 2GJ / 4GJ / 8GJ
	USM512JX / 1GJX / 2GJX / 4GJX
	USM256H / 512H / 1GH / 2GH / 4GH
	USD2G / 4G / 5G / 8G

Check the websites below for the latest information about compatible devices.

For customers in the U.S.A.:

<<http://www.sony.com/shelfsupport>>

For customers in Canada:

English <<http://www.sony.ca/ElectronicsSupport/>>

French <<http://fr.sony.ca/ElectronicsSupport/>>

For customers in Europe:

<<http://sonydigital-link.com/dna>>

For customers in Latin America:

<<http://www.sony-latin.com/pa/info>>

For customers in Asia and Oceania:

<<http://www.css.ap.sony.com/>>

## Notes

- Do not use USB devices other than these USB devices. Operation of models not listed here is not guaranteed.
- Operation may not always be ensured even when using these USB devices.
- Some of these USB devices may not be available for purchase in certain areas.

## Notes on Walkman

- You cannot play back Linear PCM audio on this system.
- You cannot play back the ATRAC Advanced Lossless audio format on this system.
- You cannot play back music recorded directly to a Walkman without using a computer on this system.

## Bluetooth devices

You can check the websites below for the Bluetooth compatible devices.

For customers in the U.S.A.:

<<http://www.sony.com/shelfsupport>>

For customers in Canada:

English <<http://www.sony.ca/ElectronicsSupport/>>

French <<http://fr.sony.ca/ElectronicsSupport/>>

For customers in Europe:

<<http://sonydigital-link.com/dna>>

For customers in Latin America:

<<http://www.sony-latin.com/pa/info>>

For customers in Asia and Oceania:

<<http://www.css.ap.sony.com/>>





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>