

# ***FM Stereo/FM-AM Receiver***

 
---

Operating Instructions

*STR-AV23*

## System Connections

Before connection, be sure to set the POWER switch to OFF.

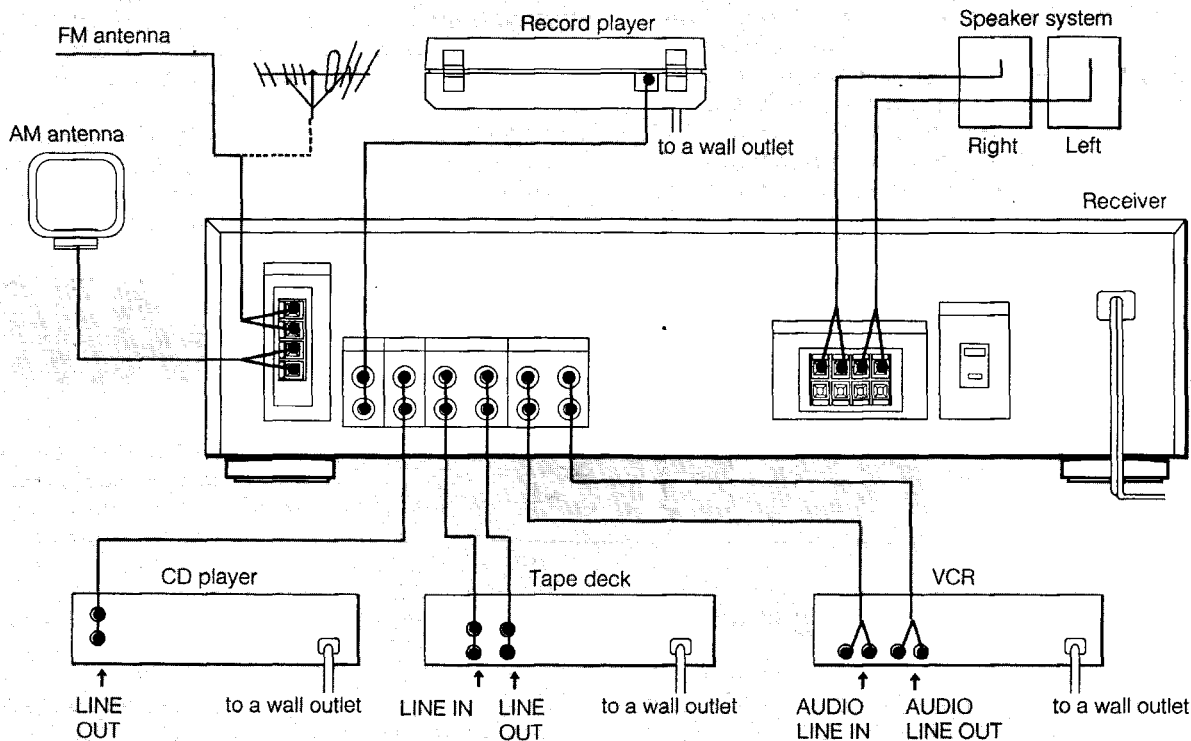

### Notes on system connection


- The red jacks of the receiver are for right-channel (R) connections and the white jacks for left-channel (L).
- The cable connectors should be fully inserted into the jacks. A loose connection may cause hum and noise.

### Note on power source connection

- The plug of the AC power cord can only be inserted into a polarized AC outlet.
- Do not connect an electrical home appliance such as an electric iron, fan, TV, or other high-wattage equipment exceeding 120 watts in total power consumption to the AC OUTLET on the receiver.


### Connecting FM Antenna

#### For normal use

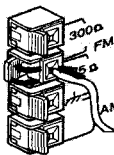

Supplied wired antenna

#### For higher quality sound

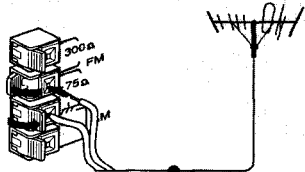


75-ohm coaxial cable (optional)

### Connecting Antenna Ground

To prevent hum, connect the ground wire to ANTENNA ground terminal (↔). When an outdoor antenna is installed, be sure to connect the ground wire for lightning protection.

### Connecting Speakers

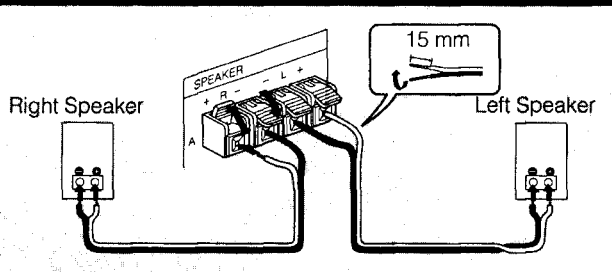

### Speaker impedance and power capability

Use only the speakers having nominal impedance from 8 to 16 ohms, and adequate power handling capability.

### Note

As the speakers A and B are connected in series, the sound volume will be slightly decreased with both of the SPEAKERS selectors depressed.

# Receiving FM/AM Broadcasts

## How to receive a broadcast

When you know the frequency	See "Direct Access Tuning".
When you do not know the frequency	FM: See "Automatic Tuning". AM: See "Manual Tuning".
Tuning in a preset frequency	See "Preset Tuning".

## Direct Access Tuning

POWER → ON

Select SPEAKERS A or B.

- 1 Press TUNER.
- 2 Select FM or AM.
- 3 Press DIRECT TUNING.
- 4 Press the appropriate numeric buttons to enter the frequency. (See examples below.)
- 5 Adjust the volume.

### Example 1: FM 108.00 MHz

1 0 8 0 0

↓

FM 108.00 MHz

### Example 2: AM 1350 kHz

1 3 5 0

↓

AM 1350 kHz

### For entering AM frequencies

You do not need to enter the last "0".


### Correcting the entered frequency

Repeat the above steps from the beginning.

### If the frequency figures flash in the display window

The entered number is outside the receiver's frequency range (FM 87.5 to 108 MHz; AM 530 to 1710 kHz). Enter the correct frequency.

## Automatic Tuning (for FM reception)

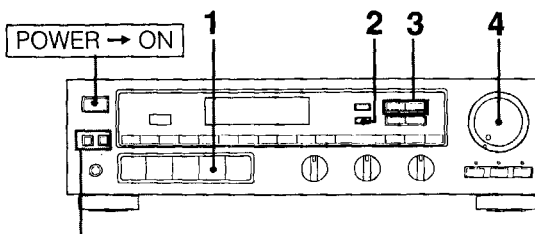

Select SPEAKERS A or B.

**1 Press TUNER.**

**2 Select FM.**

**3 Press + or – TUNING.**


When a station is received, automatic tuning stops automatically. To change the station, press + or – again.

**4 Adjust the volume.**

### When sweeping does not stop at the desired station

The signal strength is weak. Tune in the station as described in "Direct Access Tuning".

## Manual Tuning (for AM reception)

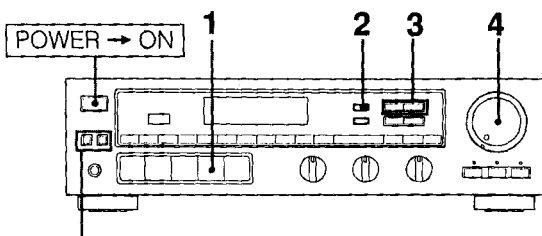

Select SPEAKERS  
A or B.

- 1 Press TUNER.**
- 2 Select AM.**
- 3 Press + or - TUNING.**


Each time + or - is pressed, the frequency will change by 10 kHz. To change the frequency continuously, keep the button pressed.

- 4 Adjust the volume.**

### Quickly tuning in a roughly known frequency

Proceed as the following example.


Example: The station between AM 700 and AM 800 kHz.

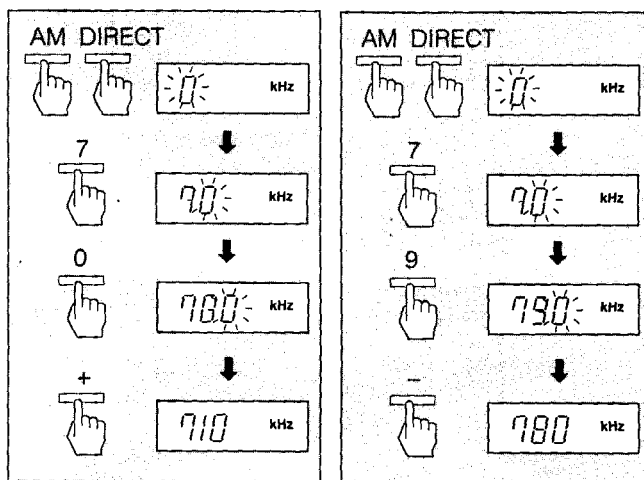

## Preset Tuning

A total of 30 FM/AM stations can be memorized in any desired sequence.

### Memorizing a Station

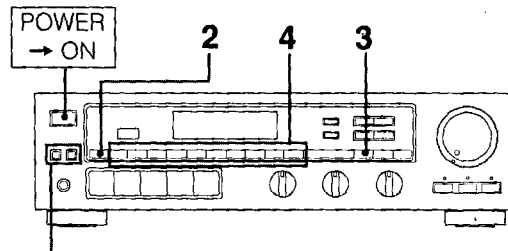

Select SPEAKERS A or B.

- 1 Tune in the desired station.** (See "Automatic Tuning", "Manual Tuning" or "Direct Access Tuning".)
- 2 Press SHIFT to select the memory page (A, B or C).**
- 3 Press MEMORY.**  
Memory indicator appears for a few seconds.
- 4 Press the desired numeric button (1 to 0), while the MEMORY indicator is displayed.**

Repeat above steps for presetting other desired stations.

### Use of memory pages

The memory pages (A, B and C) can be used to classify stations according to the music category, station band, etc.

### Replacing a preset station

Preset another station on the number of the station to be replaced. The previously preset station will be erased.

### Tuning in a Preset Station


#### Method A: Direct

- 1 Press TUNER.**
- 2 Press SHIFT to select memory page (A, B or C).**
- 3 Press the preset numeric button.**
- 4 Adjust the volume.**

#### Method B: Scan


- 1 Press TUNER.**
- 2 Press + or - PRESET.**

Each time you press + or -, the preset station of the next higher or lower number is tuned in.

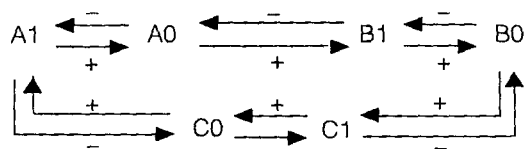

- If you keep pressing + or -, preset stations are successively tuned in. Release the button when the desired preset station is tuned in.

# Listening to Program Sources Other than Broadcast

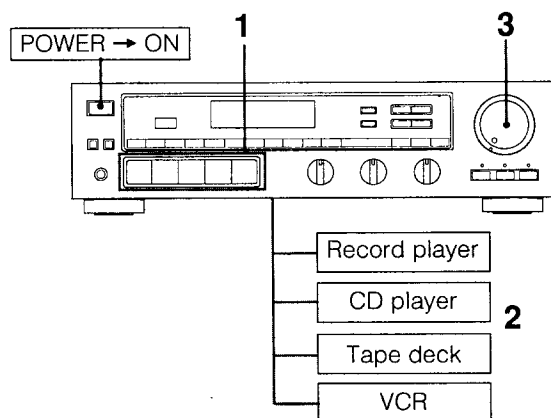

## 1 Select the program source.


Program sources	Function
Phono record	PHONO
Compact disc or other program sources	CD
Video programs	VIDEO
Tape programs	TAPE

## 2 Start the program.

## 3 Adjust the volume.

# Recording on an Audio Tape

## Recording

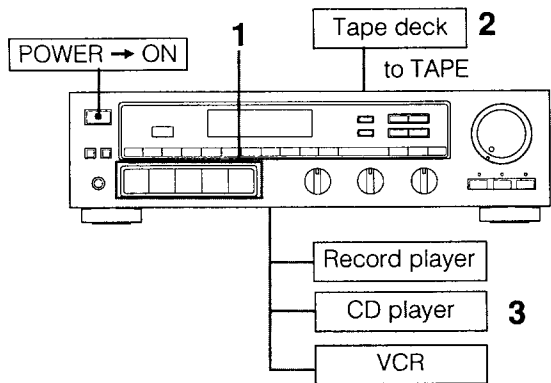


- 1 Select the desired program source.**  
For an FM/AM broadcast, tune in the desired station.
- 2 Set the tape deck in the recording mode.**
- 3 Start the desired program source.**

### Note on recording

The settings of the VOLUME, TONE controls, DBFB, SURROUND and MUTING do not have any effect on recording.

## Tape Dubbing

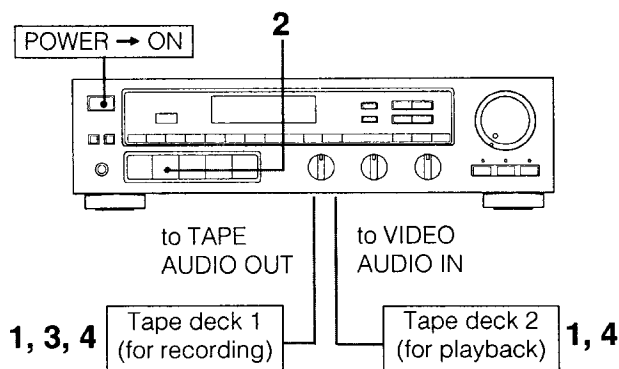


- 1 Insert the recorded tape into tape deck 2 and a blank tape into tape deck 1.**
- 2 Press VIDEO.**
- 3 Adjust the recording level of tape deck 1.**
- 4 Start the playback of tape deck 2 and set the tape deck 1 in the recording mode.**  
Dubbing will start.

# Troubleshooting


Problem	Solution
STEREO indicator flickers or does not light up when FM stereo programs are received.	<ul style="list-style-type: none"> <li>● Check the FM antenna connection, and adjust the antenna.</li> <li>● Press FM MODE to disengage the stereo mode.</li> </ul>
The figures in the display window do not stop at the desired station during automatic tuning.	<ul style="list-style-type: none"> <li>● Check the antenna connection and adjust the antenna direction.</li> <li>● Tune in the station using the direct access tuning.</li> </ul>
Stations cannot be tuned in correctly when the numeric button is pressed.	<ul style="list-style-type: none"> <li>● Memorize the frequency correctly.</li> </ul>
Audio is not heard.	<ul style="list-style-type: none"> <li>● Check the speaker and program source connections.</li> <li>● Check that the appropriate function selector is depressed.</li> <li>● Check that the appropriate SPEAKERS selector is depressed. If the A and B selectors are both depressed, check that both speaker systems are properly connected.</li> </ul>
One channel does not transmit audio, or the volume from the left and right speakers is unbalanced.	<ul style="list-style-type: none"> <li>● Adjust the BALANCE control.</li> <li>● Check the speaker connections.</li> </ul>
There is an abrupt loss of sound from one or both of the speakers. (This symptom may be caused when the protection circuit inside the unit activates.)	<ul style="list-style-type: none"> <li>● Turn off the receiver, and check the speaker terminals or speaker cord for a short.</li> </ul>
Sound transmitted from the speaker is reversed.	<ul style="list-style-type: none"> <li>● Connect the speaker correctly.</li> </ul>
Severe hum or noise is heard.	<ul style="list-style-type: none"> <li>● Use shielded connecting cords.</li> <li>● Keep the audio components further away from the TV.</li> <li>● Connect the ground wire to the ANTENNA ground terminal.</li> <li>● Clean any dirty plugs and jacks with a cloth lightly moistened with alcohol.</li> </ul>
The <b>P</b> (protection) alarm appears in the display window.	<ul style="list-style-type: none"> <li>● A serious trouble has occurred such as overheating or short-circuiting. Refer servicing to qualified person.</li> </ul>
The unit cannot be controlled by the Remote Commander.	<ul style="list-style-type: none"> <li>● Correctly point the head of the commander toward the unit. If there is any object between the unit and the commander head, remove it.</li> </ul>

## Remote Commander RM-S103

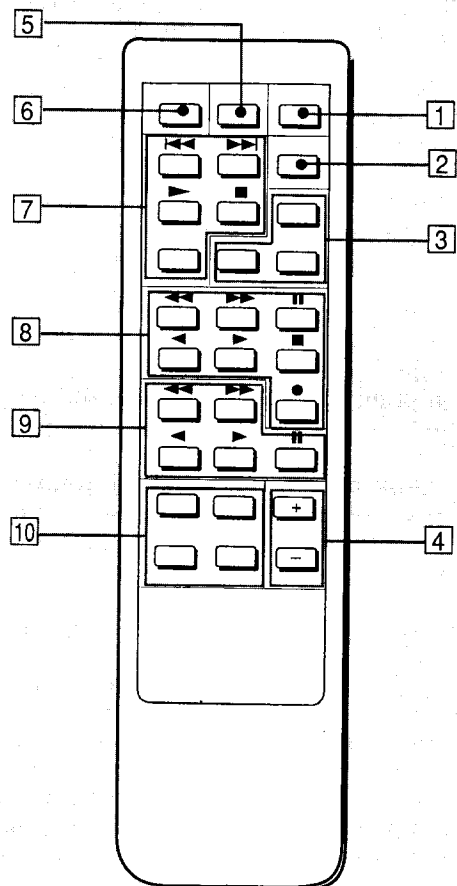


- 1 **POWER button**
- 2 **DBFB button**
- 3 **TUNER PRESET +/- and SHIFT buttons**
- 4 **VOLUME +/- buttons**
- 5 **SURROUND button**
- 6 **MUTING button**
- 7 **CD player operation buttons**  
D. (disc) SKIP: When your CD player is equipped with a multi-disc changer, use this button to select loaded disc.  
CD ▶: Selects the CD function and starts CD playback.
- 8 **DECK B operation buttons** (also for single tape deck)  
DECK B ◀▶: Select tape function and start tape playback on deck B.
- 9 **DECK A operation buttons**  
DECK A ◀▶: Select tape function and start tape playback on deck A.
- 10 **Function select buttons**

### Notes on the remote commander


For the functions other than the receiver's own ones, the remote commander is effective only with Sony components having a remote sensor with a  mark.

## Loading the Remote Commander with Batteries

1

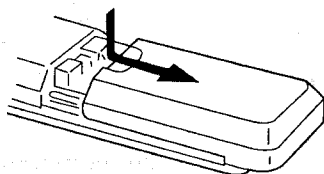

2 Two size "AA" (R6) batteries

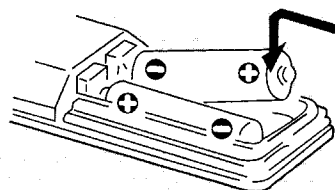

### Battery life


About half a year of normal operation can be expected when using the Sony SUM-3 (NS) batteries.

### Caution

When the commander is not to be used for a long period of time, remove the batteries to avoid damage caused by battery leakage and corrosion.



# Location and Function of Controls

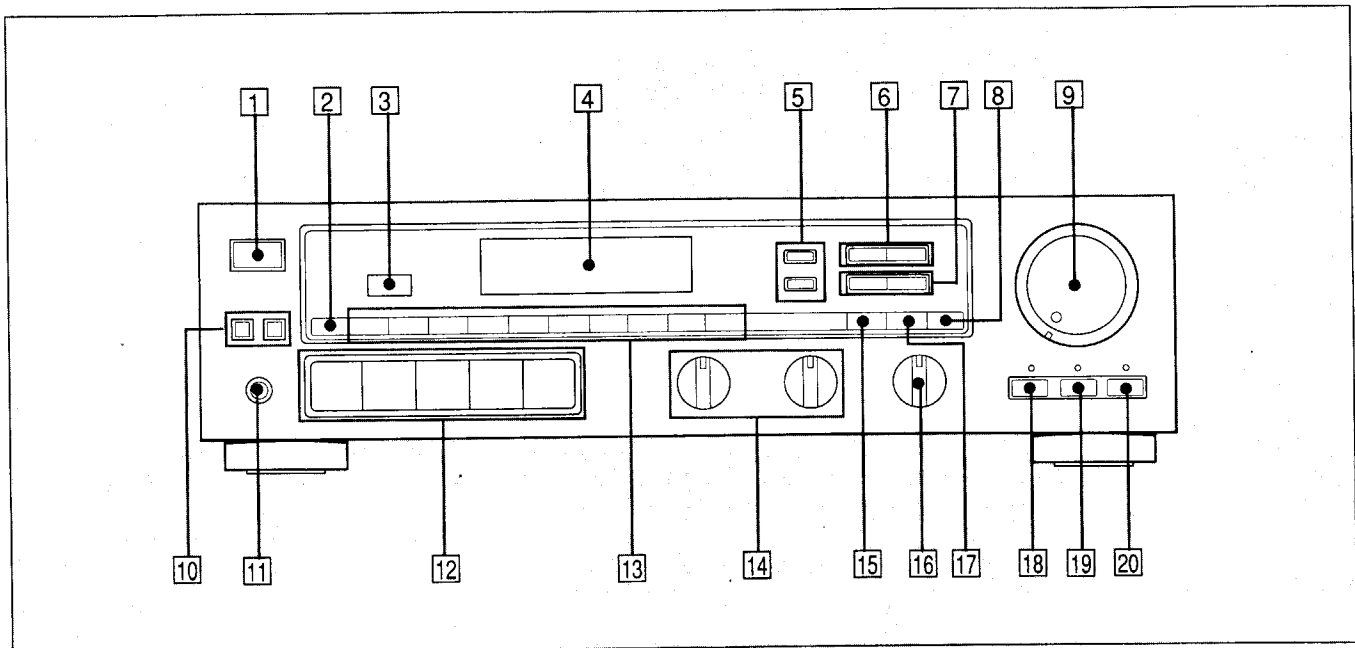

**1 POWER switch**

**2 SHIFT button**

**3 Remote sensor**

**4 Display window**

**5 BAND selectors**

**6 TUNING +/- buttons**

**7 PRESET +/- buttons**

**8 FM MODE button**

When an FM stereo program is noisy or hard to receive, press this button. The STEREO indicator goes out (the sound is heard in monaural, but the reception will be improved). To return to the stereo mode, press again or change the frequency.

**9 VOLUME control and indicator**

**10 SPEAKERS selectors**

Depress to select which speaker system to drive. For both speaker systems, depress A and B.

**11 HEADPHONES jack (stereo phone jack)**

Connect the headphones to this jack for private listening.

**12 Function selectors**

**13 Numeric buttons**

**14 TONE controls**

Turn the TREBLE control to adjust the high frequency sound. Turn BASS control to adjust the low frequency sound.

**15 MEMORY button**

**16 BALANCE control**

Adjust to correct stereo imaging, when the speaker position is not symmetrical.

**17 DIRECT TUNING button**

**18 DBFB (Dynamic Bass Feed Back) button and indicator**

To reinforce the bass frequency sound, press this button.

**19 MUTING button and indicator**

Press to attenuate the sound level immediately (-20 dB attenuation). Pressing this button makes the indicator be lighted. To restore the sound level, press again.

**20 SURROUND button and indicator**

To obtain the surround effect, press this button.

## Precautions

### On safety

- Operate the unit only on 120 V AC, 60 Hz.
- Should any solid object or liquid fall into the unit, unplug it and have it checked by qualified personnel before operating it any further.
- Unplug the unit from the wall outlet if it is not to be used for an extended period of time. To disconnect the cord, pull it out by grasping the plug. Never pull the cord itself.
- One blade of the plug is wider than the other for the purpose of safety and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.

### On installation

- Do not install the unit in a location near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Good air circulation is essential to prevent internal heat buildup in the unit. Place the unit in a location with adequate air circulation. Do not place the unit on a soft surface, such as a rug that would block the ventilation holes on the bottom.
- Do not place anything on top of the cabinet. The top ventilation holes must be unobstructed for the proper operation of the unit and to prolong the life of its components.

### On cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth lightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.

### On repacking

Do not throw away the carton and the packing material. It makes an ideal container to transport the unit in.

For detailed safety precautions, see the "IMPORTANT SAFEGUARDS" leaflet.

If you have any question or problem concerning your unit, please consult your nearest Sony dealer.

## Features

The STR-AV23 is a combined receiver and audio/video control center.

You can listen to various audio/video program sources through the amplifier of the receiver and the speakers connected to it. Newly designed DBFB (Dynamic Bass Feed Back) circuitry ensures natural sound quality even at a low volume level.



Built-in matrix surround decodes ambient information in stereo sources, providing a surround sound effect.

In the tuner section, a quartz locked digital synthesizer system allows precise tuning. A total of 30 FM/AM stations can be preset in 3 memory pages (A, B and C).

# Warning

## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

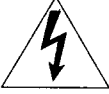	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
<p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>		



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### Note to CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## Owner's Record

The model number is located on the rear exterior and serial number is on the rear. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

# Specifications

## Audio Power Specifications

### POWER OUTPUT AND TOTAL HARMONIC DISTORTION

With 8-ohm load, both channels driven, from 40 - 20 kHz, rated 40 watts per channel minimum RMS power, with less than 0.8% total harmonic distortion from 250 milliwatts to rated output.

## Other Specifications

### Amplifier section

Continuous RMS power output (8 ohms, at 1 kHz less than 0.8% total harmonic distortion)

50 W + 50 W

Dynamic power (at 1 kHz IHF)

55 W + 55 W (8 ohms)

60 W + 60 W (4 ohms)

Harmonic distortion

Less than 0.8% at rated output

Frequency response

PHONO: RIAA equalization curve  $\pm 0.5$  dB

CD

VIDEO } 10 Hz - 50 kHz  $\begin{matrix} +0 \\ -5 \end{matrix}$  dB

TAPE }

### Inputs

	Sensitivity	Impedance	S/N (weighting network, input level)
PHONO	2.5 mV	50 kilohms	74 dB 72 dB* (A, 2.5 mV)
CD VIDEO TAPE	150 mV	50 kilohms	95 dB 80 dB* (A, 150 mV)

\* '78 IHF

### Outputs

REC OUT, VIDEO (AUDIO) OUT	Voltage 150 mV Impedance 10 kilohms
SPEAKER A, B	Accepts speakers of 8-16 ohms
HEADPHONES	Accepts low and high impedance headphones

### Tone controls

BASS:  $\pm 10$  dB at 100 Hz

TREBLE:  $\pm 10$  dB at 10 kHz

### Muting

-20 dB

### DBFB

+12 dB at 70 Hz

## Tuner section

	FM tuner section	AM tuner section
Tuning range	87.5 — 108 MHz	530 — 1710 kHz
Antenna terminals	300 ohms, balanced 75 ohms, unbalanced	External antenna terminal
Sensitivity at 50 dB quieting	18.3 dBf, 4.5 $\mu$ V (mono) 38.3 dBf, 45 $\mu$ V (stereo)	—
Usable sensitivity	11.2 dBf, 2 $\mu$ V (IHF)	Loop antenna: 500 $\mu$ V (at 1,000 kHz)
Signal-to-noise ratio	76 dB (mono) 70 dB (stereo)	54 dB (at 50 mV/m)
Harmonic distortion	0.3% (mono), 0.5% (stereo) at 1 kHz	0.5% (at 50 mV/m, 400 Hz)
Selectivity	60 dB at 400 kHz	40 dB at 10 kHz
Separation	45 dB at 1 kHz	—
Frequency response	30 Hz — 15 kHz $\begin{matrix} +0.5 \\ -2 \end{matrix}$ dB	—

## General

### System

Tuner section: PLL quartz-locked digital synthesizer system

Preamplifier section: low-noise NF type equalizer amp

Power amplifier section: quasi-complementary SEPP

### Power requirements

120 V AC, 60 Hz

### Power consumption

90 W

In standby condition: 5 W

### AC outlets

One switched (120 W/1A Max.)

### Dimensions

Approx. 430 x 122.5 x 300 mm (w/h/d)

(17 x 4  $\frac{7}{8}$  x 11  $\frac{7}{8}$  inches)

including projecting parts and controls

### Weight

Approx. 6.5 kg (14 lb 5 oz)

### Accessories supplied

FM wire antenna (1)

AM loop antenna (1)

Remote Commander RM-S103 (1)

Sony batteries SUM 3(NS) (2)

Design and specifications subject to change without notice.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>