

Micro Hi-Fi Component System

Operating Instructions

Owner's Record

The model and serial numbers are located on the rear of the unit. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. _____

Serial No. _____



CMT-HP7

 
WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To prevent fire, do not cover the ventilation of the apparatus with news papers, table-cloths, curtains, etc. And don't place lighted candles on the apparatus.

To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.




This appliance is classified as a CLASS 1 LASER product. This label is located on the rear exterior.



Don't throw away the battery with general house waste, dispose of it correctly as chemical waste.

NOTICE FOR THE CUSTOMERS IN THE U.S.A.

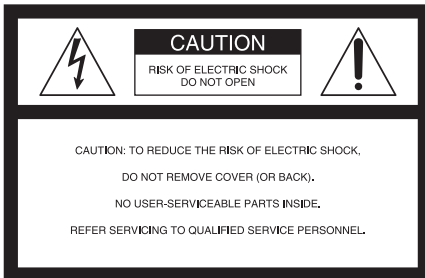

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CAUTION

The use of optical instruments with this product will increase eye hazard.

WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

NOTICE FOR THE CUSTOMERS IN CANADA

CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS POLARIZED AC PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Except for European model



ENERGY STAR® is a U.S. registered mark. As an ENERGY STAR® partner, Sony Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Table of Contents

How to use this manual.....	4
Playable discs.....	4
<hr/>	
Getting Started	
Hooking up the system.....	6
Setting the clock.....	8
<hr/>	
CD/MP3 – Play	
Loading a disc.....	9
Playing a disc.....	9
— Normal Play/Shuffle Play	
Playing repeatedly.....	11
— Repeat Play	
Creating your own program.....	11
— Program Play	
<hr/>	
Tuner	
Presetting radio stations.....	13
Listening to the radio.....	14
— Preset Tuning	
— Manual Tuning	
Using the Radio Data System (RDS)....	15
(European model only)	
<hr/>	
Tape – Play	
Loading a tape.....	16
Playing a tape.....	16
<hr/>	
Tape – Recording	
Recording your favorite CD tracks on a tape.....	17
— CD-TAPE Synchro Recording	
Recording on a tape manually.....	17
— Manual Recording	
<hr/>	
Sound Adjustment	
Adjusting the sound.....	18
Selecting the sound effect.....	18
Selecting the surround effect.....	19

Timer

Falling asleep to music.....	20
— Sleep Timer	
Waking up to music.....	20
— Daily Timer	
Timer recording radio programs.....	21

Display

Turning off the display.....	22
— Power Saving Mode	
Adjusting the brightness of the display's backlight.....	23
Viewing information about the disc in the display.....	23

Optional Components

Hooking up optional components.....	25
-------------------------------------	----

Troubleshooting



Problems and remedies.....	27
Messages.....	30

Additional Information

Precautions.....	31
Specifications.....	32
List of button locations and reference pages.....	34

How to use this manual








- This manual mainly explains operations using the remote, but the same operations can also be performed using the buttons on the unit having the same or similar names.
- The following symbols are used in this manual.

Symbol	Meaning
	Functions that can be used with audio CDs
	Functions that can be used with MP3

Playable discs

You can play back the following discs on this system. Other discs cannot be played back.

List of playable discs

Format of discs	Disc logo	Contents
Audio CDs		Audio
CD-R/CD-RW (audio data)	 	Audio
CD-R/CD-RW (MP3 files)	   	Audio

Discs that this system cannot play

- CD-ROMs
- CD-Rs/CD-RWs other than those recorded in the following formats:
 - music CD format
 - MP3 format that conforms to ISO9660*¹ Level 1/Level 2, Joliet*², Romeo*² or Multi Session*³
- A disc that has a non-standard shape (e.g., card, heart).
- A disc with paper or stickers on it.
- A disc that has the adhesive, cellophane tape, or a sticker still left on it.
- When you eject a disc, handle the disc by its edge. Do not touch the surface.
- Do not use discs with seals, protection rings or other accessories attached.
- Do not use adaptors that change the size of a disc from 8 cm to standard size.

*¹ A logical format of files and folders on CD-ROMs, defined by ISO (International Standard Organization)

*² Up to 31 characters can be displayed.

*³ Multi Session

This is a recording method that enables adding of data using the Track-At-Once method. Conventional CDs begin at a CD control area called the Lead-in and end at an area called Lead-out. A Multi Session CD is a CD having multiple sessions, with each segment from Lead-in to Lead-out regarded as a single session.

CD-Extra: This format records audio (audio CD data) on the tracks in session 1 and data on the tracks in session 2.

Mixed CD: This format records data on the first track and audio (audio CD data) on the second and subsequent tracks of a session.

Notes on CD-R and CD-RW

- This system can play CD-R/CD-RW discs edited by the user. However, note that playback of some discs may not be possible depending on the recording device used for recording or the disc condition.
- Discs recorded on CD-R/CD-RW drives may not be played back because of scratches, dirt, recording condition or the driver's characteristics.
- CD-R and CD-RW discs that have not been finalized (processing to allow play by a normal CD player) cannot be played.
- CD-R and CD-RW discs recorded in multi-session that have not ended by "closing the session" are not supported.
- The system may be unable to play MP3 format files that do not have the extender ".MP3".
- Attempting to play non-MP3 format files that have the extender ".MP3" may result in noise or malfunction.
- With formats other than ISO 9660 level 1 and 2, folder names or file names may not be displayed correctly.
- The following discs take a longer time to start playback.
 - a disc recorded with complicated tree structure.
 - a disc recorded in Multi Session.
 - a disc to which data can be added (non-finalized disc).

Music discs encoded with copyright protection technologies

This product is designed to playback discs that conform to the Compact Disc (CD) standard. Recently, various music discs encoded with copyright protection technologies are marketed by some record companies. Please be aware that among those discs, there are some that do not conform to the CD standard and may not be playable by this product.


Cautions when playing a disc that is recorded in Multi Session

- If the disc begins with a CD-DA session, it is recognized as a CD-DA (audio) disc, and playback continues until an MP3 session is encountered.
- If the disc begins with an MP3 session, it is recognized as an MP3 disc, and playback continues until a CD-DA (audio) session is encountered.
- The playback range of an MP3 disc is determined by the tree structure of files produced by analyzing of the disc.
- A disc with a mixed CD format will be recognized as a CD-DA (audio) disc.

Getting Started

Hooking up the system


Perform the following procedures **1** to **4** to hook up your system using the supplied cords and accessories.

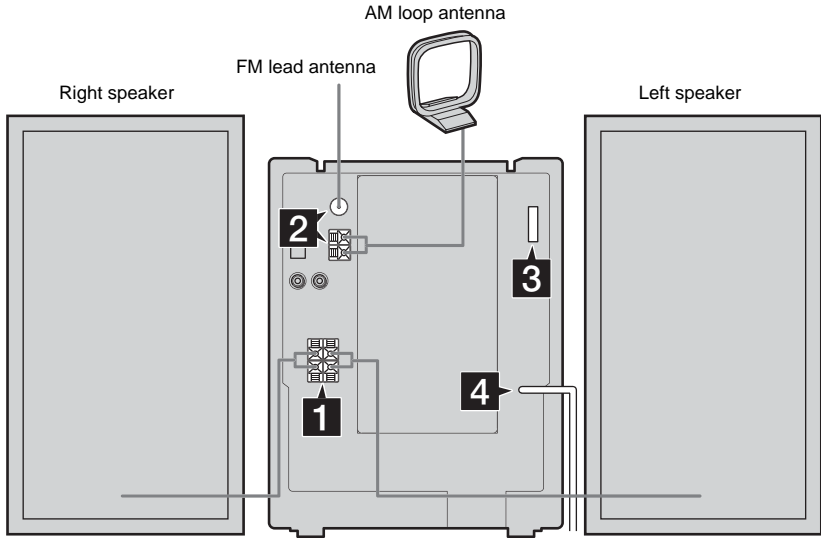

1 Connect the speakers.


Connect the right and left speaker cords to the SPEAKER terminals as shown below.

Insert only the stripped portion

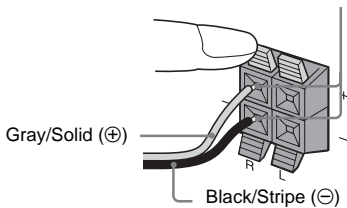

2 Connect the FM and AM antennas.

Set up the AM loop antenna, then connect it.

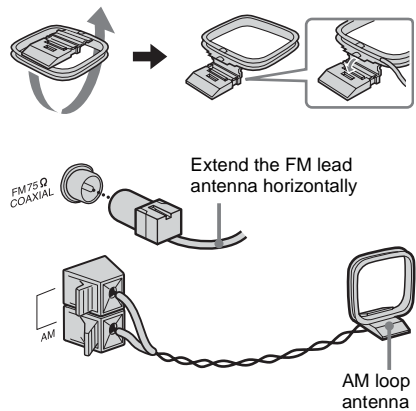


Note

Keep the antennas away from the speaker cords.

- 3 For models with a voltage selector, set VOLTAGE SELECTOR to the local power line voltage.**


Refer to the print on your system's VOLTAGE SELECTOR for available settings.

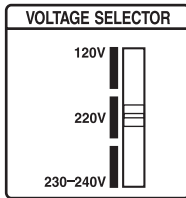

- 4 Connect the power cord to a wall outlet.**

The demonstration appears in the display. When you press **I/O**, the system turns on and the demonstration automatically ends. If the plug does not fit the wall socket, detach the supplied plug adaptor (only for models equipped with an adaptor).

Inserting two R6 (size AA) batteries into the remote

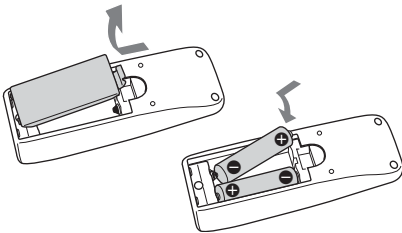

Note

If you do not use the remote for a long period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.


Tip

With normal use, the batteries should last for about six months. When the remote no longer operates the system, replace both batteries with new ones.

Attaching the speaker pads

Attach the supplied front speaker pads to the bottom of the speakers to stabilize the speakers and prevent them from slipping.

Front speaker (Left (4)/Right (4))

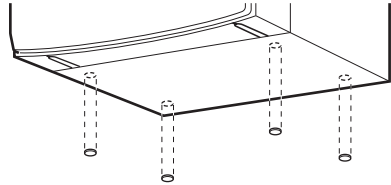

When carrying this system

Perform the following procedure to protect the CD mechanism.

- 1 Make sure that all discs are removed from the system.
- 2 Press **I/O** to turn off the system. "STANDBY" flashes for a few seconds, and then disappears from the display.
- 3 Unplug the power cord.

Setting the clock

Use buttons on the remote for the operation.

- 1** Press I/⏻ to turn on the system.
- 2** Press CLOCK/TIMER SET.
- 3** Press ◀◀/▶▶ repeatedly to set the hour.
- 4** Press ENTER.
- 5** Press ◀◀/▶▶ repeatedly to set the minute.
- 6** Press ENTER.

The clock starts working.

To adjust the clock

- 1** Press CLOCK/TIMER SET.
- 2** Press ◀◀/▶▶ to select "CLOCK SET", then press ENTER.
- 3** Do the same procedures as step 3 to 6 above.


Note

The clock settings are canceled when you disconnect the power cord or if a power failure occurs.

Loading a disc

Use buttons on the unit for the operation.

- 1 Press any one of buttons (DISC 1 ▲ – DISC 5 ▲).
- 2 Insert a disc with the label side up.
The disc is drawn in automatically.

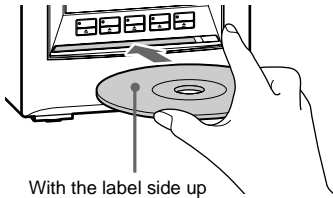

To load another disc, eject a disc or press one of the buttons (DISC 1 – 5) to select an empty compartment (it is not possible to select another compartment, when an 8 cm disc is loaded).

Notes


- Do not use a disc with tape, seals or paste on it as this may cause malfunction.
- You cannot store an 8 cm disc in any of the compartments (DISC 1 – 5).
- Do not load an 8 cm disc with an adaptor. Doing so may cause the system to malfunction.

Playing a disc

— Normal Play/Shuffle Play



You can play audio CDs and discs with MP3 audio tracks.

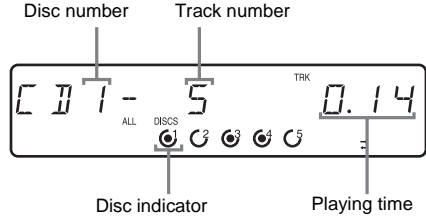

- 1 Press CD on the remote (or FUNCTION on the unit repeatedly) until “CD” appears.
- 2 Press PLAY MODE in stop mode repeatedly until the mode you want appears in the display.

Select	To play
ALL DISCS (Normal Play)	All discs in the system continuously.
1 DISC (Normal Play)	The tracks on the disc you have selected in original order.
ALBM (Normal Play)	All MP3 audio tracks in the album on the disc you have selected in original order. When playing a non-MP3 disc, Album Play becomes 1 DISC Play.
ALL DISCS SHUF (Shuffle Play)	The tracks on all discs in random order.
1 DISC SHUF (Shuffle Play)	The tracks on the disc you have selected in random order.
ALBM SHUF (Shuffle Play)	The MP3 audio tracks in the album on the disc you have selected in random order. When playing a non-MP3 disc, Album Shuffle Play becomes 1 DISC SHUF Play.

Select	To play
PGM (Program Play)	The tracks on all discs in the order you want them to be played (see “Creating your own program” on page 11).

3 Press **▶** on the remote (or **CD ▶** on the unit).

Other operations

To	Do this
Stop play	Press ■ .
Pause	Press . Press again to resume play.
Select a track	Press ◀◀/▶▶ repeatedly.
Select an album of MP3* ¹	Press ALBUM +/- repeatedly after step 2.
Find a point in a track* ²	Keep pressing ◀◀/▶▶ during playback and release it at the desired point.
Select a disc in stop mode	Press D. SKIP on the remote repeatedly (or any one of the buttons (DISC 1 – 5 * ³ on the unit)).
Switch to CD function from another source	Press any one of the buttons (DISC 1 – 5 on the unit) (Automatic Source Selection).
Remove a disc	Press any one of the buttons (DISC 1 ▲ – DISC 5 ▲ on the unit).

*¹ You may not be able to search between multiple files. Also, the time may not be displayed correctly for some files.

*² except for MP3 audio tracks

*³ **DISC 1 – 5** on the unit are not available when “**ALL DISCS SHUF**” is selected.

Notes

- For 8 cm discs, only playback is supported in this system. When an 8 cm disc is loaded in the system, it becomes impossible to select or play back another disc.
- You cannot change the play mode during playback.
- Some time may be needed to start playback of discs recorded in complex configurations such as many layers.
- When the disc is inserted, the player reads all the tracks on that disc. If there are many albums or non-MP3 audio tracks on the disc, it may take a long time for play to begin or for the next MP3 audio track to start play.
- Do not save unnecessary albums or tracks other than MP3 ones in the disc to be used for MP3 listening. We recommend that you do not save other types of tracks or unnecessary albums on a disc that has MP3 audio tracks.
- An album that does not include an MP3 audio track is skipped.
- Maximum album number: 150 (including root folder)
- The maximum number of MP3 audio tracks and albums that can be contained on a single disc is 300.
- Playback is possible up to 8 levels.
- MP3 audio tracks are played back in the order that they are recorded on the disc.
- Depending on the encoding/writing software, recording device, or the recording media used at the time an MP3 audio track is recorded, you may encounter such problems as disabled playback, sound interruptions and noise.

Playing repeatedly

— Repeat Play

CD **MP3**

You can play all the tracks or a single track on a disc.

Press REPEAT/FM MODE repeatedly until “REP” or “REP1” appears.

REP: For all the tracks on the disc(s), or all the tracks in the album up to five times.

REP1: For a single track only.

To cancel Repeat Play

Press REPEAT/FM MODE repeatedly until both “REP” and “REP1” disappear.

Notes

- You cannot select “REP” and “ALL DISCS SHUF” at the same time.
- When you select “REP1”, that track is repeated endlessly until “REP1” is canceled.

Creating your own program

— Program Play

CD **MP3**

You can make a program of up to 25 steps from all the discs in the order you want to play them. You can synchro record the programed tracks onto a cassette tape (page 17).


Use buttons on the remote for the operation.

- 1 Press CD (or FUNCTION on the unit repeatedly) until “CD” appears.**
- 2 Press PLAY MODE in stop mode repeatedly until “PGM” appears.**
- 3 Press D. SKIP repeatedly (or any one of the buttons (DISC 1 – 5 on the unit)) to select a disc.**

To program all the tracks on a disc at once, proceed to step 5 with “ALL” displayed.

- 4 Press ◀◀/▶▶ repeatedly until the desired track number appears.**

When programing an MP3, press ALBUM +/- to select an album, then press ◀◀/▶▶ repeatedly until the desired track number appears.

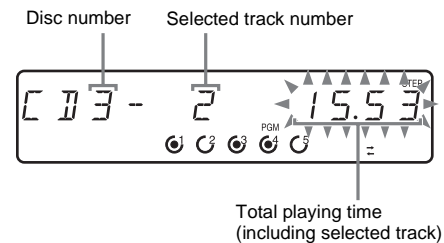

- 5 Press ENTER (or PLAY MODE on the unit).**

The track is programed.

The program step number appears, followed by the total playing time.

continued

6 Program additional discs or tracks.

To program	Repeat steps
Other discs	3 and 5
Other tracks on the same disc	4 and 5
Other tracks on other discs	3 to 5

7 Press ► (or CD ► on the unit).

Program Play starts.

Other operations

To	Do this
Cancel Program Play	Press PLAY MODE in stop mode repeatedly until "PGM" disappears.
Clear a track from the end	Press CLEAR in stop mode.

Note

When an 8 cm disc is loaded in the system, it is impossible to select another disc to create a program.

Tips

- The program you made remains after Program Play finishes. To play the same program again, press CD (or FUNCTION on the unit repeatedly) until "CD" appears, then press ► (or CD ► on the unit). However, the program is cleared when you press any one of the buttons (DISC 1 ▲ – DISC 5 ▲ on the unit).
- "--:--" appears when the total CD program time exceeds 100 minutes, or when you select a disc with 20 tracks or more, or when you select an MP3 audio track.

Presetting radio stations

You can preset up to 20 FM stations and 10 AM stations. You can then tune in any of those stations simply by selecting the corresponding preset number.

Automatic tuning preset

You can automatically tune in all of the stations that can be received in your area and then store the radio frequency of the desired stations.

- 1 Press **TUNER BAND** repeatedly to select "FM" or "AM".
- 2 Press and hold **TUNING +/-** until the frequency indication starts to change, then release it.

The frequency changes as the system scans for a station. Scanning stops automatically when a station is tuned in. At that time, "TUNED" and "STEREO" (for an FM stereo program) appear.



If "TUNED" does not appear and the scanning does not stop

Set the frequency of the desired radio station as described in steps 2 through 6 of "Manual tuning preset" (page 13).

- 3 Press **TUNER MEMORY** on the remote. A preset number appears.

Preset number



- 4 Press **PRESET +/-** repeatedly to select the desired preset number.
- 5 Press **ENTER** on the remote.

- 6 Repeat steps 1 through 5 to store other stations.

Manual tuning preset

You can manually tune in and store the radio frequency of the desired stations.

- 1 Press **TUNER BAND** repeatedly to select "FM" or "AM".
- 2 Press **TUNING +/-** repeatedly to tune in the desired station.
- 3 Press **TUNER MEMORY** on the remote. A preset number appears.
- 4 Press **PRESET +/-** repeatedly to select the desired preset number.
- 5 Press **ENTER** on the remote.
- 6 Repeat steps 1 through 5 to store other stations.

Other Operations

To	Do this
Tune in a station with a weak signal	Follow the procedure described in "Manual tuning preset" (page 13).
Set another station to the existing preset number	Start over from step 1. After step 3, press PRESET +/- repeatedly to select the preset number you want to store the other station.

To change the AM tuning interval (except for European, Russian, Middle Eastern and Philippine models)

The AM tuning interval is factory-preset to 9 kHz (or 10 kHz for some areas). To change the AM tuning interval, tune in any AM station first, then turn off the system. While holding TUNER/BAND on the unit, press I/⏻ on the unit. When you change the interval, all the AM preset stations are erased. To reset the interval, repeat the same procedure.

Note

You cannot change the AM tuning interval in the Power Saving Mode.

Tips

- The preset stations are retained for about a day even if you disconnect the power cord or if a power failure occurs.
- To improve the reception, adjust the supplied antennas or connect an external antenna.

Listening to the radio


You can listen to a radio station either by selecting a preset station, or by manually tuning in the station.

Listening to a preset station

— Preset Tuning

Preset radio stations in the tuner's memory first (see "Presetting radio stations" on page 13).

- 1 Press TUNER BAND repeatedly to select "FM" or "AM".**
- 2 Press PRESET +/- repeatedly to select the desired preset station.**

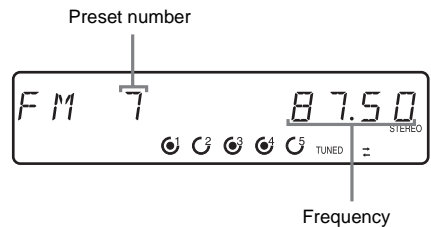

Listening to non-preset radio station

— Manual Tuning

- 1 Press TUNER BAND repeatedly to select "FM" or "AM".**
- 2 Press TUNING +/- repeatedly to tune in the desired station.**

Tips

- To improve broadcast reception, adjust the supplied antennas, or connect a commercially available external antenna.
- When an FM stereo program has static noise, press REPEAT/FM MODE on the remote until "MONO" appears. There will be no stereo effect, but the reception will improve.
- Press and hold TUNING +/- . The frequency indication changes and scanning stops when the system tunes in a station (Automatic Tuning).
- To record the radio programs, use manual recording (page 17).

Using the Radio Data System (RDS)

(European model only)

What is the Radio Data System?

Radio Data System (RDS) is a broadcasting service that allows radio stations to send additional information along with the regular program signal. RDS is available only on FM stations.*

Note

RDS may not work properly if the station you are tuned in is not transmitting the RDS signal properly or if the signal is weak.

* Not all FM stations provide RDS service, nor do they provide the same types of services. If you are not familiar with the RDS system, check with your local radio stations for details on RDS services in your area.

Receiving RDS broadcasts

Simply select a station from the FM band.

When you tune in a station that provides RDS services, the station name appears in the display.

To check the RDS information

Each time you press DISPLAY, the display changes cyclically as follows:


Station name* → Frequency → Program type*
→ Clock display → Effect status

* If the RDS broadcast is not properly received, the station name or program type may not appear in the display.

Loading a tape

- 1 Slide the lid open with your hand.
- 2 Insert a tape.

With the side you want to play/record facing up.

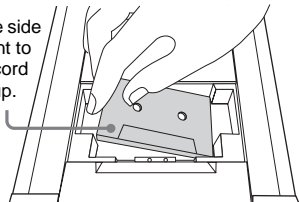

To remove the tape, lift up the tape from the side as shown in the illustration.

- 3 Slide the lid close with your hand.

Playing a tape

 
You can use TYPE I (normal) tape.

- 1 Load a tape.
- 2 Press **TAPE A/B** on the remote (or **FUNCTION** on the unit repeatedly) until “TAPE” appears.
- 3 Press **PLAY MODE** repeatedly to select “**↔**” to play one side, “**↔↔**” to play both sides, or “**↔↔**”* to play both sides repeatedly.

* The tape automatically stops after playing back five times.

- 4 Press **▶** on the remote (or **TAPE ◀▶** on the unit).

The tape starts playing.



Press **TAPE ◀▶** on the unit again to play the reverse side.

Other operations

To	Do this
Stop play	Press ■ .
Pause	Press ⏸ . Press again to resume play.
Fast-forward or rewind	Press ⏩/⏪ .

Finding a point in a track (Cue and Review)

To go forward

Press **▶▶** during playback, then press **▶** on the remote (or **TAPE ◀▶** on the unit) at the desired point.



To go back

Press **◀◀** during playback, then press **▶** on the remote (or **TAPE ◀▶** on the unit) at the desired point.

Recording your favorite CD tracks on a tape

— CD-TAPE Synchro Recording

You can record a whole CD on a tape. You can use TYPE I (normal) tape. The recording level is adjusted automatically. Use buttons on the unit for the operation.

- 1 Load a recordable tape.**
- 2 Press FUNCTION repeatedly (or TAPE A/B on the remote) until “TAPE” appears.**
- 3 Press PLAY MODE repeatedly to select “ \rightleftarrows ” to record on one side or “ \leftrightarrow ” to record on both sides.**
- 4 Press FUNCTION repeatedly (or CD on the remote) until “CD” appears.**
- 5 Load a disc you want to record.**
- 6 Press CD SYNC.**
The tape deck stands by for recording and the CD player pauses for playback. “REC” flashes.
When you want to record on the reverse side, press TAPE  .
- 7 Press REC PAUSE/START.**
Recording starts.

To stop recording

Press .

To record a disc by specifying track order

You can record only your favorite CD tracks using Program Play. Between steps 5 and 6, perform steps 2 to 6 of “Creating your own program” (page 11).

Note

When recording on the front side of the tape ends in the middle of a track, a program step is automatically added to pause CD playback.


Recording on a tape manually

— Manual Recording

You can record just the portions you like from a CD or radio program on a tape.

You can also record from connected components (see “Hooking up optional components” on page 25).

Use buttons on the unit for the operation.

- 1 Load a recordable tape.**
- 2 Press FUNCTION repeatedly (or TAPE A/B on the remote) until “TAPE” appears.**
- 3 Press PLAY MODE repeatedly to select “ \rightleftarrows ” to record on one side or “ \leftrightarrow ” to record on both sides.**
- 4 Press FUNCTION repeatedly (or CD, TUNER BAND or GAME (MD) on the remote) to select the desired source to record.**
 - CD: To record from this system’s CD player.
 - TUNER: To record from this system’s tuner.
 - MD: To record from the optional component connected to the MD IN jacks.
- 5 Press REC PAUSE/START.**
The tape deck stands by for recording. “REC” flashes.
When you want to record on the reverse side, press TAPE .
- 6 Press REC PAUSE/START, then start playing the desired source to record.**
Recording starts.

To stop recording

Press .

Note

You cannot listen to other sources while recording.

Tip

For recording from the tuner:

If noise is heard while recording from the tuner, move the respective antenna to reduce the noise.

Adjusting the sound

You can reinforce the bass and create a more powerful sound.

Press GROOVE.

Each time you press the button, the display changes as follows:

GROOVE ON* ↔ GROOVE OFF

* The volume switches to power mode, the equalizer curve changes, and “GROOVE” lights up.

Selecting the sound effect

Selecting the effect from the music menu

Press PRESET EQ repeatedly to select the preset you desire.

The preset name appears in the display. See the chart “Sound effect options”.

To cancel the sound effect

Press PRESET EQ repeatedly until “FLAT” appears.

Sound effect options

“SURR” lights up if you select an effect with surround effects.

MUSIC EQ

Effect

ROCK	Standard music sources
POP	
JAZZ	

MOVIE EQ

Effect

MOVIE	Soundtracks and special listening situations
-------	--

Selecting the surround effect

Press SURROUND on the remote.

Each time you press the button, the display changes as follows:

SURROUND ON* ↔ SURROUND OFF

* "SURR" lights up.

Falling asleep to music

— Sleep Timer

You can set the system to turn off after a certain time, so that you can fall asleep to music. Use buttons on the remote for the operation.

Press SLEEP repeatedly.

Each time you press the button, the minute display (the turn-off time) changes cyclically as follows:

AUTO* → 90MIN → 80MIN → 70MIN → ... → 10MIN → OFF

* The system automatically turns off in 100 minutes or after the current disc or tape finishes playing.

Other operations

To	Press
Check the remaining time**	SLEEP once.
Change the time to turn off	SLEEP repeatedly to select the time you want.
Cancel the Sleep Timer function	SLEEP repeatedly until "OFF" appears.

** You cannot check the remaining time if you select "AUTO".

Waking up to music

— Daily Timer

You can wake up to music at a preset time. Make sure you have set the clock (see "Setting the clock" on page 8).

Use buttons on the remote for the operation.

1 Prepare the sound source you want to play.

- CD: Load a disc. To start from a specific track, make a program (see "Creating your own program" on page 11).
- TAPE: Load a tape.
- TUNER: Tune in a radio station (see "Listening to the radio" on page 14).

2 Adjust the volume.

3 Press CLOCK/TIMER SET.

"DAILY SET" appears.

4 Press ENTER.

"ON" appears and the hour indication flashes.

5 Set the time to start playing.

Press **◀◀/▶▶** repeatedly to set the hour, then press ENTER.

 
The minute indication flashes.

Press **◀◀/▶▶** repeatedly to set the minute, then press ENTER.

6 Set the time to stop playing following the same procedure as step 5.

7 Press ◀◀/▶▶ repeatedly until the desired sound source appears.

Each time you press the button, the display changes cyclically as follows:



8 Press ENTER.

The type of timer ("DAILY"), the start time, the stop time, and the sound source appear in turn, before the original display returns.

9 Press I/⏻ to turn off the system.

Other operations

To	Do this
Check the setting	<ol style="list-style-type: none">1 Press CLOCK/TIMER SELECT.2 Press ◀◀/▶▶ repeatedly until "DAILY" appears, then press ENTER.
Change the setting	Start over from step 1.
Cancel the timer	<ol style="list-style-type: none">1 Press CLOCK/TIMER SELECT.2 Press ◀◀/▶▶ repeatedly until "TIMER OFF" appears, then press ENTER.

Notes

- You cannot activate the Daily Timer and recording timer at the same time.
- If you use the Daily Timer and the Sleep Timer at the same time, the Sleep Timer has priority.
- If the system is on at the preset time, the Daily Timer will not be activated.
- You cannot use the optional component connected to the MD IN jacks as sound sources for the Daily Timer.

Tip

The system turns on 15 seconds before the preset time.

Timer recording radio programs

You can record a preset radio station from a specified time.

To timer record, you must first preset the radio station (see "Presetting radio stations" on page 13) and set the clock (see "Setting the clock" on page 8).

Use buttons on the remote for the operation.

- 1 Tune in the preset radio station (see "Listening to a preset station" on page 14).**
- 2 Press CLOCK/TIMER SET.**
"DAILY SET" appears.
- 3 Press **◀◀/▶▶** repeatedly to select "REC SET", then press ENTER.**
"ON" appears and the hour indication flashes.
- 4 Set the time to start recording.**
Press **◀◀/▶▶** repeatedly to set the hour, then press ENTER.
The minute indication flashes.
Press **◀◀/▶▶** repeatedly to set the minute, then press ENTER.
- 5 Set the time to stop recording following the same procedure as step 4.**
The start time, the stop time, and the preset radio station to be recorded (e.g., "TUNER FM 5") appear in turn, before the original display returns.
- 6 Load a recordable tape.**
- 7 Press TAPE **◀▶** on the unit, if you want to switch the direction. Then press **■**.**
- 8 Press PLAY MODE repeatedly to select **↔** to record on one side or **↔↔** to record on both sides.**
- 9 Press I/⏻ to turn off the system.**

Other operations

To	Do this
Check the setting	<ol style="list-style-type: none">1 Press CLOCK/TIMER SELECT.2 Press ◀◀/▶▶ repeatedly until "REC SELECT" appears, then press ENTER.
Change the setting	Start over from step 1.
Cancel the timer	<ol style="list-style-type: none">1 Press CLOCK/TIMER SELECT.2 Press ◀◀/▶▶ repeatedly until "TIMER OFF" appears, then press ENTER.

Notes

- You cannot activate the Daily Timer and recording timer at the same time.
- If you use the recording timer and the Sleep Timer at the same time, the Sleep Timer has priority.
- If the system is on at the preset time, the timer recording will not be activated.
- The volume is reduced to minimum during recording.

Display

Turning off the display

— Power Saving Mode

The demonstration display (display window and buttons lighting and flashing even when the system power is off) and the clock display can be turned off to minimize the amount of power consumed during standby (Power Saving Mode).

Press DISPLAY repeatedly while the system is off until the demonstration display or the clock display disappears.

To cancel Power Saving Mode

Press DISPLAY repeatedly while the system is off. Each time you press the button, the display switches cyclically as follows:

Demonstration display → Clock display* →
No display (Power Saving Mode)

* The clock is displayed only if you set the clock.

Note

You cannot perform the following operations in Power Saving Mode.

- setting the clock
- changing the AM tuning interval (except for European, Russian, Middle Eastern and Philippine models)
- turning on the system by pressing the function buttons

Tip

The timer continues to operate in Power Saving Mode.

Adjusting the brightness of the display's backlight

You can change the brightness of the display's backlight.

Press DIMMER on the unit repeatedly.

Each time you press the button, the brightness changes cyclically as follows:
DIMMER 1 → DIMMER 2 → DIMMER 3 → DIMMER OFF

Viewing information about the disc in the display

You can check the playing time and remaining time of the current track or that of the current disc.

Checking the remaining time and titles (CD/MP3)

Press DISPLAY repeatedly during playback.

Each time you press the button, the display changes cyclically as follows:

■ When playing a CD

Elapsed playing time of the current track →
Remaining time of the current track*¹ →
Remaining time of the current disc*² →
Clock display (for eight seconds) →
Effect status

*¹ “_ _ _ _” appears when playing the program containing more than 20 tracks or 100 minutes.

*² “_ _ _ _” appears in ALL DISCS or Program Play mode.

■ When playing an MP3

Elapsed playing time of the current track →
Remaining time of the current track*¹ →
Remaining time of the current disc*² →
Track title*³ → Album name → Clock display (for eight seconds) → Effect status

*¹ “_ _ _ _” appears when playing the program containing more than 20 tracks or 100 minutes, or MP3 audio tracks.

*² “_ _ _ _” appears in ALL DISCS or Program Play mode, or when playing back MP3 audio tracks.

*³ When you play back a track with an ID3 tag ver. 1 (ver. 1.0 or 1.1), the ID3 tag appears. The ID3 tag displays only the track title information.

Checking the total playing time and titles (CD)

Press DISPLAY repeatedly in stop mode.

Each time you press the button, the display changes cyclically as follows:

■ When a CD is in Normal Play mode

TOC display*¹ or total number of albums on the current disc*² or total number of tracks on the current album*² → album name*² → Clock display (for eight seconds) → Effect status

*¹ TOC = Table of Contents; displays current disc number, total number of tracks on the disc, and total playing time of the disc (“- - - -” appears when a disc contains 20 tracks or more.).

*² For discs with MP3 audio tracks, album titles may not be displayed depending on the play mode.

■ When a CD is in Program Play mode

Last programmed track number and total playing time of the program* → Last program step number → Clock display (for eight seconds) → Effect status


* “- - - -” appears when the total playing time of the program exceeds 100 minutes.

Notes

- The total playing time is not displayed for a disc with MP3 audio tracks.
- ID3 tag applies only to version 1.
- If the MP3 file you play back has an ID3 tag, the ID3 tag information is displayed as a track title.
- In the following case, elapsed playing time and remaining time of the track may not be displayed accurately.
 - when an MP3 file of VBR (variable bit rate) is played.
 - when fast forward or fast reverse is performed.

Hooking up optional components

To enhance your system, you can connect optional components. Refer to the operating instructions provided with each component.

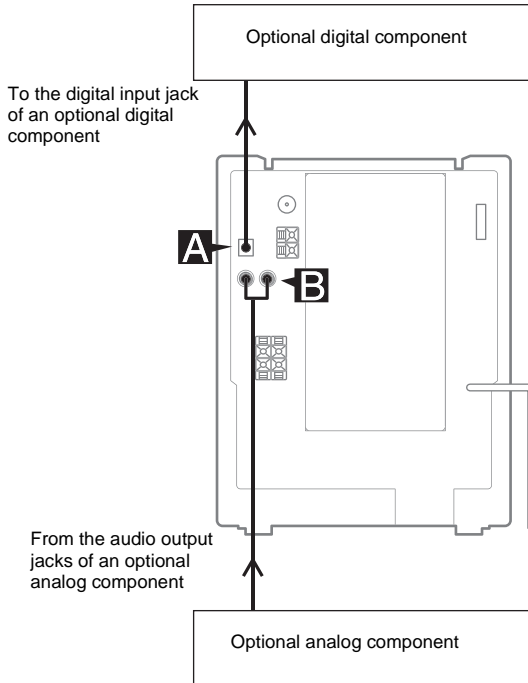

A OPTICAL CD DIGITAL OUT jack

Use a digital optical cable (square, not supplied) to connect an optional digital component (MD deck, etc.) to this jack. You can then output digital sound to that component from this system.

B MD IN jacks

Use audio cords (not supplied) to connect an optional analog component (MD deck, etc.) to these jacks. You can then listen to the sound from the component.

Listening to audio from a connected component

- 1 Connect audio cords.
See "Hooking up optional components" on page 25.
- 2 Press GAME (MD) on the remote (or FUNCTION on the unit repeatedly) until "MD" appears.
Start playing the connected component.

Recording audio from a connected component

- 1 Connect audio cords.
- 2 Start recording manually.
See "Recording on a tape manually" on page 17.

Recording on a connected component

- 1 Connect a digital optical cable.
See "Hooking up optional components" on page 25.
- 2 Start recording.
Refer to the operating instructions provided with the connected component.

Note

You can digitally record from the disc only. However, you cannot record from copy prohibited discs.

Problems and remedies

Should you encounter a problem with your system, do the following:

- 1 Make sure the power cord and speaker cords are correctly and firmly connected.
- 2 Find your problem in the troubleshooting checklist below and take the indicated corrective action.

If the problem persists after doing all of the above, consult your nearest Sony dealer.

When the I/⏻ indicator flashes

Immediately unplug the power cord and check the following items.

- Is the voltage selector set to the correct voltage?
Check the voltage for your region, then make sure the voltage selector is set correctly.
- Are the + and – speaker cords short-circuited?
- Are you using only the prescribed speakers?
- Is anything blocking the ventilation holes on the rear of the system?

After checking the above items and fixing any problems, connect the power cord again and turn on the system. If the indicator still flashes, or if the cause of the problem cannot be found even after checking all the above items, consult your nearest Sony dealer.

General

The display starts flashing as soon as you plug in the power cord even though you have not turned on the system (see step 4 of “Hooking up the system” (page 6)).

- Press DISPLAY twice while the system is off. The demonstration disappears.

“-- --” appears in the display.

- A power interruption has occurred. Set the clock (page 8) and timer settings (pages 21 and 22) again.

The clock setting/radio presetting/timer is canceled.

- Redo the following:
 - “Setting the clock” (page 8)
 - “Presetting radio stations” (page 13)
 - “Waking up to music” (page 20)
 - “Timer recording radio programs” (page 21)

There is no sound.

- Press VOL + on the remote repeatedly (or turn VOLUME on the unit clockwise).
- Make sure the headphones are not connected.
- Check the speaker connections (page 6).
- There is no audio output during timer recording.

Sound comes from one channel, or unbalanced left and right volume.

- Place the speakers as symmetrically as possible.
- Connect the supplied speakers.

Sound lacks bass.

- Check that the speaker’s + and – jacks are connected correctly.

There is severe hum or noise.

- Move the system away from the source of noise.
- Connect the system to a different wall outlet.
- Install a noise filter (commercially available) to the power line.

The timer cannot be set.

- Set the clock again (page 8).

The timer does not function.

- Check the timer setting and set the correct time (pages 21 and 22).
- Cancel the Sleep Timer function (page 20).

The remote does not function.

- Remove the obstacle.
- Move the remote closer to the system.
- Point the remote at the system’s sensor.
- Replace the batteries (R6/size AA).
- Locate the system away from the fluorescent light.

There is acoustic feedback.

- Reduce the volume.

The color irregularity on a TV screen persists.

- Turn off the TV set once, then turn it on after 15 to 30 minutes. If the color irregularity still persists, place the speakers farther away from the TV set.

CD/MP3 player

“LOCKED” appears.

- Contact your Sony dealer or local authorized Sony service facility.

The disc does not eject.

- You cannot eject the disc during CD Synchro Recording. Press **■** to cancel the CD Synchro Recording, then press any one of the buttons (DISC 1 **▲** – DISC 5 **▲** on the unit) to eject the disc.
- Consult your nearest Sony dealer.

Play does not start.

- Check whether a disc is loaded (The DISC indicator lights up when a disc is loaded).
- Wipe the disc clean (page 31).
- Replace the disc.
- Load the disc that this system can play (page 4).
- Load the disc correctly.
- Load the disc in the player with the label side up.
- Remove the disc and wipe away the moisture on the disc, then leave the system turned on for a few hours until the moisture evaporates.
- Press **▶** on the remote (or CD **▶** on the unit) to start play.

The sound skips.

- Wipe the disc clean (page 31).
- Replace the disc.
- Try moving the system to a place without vibration (e.g., on top of a stable stand).
- Try moving the speakers away from the system, or placing them on separate stands. When you listen to a track with bass sounds at high volume, the speaker vibration may cause the sound to skip.

Play does not start from the first track.

- Press PLAY MODE repeatedly until both “PGM” and “SHUF” disappear to return to Normal Play.

MP3 audio track cannot be played back.

- Recording was not performed according to the ISO 9660 level 1 or level 2 format, Joliet or Romeo in the expansion format.
- The MP3 audio track does not have the extension “.MP3”.
- The data is not stored in MP3 format.
- Discs containing files other than MPEG 1 Audio Layer-3 files cannot be played.

MP3 audio tracks take longer to play back than others.

- After the system reads all tracks on the discs, playback may take more time than usual if:
 - the number of albums or tracks on the disc is very large.
 - the album and track organization structure is very complex.

The album title, track title and ID3 tag do not appear correctly.

- Use a disc that conforms with ISO 9660 level 1, level 2, Joliet or Romeo in the expansion format.
- The disc ID3 tag is not ver. 1 (ver. 1.0 or 1.1).

Tuner

Severe hum or noise/stations cannot be received.

- Set the proper band and frequency (page 13).
- Connect the antenna properly (page 6).
- Find a place and an orientation that provide good reception, then set up the antenna again. If you cannot obtain good reception, we recommend you connect a commercially available external antenna.
- The supplied FM lead antenna receives signals along its entire length, so make sure you extend it fully.
- Locate the antennas as far away from the speaker cords as possible.
- Try turning off surrounding electrical equipment.

A stereo FM program cannot be received in stereo.

- Press REPEAT/FM MODE on the remote until “STEREO” appears.

Tape deck

The tape does not record or play, or there is a decrease in sound level.

- The heads are dirty. Clean them (page 32).
- The record/playback heads are magnetised. Demagnetise them (page 32).

The tape does not erase completely.

- The record/playback heads are magnetised. Demagnetise them (page 32).

There is excessive wow or flutter, or the sound drops out.

- The capstans or pinch rollers are dirty. Clean them (page 32).

Noise increases or the high frequencies are erased.

- The record/playback heads are magnetised. Demagnetise them (page 32).

The tape does not record.

- No cassette is loaded. Load a cassette.
- The tab has been removed from the cassette. Cover the broken tab with adhesive tape (page 32).
- The tape has wound to the end.

Optional components

There is no sound.

- Refer to General item “There is no sound.” (page 27) and check the condition of the system.
- Connect the component properly (page 25) while checking:
 - if the cords are connected properly.
 - if the cord plugs are firmly inserted all the way.
- Turn on the connected component.
- Refer to the operating instructions supplied with the connected component and start playing.
- Press GAME (MD) on the remote (or FUNCTION on the unit repeatedly) until “MD” appears.

The sound is distorted.

- Set the volume of the connected component lower.

If the system still does not operate properly after performing the above measures, reset the system as follows:

Use buttons on the unit for the operation.

- 1 Disconnect the power cord.
- 2 Reconnect the power cord.
- 3 Press ■, DISPLAY and DISC 1 at the same time.
- 4 Press I/⏻ to turn on the system.

The system is reset to the factory settings. You should set the settings you made, such as the preset stations, clock, and timer.

Messages

One of the following messages may appear or flash in the display during operation.

CD/MP3

NO DISC

There is no disc in the player.

NO STEP

There is no program step.

OVER

You have reached the end of the disc while pressing and holding ►► during playback or pause.

PUSH STOP

You pressed PLAY MODE during playback.

STEP FULL

You tried to program 26 tracks (steps) or more.

Tape

NO TAPE

There is no tape in the deck.

Timer

OFF TIME NG

The stopping time is the same as the starting time for the Daily Timer or timer recording operation.

SET TIMER

You tried to select the timer without first setting it.

Precautions

On operating voltage

Before operating the system, check that the operating voltage of your system is identical with the voltage of your local power supply.

On safety

- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.
- Unplug the system from the wall outlet (mains) if it is not to be used for an extended period of time. To disconnect the power cord (mains lead), pull it out by the plug. Never pull the cord itself.
- Should any solid object or liquid fall into the system, unplug the system and have it checked by qualified personnel before operating it any further.
- AC power cord must be changed only at the qualified service shop.

On placement

- Do not place the system in an inclined position.
- Do not place the system in locations where it is;
 - Extremely hot or cold
 - Dusty or dirty
 - Very humid
 - Subject to vibrations
 - Subject to direct sunlight.
- Use caution when placing the unit or speakers on surfaces that have been specially treated (with wax, oil, polish, etc.) as staining or discoloration of the surface may result.

On heat buildup

- Although the system heats up during operation, this is not a malfunction.
- Place the system in a location with adequate ventilation to prevent heat buildup in the system.
- If you continuously use this system at a high volume, the cabinet temperature of the top, side and bottom rises considerably. To avoid burning yourself, do not touch the cabinet.
- To prevent a malfunction, do not cover the ventilation hole for the cooling fan.

On the speaker system

This speaker system is not magnetically shielded and the picture on TV sets may become magnetically distorted. In such a case, turn off the TV set once, and after 15 to 30 minutes turn it on again.

If there seems to be no improvement, locate the speaker system further away from the TV set. Also, be sure not to place objects in which magnets are attached or used near the speaker system, such as audio racks, TV stands and toys. These way cause magnetic distortion to the picture due to their interaction with the system.

On operation

- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens inside the CD player. Should this occur, the system will not operate properly. Remove the disc and leave the system turned on for about an hour until the moisture evaporates.
- When you move the system, take out any disc.

If you have any questions or problems concerning your system, please consult your nearest Sony dealer.

Notes on discs


- Before playing, clean the disc with a cleaning cloth. Wipe the disc from the center out.
- Do not expose the disc to direct sunlight or heat sources such as hot air ducts, nor leave it in a car parked in direct sunlight.
- When using discs that have glue or similar tacky substance on the label side of the disc or that used a special ink when the label was printed, there is a chance that the disc or label may become attached to parts inside this unit. When this occurs, it may not be possible to remove the disc, and may also cause this unit to malfunction. Be sure to check that the label side of the disc is not sticky before using.
 - Rental or used discs with attached seals where the glue extends beyond the seal. The perimeter of the seal on the disc is tacky.
 - Discs that have labels printed using a special ink that feels tacky when touched.
- Discs with non-standard shapes (e.g., heart, square, star) cannot be played on this unit. Attempting to do so may damage the unit. Do not use such discs.

Cleaning the cabinet

Clean the cabinet, panel and controls with a soft cloth slightly moistened with mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as thinner, benzene or alcohol.

To save a tape permanently

To prevent a tape from being accidentally recorded over, break off the cassette tab from side A or B as illustrated.

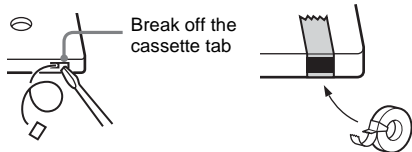

If you later want to reuse the tape for recording, cover the broken tab with adhesive tape.

Before placing a cassette in the tape deck

Take up any slack in the tape. Otherwise, the tape may get entangled in the parts of the tape deck and become damaged.

When using a tape longer than 90 minutes

The tape is very elastic. Do not change the tape operations such as play, stop, and fast-winding frequently. The tape may get entangled in the tape deck.

Cleaning the tape heads

Clean the tape heads after every 10 hours of use. Be sure to clean the tape heads before you start an important recording or after playing an old tape. Use a separately sold dry-type or wet-type cleaning cassette. For details, refer to the instructions of the cleaning cassette.

Demagnetising the tape heads

Demagnetise the tape heads and the metal parts that have contact with the tape after every 20 to 30 hours of use with a separately sold demagnetising cassette. For details, refer to the instructions of the demagnetising cassette.

Specifications

Main unit

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:

With 6 ohm loads, both channels driven, from 120 – 10,000 Hz: rated 60 watts per channel minimum RMS power, with no more than 10% total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

North American model:

Continuous RMS power output (reference):
60 + 60 watts (6 ohms at 1 kHz, 10% THD)

Total harmonic distortion less than 0.7% (6 ohms at 1 kHz, 30 W)

European and Russian models:

DIN power output (rated): 60 + 60 watts (6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):
60 + 60 watts (6 ohms at 1 kHz, 10% THD)

Music power output (reference):
120 + 120 watts (6 ohms at 1 kHz, 10% THD)

Other models:

The following measured at AC 120, 127, 220, 240 V 50/60 Hz

DIN power output (rated): 60 + 60 watts (6 ohms at 1 kHz, DIN)

Continuous RMS power output (reference):
60 + 60 watts (6 ohms at 1 kHz, 10% THD)

Inputs

MD IN (phono jacks):

Sensitivity 250 mV,
impedance 47 kilohms

Outputs

PHONES (stereo minijack):

accepts headphones of 8 ohms or more

OPTICAL CD DIGITAL OUT (Supported sampling frequency: 44.1 kHz)

SPEAKER: accepts impedance of 6 to 16 ohms.

CD player section

System	Compact disc and digital audio system
Laser	Semiconductor laser ($\lambda=780$ nm) Emission duration: continuous
Frequency response	2 Hz – 20 kHz (± 0.5 dB)
Wavelength	780 – 790 nm
Signal-to-noise ratio	More than 90 dB
Dynamic range	More than 90 dB

Tape deck section

Recording system	4-track 2-channel, stereo
Frequency response	50 – 13,000 Hz (± 3 dB), using Sony TYPE I cassettes
Wow and flutter	$\pm 0.15\%$ W. Peak (IEC) 0.1% W. RMS (NAB) $\pm 0.2\%$ W. Peak (DIN)

Tuner section

FM stereo, FM/AM superheterodyne tuner	
FM tuner section	
Tuning range	
Russian model:	65.0 – 74.0 MHz (There is no stereo effect) 87.5 – 108.0 MHz
Other models:	87.5 – 108.0 MHz
Antenna	FM lead antenna
Antenna terminals	75 ohms unbalanced
Intermediate frequency	10.7 MHz
AM tuner section	
Tuning range	
Pan-American model:	530 – 1,710 kHz (with the tuning interval set at 10 kHz) 531 – 1,710 kHz (with the tuning interval set at 9 kHz)
European, Russian, Middle Eastern and Philippine models:	531 – 1,602 kHz (with the tuning interval set at 9 kHz)
Other models:	530 – 1,710 kHz (with the tuning interval set at 10 kHz) 531 – 1,602 kHz (with the tuning interval set at 9 kHz)
Antenna	AM loop antenna
Antenna terminals	External antenna terminal
Intermediate frequency	450 kHz

Speaker	
Speaker system	3-way, 3-unit, bass-reflex type
Speaker units	
Woofer:	12 cm, cone type
Tweeter:	5 cm, cone type
Super Tweeter:	2 cm, dome type
Nominal impedance	6 ohms
Dimensions (w/h/d)	Approx. 167 × 280 × 230 mm
Mass	Approx. 2.6 kg net per speaker

General

Power requirements	
North American model:	120 V AC, 60 Hz
European and Russian models:	
	230 V AC, 50/60 Hz
Australian model:	230 – 240 V AC, 50/60 Hz
Argentine model:	220 V AC, 50/60 Hz
Mexican model:	120 V AC, 60 Hz
Saudi Arabian model:	120 – 127/220 or 230 – 240 V AC, 50/60 Hz
	Adjustable with voltage selector
Other models:	120 V, 220 V or 230 – 240 V AC, 50/60 Hz
	Adjustable with voltage selector


Power consumption	
European and Russian models:	
	100 watts
	0.35 watts (at the Power Saving Mode)
Other models:	100 watts
Dimensions (w/h/d)	Approx. 199 × 252 × 400 mm
Mass	Approx. 7.0 kg
Supplied accessories:	Remote Commander (1) Batteries (2) AM loop antenna (1) FM lead antenna (1) Speaker pads (8)

Design and specifications are subject to change without notice.

List of button locations and reference pages

How to use this page

Use this page to find the location of buttons and other parts of the system that are mentioned in the text.

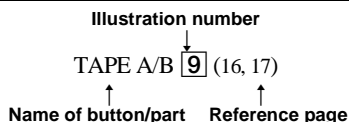

Main unit

ALPHABETICAL ORDER

A - G


CD SYNC **9** (17)
 DIMMER **19** (23)
 DISC 1 - 5 **12** (9, 10, 11, 29)
 Disc slot **14**
 DISPLAY **6** (15, 22, 23, 29)
 Display window **3**
 FUNCTION **20** (9, 11, 16, 17, 25)
 GROOVE **17** (18)

P - Z

PHONES jack **13**
 PLAY MODE **7** (9, 11, 16, 17, 21)
 PRESET EQ **18** (18)
 PRESET/ALBUM +/- **21** (10, 11, 13, 14)
 REC PAUSE/START **10** (17)
 Remote sensor **2**
 REPEAT **8** (11)
 Tape deck **4**
 TUNER/BAND **5** (13, 14, 17)
 TUNING +/- **11** (13, 14)
 VOLUME **16** (20)

BUTTON DESCRIPTIONS

I/⏻ (power) **1** (7, 8, 14, 20, 21, 29)
 ◀▶ (rewind/fast forward) **11** (10, 16)
 ◀▶▶▶ (go back/go forward) **11** (8, 10, 11, 20, 21)
 ■ (stop) **5** (10, 16, 17, 21, 29)
 || (pause) **5** (10, 16)
 CD ▶ (play) **5** (10, 12)
 TAPE ◀▶ (play) **5** (16, 17, 21)
 DISC 1 ▲ - DISC 5 ▲ (eject) **15** (9, 10)

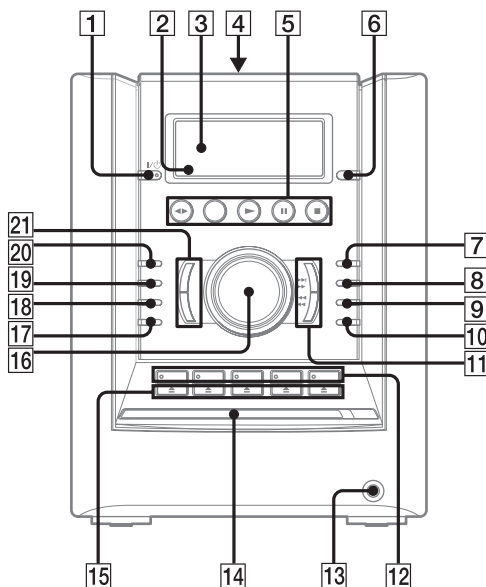

Remote control

ALPHABETICAL ORDER

A - G

- ALBUM +/- [14] (10, 11)
- CD [19] (9, 11, 17)
- CLEAR [5] (12)
- CLOCK/TIMER SELECT [2] (21, 22)
- CLOCK/TIMER SET [3] (8, 20, 21)
- DISPLAY [6] (15, 22, 23, 29)
- D. SKIP [7] (10, 11)
- ENTER [16] (8, 11, 13, 20, 21)
- GAME (MD)*1 [10] (17, 25)
- GROOVE [13] (18)

I - Z

- ILLUMINATION*2 [15]
- PLAY MODE [20] (9, 11, 16, 17, 21)
- PRESET EQ [17] (18)
- PRESET +/- [5] (13, 14)
- REPEAT/FM MODE [21] (11, 14)
- SLEEP [1] (20)
- SURROUND [11] (19)
- TAPE A/B*3 [9] (16, 17)
- TUNER BAND [18] (13, 14, 17)
- TUNER MEMORY [8] (13)
- TUNING +/- [5] (13, 14)
- VOL +/- [12] (20)


BUTTON DESCRIPTIONS

- I/⏻ (power) [4] (7, 8, 20, 21, 29)
- ◀◀/▶▶ (rewind/fast forward) [5] (10, 16)
- ◀◀/▶▶/▶▶ (go back/go forward) [5] (8, 10, 11, 20, 21)
- (stop) [5] (10, 16, 17, 21, 29)
- ⏸ (pause) [5] (10, 16)
- ▶▶ (play) [5] (10, 12, 16)

*1 This button is used to switch to MD function.

*2 This button cannot be used in this system.

*3 This button is used to switch to TAPE function.

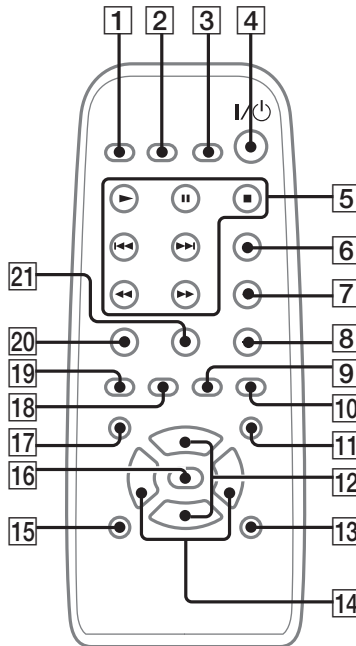

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>