

SONY[®]

User guide

Xperia[™] SmartTags
NT1/NT2

Contents


Introduction.....	3
Getting started.....	4
Turning on the NFC function.....	4
NFC detection area.....	4
Using Smart Connect to manage your tags.....	4
Using Xperia™ SmartTags.....	5
Ready-to-go SmartTag events.....	5
Setting up a SmartTag.....	6
Personalising your Xperia™ SmartTags.....	7
Important Information.....	7
Legal information.....	9

Introduction

The Xperia™ SmartTags suite uses NFC (Near Field Communication) technology to activate different events on your phone. An "event" is a set of actions associated with a particular SmartTag. Each tag in the suite is pre-configured with an event. When you swipe one of the SmartTags with your phone, the event associated with the tag is activated. For example, if you swipe the "Car" tag, the Bluetooth function gets turned on and the Navigation application is launched.

You can change the actions associated with a SmartTag and set up different SmartTags to suit your various needs. For example, you can remove Bluetooth from your "Car" tag and change the sound mode. By setting up SmartTags for different situations, you don't need to turn on the associated functions manually every time.

- ! Use the dual adhesive stickers supplied with your Xperia™ SmartTags to place them in convenient locations. Do not place the tags on or stick them to metal surfaces in order to avoid damaging the magnetic chips inside the tags.
- 💡 Compatibility information for your Xperia™ SmartTags is available at www.sonymobile.com. Scan the QR code™ below to get product information and watch a setup video online.

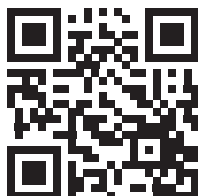

Getting started

Turning on the NFC function

To get started, you must first turn on the NFC function in your phone so that the phone can recognise NFC tags.

To turn on the NFC function

- 1 From your phone's main application screen, find and tap **Settings > More....**
 - 2 Mark the **NFC** checkbox.
- ! Make sure that the devices you are sharing with also have NFC turned on.

NFC detection area



The location of the NFC detection area in a phone can vary depending on the phone. You can swipe an NFC tag against the back of your phone to detect where the NFC detector is located. For more information, refer to the User guide of your phone.

Using Smart Connect to manage your tags

The Smart Connect application, formerly known as LiveWare™ manager, helps you to use and manage your SmartTags. Smart Connect is sometimes installed on your phone at purchase. For optimum performance, you should always have the most up-to-date version installed. You can download it from Google Play™.





- ! Smart Connect is only available for phones running Android version 4.0 or later. Before downloading applications from Google Play™, make sure you have an Internet connection and a Google™ account. You may also need to have a memory card inserted in your phone.





To install Smart Connect

- 1 From your phone's main application screen, find and tap **Play Store**.
- 2 Tap  to display the search field, then type *Smart Connect*.
- 3 Tap  to launch a search on Google Play™.
- 4 Select **Smart Connect** in the result list, then follow the instructions to install the application on your phone.

Using Xperia™ SmartTags

Ready-to-go SmartTag events

	<p>Colour: Orange</p> <p>Name: Listen</p>	<p>Actions at start:</p> <ul style="list-style-type: none"> Ring signal normal level Media volume level set to 80% WALKMAN application open Music plays Post to Facebook Timeline <p>Actions at end:</p> <ul style="list-style-type: none"> Media volume level set to 50% Music stops playing
	<p>Colour: Grey</p> <p>Name: Active</p>	<p>Actions at start:</p> <ul style="list-style-type: none"> Loud ringtone volume Media volume level set to 70% GPS on Open a browser window to the URL specified Music plays in the background Post to Facebook Timeline <p>Actions at end:</p> <ul style="list-style-type: none"> Ring signal normal level Music stops playing GPS off Media volume level set to 50%
	<p>Colour: Green</p> <p>Name: Play</p>	<p>Actions at start:</p> <ul style="list-style-type: none"> Loud ringtone volume Media volume level set to 80% Open a browser window to the URL specified Post to Facebook Timeline <p>Actions at end:</p> <ul style="list-style-type: none"> Ring signal normal level Media volume level set to 80%
	<p>Colour: Purple</p> <p>Name: Watch</p>	<p>Actions at start:</p> <ul style="list-style-type: none"> Loud ringtone volume Media volume level set to 80% Wi-Fi on YouTube application open Post to Facebook Timeline

		Actions at end: Ring signal normal level Wi-Fi off Media volume level set to 50%
	Colour: Red Name: Home	Actions at start: Wi-Fi on Loud volume Launch news & weather
	Colour: Black Name: Bedroom	Actions at start: Alarm mode on Silent mode on Wi-Fi off Bluetooth off
	Colour: Blue Name: Car	Actions at start: Bluetooth on Navigation application open
	Colour: White Name: Office	Actions at start: Bluetooth on Wi-Fi on Calendar application open

! Note that you can add or remove actions to/from all of the above SmartTags and customise them to your individual needs. If some of the SmartTags described above are not included with the phone, you may purchase them separately.

Setting up a SmartTag

Before you can start using SmartTags, you must first set up each tag to work with your phone. After you set up the tags, your phone can recognise them and activate the set of actions associated with each tag.

To scan a SmartTag for the first time



- 1 Make sure that your phone has the NFC function turned on and that the phone screen is active.
- 2 Place your phone over the SmartTag so that the phone's NFC detection area touches the tag. Your phone vibrates and a popup window opens.
- 3 Tap **Next**. Your tag is saved in the Smart Connect application as a SmartTag.
- 4 Place your phone over the SmartTag again so that the phone's NFC detection area touches the tag. A popup window shows which actions have been activated.

Personalising your Xperia™ SmartTags

You can change the behavior of your tags by adding or removing the actions associated with them. For example, you can make a tag launch your favourite applications and music, display the latest news direct on your phone screen, and adapt the volume level to your surroundings. You can also set an activity period for a SmartTag so that you can control when the actions associated with a particular tag start and finish.

To change the actions associated with a SmartTag

- 1 From your phone's main application screen, find and tap **Smart Connect**.
- 2 Tap the SmartTag that you want to edit.
- 3 To add an action, tap **+** and select the desired action.
- 4 To delete an action, touch and hold on the action that you want to delete, then tap **Delete**.

To change the status of existing actions

- 1 From your phone's main application screen, find and tap **Smart Connect**.
- 2 Tap the SmartTag that you want to edit.
- 3 Tap the action that you want to edit, then select an option.

To set an activity period for a SmartTag

- 1 From your phone's main application screen, find and tap **Smart Connect**.
- 2 Tap the SmartTag that you want to edit, then tap **+**.
- 3 Tap **Time** and set the desired time period.

Important Information

Children



Warning! Keep out of the reach of children. Do not allow children to play with phones or accessories. They could hurt themselves or others. Products may contain small parts that could become detached and create a choking hazard.

Disposal of old electrical and electronic equipment and battery



This symbols on the electronic product or on its packaging indicates that the electronic product inclusive the battery should not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Do not attempt to remove internal batteries.

Internal batteries shall be removed only by a waste treatment facility or trained service professional.

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product, by calling a Sony Contact Center or at www.sonymobile.com/recycling.

Legal information

Sony NT1/NT2

Prior to use, please read the *Important information* leaflet separately provided.

This User guide is published by Sony Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Mobile Communications AB, 2012

Publication number: 1263-3650.2

All product and company names mentioned herein are the trademarks or registered trademarks of their respective owners. Any rights not expressly granted herein are reserved. All other trademarks are property of their respective owners.

Visit www.sonymobile.com for more information.

All illustrations are for illustration only and may not accurately depict the actual accessory.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>