

M15ES




Getting Start

Table of content	1
View of Monitor	2
Unpacking	3
Warning	3
Hardware Installation	
Hardware Installation Step by Step	
Angle of Inclination	
- Hanging	6
Menu control button	
Key introduction	
Cleaning Notices	
Precaution	8
Troubleshooting	8
OSD (On-Screen Display) Menu Mode	
Display Mode	
Specification	11


All Information in this manual may change from time to time without prior notice.

View of Monitor

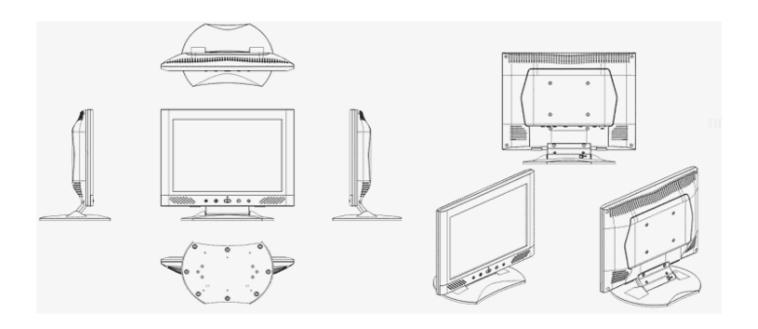

Unpacking

Our 15" LCD monitor shall be content with these following items. Make sure you get all these set ready, otherwise contact to your dealer or store which you purchased it. At last, feel free to contact us.

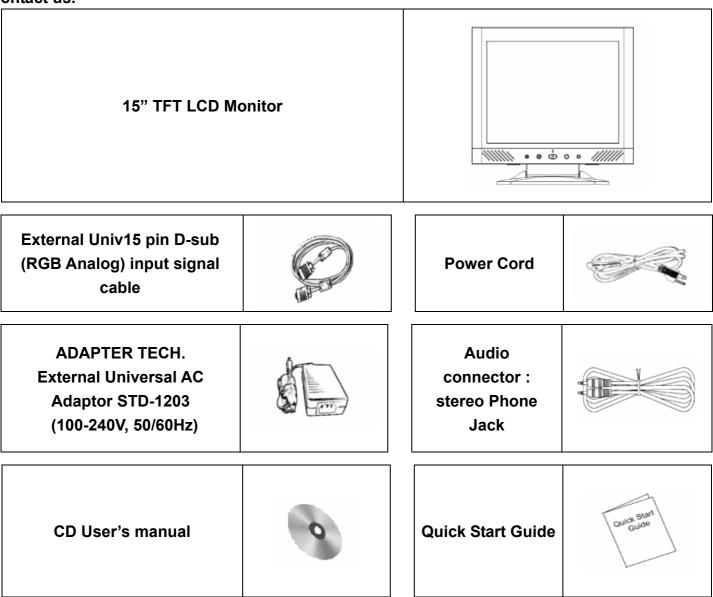


Warning

- 1. Make sure that the system power is turned off.
- 2. Plug the signal cable to the signal connector at the rear of PC.
- Plug adapter output cable to the jack at the rear of LCD monitor and the power cord to the adapter.
- 4. Connect the power cord to power source.
- Turn on the computer and the monitor. 5.
- For the best quality of the performance, we suggest you to set resolution as page 11 6. (Display Mode).
- 7. The lock (on the stand) must be locking in while using it.

Hardware Installation

Be carefully to your LCD monitor, it's very exquisite but easy to broken. Turn off LCD's and PC's power before you set it up. Follow our installation step by step.

<u>Input</u>

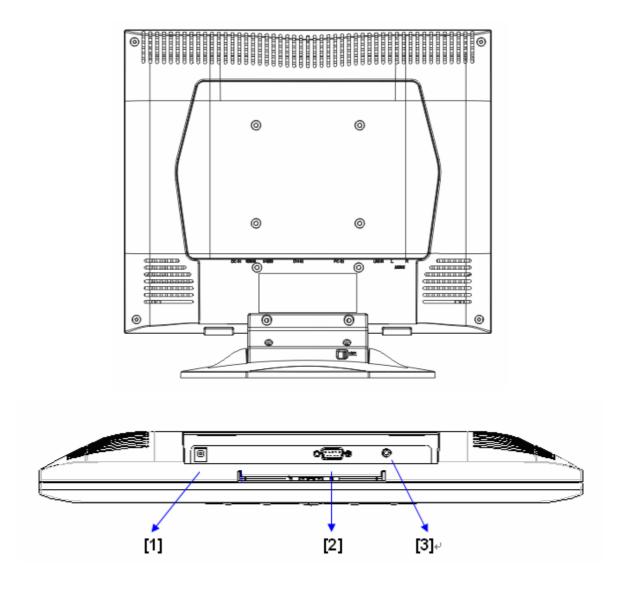

[1] DC port: This is for connecting the power cable

[2] PC In: This can be connected with the D-Sub 15 pin signal Cable.

[3] LINE in: This can be connected to the audio-out connector of any sound resource.

Hardware Installation Step by Step

- 1. Turn your LCD opposite carefully which can see all the connection port.
- 2. Inset the signal cable such as RGB analog (standard) to its own port, and the other side connects to computer.





3. Inset the Audio connector to its own port, and the other side connects to computer line out.





4. Put AC Adaptor and Power Cord together.





5. Inset the DC cable to its own port (DC in), and the other side connect to socket.





6. Congratulations you had done with it. You can enjoy the excellent performance.

Angle of Inclination

- 1. In normal condition
- 2. With Lock in, LCD lay back 0° ~ 15° (positive and negative 2°)
- 3. With Lock off, LCD can lay back up to 90° for hanging








Hanging


- 1. Unlock
- 2. Lay back the stand
- 3. Use the tape measure to determine the position of two holes and mark them down. (112mm of the total length from eight edges)
- 4. Pick the right drill to bore holes in the wall.
- 5. Hammer the plastic ribbed anchor onto the holes for screw.(save 5 mm for Hanging)
- 6. Hang the LCD by use its stand to mount the screws.





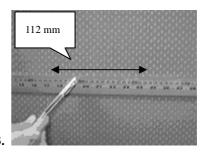




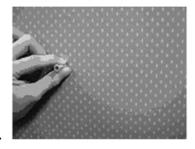



Monitor Adjusting

Menu control button

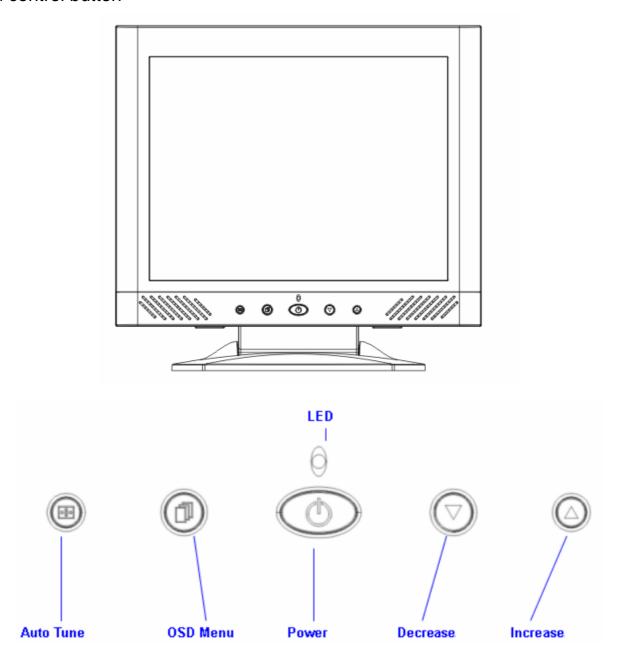

There 5 keys for user to set up the monitor, including, "OSD menu ", "Auto Tune", "Increase<+>","Decrease<->", "Power". The following descriptions are the introduction of these Keys.

Key Introduction

- 1. "Power": Turn the LCD power on and off. When the power is on, the light is showing green, standby will be orange.
- 2. "Auto Tune": Auto adjust, menu left adjustment.
- 3. "OSD menu": Press the button to OSD menu, menu right adjustment.
- 4. "Increase <+>": Increase the option value in the OSD menu.
- 5. "Decrease <->": Decrease the option value in the OSD menu.

Cleaning Notice

- 1. Be gentle to clean the screen.
- 2. Never, ever, using any kind of corrosiveness chemical dissolvent to clean the screen, it may hurt your screen surface.
- 3. We suggest that using a clean camel hair brush or a soft, clean, lint-free cloth to wipe the screen.
- 4. Don't give any pressure directly to the LCD

Precaution

- 1. Do not expose the monitor to direct sunlight or heat.
- 2. Do not spill liquid on the monitor.
- 3. Do not attempt to open the monitor. You may be hurt by electric shock. For service, call your place of purchase.
- 4. Do not use your monitor when magnets or electronic products are operating nearby.
- 5. Do not use harsh chemicals or strong cleaning solvents to clean the monitor screen. Wipe it with clean, soft clothes applied with mild solution.
- 6. Do not place anything on your monitor. Bad ventilation may elevate temperature in the monitor.
- 7. Don't use your fingers to touch the LCD Screen, directly. Fingerprint that contains oil and may by difficult to clear.

Troubleshooting

Make sure that your monitor is properly installed if you have encountered any trouble using this product.

There is no picture on the screen.

Check:

- 1. Power saving mode. Press any key and move the mouse to deactivate the mode.
- 2. Signal cable connector pins. If there are bent or missing pins, consult your place of purchase.
- Characters look too dark or too light

Check:

- 1. Using OSD Menu to adjust the Brightness.
- When your monitor shall be Adjusted?

Check:

- 1. If the resolution of frequency is being changed.
- . The Text appears on the screen are unclear.

Check

1. Make sure the resolution or refresh rate match with the Display Mode.


OSD (On-Screen Display) Menu Mode

Option select


- 1. Press the OSD button to access menu.
- 2. Using Auto Tune for left adjustment.
- 3. Press OSD again for right adjustment.






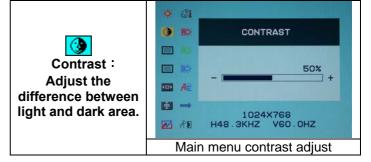





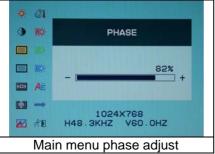

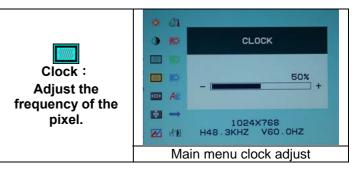




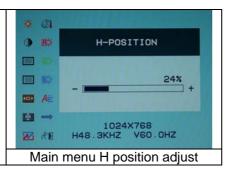

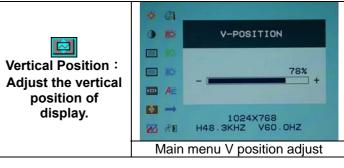







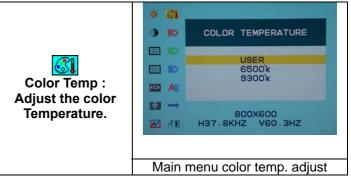







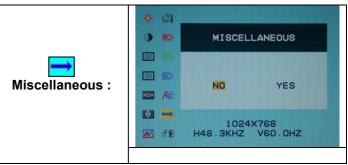


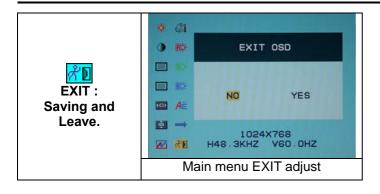



Miscellaneous

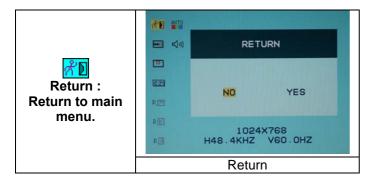


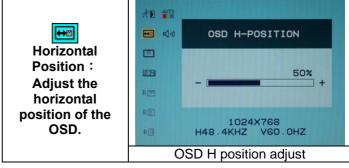

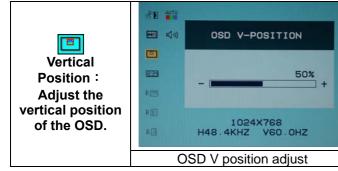

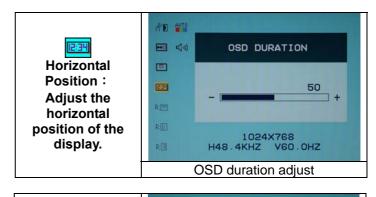

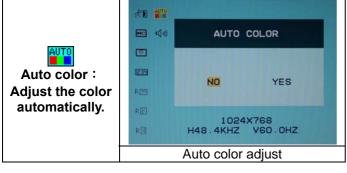

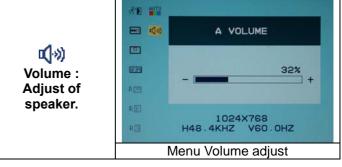

DISPLAY MODE

Incoming Display Mode				
Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)		
640X350	31.475	70.100		
640X480	31.469	59.940		
640X480	37.500	75.000		
720X400	31.469	70.087		
800X600	37.879	60.317		
800X600	46.875	75.000		
1024X768	48.363	60.004		
1024X768	60.023	75.029		

- 1. We offer you 8 available modes compatible with Windows.
- 2. If any interference occurs on your screen while you modulating your PC or OSD. It is normal.
- 3. To have Best quality present on the PC, remember to upgrade your video card Driver. We strongly recommend you to choose a Mode listed in the table.
- 4. The other Modes may not be supported that are not list on the table above
- 5. You may use the power management on your computer. It's good for last service life of the product.

Specification

LCD Panel	Туре	15.0" TFT Active Matrix LCD Display
	Viewing Angle	H:140°, V:125°
	Contrast Ratio	400 : 1 (Typical)
	Brightness	250 cd/m ² (Typical)
	Response Time(Tr+Tf)	(14+2) 16 ms
	Display Colors	16.7M colors(True color)
	Max Resolution	1024X768(XGA)
	Pixel Pitch	0.297mm(H)x0.297mm(V)
Input Signals	RGB Analog	Video Level:0.7Vp-p(75Ω)
	_	Sync TTL with 75Ω internal pull-up resistors
		Frequency FH:30~62KHz
		FV:56~75Hz
Compatibility	PC	Up to 1024X768@75Hz(Non-interlaced)
Connector	RGB Analog	D-sub 15-pins
	Audio	Stereo Phone Jack, RCA-Jack(L/R)*
	Power	12V/DC Power Jack
Power	Voltage	100-240V, 50/60Hz(universal) via external AC Adapter
	Consumption	Active < 35 Watt Max
	Power saving mode	Standby < 3Watt
Internal Speaker	_	2Wx2(Stereo)
User Interface	LED Indicator	Active - Green
		Standby - Orange
		Off - Turn off
Operating Condition	Temperature	5°C~40°C
	Air Humidity	20% ~ 80% R.H.
Dimensions	Physical	309mm(H) x 375mm(W) x 59mm(D)
(W x H x D)	(with Stand)	355mm(H) x 375mm(W) x 59mm(D)
Net Weight		4.1Kg
DDC		DDC1/DDC2B Compliant
Power Management		VESA DPMS, EPA Energy Star
Regulation		CE, FCC, VCCI, UL/CUL, BSMI
(Certifications)		

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com