

Separating the Cabinet (Models KP-65WS510, KDP-65WS550)

This flyer provides instructions on the separation of the projection TV cabinet.

IMPORTANT: This projection TV weighs over 300 pounds and has many delicate internal components.


Transportation, disassembly, and reassembly should be done by authorized Sony Dealers and Service Personnel ONLY.

Notes on Disassembly and Reassembly


- The disassembly procedure requires at least 2 people.
- You will need the following tools for this procedure: a screwdriver with either a philips or a 1/4" hex-head bit; an open-end or socket 7/16" wrench.
- The CRT projection assembly is exposed during the separation of the cabinet. Be careful to ensure that the top portion of the cabinet does not contact the CRT projection assembly.

DISASSEMBLY


- 1** Using a screwdriver with a philips or a 1/4" hex-head bit, unscrew the eight screws located on the rear panel of the TV's cabinet.

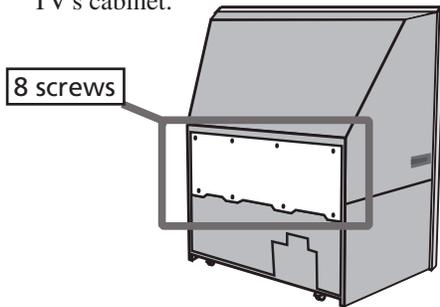


- 2** Being careful not to contact the CRT projection assembly, remove the back panel.

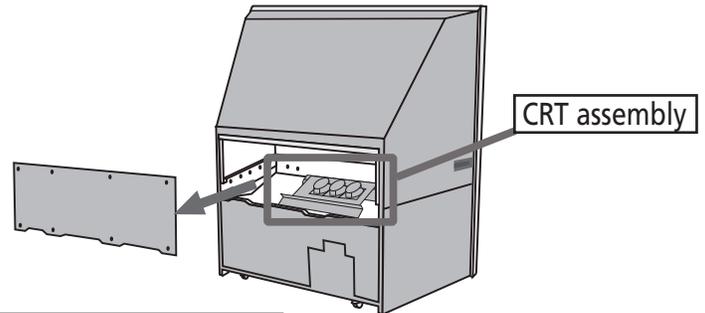


- 3** Using an open-end or socket 7/16" wrench, unfasten the 14 bolts located inside the cabinet, where the top and bottom portion of the cabinet meet.

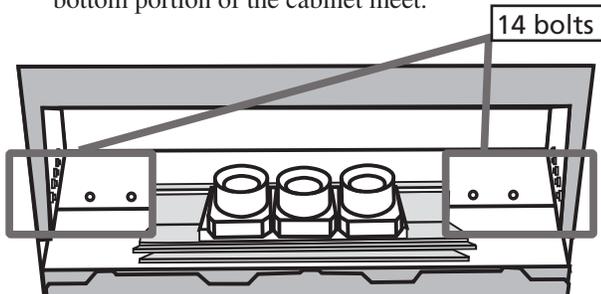


- 4** Disconnect the wire harness connector, located to the right of the CRT assembly.

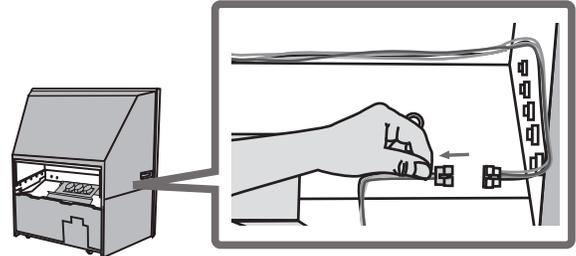

- 5** Being careful not to contact the CRT assembly, slide the top portion of the cabinet back slightly.

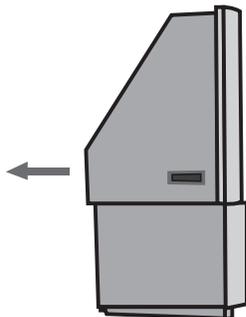

- 6** Lift the top portion of the cabinet directly up. It should separate easily.

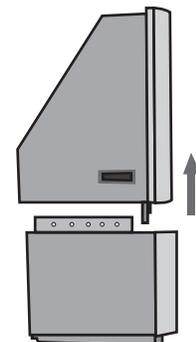

IMPORTANT: Avoid contacting the CRT assembly when separating or reattaching the top and bottom portions of the cabinet.

ATTENTION: The reassembly process is the reverse of the disassembly process.

IMPORTANT: When reassembling the cabinet, first fasten the two bolts on each side of the CRT assembly (see step 3) to ensure that the top and bottom portions of the cabinet are aligned properly.

IMPORTANT: When reassembling the cabinet, make sure that the wire harness is reconnected (see step 4). If this is not done, the TV's Flash Focus feature will not function.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>