


Quick Start Guide

Main Room – Wireless Remote Control

START HERE – Select your source.** Press the TV, CABLE, SATELLITE, HIGH DEFINITION CABLE/SATELLITE, DVD, VCR, CD or TUNER button.* The system will automatically turn on the correct components and select the correct inputs.

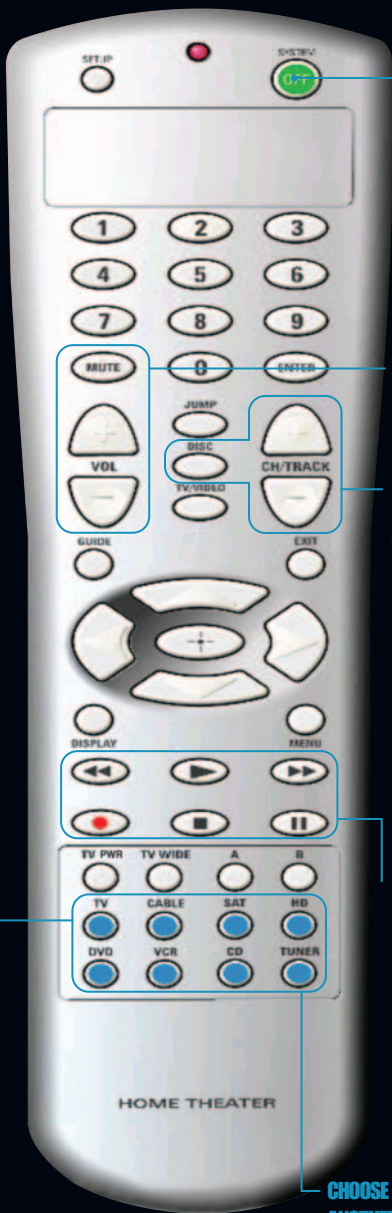

WHEN YOU'RE DONE –

press the System OFF button and the entire system will switch off.

ADJUST VOLUME –

with the VOLUME +/- and MUTE buttons.

CHANGE THE CHANNEL OR TRACK –

When watching TV you can easily change the channel. While watching a DVD or listening to your favorite CD you can change tracks. Plus with the DISC skip button you can change discs.

CONTROL PLAYBACK –

of CD, DVD and VHS with the familiar buttons.

CHOOSE ANOTHER SOURCE –

and the system will automatically switch on the correct components.

**Make certain to point the remote at the system until the LED stops flashing.

*Cable or Satellite require separate set-top box, not included.


Quick Start Guide

Remote Room –

In-wall Mute and Volume Control

ADJUST VOLUME –

with the in wall volume control.

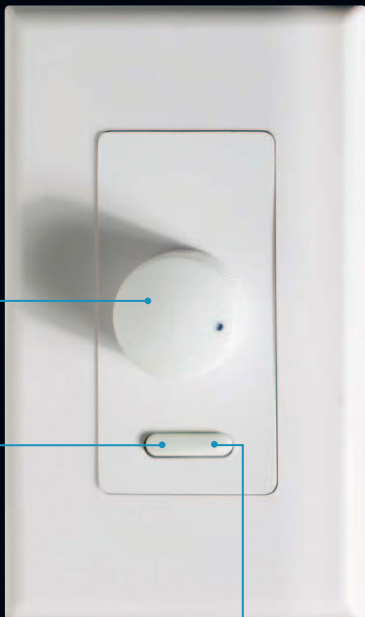

LISTEN IN – to whatever source is playing in the Main Room by pressing the MUTE button.

TURN OFF – by pressing the MUTE button again.

Consumer Support:

Hotline: 1-877-619-7669

email: sonynewhome@info.sel.sony.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>