

# ***Remote Commander***

---

Operating Instructions

***RM-LG112***

---

## Precautions

### On safety

Should any solid object or liquid fall into the cabinet, unplug the receiver and have it checked by qualified personnel before operating it any further.

### On operation

Before connecting other components, be sure to turn off and unplug the receiver.

### On cleaning

Clean the cabinet, panel and controls with a soft cloth slightly moistened with a mild detergent solution. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzine.


If you have any question or problem concerning your remote, please consult your nearest Sony dealer.

---

## Before you use your remote

### Inserting batteries into the remote

Insert two R6 (size-AA) batteries with the + and – properly oriented in the battery compartment.

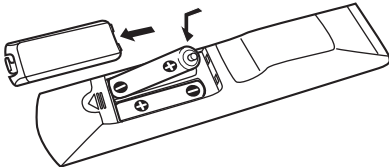

### Tip

Under normal conditions, the batteries should last for about 6 months. When the remote no longer operates the receiver, replace all the batteries with new ones.

### Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with old ones.
- Do not expose the remote sensor of the receiver to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you don't use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

# Table of Contents

---

## Location of Parts and Basic Remote Operations

Parts description .....	4
Table of buttons used to control each component .....	8

---

## Advanced Remote Operations

Programming the remote.....	9
Learning the commands of your components .....	12
Performing several commands in sequence automatically .....	13
— Macro Play	
Selecting the mode of the remote.....	14

---

## Additional Information

Troubleshooting .....	15
Specifications .....	15


## Location of Parts and Basic Remote Operations

This chapter provides information on the location of buttons and how to use them to perform basic operations.

However, some functions explained in this section may not work depending on the model of the receiver.

For the functions of the receiver you purchased, refer to the Operating Instructions supplied with the receiver.

## Parts description

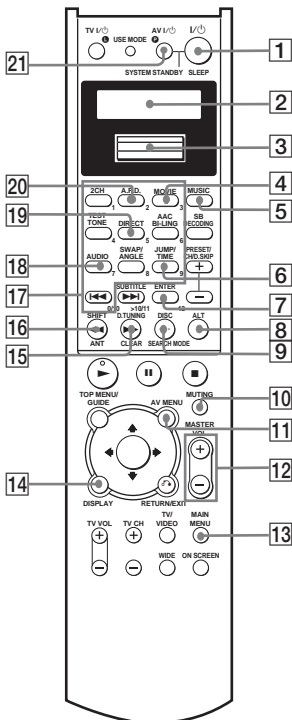

### I/O 1

Press to turn the receiver on or off.

### A.F.D. 20

Press to set the receiver to automatically select the appropriate decoding mode for the input signal.

### ALT 8

Press to change remote key function to activate those buttons with orange printing.

### ANT\* (After pressing ALT) 16

When you selected VCR, press to select output signal from antenna terminal: TV signal or VCR program.

### AUDIO 18

Changing the sound to Multiplex, Bilingual or Multi channel TV sound.

### AV MENU 11

Press to display the menus of the VCR, satellite tuner, or DVD.

### AV I/O 21

Press to turn the selected audio and video components on or off.

If you press the I/O switch at the same time, it will turn off the receiver and other Sony audio/video components (SYSTEM STANDBY).

### Note

The function of the AV I/O switch changes automatically each time you select the input with the easy scroll key (3). Depending on the component, the above operation may not be possible or may operate differently than described.

### CLEAR\* (After pressing ALT) 15

When you selected CD player or DVD player, press if you made a mistake when you press the numeric buttons or press to return to the continuous play, etc.

### D.TUNING\* 15

When you selected tuner, press to enter direct tuning mode.

### DIRECT 19

Press to select DIRECT function.

### DISC\* 9

When you selected CD player or video CD player, press to select a disc directly (multi-disc changer only).

**DISPLAY\* [14]**

Press to select the information displayed on the display of the receiver or TV screen.

**Display [2]**

Select the input, macro list and command mode of the remote.

**Easy scroll key [3]**

Move to select the input and press to enter the selection. The components are factory assigned to the inputs as follows. When you want to assign other components, program the remote following the steps on "Programming the remote" on page 9.

Input(s)	Assigned component(s)
VIDEO 1	VCR (VTR mode 3)
VIDEO 2	VCR (VTR mode 1)
VIDEO 3	VCR (VTR mode 2)
DVD	DVD player
TV/SAT	TV tuner
TAPE	Tape deck (B)
MD/DAT	MD deck
CD/SACD	CD player
TUNER	Built-in tuner
PHONO	Turntable
MULTI	Component connected to the multi channel input jacks on the receiver
M1, M2*	(Macro list)

\* For details, see page 13.

See the table on page 8 for information on the buttons that you can use to control each component.

Note that the inputs are factory-set as described in the table above. If you want to change the factory setting of the buttons to match your particular components, do the procedure "Programming the remote" on page 9.

**ENTER (After pressing ALT) [7]**

After selecting a channel, disc or track using the numeric buttons, press to enter the value.

**JUMP/TIME\* [6]**

**If you selected TV:**

Press to toggle between the previous and the current channels.

**If you selected CD player, video CD player, or DVD player:**

Press to display the time information.

**MAIN MENU [13]**

Press to select the menu of the receiver.

**MASTER VOL +/- [12]**

Press to adjust the volume level of all speakers at the same time.

**MOVIE [4]**

Press to select the sound fields for movies.

**MUSIC [5]**

Press to select the sound fields for music.

**MUTING [10]**

Press to mute the sound.

**Numeric buttons (1–9, 0/10)\* (After pressing ALT) [17]**

**If you selected tuner:**

Use with SHIFT to select tuner preset station numeric input during DIRECT TUNING or MEMORY mode.


**If you selected CD player, video CD player, DVD player, MD deck, or DAT deck:**

Press to select track numbers. 0/10 selects track 10.

**If you selected TV, VCR, or satellite tuner:**

Press to select channel numbers.

\* The function of these buttons switch automatically each time you select the input with the easy scroll key ([3]). Depending on the component, the above operation may not be possible or may operate differently than described.

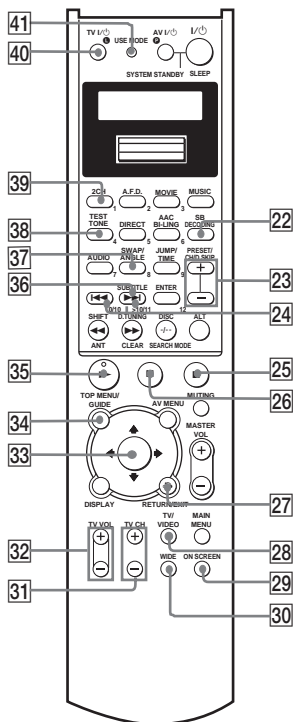

### ON SCREEN 29

Press to display the menus of the receiver on the TV screen (only for the models with on screen function).

### PRESET/CH/D.SKIP +/- 23

**If you selected tuner:**

Press to scan and select preset stations.

**If you selected TV, VCR, or satellite tuner:**

Press to select preset channels.

**If you selected CD player, video CD player, DVD player, or MD deck:**

Press to skip discs (multi-disc changer only).

### RETURN ↵/EXIT 27

After pressing MAIN MENU, AV MENU, or TOP MENU/GUIDE, press to return to the previous menu or exit the menu.

### SB DECODING 22

Press to select surround back decoding mode.

### SEARCH MODE 9

When you selected DVD player, press to select the search mode. Press to select the unit for search (track, index, etc.).

### SHIFT 16

When you selected tuner, press repeatedly to select a memory page for presetting radio stations or tuning to preset stations.

### SLEEP (After pressing ALT) 1

Press repeatedly to activate the sleep function and select the duration which the receiver turns off automatically.

### SUBTITLE\* (After pressing ALT) 36

When you selected DVD player, press to change the subtitles.

### SWAP\*\*/ANGLE\* 37

**If you selected TV:**

Press to swap the small and large pictures (only for Sony TVs with picture-in-picture function).

**If you selected DVD player:**

Press to select viewing angle or changing the angles.

### TEST TONE 38

Press to output a test tone.

### TOP MENU/GUIDE\* 34

Press to display DVD titles or guide menus.

### TV/VIDEO 28

Press to select the TV to input signal: TV input or video input.

### TV CH +/- 31

Press to select preset TV channels.

### TV VOL +/- 32

Press to adjust the volume of TV.

### TV I/O 40

Press to turn the TV on or off.

### USE MODE 41


Press to set up the remote.

### WIDE 30

Press to switch the TV to the wide mode.

**2CH** 

Press to turn the sound field off and listen to 2 channel stereo sound. Multi channel source is also downmixed to a 2 channel stereo sound.

**>10/11\*** (After pressing ALT) 

When you selected CD player, video CD player, LD player, MD deck, or tape deck, press to select track number over 10.

**-/-\*** 

When you selected TV, press to select the channel entry mode, either one or two digit.

**▲/▼/↔/▶/ENTER/EXECUTE** 

After pressing MAIN MENU, AV MENU, or TOP MENU/GUIDE, use the button to make specific settings, then press the button to enter the selection.

**▷** 

Press to start play. (Press to start play on the front sides of the cassette.)

**||** 

Press to pause play or recording, or press to start recording when the component is in recording standby.

**■** 

Press to stop play.


**◀◀/▶▶** 

Press to skip tracks.

**◀◀/▶▶**  

Press to fast-forward or rewind.

Press to search tracks in the forward or backward direction.

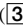\* The function of these buttons switch automatically each time you select the input with the easy scroll key (). Depending on the component, the above operation may not be possible or may operate differently than described.

\*\* Only for Sony TVs with the picture-in-picture function.

**Notes**

- The AAC BI-LING and 12 buttons are not available.
- Some buttons may not be used depending on the model.
- The above explanation is intended to serve as an example only. Therefore, depending on the

component the above operation may not be possible or may operate differently than described.

- To activate the buttons with orange printing, press ALT first before pressing the buttons.
- Before you use the ▲/▼/↔/▶/ENTER/EXECUTE button for receiver operation, press MAIN MENU. To operate other components, press TOP MENU/GUIDE or AV MENU after selecting the input.

## Table of buttons used to control each component

When you program the remote to control the following Sony or non-Sony components, you can use the buttons on the remote that are marked with circles. Note, however, that some buttons may not operate your component.

Component	CD player	DAT deck	MD deck	Tape deck (A and B)	LD player	VCR	TV	Satellite tuner/Cable box	Video CD player	DVD player
Button(s)										
AV I/⏻	●	●	●		●	●	●	●	●	●
Numeric buttons	●	●	●	●	●	●	●	●	●	●
▷	●	●	●	●	●	●			●	●
⏏	●	●	●	●	●	●			●	●
■	●	●	●	●	●	●			●	●
◀◀/▶▶	●	●	●	●*	●	●			●	●
◀◀/▶▶	●	●	●	●	●	●			●	●
ANT						●				
D.SKIP**	●		●						●	●
PRESET/CH +/-						●	●	●		
SUBTITLE										●
>10/11	●		●	●	●			●	●	
AUDIO						●	●			●
SWAP ANGLE							●			●
JUMP TIME	●		●				●	●	●	●
DISC**	●								●	
-/--							●	●		
SEARCH MODE										●
ENTER	●	●	●	●	●	●	●	●	●	●
AV MENU						●		●		●
TOP MENU/GUIDE								●		●
DISPLAY	●		●		●	●	●	●	●	●
RETURN ↶					●				●	●
EXIT								●		
↑/♦/←/→/ENTER/ EXECUTE						●		●		●
CLEAR	●									●

\* B deck only.

\*\* With a multi-disc changer only.



## Advanced Remote Operations

This chapter describes how to change the factory setting of the easy scroll key and how to set the remote to control non-Sony components.

### Programming the remote

You can program the remote to control non-Sony components. Once the control signals have been memorized, you can use those components as part of your system.

Furthermore, you can also program the remote for Sony components that the remote is unable to control. Note that the remote can only control components that accept infrared wireless control signals.

#### Note

You cannot program "SOURCE".

#### 1 Press AV I/⏏ while holding down USE MODE.

The USE MODE button lights and "IR SET" appears in the display.

#### 2 Move the easy scroll key to select the input you want to control, then press the key to enter the selection.

For example, if you are going to control a CD player, select CD/SACD.

You can also select the TV I/⏏ button.

#### 3 Press the numeric buttons to enter the numeric code (or one of the codes if more than one code exists) corresponding to the component and the maker of the component you want to control.

See the tables starting from page 10 for information on the numeric code(s) corresponding to the component and the maker of the component. (The first digit and the last two digits of the numeric code correspond to the category and the maker's code respectively.)

#### 4 Press ENTER.

Once the numeric code has been verified, the USE MODE button slowly flashes

twice and the remote automatically exits the programming mode.

#### 5 Repeat steps 1 to 4 to control other components.

#### To cancel programming

Press USE MODE during any step. The remote automatically exits the programming mode.

#### To use the programmed input

Move the easy scroll key to select the programmed input, then press the key to enter the selection.

#### If programming is unsuccessful, check the following:

- If the USE MODE button does not light up in step 1, the batteries are weak. Replace both batteries.
- If the USE MODE button flashes 4 times in quick succession while entering the numeric code, an error has occurred. Start again from step 1.
- In step 1, the remote automatically exits the programming mode if 60 seconds has passed after pressing USE MODE. Start again from step 1.

#### Notes

- The USE MODE button turns off while a valid button is pressed.
- In step 2, if you press the easy scroll key several times, only the last selected input is valid.
- In step 2, if you press TV I/⏏, only TV VOL +/-, TV CH +/-, TV/VIDEO and WIDE buttons are reprogrammed.
- In step 3, if you press the easy scroll key, the new input is selected and the programming procedure returns to the beginning of step 3.
- For the numeric codes, only the first three numbers entered are valid.

#### To clear the memory of the remote

Press I/⏏, AV I/⏏ and MASTER VOL - at the same time. The USE MODE button flashes 3 times, then goes off.

---

## The numeric codes corresponding to the component and the maker of the component

Use the numeric codes in the tables below to control non-Sony components and also Sony components that the remote is normally unable to control. Since the remote signal that a component accepts differs depending on the model and year of the component, more than one numeric code may be assigned to a component. If you fail to program your remote using one of the codes, try using other codes.

### Notes

- The numeric codes are based on the latest information available for each brand. There is a chance, however, that your component will not respond to some or all of the codes.
- All of the functions on this remote may not be available when used with your particular component.

### To control a tuner

Maker	Code(s)
SONY	002, 003, 004, 005

### To control a CD player

Maker	Code(s)
SONY	101, 102, 103
DENON	123, 104
JVC	105, 106, 107
KENWOOD	108, 109, 110
MAGNAVOX	111, 116
MARANTZ	116
ONKYO	112, 113, 114
PANASONIC	115
PHILIPS	116
PIONEER	117
TECHNICS	115, 118, 119

### To control a DAT deck

Maker	Code(s)
SONY	203
PIONEER	219

### To control a tape deck

Maker	Code(s)
SONY	201, 202
DENON	204, 205
KENWOOD	206, 207, 208, 209
NAKAMICHI	210
PANASONIC	216
PHILIPS	211, 212
PIONEER	213, 214
TECHNICS	215, 216
YAMAHA	217, 218

### To control an MD deck

Maker	Code(s)
SONY	301
DENON	302
JVC	303
KENWOOD	304

### To control a DVD player

Maker	Code(s)
SONY	401, 402, 403
PANASONIC	408, 406
PHILIPS	407
PIONEER	409
TOSHIBA	404
DENON	405

**To control a TV**

Maker	Code(s)
SONY	501, 502
DAEWOO	544, 515
FISHER	508
GOLDSTAR	544, 503, 515, 534
GRUNDIG	534
HITACHI	544, 515
JVC	516
MAGNAVOX	544, 503, 518
mitsubishi/ MGA	544, 503
NEC	544, 503
PANASONIC	509, 524
PHILIPS	515, 518
PIONEER	509, 525, 526, 540
RCA/PROSCAN	544, 510, 527, 528, 529
SAMSUNG	544, 503, 515, 531, 532, 533, 534
SANYO	508, 545, 546, 547
SHARP	535
TOSHIBA	535, 540
ZENITH	542, 543

**To control an LD player**

Maker	Code(s)
SONY	601, 602, 603
PIONEER	606

**To control a video CD player**

Maker	Code(s)
SONY	605

**To control a VCR**

Maker	Code(s)
SONY	701, 702, 703, 704, 705, 706
AIWA	757, 758, 710, 750
BLAUPUNKT	740
EMERSON	750
GENERAL ELECTRIC	722, 730
HITACHI	722, 729, 741
JVC	726, 727, 728, 736
MAGNAVOX	730, 731, 738
NEC	736
PANASONIC	729, 730, 737, 738, 739, 740
PHILIPS	729, 730, 731
PIONEER	729
RCA/PROSCAN	722, 729, 730, 731, 741, 747
TOSHIBA	747

**To control a satellite tuner or cable box**

Maker	Code(s)
SONY	801, 802, 803, 804
JERROLD/G.I.	806, 807, 808, 809, 810, 811, 812, 813, 814
PANASONIC	818
RCA	819, 805
S.ATLANTA	815, 816, 817

# Learning the commands of your components

By using the Learning function, it is possible for this remote to perform learned commands.

## Setting remote control codes that are not stored in the remote

When a remote control code is not one of the presets stored in the remote, it is possible for the remote to learn the code using the Learning function.

### 1 Press TV I/⏻ while holding down USE MODE.

The USE MODE button lights and “LEARN” appears in the display.

### 2 Move the easy scroll key to select the input you want to learn commands for, then press the key to enter the selection.

For example, if you are going to learn an operation for a CD player, select CD/SACD.

You can also select the TV I/⏻ button.

### 3 Press the button you want to use for the Learning function.

The USE MODE button turns off while a valid button is pressed, then blinks slowly.

### 4 Point the remote control code receiver section of the remote towards the receiver/transmitter on the remote control to be learned.



5-10 cm

### 5 Press the appropriate button on the remote control to be learned to send the remote button code.

Lightly pressing the button once should be sufficient.

If learning is completed successfully, the USE MODE button slowly flashes twice

and the remote automatically exits the learning mode.

When learning is not completed successfully, the USE MODE button flashes 4 times in quick succession and the procedure returns to step 5.

If the memory of the remote is already full, the USE MODE button flashes 8 times in quick succession and the remote automatically exits the learning mode.

## Notes

- You can program at the most 80 keys for the Learning function. In some cases, you may not be able to program even if you have not programmed 80 buttons.
- In steps 2 and 3, the USE MODE button turns off while a valid button is pressed.
- In step 3, if several buttons that can be used for learning are pressed, only the last pressed button is valid. The USE MODE button blinks slowly, then lights when the valid button is selected.
- In step 5, if a button that can be used for learning is pressed, the new button is selected and the learning procedure returns to the beginning of step 5.

## To cancel learning

Press USE MODE during any step. The remote automatically exits the learning mode.

## To clear the learned codes

Start again from step 1.

After step 3, press TV I/⏻ for more than 2 seconds. The USE MODE button blinks twice slowly and the learned code is cleared. If TV I/⏻ is pressed less than 2 seconds, the learning procedure returns to the beginning of step 5.

When a learned code is cleared, if the button was previously programmed for another input, the programmed code for that input can be used.

## To use the learned input

Move the easy scroll key to select the learned input, then press the key to enter the selection.

## To use a command that has been learned

Select a learned input, then press the learned button for that input.

## To clear the memory of the remote

Press I/⏻, AV I/⏻ and MASTER VOL – at the same time. The USE MODE button flashes 3 times, then goes off.

## Performing several commands in sequence automatically

### — Macro Play

The Macro Play function lets you link several IR codes in a sequential order as a single command. The remote provides 2 macro lists (M1 and M2). You can specify up to 10 IR codes for each macro list.

### Setting the sequence of IR codes

#### 1 Press TV I/⏻ while holding down USE MODE.

The USE MODE button lights and “LEARN” appears in the display.

#### 2 Move the easy scroll key to select “M1” or “M2”, then press the key to enter the selection.

#### 3 Press the numeric buttons to select the macro step number.

For example, to program step 1, press 1. You can also move the easy scroll key to select the macro step number. The USE MODE button blinks slowly.

#### 4 Point the remote control code receiver section of the remote towards the receiver/transmitter on the remote control to be learned.

#### 5 Press the appropriate button on the remote control to be learned to send the remote button code.

Lightly pressing the button once should be sufficient.

If learning is completed successfully, the USE MODE button slowly flashes twice and the remote automatically exits the macro setting mode.

When learning is not completed successfully, the USE MODE button flashes 4 times in quick succession and the procedure returns to step 5.

*continued*

If the memory of the remote is already full, the USE MODE button flashes 8 times in quick succession and the remote automatically exits the learning mode.

## **6 Repeat steps 1 through 5 to program up to 10 IR codes.**

### **Tip**

If programming is unsuccessful, check the following:

- If the USE MODE button does not light up in step 1, the batteries are weak. Replace both batteries.
- If the USE MODE button lights 4 times in quick succession in step 3, an error has occurred. Start again from step 1.

### **To cancel programming**

Press USE MODE during any step. The remote automatically exits the macro setting mode.

### **To delay the output of an IR code**

Start over from step 1.

In step 3, press the easy scroll key lightly (for less than 2 seconds). A 1 second delay is programmed. The USE MODE button lights twice slowly, then the remote automatically exits the macro setting mode.

### **To clear the programmed IR codes**

Clear each macro step individually. In step 3, press the easy scroll key for more than 2 seconds. The IR code is cleared. The USE MODE button lights twice slowly, then the remote automatically exits the macro setting mode.

---

## **To start macro play**

**Move the easy scroll key to select “M1” or “M2”, then press the key to enter the selection**

### **Note**

If the Macro Play function does not work properly, program a delay between each operation. See “To delay the output of an IR code”.

## **Selecting the mode of the remote**

You can switch the command mode (AV1 or AV2) of the remote. If the command mode of the receiver and the remote is different, you cannot use the remote to operate the receiver.

- 1 Press I/⏻ while holding down USE MODE.**
- 2 Move the easy scroll key to select “MAIN”, then press the key to enter the selection.**
- 3 Move the easy scroll key to select “AV1” or “AV2”, then press the key to enter the selection.**

The USE MODE button lights once (or twice for AV2), then the command mode switches.

### **To set the 2nd zone mode (North American models only)**

You can use the remote to select the input for the 2nd zone. You can use the easy scroll key only for the 2nd zone.

- 1 Press I/⏻ while holding down USE MODE.**
- 2 Move the easy scroll key to select “2ND”, then press the key to enter the selection.**

The USE MODE button lights once, then the command mode switches.

### **To reset the remote to factory settings**

Press I/⏻, AV I/⏻, and MASTER VOL – at the same time. The USE MODE button lights 3 times, then goes off.

## Additional Information

### Troubleshooting

If you experience any of the following difficulties while using the receiver, use this troubleshooting guide to help you remedy the problem. Should any problem persist, consult your nearest Sony dealer.

---

#### The remote does not function.

- The AAC BI-LING and 12 buttons are not available.
  - Check that the mode of the remote corresponds to that of the receiver (page 14).
  - Point the remote at the remote sensor **R** on the component.
  - Remove any obstacles in the path between the remote and the receiver.
  - Replace both batteries in the remote with new ones, if they are weak.
  - Make sure you select the correct input on the remote.
  - When you operate a programmed non-Sony component, the remote may not function properly depending on the model and the maker of the component.
  - Press MAIN MENU before you use the **▲/▼/◀/▶/ENTER/EXECUTE** button for receiver operation (page 7).
- 

## Specifications

### General

Remote control system	Infrared control
Power requirements	3 V DC with two R6 (size-AA) batteries
Dimensions	210 × 49 × 27 mm
Mass (approx.)	85 g excluding batteries

Design and specifications are subject to change without notice.





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>