

SONY Remote Commander **RM-V202**

3-252-842-12(1)

Operating Instructions Manual de instrucciones (parte posterior)

© 2003 Sony Corporation Printed in China

English

For the customers in the U.S.A.

WARNING


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Installing the Batteries

Before replacing the batteries, have new ones ready beforehand. Slide open the battery compartment and insert two size AA (R6) batteries (not supplied). Be sure to line up the + and - on the batteries with the + and - on the battery compartment.

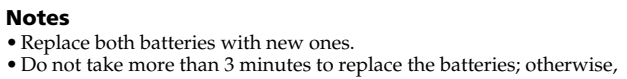

When to replace the batteries
Under normal conditions, batteries will last up to 6 months. If the Commander does not operate properly, the batteries might be worn out. Replace the batteries with new ones.

Notes

- Replace both batteries with new ones.
- Do not take more than 3 minutes to replace the batteries; otherwise, your setting of the code numbers will be erased.

Setting Up the Remote Commander

About Presetting the Commander
The Commander is preset at the factory to operate Sony brand components. If you're using the Commander with a Sony component, you won't need to preset the Commander before you start using it. To set up the Commander to use with other (non-Sony) manufacturers' components, or to use with a component that is not preset at the factory, you'll need to follow the instructions in this manual to preset the Commander with the correct code number for your components. (See the supplied "Component Code Numbers" also).


Component that can be preset	Button	Factory setting
TV	TV	Sony TV
VCR	VCR	Sony VHS VCR
Analog cable box/Digital cable box/ Digital satellite receiver/DVD/TV/ VCR/Digital video recorder/DAV	CBL/SAT DVD	— Sony DVD player

- Notes**
- The Commander can be set up to operate only one component per button – unless their code numbers happen to be the same. For example, you cannot set up the Commander to operate a Sony TV and a Panasonic TV simultaneously (because they use different code numbers).
 - You may not be able to operate even a Sony brand component with the factory presetting. In such a case, follow the procedure in "Setting the Code."

Step 1: Entering the Code Number

- See the supplied "Component Code numbers", and find the three-digit code number for the desired component. If more than one code number is listed, use the number that's listed first to complete the steps below. For example, if you're setting up a Philips' VCR, you would use the code number 035. If your component isn't listed, see "Searching for the Correct Code."
- While pressing the **SET** button, press the **POWER** button.
- Press the button of the component that you want to set up.

Note
On the **CBL/SAT** and **DVD** buttons, "cable box", and "DVD player" are assigned respectively at the factory. But you can also assign other components on these buttons. For details, see "Changing the Component Type on the **CBL/SAT** and **DVD** buttons."

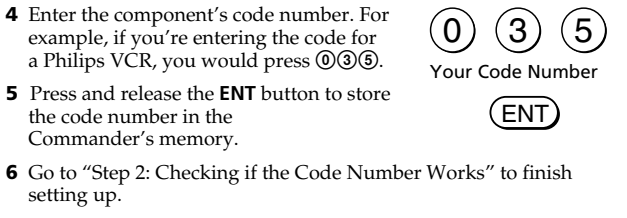

1 Enter the component's code number. For example, if you're entering the code for a Philips VCR, you would press 035.

2 Press and release the **ENT** button to store the code number in the Commander's memory.

3 Go to "Step 2: Checking if the Code Number Works" to finish setting up.

Step 2: Checking if the Code Number Works

- Power on the component you want to set up.
- Aim the Remote Commander at the component and press a button to check if that button works. For example, press the **POWER** button to see if it works on your component.
- Check that the other buttons of the Commander is operating the corresponding functions of the component.

You can write down the code number on the label inside the battery compartment lid.

If the Commander Doesn't Seem to Be Working...

- First, try repeating these setup procedures using the other codes listed for your component (see the supplied "Component Code Numbers").
- If – after trying all the codes listed for your component – you still cannot get the Commander to work properly, try the search method described in "Searching for the Correct Code."

Searching for the Correct Code

If you've tried all the code numbers listed for your component and you still cannot get the Commander to work (or if your component is not listed in the "Component Code Numbers" tables), try these steps.

- Power on the component you want to set up. Insert a tape or disc if necessary.
- While pressing the **SET** button, press the **POWER** button.
- Press the button of the component on the Commander that you want to set up.
- Repeat step 4 until the correct code number is found. Each time you press the **CH+** button and then the **POWER** button, a new code number will be transmitted. Keep trying until your component operates by receiving the transmitted signal from the Commander (e.g., the power turns off, the **CH+** function works, playback starts, etc). Be patient as you do this; it may take about 70 tries until the correct code number is located.
- When the correct code is found, press the **ENT** button to store the code number in the Commander's memory.
- Check that the Commander is operating the other functions of your component by pressing the corresponding buttons on the Commander. If they seem to be working properly, you're done setting up the Commander.

If the component does not operate properly, repeat steps 1 to 6 and search for another code.

If you still cannot get the Commander to work properly, see "Troubleshooting."

Changing the Component Type on the CBL/SAT and DVD buttons

At the factory, "cable box" is assigned on the **CBL/SAT** button and "DVD player" on the **DVD** button. By completing the following procedure, you can change this setting so that you can set up any component on these buttons.

- While pressing the **SET** button, press the **POWER** button.
- Press the **CBL/SAT** or **DVD** button.
- Press and release the **■** (stop) button.
- Press and release one of the following buttons;
 - to assign a VCR
 - to assign a DAV
 - to assign a digital satellite receiver, a digital cable box or a digital video recorder
 - to assign a TV
 - to assign an analog cable box
 - to assign a DVD

Step 2: Checking if the Code Number Works

- Power on the component you want to set up.
- Aim the Remote Commander at the component and press a button to check if that button works. For example, press the **POWER** button to see if it works on your component.
- Check that the other buttons of the Commander is operating the corresponding functions of the component.

Operating a Component

- Press the button of the desired component on the Commander.




- Point the Commander directly at the component.
 - Press the button for the function you want to use.
- See "Remote Button Descriptions" for complete descriptions of the buttons on the Commander.

Notes on Using the Remote Commander

- Basically, use this Commander in the same way as the Commanders supplied with your components.
- Using this Commander will not increase the functions of your components. The functions of the Commander are limited to the functions of the components themselves. For example, if your TV does not have a **MUTING** function, the **MUTING** button on this Commander will not function with your TV.
 - Some functions of the component may not work with this Commander.
 - If your cable box can control volume, be sure to set its volume switch to a medium position. If the volume on the cable box is turned down completely, you will not be able to adjust your TV's volume with the Commander.

Remote Button Descriptions

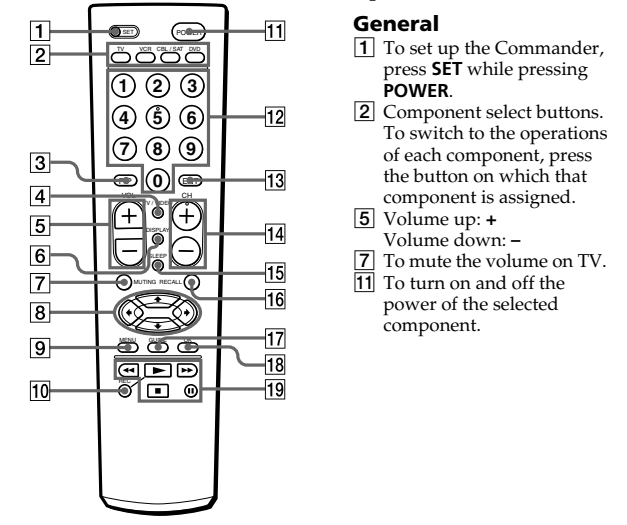

- General**
- To set up the Commander, press **SET** while pressing **POWER**.
 - Component select buttons. To switch to the operations of each component, press the button on which that component is assigned.
 - Volume up: +
 - Volume down: -
 - To mute the volume on TV.
 - To turn on and off the power of the selected component.

- Operating a TV**
- To operate the Picture-in-Picture function. Press each button or combination of buttons as described in the table below.

Channel up: +	Channel down: -
To operate SLEEP function on the TV. (Works only for a TV with the SLEEP function).	
To change the input mode.	
To display the current channel on TV.	
To move the cursor upward, downward, to the left, or to the right.	
To call up the MENU display. and 13	
To change the channel. For example, to change to channel 5, press 0 and 5 (or press 5 and ENT).	

- PIP operations**
- | Press | To |
|----------|---|
| PIP | Turn on/off the "window" picture. |
| GUIDE | Turn off the "window" picture. |
| ◀◀ or ▶▶ | Change the TV channel in the "window" picture. |
| ●REC | Change the input mode of the "window" picture. |
| ■ | Move the location of the "window" picture. |
| ▶ | Swap the "main" picture and the "window" picture. |
| | Freeze the "window" picture. |

- Operating a VCR**
- To switch the antenna output.
 - To expose the on-screen display.
 - To move the cursor upward, downward, to the left, or to the right.
 - To call up the MENU display. and **13**
 - To play.
 - To stop.
 - To rewind.
 - To fast-forward.
 - To record, press **▶** while pressing **●REC**.

- Operating a VCR**
- To switch the antenna output.
 - To expose the on-screen display.
 - To move the cursor upward, downward, to the left, or to the right.
 - To call up the MENU display. and **13**
 - To play.
 - To stop.
 - To rewind.
 - To fast-forward.
 - To record, press **▶** while pressing **●REC**.

- Operating a DVR (Digital video recorder)**
- To call up the title of the recorded program.
 - To switch the output of the SAT receiver to the TV. (When connecting a TV cable or antenna to the receiver, the output switches between a TV and SAT program.) (*THUMB+)
 - To select the desired recorded program. (It is necessary to have recorded the desired program.)
 - CH+: Channel up. (*PAGE+) Page up. (*THUMB+)
 - CH-: Channel down. (*PAGE-) Page down.
 - To clear the setting. To exit the setting menu. (*REPLAY) To replay. Or to go into REC/REVIEW mode during play. (After about 5-second rewind, replay begins.)
 - To access to all aspects of the service. (*Live TV) To bring up Master Guide.
 - To bring up Master Guide. To bring up the Station Index when a program guide is not displayed. To select the channel that is highlighted.

- Operating an analog cable box**
- To change the channel. For example, to change to channel 5, press **0** and **5** (or press **5** and **ENT**).
 - Channel up: +
 - Channel down: -
- Notes**
- There may be cases you may turn on/off the cable box by pressing the **CH+** or **CH-** buttons on the Commander.
 - If your cable box can control volume, be sure to set its volume control to a medium position. If the volume on the cable box is turned down completely, you will not be able to adjust your TV's volume with the Commander.

- Operating a DVD**
- To select numbers 10 and above. For example, to select track 15, press **PIP** and then press **5**.
 - To change the sound.
 - To show the current play status on the screen.
 - To move the cursor upward, downward, to the left, or to the right.
 - To display the DVD menu.
 - To record, press **▶** while pressing **●REC**. First release **▶**, then release **●REC**.
 - Number buttons : To set items selected from the screen.
 - To enter the setting. To set items selected from the screen.
 - CH+: To proceed to the next location or song. Channel up.
 - CH-: To proceed to the previous location or song. Channel down.
 - To switch the subtitle.
 - To display the title menu.
 - To clear the selected characters from the screen or select a drive.
 - To execute items selected from the screen.
 - ▶: To play.
 - ◀: To rewind.
 - ▶▶: To fast-forward.
 - : To stop.
 - ||: To pause.

- Operating a digital cable box**
- To use the "FAVORITE" function
 - To switch the output of the SAT receiver to the TV. (When connecting a TV cable or antenna to the receiver, the output switches between a TV and SAT program.)
 - To turn on the display.
 - To move the cursor upward, downward, to the left, or to the right.
 - To call up the MENU display. and **13**
 - To play.
 - To rewind.
 - To fast-forward.
 - To record, press **▶** while pressing **●REC**. First release **▶**, then release **●REC**. To stop recording, perform the same procedure.
 - Channel up: +
 - Channel down: -
 - To bring up the Station Index. To tune to the last tuned station.
 - To bring up the Master Guide.
 - To select the channel that's highlighted. To bring up the Station Index when a program guide is not displayed.
 - ▶: To exit the mode.

- Operating a DVD**
- To select numbers 10 and above. For example, to select track 15, press **PIP** and then press **5**.
 - To change the sound.
 - To show the current play status on the screen.
 - To move the cursor upward, downward, to the left, or to the right.
 - To display the DVD menu.
 - To record, press **▶** while pressing **●REC**. First release **▶**, then release **●REC**.
 - Number buttons : To set items selected from the screen.
 - To enter the setting. To set items selected from the screen.
 - CH+: To proceed to the next location or song. Channel up.
 - CH-: To proceed to the previous location or song. Channel down.
 - To switch the subtitle.
 - To display the title menu.
 - To clear the selected characters from the screen or select a drive.
 - To execute items selected from the screen.
 - ▶: To play.
 - ◀: To rewind.
 - ▶▶: To fast-forward.
 - : To stop.
 - ||: To pause.

- DAV (DVD/Receiver combo)**
- To select numbers 10 and above.
 - To change the input mode.
 - VOLUME+: Volume up (DAV). VOLUME-: Volume down (DAV).
 - To show the current play status on the screen.
 - To mute the volume. Press again to turn muting off.
 - To move the cursor upward, downward, to the left, or to the right.
 - To call up the MENU.
 - To turn the power on/off.
 - Number buttons: To set items selected on the screen.
 - To enter the setting.
 - CHANNEL+: Presetting or turning frequency to a higher +.
 - CHANNEL-: Presetting or turning frequency to a lower -.
 - To switch the subtitle.
 - To display the Top Menu.
 - To change the sound.
 - To enter the selection of the MENU display.
 - ▶: To play.
 - ◀: To rewind.
 - ▶▶: To fast-forward.
 - : To stop.
 - ||: To pause.

Specifications

- Operable distance** Approx. 7 m (23 ft) (varies depending of the component of each manufacturer)
- Power requirements** Two size AA (R6) batteries (not supplied)
- Battery life** Approx. 6 months (varies depending on frequency of use)
- Dimensions** Approx. 55 x 200 x 32 mm (w/h/d) (2 1/4 x 7 7/8 x 1 1/8 in.)
- Mass** Approx. 95 g (3.4 oz). (not including batteries)

Design and specifications are subject to change without notice.

The CE mark on the unit is valid only for products marketed in the European Union.

Troubleshooting

- When setting up the Commander, carefully go through the procedures described in "Setting the Code." If the code that's listed first for your component doesn't work, try all the codes for your component – in the order in which they're listed. If all the codes fail to work (or if your component is not listed in this manual), try using the procedures in "Searching for the Correct Code."
- Check that you're aiming the Commander directly at the component, and that there are no obstructions between the Commander and the component.
- Make sure the batteries you're using are not worn out, and that they're inserted correctly.
- Check that the button of the **TV**, **VCR**, **CBL/SAT**, or **DVD** is pressed to choose your desired component.
- Check that the component has infrared remote capability. For example, if your component didn't come with a remote commander, it probably isn't capable of being controlled by a remote commander.
- Should any problem persist, reset the Commander to the factory setting by pressing the **POWER**, **TV/VIDEO** and **VOL-** buttons simultaneously.

For the customers in the U.S.A.

Customer Support Information
If – after you've read through this manual – you still cannot get the Remote Commander to work properly, call the Sony Customer Support Helpline at 1-800-822-2217.

Component code numbers / Números de código de componentes

English

TV/VCR/COMBO*
The left row of the table shows the brand, the center row shows the component (TV, VCR or COMBO) and the right row shows the code No.

* COMBO stands for the unit combined with TV and VCR.

Brand	Code No.
Hamlin/Regal	022, 023, 024, 025, 026
Jerrold/G.I.	031, 001, 002, 003, 004, 005, 006, 007, 008, 018, 022, 032
Oak	027, 028, 029
Panasonic	019, 020, 021
Pioneer	014, 015
Scientific Atlanta	009, 010, 011
Tocom	031, 016, 017
Zenith	012, 013

Digital cable box/Decodificador digital

Brand	Code No.
Sony	013
Jerrold/G.I.	015
Motorola	015
Panasonic	021
Philips	016
Scientific Atlanta	014

Español

TV/VCR/COMBO*
La fila izquierda de la tabla muestra la marca, la central el componente (televisor (TV), videograbadora (VCR) o COMBO), y la derecha el número de código.

* COMBO significa que la unidad está combinada con un televisor y una videograbadora.

Brand	Code No.
DirecTV	001
Sony	001
Hitachi	005
Hughes	004
Panasonic	003
RCA/Proscan	002, 007
Toshiba	006

SAT

Brand	Code No.
Sony	001, 023, 024, 025, 030, 031, 032, 040, 050
Aiwa	015
Cyber Home	054, 055, 067
Daewoo	029
Denon	006, 017
Emerson	051, 060, 069
Harman/Kardon	018
Hitachi	008
ILO	068
JVC	007, 037
Sony	017, 018, 019
Philips	020
Magnabox	059, 066
Onkyo	016
Orion	052, 058
Panasonic	002, 006, 027, 028, 034, 035, 036, 042, 045, 053
Philips	012, 062
Pioneer	004, 019, 021, 033, 063, 064
RCA	005
Samsung	014, 041, 070
Sanyo	057
Sharp	011, 048
Shinco	022
Symphonic	060, 061
Sylvania	020, 044, 049
Terapin	056
Thomson	013
Toshiba	003, 038, 039, 046, 065
Yamaha	006
Zenith	009, 047

To set a Component Code (see the instruction manual for details)
Para introducir un código de componente (consulte los detalles en el manual de instrucciones)



DVR (Digital Video Recorder)/ DVR (Videograbadora digital)

Tivo

Brand	Code No.
Sony	017, 018, 019
Philips	020

Replay

Brand	Code No.
Panasonic	021
Replay	022

DAV (DVD/Amplifier) DAV (DVD/amplificador)

Brand	Code No.
Sony	001, 002, 003, 004, 005
JVC	007
Onkyo	009
Panasonic	006
Samsung	008

Brand	Component	Code No.	
Sony	VCR	001	
	(VTR1:Betamax)		
	VCR (VTR2:8mm)	002	
	VCR (VTR3:VHS)	003	
	VCR (VTR4:DV)	004	
Mitsubishi/MGA	VCR (VTR5:DV)	005	
	VCR (VTR6:DV)	006	
	TV	001	
	VCR	030	
	TV	002, 014, 009	
Aiwa	VCR	041, 050, 035	
	VCR	052, 033, 054	
AOC	TV	003	
	TV	012	
	TV	034	
Audinac	VCR	017, 040	
Bell&Howell	VCR	033, 046	
	TV	014, 009, 038	
Broksonic	VCR	020, 022, 017, 066	
	TV	003, 012, 072	
Canon	VCR	012, 011	
	VCR	035	
Citizen	VCR	035	
	VCR	018, 035	
Craig	TV	022, 034, 020, 021	
	TV	011	
Crown	TV	034	
	VCR	007, 041, 012	
Curtis Mathis	TV	003, 019, 034	
	TV	044, 015, 012, 064	
Daewoo	VCR	035, 036, 003, 041, 029	
	TV/VCR COMBO	TV036&VCR044	
Daytron	TV	013	
	VCR	002, 003, 004, 005, 006, 007, 008, 044, 045, 046, 053, 086	
DBX	VCR	017, 039, 040	
	VCR	007, 009	
Dimensia	VCR	012, 033, 031, 038, 027, 041	
Durabrand	TV	077, 078	
Emerson	VCR	044, 022, 023, 019, 020, 021, 041, 058, 070, 071	
	TV	022, 013, 020, 021, 003, 015, 042, 034, 081	
TV/VCR COMBO	TV021&VCR023, TV021&VCR022, TV020&VCR058, TV081&VCR070, TV083&VCR071		
	ESA	TV	080
	Fisher	VCR	033, 037, 038, 036
Funai	VCR	041	
	VCR	032, 007, 012, 062	
General Electric	VCR	002, 018, 003, 007, 045, 049	
	TV/VCR COMBO	TV027&VCR024, TV027&VCR025	
GoldStar/LG	VCR	035	
	TV	003, 013, 012, 030, 046, 050, 051, 049	
TV/VCR COMBO	TV code&VCR035		
GO VIDEO	VCR	051, 042, 043	
Hitachi	VCR	011, 047, 008	
	TV	031, 013, 003, 032	
HQ	VCR	015	
	VCR	012, 011	
Instant Replay	VCR	012, 008, 007, 033, 017, 039, 040	
JC Penny	TV	003, 002, 030, 007	
Jensen	TV	079	
	VCR	017, 047, 048, 049, 039, 040	
JVC	TV	028	
Kenwood	VCR	017, 039, 035, 040	
	TV	033, 013, 003, 034	
KTV	VCR	041, 035, 008, 036, 037, 033, 038, 052	
LXI(Sears)	TV	002, 003, 011, 025, 019, 012, 052	
	VCR	013, 011, 012, 010, 063, 073	
Magnavox	TV	011, 012, 013, 003, 043, 047, 083, 084, 085	
	TV/VCR COMBO	TV011, 018, 047&VCR012, 013, TV083&VCR073	

Brand	Component	Code No.
Marantz	VCR	017, 039, 040
	TV	024
Marta	VCR	035
Memorex	VCR	012, 038, 077
	VCR	008, 007
Minolta	VCR	026, 027, 028, 029, 056, 057, 065, 059
	TV	024, 003, 012, 066
	VCR (VTR4:DV)	004
	VCR (VTR5:DV)	005
	VCR (VTR6:DV)	006
Multitech	VCR	028, 041, 024
	VCR	017, 039, 040
NEC	TV	003, 012
	VCR	012, 011
Olympic	VCR	027
	VCR	055, 072
Orion	TV	082, 087
	TV/VCR COMBO	TV087&VCR072
Panasonic	VCR	009, 010, 011, 012, 060, 068
	TV	018, 016, 007, 049, 067, 074, 076
TV/VCR COMBO	TV018&VCR011, TV018&VCR012	
Pentax	VCR	008, 007
Philco	VCR	011, 012, 044, 020, 064
	TV	011, 013, 003, 068, 035, 031
Philips	VCR	035, 013, 011, 012, 063
	TV	011, 056, 043, 017
Pioneer	VCR	011
Portland	TV	037, 018, 019
	TV	003, 008
Proton	TV	071
Quasar	VCR	011, 012, 009, 010, 006
	TV/VCR COMBO	TV018, 048&VCR012, 009, 010
Radio Shack	TV	002, 012, 024, 034, 015
	RCA/PROSCAN	VCR
TV/VCR COMBO	TV	002, 003, 004, 005, 006, 007, 008, 044, 045, 046, 053, 086
	TV/VCR COMBO	TV018&VCR011
Realistic	VCR	012, 033, 031, 038, 027, 041
	VCR	025, 016, 024
Samsung	TV	026, 012, 013, 003, 055, 027
	TV/VCR COMBO	TV034, 027&VCR024, 025, 029
Sansui	VCR	017
	Sanyo	VCR
TV/VCR COMBO	TV	025, 054, 034
	Scott	VCR
Sharp	TV	034, 012
	VCR	030, 031
Shintom	TV	014, 013, 015, 070
	VCR	018
Signature 2000	VCR	041, 030
	TV	014, 009
Singer	VCR	018
	Sylvania	VCR
TV	TV	011, 012, 003, 073
	TV/VCR COMBO	TV code&VCR035
Symphonic	VCR	041, 075, 076
	TV	023, 039, 040, 034
TV/VCR COMBO	TV034&VCR041	
Tashiro	VCR	035
	VCR	017, 039, 040
Teac	VCR	017, 039, 041, 040
	VCR	012, 011
Technics	TV	015, 014, 052, 069
	TV	060, 019, 014, 052, 059, 075
Toshiba	TV	031, 003, 012
	VCR	030, 031, 038, 034, 035
Wards	TV	013, 003, 015, 012
	VCR	033, 017, 039, 040
Yamaha	VCR	034
	TV	009, 010
Zenith	VCR	039, 010

Brand	Component	Code No.	
Español	VCR	017, 039, 040	
	TV	024	
Marta	VCR	035	
	VCR	012, 038, 077	
Memorex	VCR	008, 007	
	VCR	026, 027, 028, 029, 056, 057, 065, 059	
Minolta	VCR	026, 027, 028, 029, 056, 057, 065, 059	
	TV	024, 003, 012, 066	
Mitsubishi/MGA	VCR (VTR4:DV)	004	
	VCR (VTR5:DV)	005	
VCR (VTR6:DV)	006		
	TV	001	
Admiral	VCR	030	
	TV	002, 014, 009	
Aiwa	VCR	041, 050, 035	
	VCR	052, 033, 054	
AOC	TV	003	
	TV	012	
Audinac	TV	034	
Audio Dynamic	VCR	017, 040	
	VCR	033, 046	
Bell&Howell	TV	014, 009, 038	
	VCR	020, 022, 017, 066	
Broksonic	VCR	003, 012, 072	
	TV	012, 011	
Canon	VCR	035	
	VCR	018, 035	
Citizen	VCR	035	
	VCR	018, 035	
Craig	TV	022, 034, 020, 021	
	TV	011	
Crown	TV	034	
	VCR	007, 041, 012	
Curtis Mathis	TV	003, 019, 034	
	TV	044, 015, 012, 064	
Daewoo	VCR	035, 036, 003, 041, 029	
	TV/VCR COMBO	TV036&VCR044	
Daytron	TV	013	
	VCR	002, 003, 004, 005, 006, 007, 008, 044, 045, 046, 053, 086	
DBX	VCR	017, 039, 040	
	VCR	007, 009	
Dimensia	VCR	012, 033, 031, 038, 027, 041	
Durabrand	TV	077, 078	
Emerson	VCR	044, 022, 023, 019, 020, 021, 041, 058, 070, 071	
	TV	022, 013, 020, 021, 003, 015, 042, 034, 081	
TV/VCR COMBO	TV021&VCR023, TV021&VCR022, TV020&VCR058, TV081&VCR070, TV083&VCR071		
	ESA	TV	080
	Fisher	VCR	033, 037, 038, 036
Funai	VCR	041	
	VCR	032, 007, 012, 062	
General Electric	VCR	002, 018, 003, 007, 045, 049	
	TV/VCR COMBO	TV027&VCR024, TV027&VCR025	
GoldStar/LG	VCR	035	
	TV	003, 013, 012, 030, 046, 050, 051, 049	
TV/VCR COMBO	TV code&VCR035		
GO VIDEO	VCR	051, 042, 043	
Hitachi	VCR	011, 047, 008	
	TV	031, 013, 003, 032	
HQ	VCR	015	
	VCR	012, 011	
Instant Replay	VCR	012, 008, 007, 033, 017, 039, 040	
JC Penny	TV	003, 002, 030, 007	
Jensen	TV	079	
	VCR	017, 047, 048, 049, 039, 040	
JVC	TV	028	
Kenwood	VCR	017, 039, 035, 040	
	TV	033, 013, 003, 034	
KTV	VCR	041, 035, 008, 036, 037, 033, 038, 052	
LXI(Sears)	TV	002, 003, 011, 025, 019, 012, 052	
	VCR	013, 011, 012, 010, 063, 073	
Magnavox	TV	011, 012, 013, 003, 043, 047, 083, 084, 085	
	TV/VCR COMBO	TV011, 018, 047&VCR012, 013, TV083&VCR073	

Brand	Component	Code No.	
Español	VCR	017, 039, 040	
	TV	024	
Marta	VCR	035	
	VCR	012, 038, 077	
Memorex	VCR	008, 007	
	VCR	026, 027, 028, 029, 056, 057, 065, 059	
Minolta	VCR	026, 027, 028, 029, 056, 057, 065, 059	
	TV	024, 003, 012, 066	
Mitsubishi/MGA	VCR (VTR4:DV)	004	
	VCR (VTR5:DV)	005	
VCR (VTR6:DV)	006		
	TV	001	
Admiral	VCR	030	
	TV	002, 014, 009	
Aiwa	VCR	041, 050, 035	
	VCR	052, 033, 054	
AOC	TV	003	
	TV	012	
Audinac	TV	034	
Audio Dynamic	VCR	017, 040	
	VCR	033, 046	
Bell&Howell	TV	014, 009, 038	
	VCR	020, 022, 017, 066	
Broksonic	VCR	003, 012, 072	
	TV	012, 011	
Canon	VCR	035	
	VCR	018, 035	
Citizen	VCR	035	
	VCR	018, 035	
Craig	TV	022, 034, 020, 021	
	TV	011	
Crown	TV	034	
	VCR	007, 041, 012	
Curtis Mathis	TV	003, 019, 034	
	TV	044, 015, 012, 064	
Daewoo	VCR	035, 036, 003, 041, 029	
	TV/VCR COMBO	TV036&VCR044	
Daytron	TV	013	
	VCR	002, 003, 004, 005, 006, 007, 008, 044, 045, 046, 053, 086	
DBX	VCR	017, 039, 040	
	VCR	007, 009	
Dimensia	VCR	012, 033, 031, 038, 027, 041	
Durabrand	TV	077, 078	
Emerson	VCR	044, 022, 023, 019, 020, 021, 041, 058, 070, 071	
	TV	022, 013, 020, 021, 003, 015, 042, 034, 081	
TV/VCR COMBO	TV021&VCR023, TV021&VCR022, TV020&VCR058, TV081&VCR070, TV083&VCR071		
	ESA	TV	080
	Fisher	VCR	033, 037, 038, 036
Funai	VCR	041	
	VCR	032, 007, 012, 062	
General Electric	VCR	002, 018, 003, 007, 045, 049	
	TV/VCR COMBO	TV027&VCR024, TV027&VCR025	
GoldStar/LG	VCR	035	
	TV	003, 013, 012, 030, 046, 050, 051, 049	
TV/VCR COMBO	TV code&VCR035		
GO VIDEO	VCR	051, 042, 043	
Hitachi	VCR	011, 047, 008	
	TV	031, 013, 003, 032	
HQ	VCR	015	
	VCR	012, 011	
Instant Replay	VCR	012, 008, 007, 033, 017, 039, 040	
JC Penny	TV	003, 002, 030, 007	
Jensen	TV	079	
	VCR	017, 047, 048, 049, 039, 040	
JVC	TV	028	
Kenwood	VCR	017, 039, 035, 040	
	TV	033, 013, 003, 034	
KTV	VCR	041, 035, 008, 036, 037, 033, 038, 052	
LXI(Sears)	TV	002, 003, 011, 025, 019, 012, 052	
	VCR	013, 011, 012, 010, 063, 073	
Magnavox	TV	011, 012, 013, 003, 043, 047, 083, 084, 085	
	TV/VCR COMBO	TV011, 018, 047&VCR012, 013, TV083&VCR073	

Brand	Component	Code No.
Español	VCR	017, 039, 040
	TV	024
Marta	VCR	035
	VCR	

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>