

**SONY**

Remote Commander

**RM-V22****Operating Instructions**

© 1996 by Sony Corporation Printed in Malaysia

**English****WARNING**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help. You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

**Setting Up the Remote Commander**

Before you can start using the Commander, you must first set it up. This manual describes everything you need to know to set up the Commander, including:

- Installing the batteries.
- Presetting the Commander with the codes for your TV, VCR, Cable box, and other audio components.

**Presetting the Remote Commander**

The Commander is preset at the factory to operate Sony brand TVs, VHS VCRs, receivers, and CD players. If you're using the Commander with a Sony TV, VHS VCR, receiver, and CD player, you won't need to preset the Commander before you start using it.

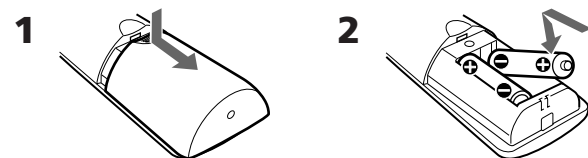
To set up the Commander to use with other (non-Sony) manufacturer's components, you'll need to follow the instructions in this manual to preset the Commander with the correct code number for your components.

**Note**

The Commander can be set up to operate only one component of each category (VCR, AV1, AV2, CBL, or TV position of the slide switch) at a time - unless their code numbers happen to be the same. For example, you cannot set up the Commander to operate a Sony TV and a Panasonic TV at the same time (because they use different code numbers).

**Installing the Batteries**

Slide open the battery compartment and insert two size AA (R6) batteries (not supplied). Be sure to line up the + and - on the batteries with the + and - on the battery compartment.



3-858-409-12(1)

**If the Commander Seems to Be Working Properly...**

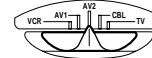
- You're finished setting up the Commander for your component.
- If you're setting up more than one component, you'll need to complete these procedures for each component you plan to use with the Commander.
- Use the label (supplied) to write down the code numbers of your components. Then affix the label to the back of the Commander.

**Changing the Component Type on the AV1 and AV2 Positions of the Slide Switch**

On the positions AV1 and AV2 of the slide switch, the functions to operate Sony brand receivers and CD player are preset at the factory (using cord No. 4 and 5 respectively).

When you change the component type on the positions AV1 and AV2 of the slide switch, complete the following procedures:

- 1 Set the slide switch to the AV1 or AV2 position.



- 2 Press the SET button with a ball-point pen tip etc., and release it.
- 3 Enter one of the codes from the following table, correspond to the component type you're setting up:

Component type	Code No.
VCR	1
Receiver	4
CD player	5
Tape deck	6
TV	8
Cable box	9

For example, if you're setting up a CD player, you would press and release 5.

- 4 Press and release the ENTER button to store the code number in the Commander's memory.

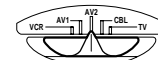


To finish setting up the component, go to "Step 1: Entering the Code Number" and complete the procedures that are described.

**Searching for the Correct Code**

If you've tried all the code numbers listed for your component and you still cannot get the Commander to work (or if your component is not listed in this manual), try these steps.

- 1 Power on the component you want to set up with its power switch. Then set the slide switch on the commander to the position that corresponds to the component.



- 2 Press the SET button with a ball-point pen tip etc., and release it.
- 3 Press and release the CH+ button. Then press and release the POWER button.
- 4 Repeat step 3 until your component powers off.



Pressing the CH+ and POWER buttons repeatedly will try every available code until the correct one is found. It may take up to about 50 to 60 tries until the correct code number is located.

- 5 When the component powers off, press and release the ENTER button to store the code number in the Commander's memory.
- 6 Check that the Commander is operating the other functions of your component. Turn on the component again; then press the CH and VOL buttons. If the Commander seems to be working properly, you have completed setting up the Commander.



If the component does not operate properly, repeat steps 2 and 5 and search for another code. As the searching always start from 01, it will stop again at the same code as the last searching. Pass the code and continue searching until the next code which the component turns off.

If you still cannot get the Commander to work properly, see "Troubleshooting."

**Controlling the Volume of Video Components Connected to an Audio System**

The Commander is factory preset based on the assumption that you hear the sound of your video components from your TV's speakers, and that you hear the sound of your audio components from the loudspeakers via your receiver (or amplifier).

Even if you are operating a video or audio component, this feature enables you to control the volume of your TV or receiver without first having to change the Commander's slide switch to the TV or AV1.

Position of the slide switch	Controls the volume of
VCR	TV
CBL	TV
TV	TV
AV1	Component whose type is set on the AV1 position*.
AV2	Component whose type is set on the AV1 position*.

For example, to control the volume for your VCR channels, you don't need to change the slide switch from VCR to TV.

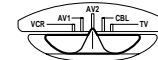
\* On the AV1 position, the receiver is preset at the factory (using code No. 4). The commander controls the receiver's volume, even if you assign a component which has no volume control itself (e.g. CD player, VCR) on the AV1 position, when the slide switch is set to the AV1 position.

**Changing the Factory Preset of the Volume Control**

If your video components are connected to an audio system, you probably hear your TV or VCR's sound from the loudspeakers via your receiver, not from your TV speakers. In this case, you need to change the factory preset so that you can control the volume of your video components without first having to switch to the receiver (factory set on AV1 position). To change the factory preset of the volume control, follow the procedures below.

You can change this either before or after you set up the Commander to work with your component.

- 1 Set the slide switch to the position that you want to set up.
- 2 Press the SET button with a ball-point pen tip etc., and release it.
- 3 To control the component's sound from the loudspeakers via your receiver which is assigned to AV1, press the VOL- button.
- 4 To control the component's sound from the loudspeakers via your receiver which is assigned to AV2, press the MUTING button.
- 5 To control the component's sound from the TV speakers, press the VOL+ button.
- 4 Press and release the ENTER button to store your setting in the Commander's memory.
- 5 If you haven't already done so, finish setting up the component by completing the procedures in "Step 1: Entering the Code Number".

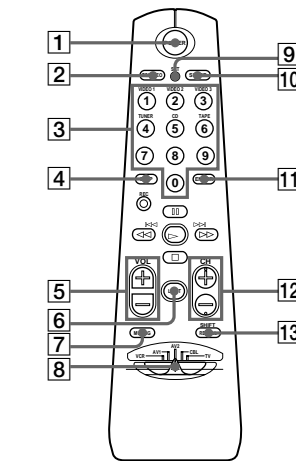
**Using the Remote Commander****Operating a Component**

- 1 Make sure that the slide switch is set to the position that correspond to your desired component.
- 2 Point the Commander directly at the component.
- 3 Press the button for the function you want to use.

See "Remote Button Descriptions" for complete descriptions of the buttons on the Commander.

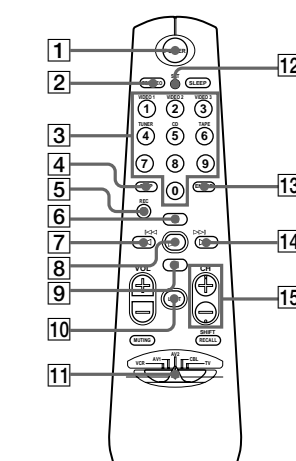
**Notes on Using the Remote Commander**

- Using the Commander will not increase the functions of your TV or other components. The functions of the Commander are limited to the functions of the TV or other components. For example, if your TV doesn't have a MUTE function, the MUTE button on the Commander will not function with your TV.
- Using the LIGHT function frequently of the Commander will shorten the battery life.

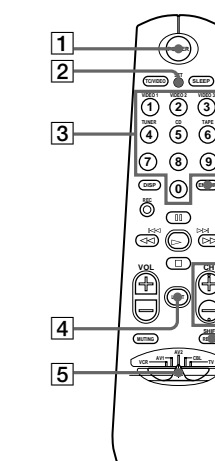
**Remote Button Descriptions****Operating a TV**

- 1 To turn on and off.
- 2 To change the input mode.
- 3 To change the channel. For example, to change to channel 5, press 0 and 5 (or , press 5 and ENTER.)
- 4 To display the current channel on TV.
- 5 Volume up: +  
Volume down: -

- 6 To light up the Commander's buttons. (The light will automatically turn off if no button is pressed for more than 10 seconds.)
- 7 To mute the volume on the TV. Press again to turn muting off.
- 8 Set to TV (AV1 or AV2 on which the TV is assigned).
- 9 To set up the Commander.
- 10 To operate SLEEP function on the TV. (Works only for a TV with the SLEEP function.)
- 11 To change the channel. For example, to change to channel 5, press 5 and ENTER.
- 12 Channel up: +  
Channel down: -
- 13 To operate JUMP, FLASHBACK or CHANNEL RETURN function on the TV depending on the setting of the TV's manufacturer.

**Operating a VCR**

- 1 To turn on and off.
- 2 To change the input mode.
- 3 To change the channel. For example, to change to channel 5, press 0 and 5 (or , press 5 and ENTER.)
- 4 To display the on-screen menu (Sony VCR only).
- 5 To record, press ► while pressing ●. First release ►, then release ●.
- 6 To pause
- 7 To rewind
- 8 To play
- 9 To stop
- 10 To light up the Commander's buttons. (The light will automatically turn off if no button is pressed for more than 10 seconds.)
- 11 Set to VCR (AV1 or AV2 on which the VCR is assigned)
- 12 To set up the Commander.
- 13 To change the channel. For example, to change to channel 5, press 5 and ENTER.
- 14 To fast-forward
- 15 Channel up: +  
Channel down: -

**Operating a Cable box**

- 1 To turn on and off.
- 2 To set up the Commander
- 3 To change the channel. For example, to change to channel 5, press 0 and 5 (or , press 5 and ENTER.)
- 4 To light up the Commander's buttons. (The light will automatically turn off if no button is pressed for more than 10 seconds.)
- 5 Set to AV1 or AV2 on which the cable box is assigned.
- 6 To change the channel. For example, to change to channel 5, press 5 and ENTER.
- 7 Channel up: +  
Channel down: -
- 8 To operate JUMP, FLASHBACK or CHANNEL RETURN function on the TV depending on the setting of the TV's manufacturer.

**Notes**

- There may be cases you may turn on/off the cable box by pressing the CH+ or CH- buttons on the Commander.
- If your cable box can control volume, be sure to set its volume control to a medium position. If the volume on the cable box is turned down completely, you will not be able to adjust your TV's volume with the Commander.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>