

**SONY**<sup>®</sup>

3-859-040-11 (1)

# *Video Cassette Recorder*

---

## Operating Instructions

### Owner's record

The model and serial numbers are located at the rear of the unit. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

**VHS**

Hi-Fi

**VCR** *plus+*


*SLV-685HF*

©1996 by Sony Corporation

SONY SLV-685HF (E) 3-859-040-11 (1)

## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

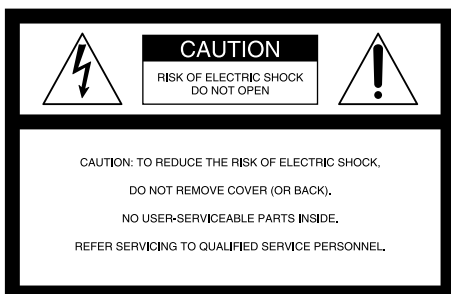

electric shock to persons.

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### CAUTION

To prevent electric shock, do not use this polarized AC plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

### Precautions

#### Safety

- Operate the unit only on 120 V AC, 60 Hz.
- If anything falls into the cabinet, unplug the unit and have it checked by qualified personnel before operating it any further.
- One blade of the plug is wider than the other for the purpose of safety and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your Sony dealer.
- Unplug the unit from the wall outlet if you do not intend to use it for an extended period of time. To disconnect the cord, pull it out by the plug, never by the cord.

#### Installing

- Allow adequate air circulation to prevent internal heat buildup.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.

- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not install the unit in an inclined position. It is designed to be operated in a horizontal position only.
- Keep the unit and cassettes away from equipment with strong magnets, such as microwave ovens or large loudspeakers.
- Do not place heavy objects on the unit.
- If the unit is brought directly from a cold to a warm location, moisture may condense inside the VCR and cause damage to the video head and tape. When you first install the unit, or when you move it from a cold to a warm location, wait for about one hour before operating the unit.

### Information

#### For customers in the USA

##### CAUTION

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

##### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

##### Caution

Television programs, films, video tapes and other materials may be copyrighted. Unauthorized recording of such material may be contrary to the provisions of the copyright laws. Also, use of this recorder with cable television transmission may require authorization from the cable television transmission and/or program owner.

---

# Table of contents

---

## Getting Started

- 4 Step 1: Unpacking
- 5 Step 2: Setting up the remote commander
- 7 Step 3: Hookups
- 28 Selecting a language
- 29 Setting the clock
- 30 Setting up cable box control
- 35 Presetting channels
- 39 Setting up VCR Plus+\*

## Basic Operations

- 42 Playing a tape
- 44 Recording TV programs
- 47 Recording TV programs using VCR Plus+
- 50 Setting the timer manually

## Additional Operations

- 52 Playing/searching at various speeds
- 53 Recording TV programs using the quick timer
- 54 Checking/changing/canceling timer settings
- 55 Recording stereo and bilingual programs
- 57 Adjusting the picture
- 58 Changing menu options
- 59 Editing with another VCR

## Additional Information

- 61 General setup information
- 63 Troubleshooting
- 65 Specifications
- 66 Index to parts and controls
- 69 Index
- back cover
- Quick reference to using the VCR


\* VCR Plus+ and PlusCode are trademarks of Gemstar Development Corporation. VCR Plus+ system is manufactured under license from Gemstar Development Corporation.

## Step 1


# Unpacking

Check that you have received the following items with the VCR:


- Remote commander

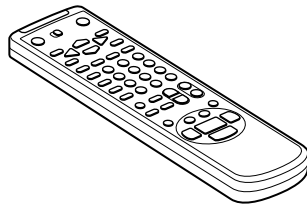


- Audio/video cable (3-phono to 3-phono)

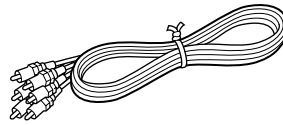

- Size AA (R6) batteries

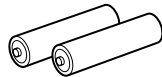 

- 75-ohm coaxial cable with F-type connectors

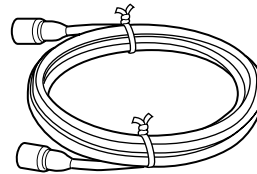


## Step 2

# Setting up the remote commander


### Inserting the batteries

Insert two size AA (R6) batteries by matching the + and - on the batteries to the diagram inside the battery compartment.

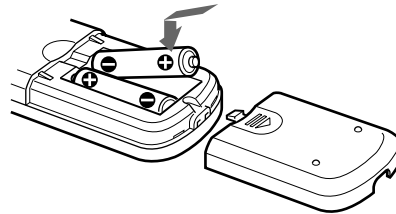

### Using the remote commander

You can use this remote commander to operate this VCR and a Sony TV. Buttons on the remote commander marked with a dot (•) can be used to operate your Sony TV.

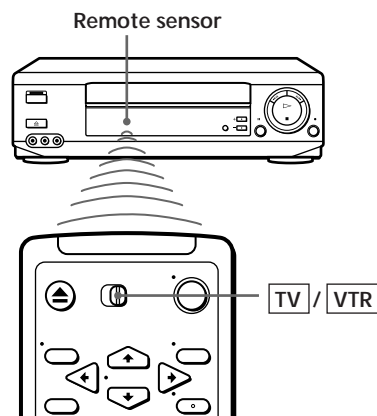

To operate	Set <b>[TV/VTR]</b> to
the VCR	<b>[VTR]</b> and point at the remote sensor on the VCR
a Sony TV	<b>[TV]</b> and point at the remote sensor on the TV

### Notes

- With normal use, the batteries should last about three to six months.
- If you do not use the remote commander for an extended period of time, remove the batteries to avoid possible damage from battery leakage.
- Do not use a new battery with an old one.
- Do not use different types of batteries.

continued

---

## Step 2: Setting up the remote commander (continued)

### Controlling other TVs with the remote commander

The remote commander is preprogrammed to control non-Sony TVs. If your TV is listed in the table below, set the appropriate manufacturer's code number.

- 1 Set **TV**/**VTR** at the top of the remote commander to **TV**.
- 2 Hold down POWER, and enter your TV's code number(s) using the number buttons. Then release POWER.

Now you can use the POWER, VOL +/-, CH +/- and TV/VTR buttons to control your TV. You can also use the buttons marked with a dot (●) to control a Sony TV. To control the VCR, reset **TV**/**VTR** to **VTR**.

#### Code numbers of controllable TVs

If more than one code number is listed, try entering them one at a time until you find the one that works with your TV.

Manufacturer	Code number	Manufacturer	Code number	Manufacturer	Code number
Sony	01	JVC	09	RCA	04,10
Akai	04	KMC	03	Sampo	12
AOC	04	Magnavox	03,08,12	Sanyo	11
Centurion	12	Marantz	04,13	Scott	12
Coronado	03	MGA/Mitsubishi	04,12,13,17	Sears	07,10,11
Curis-Mathes	12	NEC	04,12	Sharp	03,05,18
Daytron	12	Panasonic	06,19	Sylvania	08,12
Emerson	03,04,14	Philco	03,04	Teknika	03,08,14
Fisher	11	Philips	08	Toshiba	07
General Electric	06,10	Pioneer	16	Wards	03,04,12
Gold Star	03,04,17	Portland	03	Yorx	12
Hitachi	02,03	Quasar	06,18	Zenith	15
J.C.Penny	04,12	Radio Shack	05,14		

#### Notes

- If the TV uses a different remote control system from the one programmed to work with the VCR, you cannot control your TV with the remote commander.
- If you enter a new code number, the code number previously entered will be erased.
- When you replace the batteries of the remote commander, the code number automatically resets to 01 (Sony). Reset the appropriate code number.

## Step 3

# Hookups

### Selecting the best hookup option

There are many ways in which your VCR can be hooked up. To hook up your VCR so that it works best for you, first scan through the table below. Then use the accompanying diagrams and procedures on the following pages to set up your VCR. For hookup 1 or 5, use the Sony RM-CM101 Cable Mouse (cable box controller) (not supplied).

If you have	Use	Refer to
TV that has audio/video inputs	Audio/video (A/V) hookup, then follow one of the hookups below.	Pages 8 and 9
Cable box that is compatible with the VCR's cable box control feature	Hookup 1	Pages 10 to 12
No cable box or incompatible cable box with only a few scrambled channels	Hookup 2	Pages 13 to 15
Antenna only, no cable TV	Hookup 3	Pages 16 to 18
Incompatible cable box with many scrambled channels	Hookup 4	Pages 19 to 21
DSS <sup>®</sup> receiver	Hookup 5	Pages 22 and 23
Incompatible cable box with only a few scrambled channels, using an A/B switch	Hookup 6	Pages 24 to 27

After you've completed the connections, follow the instructions for setup. During setup, if you need more details on the procedure described, page numbers are provided where you can find complete, step-by-step instructions.

After you've completed the setup, you're ready to use your VCR. Procedures differ depending on the hookup you used. For an overview, refer to "Quick reference to using the VCR" on the back cover.

#### Before you get started

- Turn off the power to all equipment.
- Do not connect the AC power cords until all of the connections are completed.
- Be sure you make connections firmly. Loose connections may cause picture distortion.
- If your TV doesn't match any of the examples provided, see your nearest Sony dealer or qualified technician.

\* DSS<sup>®</sup> is a registered trademark of DIRECTV, Inc., a unit of Hughes Electronics Corporation.

### Step 3: Hookups (continued)


## Audio/video (A/V) hookup

Pages 8 and 9


If your TV has audio/video (A/V) input jacks, you will get a better picture and sound if you hook up your VCR using these connections. In addition, for a true "home theater" experience, you should connect the audio outputs of your VCR or TV to your stereo system. If your TV doesn't have A/V inputs, see the following pages for antenna or cable hookups.

If you're not planning to use your VCR to record programs, you're finished setting up the VCR after you've made the connections shown on this page. If you want to record off-air or off your cable TV system, complete these connections first, and then go to the following pages for antenna or cable hookups.

**A** Use this hookup if your TV has stereo jacks

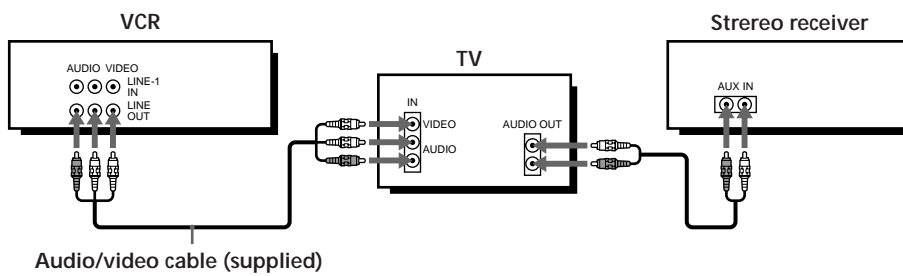

**B** Use this hookup if your TV doesn't have stereo jacks

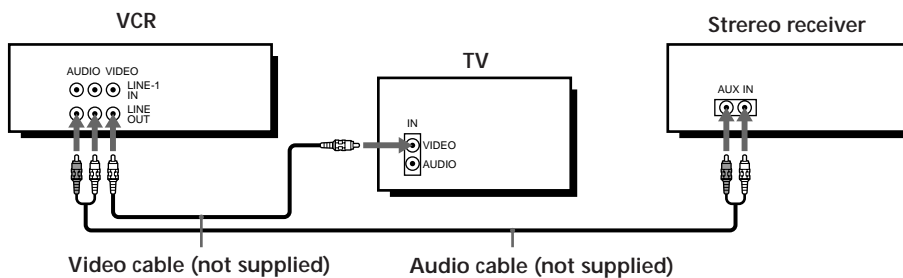

#### Note

To play a tape in stereo, you must use the A/V connection.



---

**Caution**

Connections between the VCR's VHF/UHF connector and the antenna terminals of the TV receiver should be made only as shown in the following instructions. Failure to do so may result in operation that violates the regulations of the Federal Communications Commission regarding the use and operation of RF devices. Never connect the output of the VCR to an antenna or make simultaneous (parallel) antenna and VCR connections at the antenna terminals of your receiver.

**Note to CATV system installer (in USA)**

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

### Step 3: Hookups (continued)

## Hookup 1

Pages 10 to 12

### Using cable box control

#### Recommended use


You should use this hookup if you have a cable box, especially if your cable system scrambles all or most channels. This hookup allows the VCR's cable box control feature to control the channel on the cable box, simplifying the recording process. A list of compatible cable boxes is on page 31.

#### What you can do with this hookup

- Record any channel using the VCR's cable box control feature to select channels on the cable box

#### What you can't do


- Record with the cable box turned off
- Record one channel while watching another channel

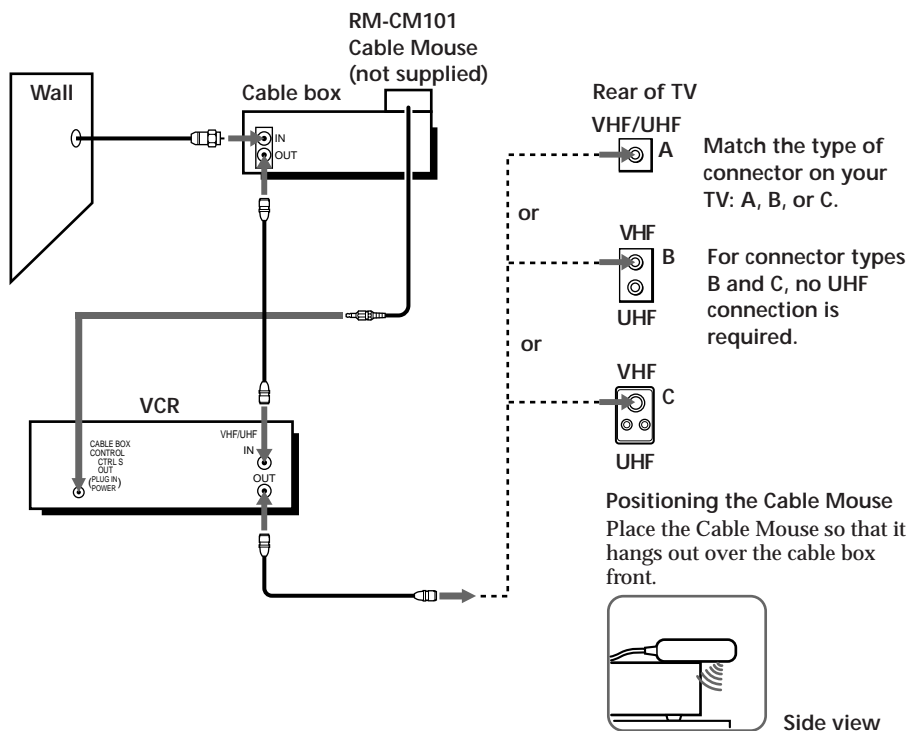

## Hookup 1: VCR setup


- 1** Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.

For details, see page 61. If you made A/V connections (from page 8), you can skip this step.

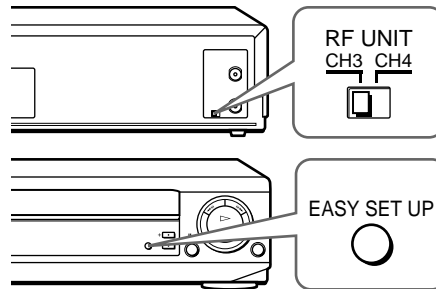


- 2** Turn on your cable box.  
**3** Press EASY SET UP on the VCR.


- 1** The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press EXECUTE. For details, see page 28.

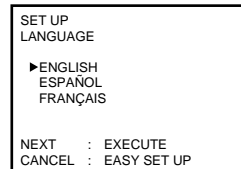


- 2** The CLOCK SET menu appears. Set the clock and press EXECUTE. For details, see page 29.

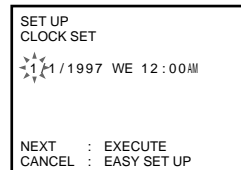



- 3** The CABLE BOX CONTROL menu appears. Select ON. For details, see page 30.

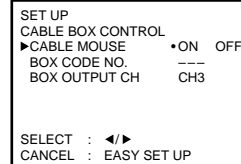

- 4** Enter your cable box code number and press CURSOR ↓.

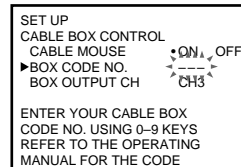

- 5** Select your cable box output channel and press EXECUTE.

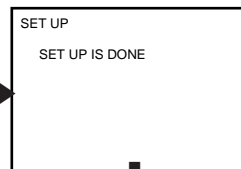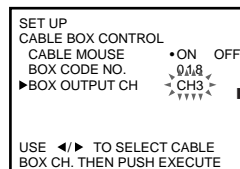

Normal display  
continued


---

**Step 3: Hookups (continued)**


**Hookup 1: VCR Plus+ channel setup**

- 1** Find the VCR Plus+ Channel Listing in your program guide. For details, see page 39.
- 2** If the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows. For details, see page 40.

- 1** Press MENU and select SET VCR PLUS+ CHANNELS.

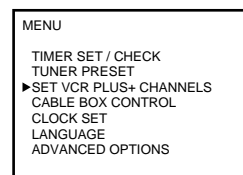

- 2** Enter the program guide channel, then the channel you use on your TV.

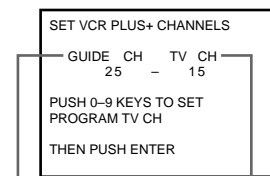

- 3** Press EXECUTE.

Program guide channel

Your actual TV channel

**No cable box, or compatible cable box with only a few scrambled channels**

**Recommended use**


Use this hookup if you do not have a cable box. Also use this hookup if your cable company cannot supply a cable box that is compatible with the VCR's cable box control feature, and your cable system scrambles only a few channels.

**What you can do with this hookup**

- Record any unscrambled channel by selecting the channel on the VCR

**What you can't do**

- Record scrambled channels that require a cable box

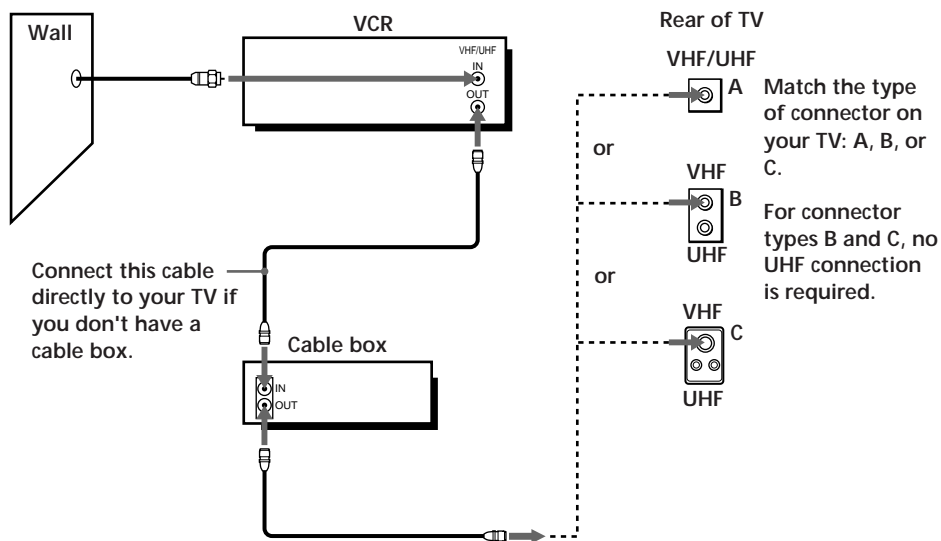


continued

**Step 3: Hookups (continued)**


**Hookup 2: VCR setup**

- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.  
For details, see page 61. If you made A/V connections (from page 8), you can skip this step.

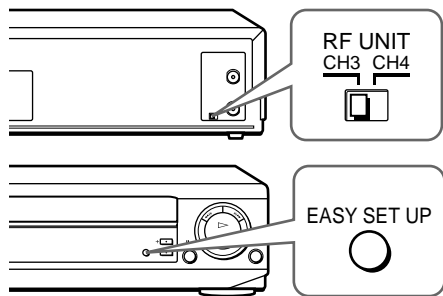


- 2 Press EASY SET UP on the VCR.


- 1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press EXECUTE. For details, see page 28.

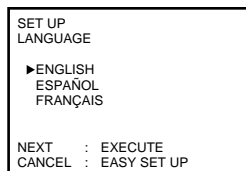


- 2 The CLOCK SET menu appears. Set the clock and press EXECUTE. For details, see page 29.

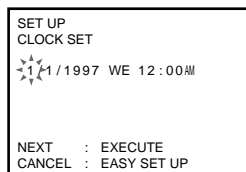


- 3 The CABLE BOX CONTROL menu appears. Select OFF and press EXECUTE. For details, see page 30.

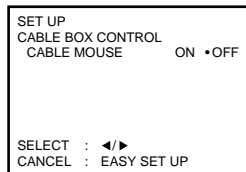

- 4 The TUNER PRESET menu appears. Set ANTENNA / CABLE to CABLE and press EXECUTE. For details, see page 35.

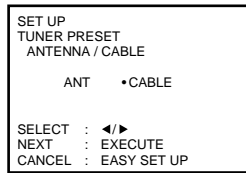


- 5 The AUTO PRESET starts.

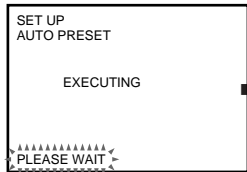


Normal display

## Hookup 2: VCR Plus+ channel setup

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details, see page 39.
- 2 If the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows. For details, see page 40.
  - ① Press MENU and select SET VCR PLUS+ CHANNELS.

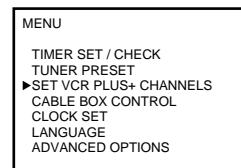

- ② Enter the program guide channel, then the channel you use on your TV.

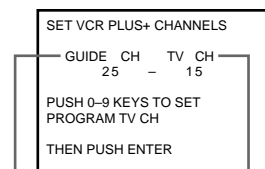

- ③ Press EXECUTE.

Program guide channel

Your actual TV channel

### Step 3: Hookups (continued)

## Hookup 3


Pages 16 to 18

### Antenna hookup


Make the following connections if you're using an antenna (if you don't have cable TV).

**A** Use this hookup if you're using:

- VHF/UHF antenna (you get channels 2-13 and channels 14 and higher)
- UHF-only antenna (you get channels 14 and higher)
- Separate VHF and UHF antennas

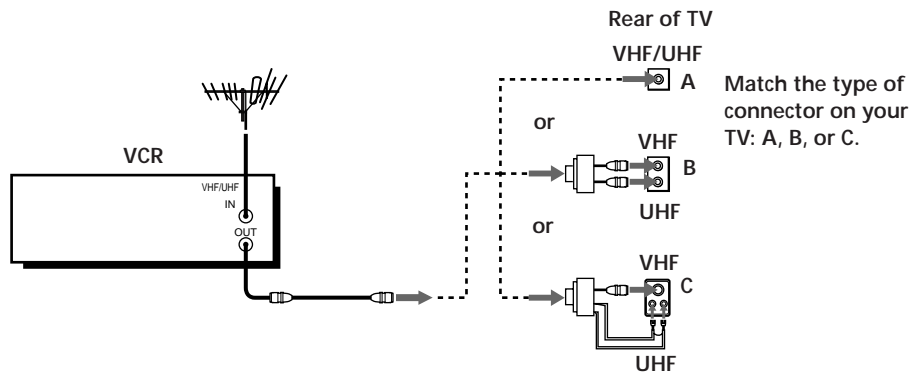

**B** Use this hookup if you're using a VHF-only antenna (you get channels 2-13 only)

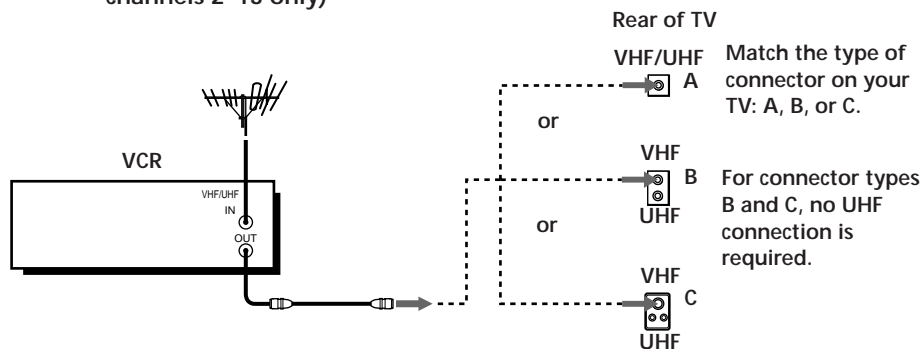

**If you cannot connect your antenna cable to the VCR directly**


If your antenna cable is a flat cable (300-ohm twin lead cable), attach an external antenna connector (not supplied) so that you can connect the cable to the VHF/UHF IN connector. If you have separate cables for VHF and UHF antennas, you should use a U/V band mixer (not supplied). For details, see page 62.



### Hookup 3: VCR setup


- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.

For details, see page 61. If you made A/V connections (from page 8), you can skip this step.

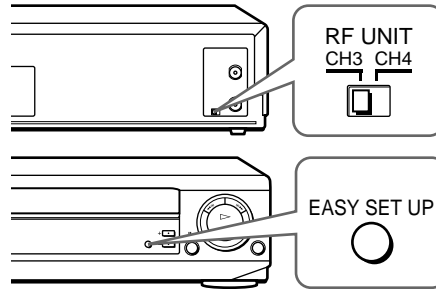


- 2 Press EASY SET UP on the VCR.


- 1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press EXECUTE. For details, see page 28 .

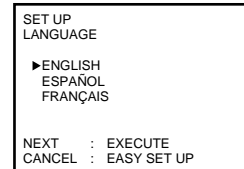


- 2 The CLOCK SET menu appears. Set the clock and press EXECUTE. For details, see page 29.

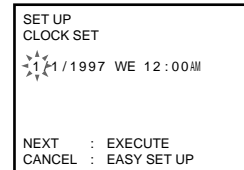


- 3 The CABLE BOX CONTROL menu appears. Select OFF and press EXECUTE. For details, see page 30.

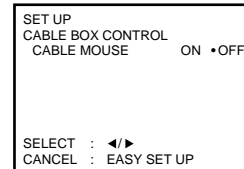

- 4 The TUNER PRESET menu appears. Set ANTENNA/CABLE to ANT and press EXECUTE. For details, see page 35.

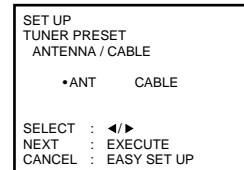

- 5 The AUTO PRESET starts.

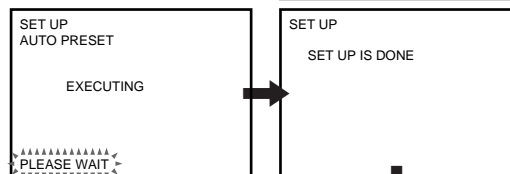

Normal display  
continued


---

**Step 3: Hookups (continued)**


**Hookup 3: VCR Plus+ channel setup**

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details, see page 39.
- 2 If the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows. For details, see page 40.

- 1 Press MENU and select SET VCR PLUS+ CHANNELS.

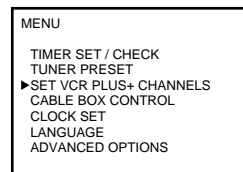

- 2 Enter the program guide channel, then the channel you use on your TV.

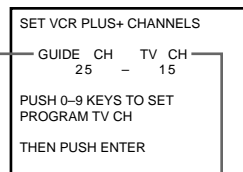

- 3 Press EXECUTE.

Program guide channel

Your actual TV channel

### Incompatible cable box with many scrambled channels

#### Recommended use


this hookup if your cable company cannot supply a cable box that is compatible with the VCR's cable box control feature, and your cable system scrambles all or most channels.

#### What you can do with this hookup

- Record any channel by selecting the channel on the cable box

#### What you can't do

- Record with the cable box turned off
- Record one channel while watching another channel
- Select channels directly on the VCR

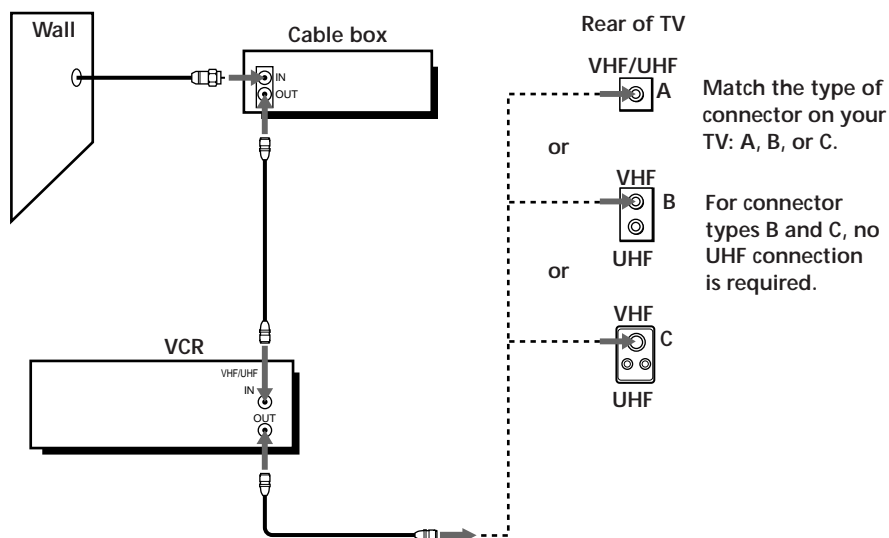


continued

**Step 3: Hookups (continued)**

**Hookup 4: VCR setup**


- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.

For details, see page 61. If you made A/V connections (from page 8), you can skip this step.

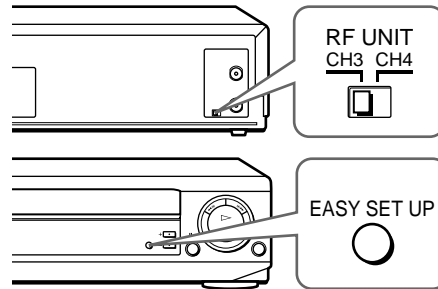


- 2 Turn on your cable box.
- 3 Press EASY SET UP on the VCR.


- 1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press EXECUTE. For details, see page 28.

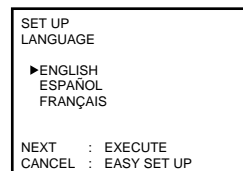


- 2 The CLOCK SET menu appears. Set the clock and press EXECUTE. For details, see page 29.

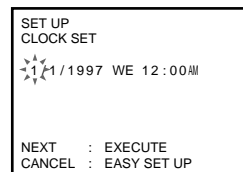



- 3 The CABLE BOX CONTROL menu appears. Select OFF and press EXECUTE. For details, see page 30.

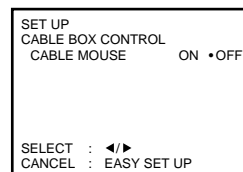

- 4 The TUNER PRESET menu appears. Set ANTENNA/CABLE to ANT and press EXECUTE. For details, see page 35.

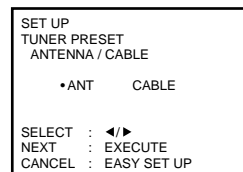

- 5 The AUTO PRESET starts.

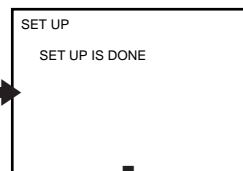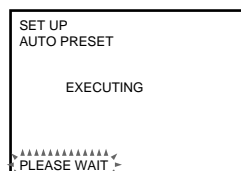

Normal display

## Hookup 4: VCR Plus+ channel setup

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details, see page 39.
- 2 Enter all the channels you want to record and the cable box output channel (usually 2, 3, or 4). For details, see page 40.

① Press MENU and select SET VCR PLUS+ CHANNELS.

```

MENU
TIMER SET / CHECK
TUNER PRESET
▶SET VCR PLUS+ CHANNELS
CABLE BOX CONTROL
CLOCK SET
LANGUAGE
ADVANCED OPTIONS
  
```

② Enter the program guide channel, then the cable box output channel.

```

SET VCR PLUS+ CHANNELS
GUIDE CH   TV CH
 33   -   3
PUSH 0-9 KEYS TO SET
PROGRAM TV CH
THEN PUSH ENTER
  
```

③ Press EXECUTE.

Program guide channel

Cable box output channel

### DSS (Digital Satellite System) receiver

#### Recommended use

Use this hookup if you have a DSS receiver. It allows the VCR's cable box control feature to control the channel on the DSS receiver, simplifying the recording process. A list of compatible DSS receivers is on page 32.


DSS (Digital Satellite System) is a satellite broadcast that provides superior digital-quality video and crisp digital-quality audio. A variety of program packages are available through your program providers. It also has program guides that are sorted by program categories.

#### What you can do with this hookup

- Record any channels using the VCR's cable box control feature to select channels on the DSS receiver.

#### What you can't do

- Record with the DSS receiver turned off
- Record any channels from cable or an antenna  
(To record channels from cable or an antenna, turn off the cable box control feature.)
- Use a cable box
- Record programs with VCR Plus+

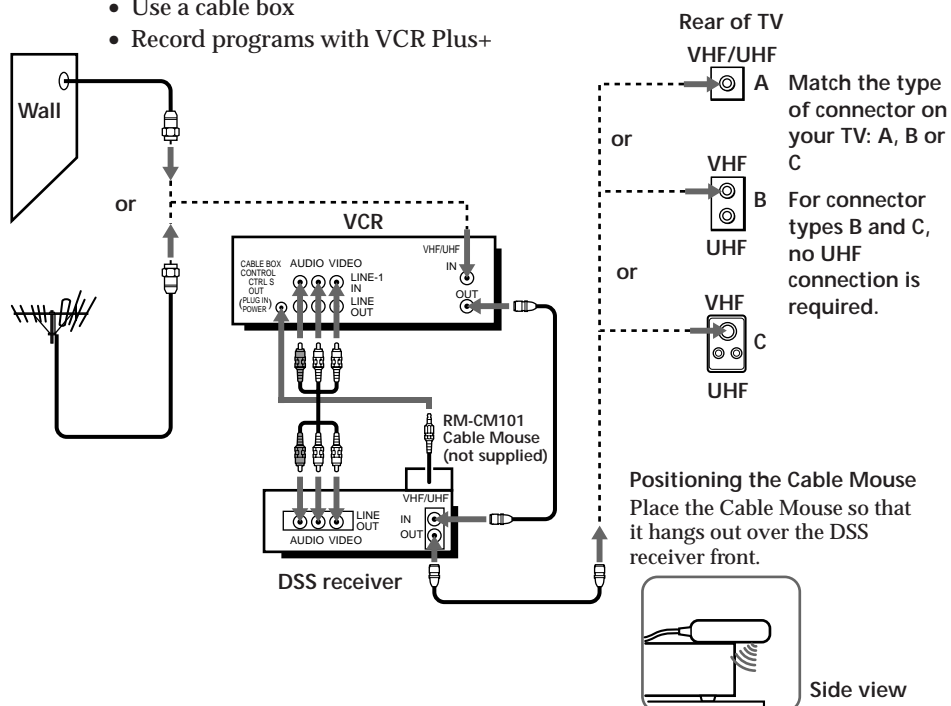


## Hookup 5: VCR setup

- 1 Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.


For details, see page 61. If you made A/V connections (from page 8), you can skip this step.

- 2 Turn on your DSS receiver.
- 3 Press EASY SET UP on the VCR.


- 1 The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press EXECUTE. For details, see page 28.

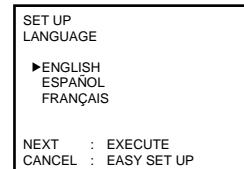


- 2 The CLOCK SET menu appears. Set the clock and press EXECUTE. For details, see page 29.

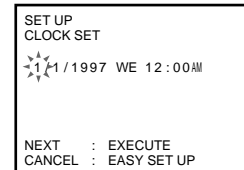



- 3 The CABLE BOX CONTROL menu appears. Select ON. For details, see page 30.

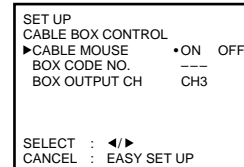

- 4 Enter your DSS receiver code number and press CURSOR↓. For details, see page 30.

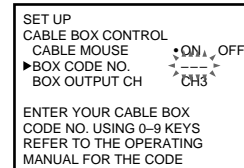

- 5 Set your DSS receiver output channel (BOX OUTPUT CH) to LINE and press EXECUTE.

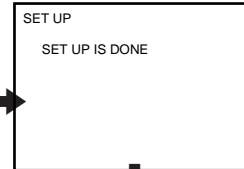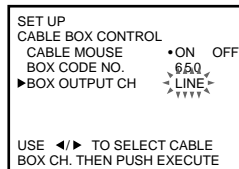

Normal display

Getting Started | 23

### Step 3: Hookups (continued)

## Hookup 6

Pages 24 to 27

### Incompatible cable box with only a few scrambled channels, using an A/B switch

#### Recommended use


By using an A/B switch (not supplied), this hookup allows you to record both scrambled and unscrambled channels conveniently.

#### What you can do with this hookup

- Record any unscrambled channel by selecting the channel directly on the VCR (the A/B switch is set to A)
- Record any scrambled channel by selecting the channel on the cable box (the A/B switch is set to B)

#### What you can't do

- Record one scrambled channel while watching another channel (the A/B switch is set to B)

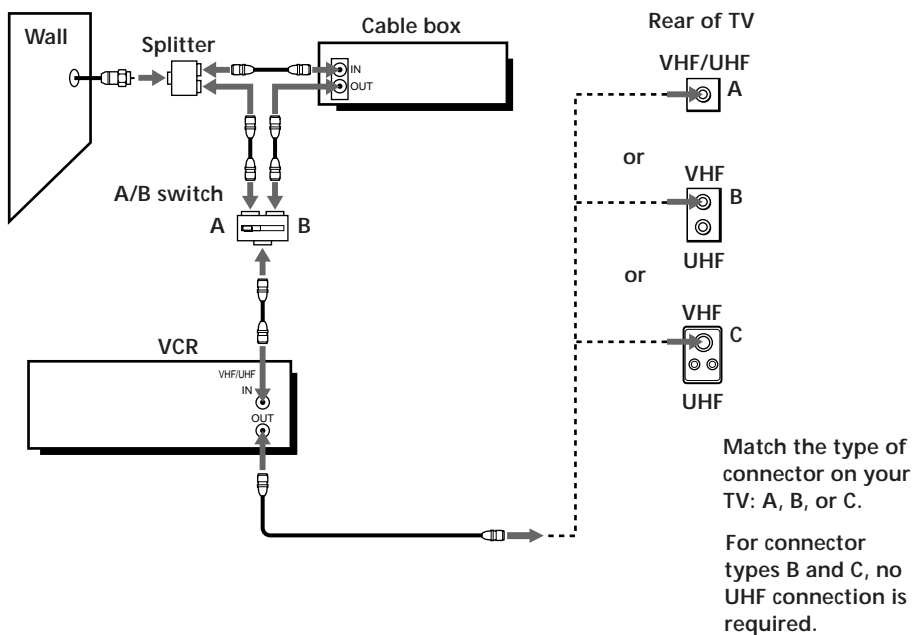




**Hookup 6: VCR setup**


- 1** Set the RF UNIT switch to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.

For details, see page 61. If you made A/V connections (from page 8), you can skip this step.


- 2** Set the A/B switch to "A."  
**3** Press EASY SET UP on the VCR.

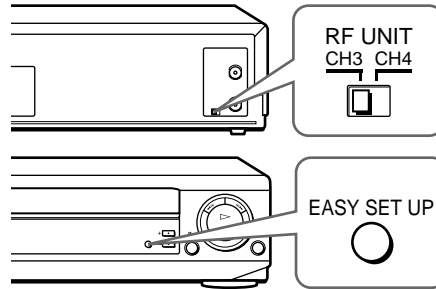


- 1** The LANGUAGE menu appears. Change the on-screen display language to Spanish (ESPAÑOL) or French (FRANÇAIS) if desired, and press EXECUTE. For details, see page 28.

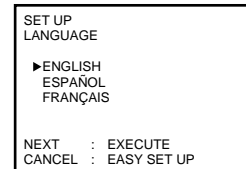


- 2** The CLOCK SET menu appears. Set the clock and press EXECUTE. For details, see page 29.

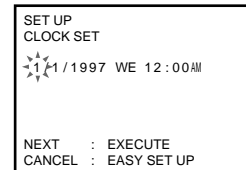


- 3** The CABLE BOX CONTROL menu appears. Select OFF and press EXECUTE. For details, see page 30.

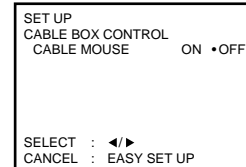

- 4** The TUNER PRESET menu appears. Set ANTENNA/CABLE to CABLE and press EXECUTE. For details, see page 35.

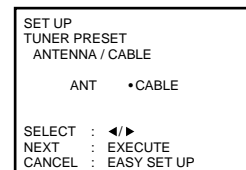

- 5** The AUTO PRESET starts.

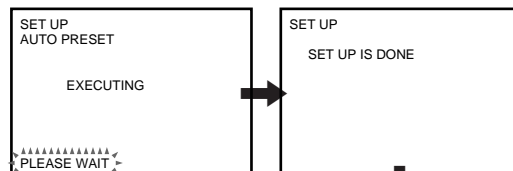

Normal display

continued

---

### Step 3: Hookups (continued)


- 4** Preset the cable box output channel (usually 2, 3 or 4). For details, see page 37.

❶ Press MENU and select TUNER PRESET.

❷ Enter the cable box output channel.

❸ Set MANUAL SET to ADD and press EXECUTE.


#### Cable box output channel

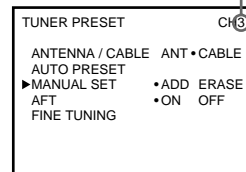


## Hookup 6: VCR Plus+ channel setup

- 1 Find the VCR Plus+ Channel Listing in your program guide. For details, see page 39.
- 2 For unscrambled channels, if the channels in the program guide are different from the channels that you actually use on your TV, set the channels that are different as follows. For details, see page 40.

- 1 Press MENU and select SET VCR PLUS+ CHANNELS.

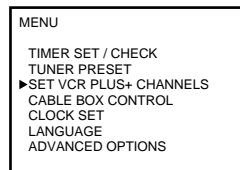

- 2 Enter the program guide channel, then the channel you use on your TV.

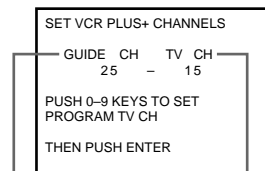


Program guide channel

Your actual TV channel


- 3 Press EXECUTE.

- 3 For scrambled channels, enter all the scrambled channels you want to record and the cable box output channel (usually 2, 3, or 4). For details, see page 40.

- 1 Press MENU and select SET VCR PLUS+ CHANNELS.

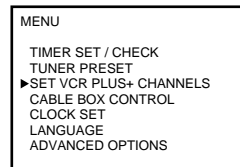

- 2 Enter the program guide channel, then the cable box output channel.

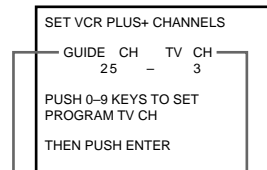


Program guide channel

Cable box output channel



- 3 Press EXECUTE.

## Selecting a language

You can change the on-screen display language.

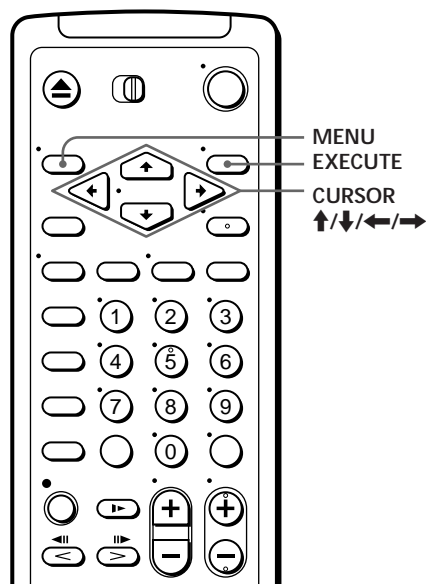


- 1** Press MENU, then press CURSOR  $\uparrow/\downarrow$  to move the cursor (▶) to LANGUAGE and press EXECUTE.

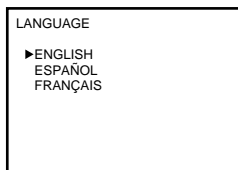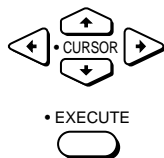

When using the EASY SET UP procedure, skip this step.

- 2** Press CURSOR  $\uparrow/\downarrow$  to select ENGLISH, ESPAÑOL, or FRANÇAIS, then press EXECUTE.

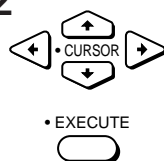


## Setting the clock

Set the time and date to use the timer feature for recording programs.


Before you start...


- Turn on the VCR and the TV.
- Set the TV to the VCR channel (channel 3 or 4). If your TV is connected to the VCR using A/V connections, set the TV to video input.
- Press TV/VTR to display the VTR indicator in the VCR's display window.

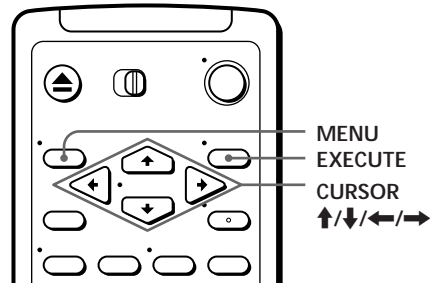


- 1** Press MENU, then press CURSOR  $\uparrow/\downarrow$  to move the cursor (▶) to CLOCK SET and press EXECUTE.

When using the EASY SET UP procedure, skip this step.

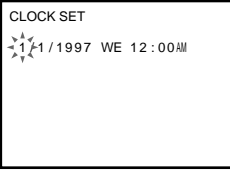
- 2** Press CURSOR  $\uparrow/\downarrow$  to set the month.

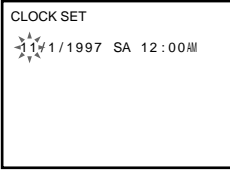

- 3** Press CURSOR  $\rightarrow$  to flash the day and press CURSOR  $\uparrow/\downarrow$  to set the day. The day of the week is set automatically.

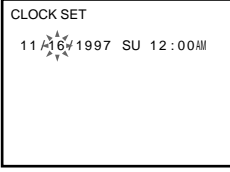
- 4** Set the year, hour and minutes in the same way as the day.
- 5** Press EXECUTE to start the clock.

## Setting up cable box control

(Skip this section if you are using Hookup 2, 3, 4 or 6.)

Your VCR includes a cable box control feature that allows the VCR to control most brands of cable boxes/DSS receivers via an optional Cable Mouse. With cable box control, the VCR controls channels on the cable box/DSS receiver for timer recording. You can also use the VCR's remote commander to change channels on the cable box/DSS receiver whenever the cable box/DSS receiver is turned on even if the VCR is turned off. To use cable box control, you need to connect the Sony RM-CM101 Cable Mouse (not supplied) (pages 10 and 22) and set the code number and output channel.

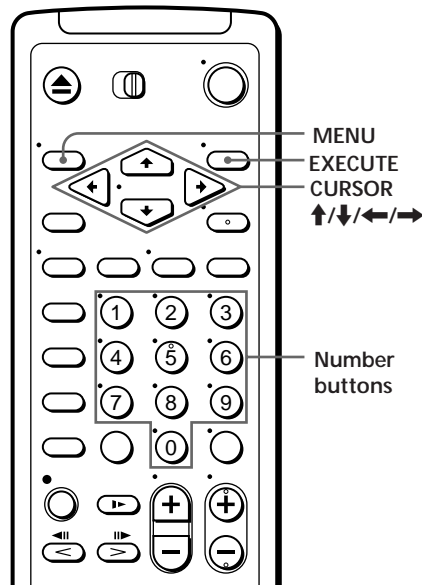

This VCR is programmed with codes necessary to control channel selection on most brands of cable boxes at the time this VCR was manufactured. It is possible that new cable boxes may be introduced that cannot be controlled with the RM-CM101 Cable Mouse. If you have a cable box that is incompatible with this VCR, contact your cable operator -- they may be able to provide you with a compatible cable box.

**1**

• MENU

• EXECUTE

• CURSOR

Press MENU, then press CURSOR  $\uparrow/\downarrow$  to move the cursor (▶) to CABLE BOX CONTROL and press EXECUTE.

When using the EASY SET UP procedure, skip this step.

CABLE BOX CONTROL

CABLE MOUSE ON •OFF

USE  $\leftarrow/\rightarrow$  TO SELECT  
PUSH MENU TO QUIT

**2**

• CURSOR

Press CURSOR  $\leftarrow/\rightarrow$  to select ON, then press CURSOR  $\downarrow$ .

CABLE BOX CONTROL


CABLE MOUSE  $\leftarrow/\rightarrow$  ON •OFF

▶BOX CODE NO. CH#


BOX OUTPUT CH

ENTER YOUR CABLE BOX  
CODE NO. USING 0-9 KEYS  
REFER TO THE OPERATING  
MANUAL FOR THE CODE

- 3** Press the number buttons to enter the cable box/DSS receiver code number, then press CURSOR ↓.

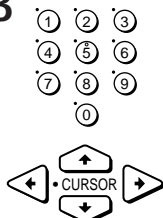

Find your cable box/DSS receiver code number from the chart below.

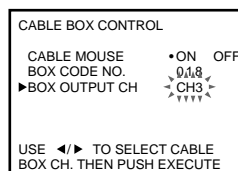

- 4** If you want to control a cable box, press CURSOR ←/→ to select the output channel for the cable box, then press EXECUTE.



If you want to control a DSS receiver, select LINE, then press EXECUTE.

#### Cable box and DSS receiver brand and the corresponding code numbers

If more than one code number is listed, try entering them one by one, until you come to the correct code for your equipment.

Cable box brand	Code numbers
ABC	018, 022, 024, 028, 217
Antronix	218
Archer	033, 050, 164, 218
BBT	278
Cable Star	067
Cabletenna	033
Cable time	172, 282, 388, 459
Century	164
Citizen	164, 326, 327
Clyde Cablevision	097
Colour Voice	036, 042
Combant	243, 244
Comtronics	051, 071
Decsat	434
Diamond	046
Eagle Comtronics	051

Cable box brand	Code numbers
Eastern	013, 285
Electricord	089
Electus	055
Filmnet	454
Focus	411
Garrard	164
GC Electronics	027, 067, 341
GE	243, 244
GEC	097
Gemini	026, 068, 081, 253
General Instrument	022, 287, 487
Hamlin	020, 031, 045, 270, 284
Hitachi	022
Jasco	164, 326
Jerrold	014, 022, 025, 026, 035, 037, 058, 109, 287, 487

continued

### Setting up cable box control (continued)

Cable box brand	Code numbers
Linsay	451
Macom	044
Magnavox	038, 043, 080, 345
Memorex	011
Movie Time	089, 167, 214
Northcoast	325
Novaplex	629
NSC	074, 081, 167, 214
Oak	018, 030, 259
Omniview	382
Panasonic	032, 118
Paragon	011
Philips	036, 038, 039, 040, 041, 042, 071, 301, 345
Philips ECG	253
Pioneer	034, 155, 271, 544, 695
Popular Mechanics	411
Pulsar	011
RCA	032
Realistic	218
Recoton	411
Regal	031, 270, 284, 290
Regency	013
Rembrandt	081
RK	315, 317, 490
Samsung	051, 155
Satbox	386
Scientific Atlanta	017, 019, 028, 288, 338
Seam	521
Sharp	324
Signal	051
Signature	022
SL Marx	051
Spectravision	069
Sprucer	032, 318
Standard Components	107, 166
Starcom	014, 026, 058, 109

Cable box brand	Code numbers
Stargate	026, 051
STS	167
Sylvania	012
T-Cable Teletext	116
Tandy	269
Tatung	108
Teknica	157
Tele +1	454
TeleCaption	232
Teleservice	292
Texscan	012, 107
TFC	321
Timeless	429
Tocom	023, 024, 070
Toshiba	011
Tudi	297
TV86	074
TV COM	018, 030, 259
Uniden	236
Unika	033, 164, 218
United Artists	018
United Cable	014
Universal	033, 050, 067, 088, 089, 164, 202, 218, 333
Videoway	261
Vidtech	255
Viewstar	038, 071, 074, 122, 222, 269, 300
Westminster cable	116
Zenith	011, 065, 536
Zentek	411
Wave Master	576


  

DSS receiver brand	Code numbers
Sony	650
RCA	577



**To ensure correct operation**

- Place the Cable Mouse so that it hangs out over the cable box/DSS receiver front.
- Do not place the cable box/DSS receiver on top of the VCR.
- Position the cable box/DSS receiver away from the VCR.
- Point the remote commander at the VCR, not at the cable box/DSS receiver.

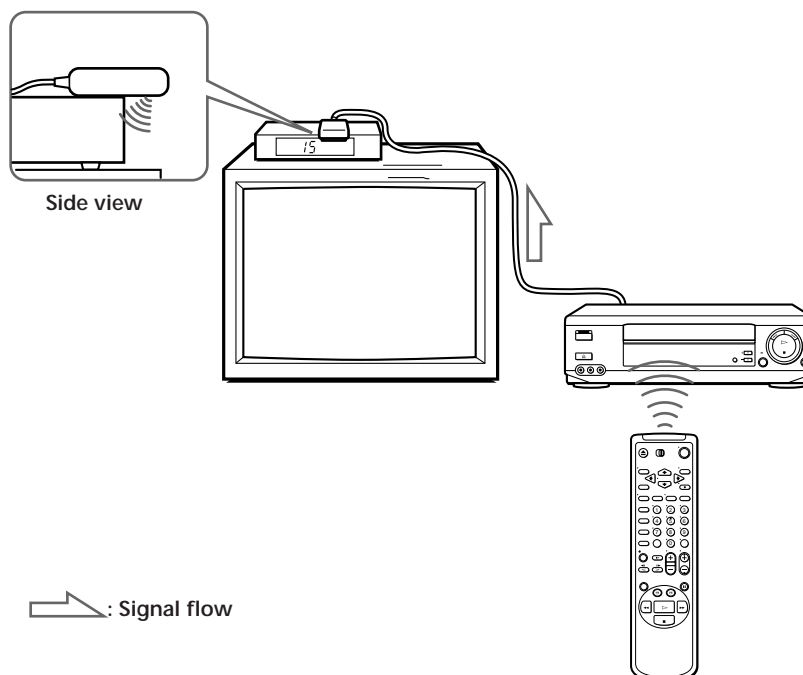**To check the cable box control setting**

- 1** Press CH +/- on the remote commander. Does the channel indicator on the cable box/DSS receiver change? (Point the remote commander at the VCR, not at the cable box/DSS receiver.)
- 2** Press all 10 number buttons (0 to 9) on the remote commander. Does the channel indicator on the cable box/DSS receiver change?

If the answer to both 1 and 2 is "yes," you have made the correct setting.

continued

---

### ***Setting up cable box control (continued)***

**If you cannot get your VCR to control the cable box/DSS receiver**

- Check that the Cable Mouse is connected to the CABLE BOX CONTROL jack on the VCR.
- Check the position of the Cable Mouse.
- Place the cable box/DSS receiver and VCR away from each other. Do not place the cable box/DSS receiver on top of the VCR.
- Try the setup again making sure to use the correct control code. If the cable box still does not respond, try the other codes that are listed.

If your cable box still does not operate with the Cable Mouse, contact your cable company to see if they can provide you with a compatible cable box.

**Note**

- Make sure you turn off the VCR when you plug in or unplug the Cable Mouse. If you unplug the Cable Mouse and plug it in again, turn on the VCR before you use the cable box/DSS receiver control feature.


## Presetting channels

(Skip this section if you are using cable box/DSS receiver control.)

This VCR is capable of receiving VHF channels 2 to 13, UHF channels 14 to 69 and unscrambled CATV channels 1 to 125. First, we recommend that you preset the receivable channels in your area using automatic presetting. Then, if there are any unwanted channels, disable them manually. If you have decided which channels you wish to preset, set them directly using manual presetting.

Before you start...

- Turn on the VCR and the TV.
- Set the TV to the VCR channel (channel 3 or 4). If your TV is connected to the VCR using A/V connections, set the TV to video input.
- Press TV/VTR to display the VTR indicator in the VCR's display window.

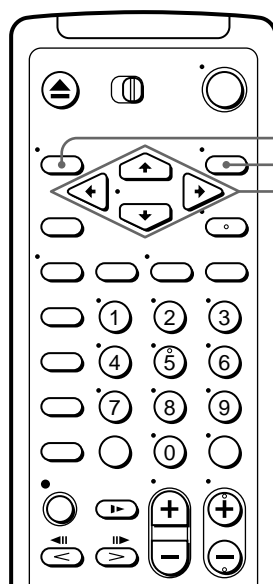


MENU  
EXECUTE  
CURSOR  
↑/↓/←/→

Getting Started

### Presetting all receivable channels automatically

 1

• MENU

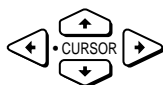

• EXECUTE




Press MENU, then press CURSOR ↑/↓ to move the cursor (▶) to TUNER PRESET and press EXECUTE.

When using the EASY SET UP procedure, skip this step.

TUNER PRESET	CH1
ANTENNA / CABLE	ANT • CABLE
AUTO PRESET	
▶ MANUAL SET	• ADD ERASE
AFT	• ON OFF
FINE TUNING	

 2

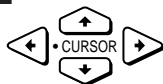


Press CURSOR ↑/↓ to select ANTENNA/CABLE.

continued

Getting Started | 35



## Presetting/disabling channels manually

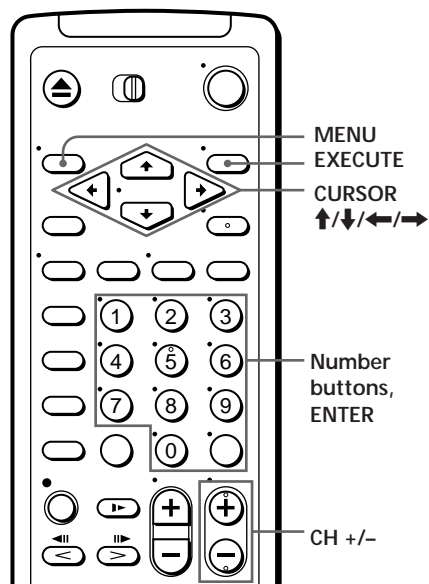

Getting Started


1



Press MENU and select TUNER PRESET, then press EXECUTE.

TUNER PRESET	CH1
ANTENNA / CABLE	ANT • CABLE
AUTO PRESET	
▶MANUAL SET	•ADD ERASE
AFT	•ON OFF
FINE TUNING	

 2

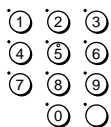

• To preset a channel:

- 1 Press the number buttons to enter the channel number, then press ENTER.
- 2 Press CURSOR ←/→ to set MANUAL SET to ADD.

Channel to be preset

TUNER PRESET	CH5
ANTENNA / CABLE	ANT • CABLE
AUTO PRESET	
▶MANUAL SET	•ADD ERASE
AFT	•ON OFF
FINE TUNING	



• To disable a channel:

- 1 Press CH +/- to select the channel number.
- 2 Press CURSOR ←/→ to set MANUAL SET to ERASE.

Channel to be disabled

TUNER PRESET	CH5
ANTENNA / CABLE	ANT • CABLE
AUTO PRESET	
▶MANUAL SET	ADD • ERASE
AFT	• ON OFF
FINE TUNING	

3



Repeat step 2 to preset or disable channels as required, then press EXECUTE.


continued

Getting Started | 37


**Presetting channels (continued)**

**If the picture is not clear**


Normally, the Auto Fine Tuning (AFT) function automatically tunes in channels clearly. If, however, the picture of a channel is not clear, you can also use the manual tuning function.

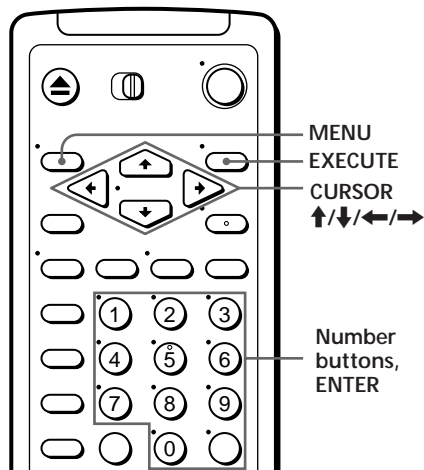


**1** Press MENU and select TUNER PRESET, then press EXECUTE.

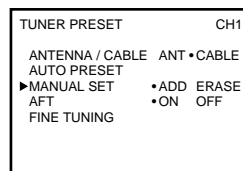

 
**2** Press the number buttons to select the channel you want to fine-tune, then press ENTER.

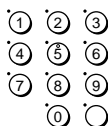



Selected channel

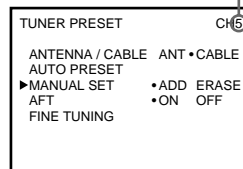

**3** Press CURSOR ↑/↓ to select FINE TUNING. The fine tuning meter appears.

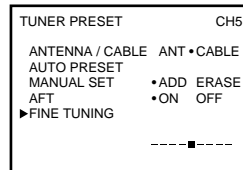

 **4** Press CURSOR ←/→ to adjust to a clearer picture, then press EXECUTE. Note that the AFT setting switches to OFF.

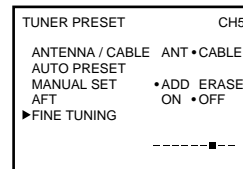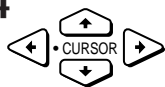

# Setting up VCR Plus+

## How VCR Plus+ works

Whenever you want to record a TV program, all you need to do is look up the program's "PlusCode," a number assigned to each program that's published in the TV section of most newspapers, cable TV listings, and even *TV GUIDE* magazine. Then, just enter the PlusCode of the program you want and the VCR is automatically programmed to record that show. It's that simple.

## How to set up your VCR

Setting up your VCR involves coordinating the TV channel number (the number you turn to on your TV or VCR to watch a program) with the guide channel (the number that's assigned to that channel in your program guide). To get the guide channel numbers, find the "Channel Line-up Chart" in the program guide for your area that features VCR PlusCodes. It usually looks like the example to the right.

For each channel your VCR receives, use the Channel Line-up Chart to check that the channel numbers match. For example, if HBO is listed in the Channel Line-up Chart on channel 33, and your VCR receives HBO on channel 5, you need to coordinate these numbers using the following procedure. For channels in which the numbers are the same, you can skip this procedure.

Example of "PlusCode"

5:30	<b>14</b> MOVIE — Musical (2hrs.)	<b>33044</b>
	<b>2</b> SPORT — Golf (1hr. 25min.)	42060
	<b>CNN</b> — WS 9974	
6:30	<b>2 3 4</b> DRAMA — Comedy (2hrs.)	17390
	<b>5</b> SCIENCE AND TECHNOLOGY (1hr. 15min.)	73457


Example of "Channel Line-up Chart"

CABLE CH	CABLE TV	VCR Plus+ GUIDE CH
16	<b>AMC</b> American Movie Classics	35
17	<b>BRV</b> Bravo (program grid only)	54
20	<b>CNN</b> Cable News Network	42
21	<b>CSP</b> C-SPAN	28
22	<b>DIS</b> The Disney Channel	53
25	<b>DSC</b> The Discovery Channel	37
34	<b>ESN</b> ESPN	34
35	<b>FAM</b> The Family Channel	47
5	<b>HBO</b> Home Box Office	33
27	<b>LIF</b> Lifetime	46
29	<b>MAX</b> Cinemax	45
30	<b>MTV</b> Music Television	48
31	<b>NIK</b> Nickelodeon	38
38	<b>SC</b> Sports Channel	59
39	<b>SCA</b> Sports Channel America	70
45	<b>SHO</b> Showtime	41
17	<b>TBS</b> TBS SuperStation	43
44	<b>TMC</b> The Movie Channel	58
49	<b>TNN</b> The Nashville Network	49
50	<b>TNT</b> Turner Network Television	52
51	<b>USA</b> USA Network	44

continued

Getting Started

## Setting up VCR Plus+ (continued)

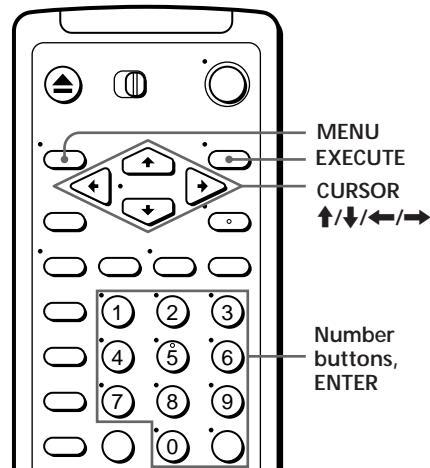

- 1**
- MENU
  - CURSOR
  - EXECUTE
- Press MENU, then press CURSOR ↑/↓ to move the cursor (▶) to SET VCR PLUS+ CHANNELS and press EXECUTE.

SET VCR PLUS+ CHANNELS

GUIDE	CH	TV	CH
	▶	-	--

PUSH 0-9 KEYS TO SET PROGRAM GUIDE CH  
OR PUSH EXECUTE TO SEE VCR PLUS+ CHANNEL LIST

- 2**
- ①
  - ②
  - ③
  - ④
  - ⑤
  - ⑥
  - ⑦
  - ⑧
  - ⑨
  - ⑩
- Enter the channel number assigned in the program guide and press ENTER.

SET VCR PLUS+ CHANNELS

GUIDE	CH	TV	CH
	33	-	--

PUSH 0-9 KEYS TO SET PROGRAM GUIDE CH  
THEN PUSH ENTER

- 3**
- ①
  - ②
  - ③
  - ④
  - ⑤
  - ⑥
  - ⑦
  - ⑧
  - ⑨
  - ⑩
- If you made Hookup 1 or 3: Enter the actual number on your TV (and VCR) and press ENTER.
  - If you made Hookup 2: Enter the cable output channel (usually 2, 3 or 4) and press ENTER.
  - If you made Hookup 4: Enter the actual number on your TV (and VCR) for an unscrambled channel and press ENTER. For a scrambled channel, enter the cable box output channel (usually 2, 3 or 4) and press ENTER.

SET VCR PLUS+ CHANNELS

GUIDE	CH	TV	CH
	33	-	5

PUSH 0-9 KEYS TO SET PROGRAM TV CH  
THEN PUSH ENTER


SET VCR PLUS+ CHANNELS

GUIDE	CH	TV	CH
	33	-	3



PUSH 0-9 KEYS TO SET PROGRAM TV CH  
THEN PUSH ENTER



**4** Repeat steps 2 and 3 for each channel whose numbers don't match.


**5**  EXECUTE When you have set all channels, press EXECUTE to confirm your channel settings.

VCR PLUS+ CHANNEL LIST			
PAGE 1			
GUIDE	TV	GUIDE	TV
2	- 73	59	- 47
5	- 4	61	- 3
17	- 55	77	- 35
28	- 9	86	- 120
33	- 5	90	- 22

USE   TO CHANGE PAGE  
PUSH MENU TO QUIT


**6**  MENU When you've finished, press MENU to exit.

## Playing a tape

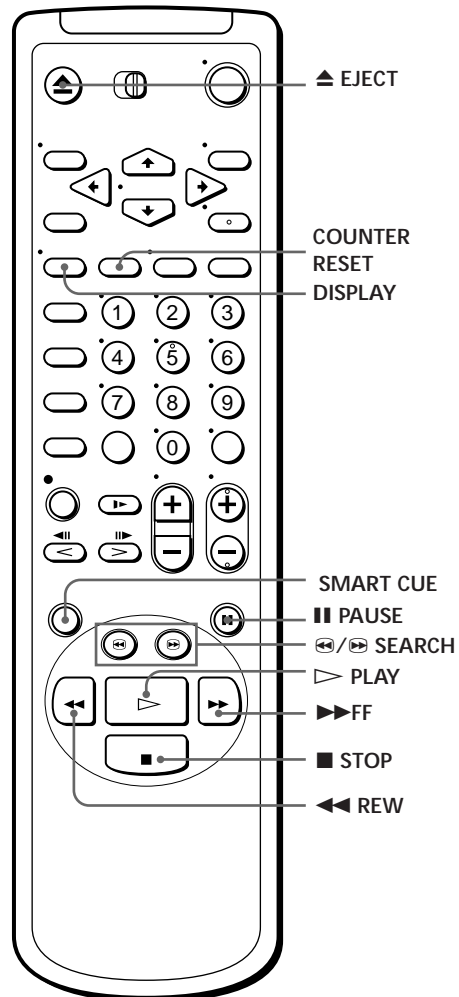

**1** Turn on your TV and set it to the video channel.

 **2** Insert a tape.  
The VCR turns on and starts playing automatically if you insert a tape with its safety tab removed.

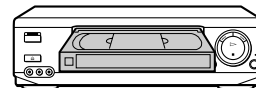

3



Press ▷ PLAY.

When the tape reaches the end, it will rewind automatically.

#### Additional tasks

To	Press
Stop play	■ STOP
Pause play	▬ PAUSE
Resume play after pause	▬ PAUSE or ▷ PLAY
Search forward	▶▶ FF or 🔍 SEARCH during playback
Search backward	◀◀ REW or 🔍 SEARCH during playback
Fast-forward the tape	▶▶ FF during stop
Rewind the tape	◀◀ REW during stop
Eject the tape	⬆ EJECT

#### To skip playback

 
You can skip a portion of playback you don't want to watch such as a commercial and restart playback by pressing a single button.

Press SMART CUE during playback of the scene you want to skip. The VCR starts searching.

Press SMART CUE again when you find the scene you want to watch. The VCR stops searching, rewinds a few seconds, then resumes normal playback.

#### To use the time counter

At the point on the tape that you want to find later, press COUNTER RESET. The counter in the display window resets to "0H00M00S." Search for the point afterwards by referring to the counter.

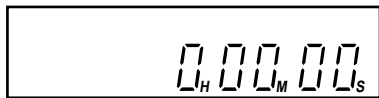


To display the counter on the TV screen, press DISPLAY.

#### Notes

- Tapes recorded in the LP mode on other VCRs can be played back on this VCR but the picture quality cannot be guaranteed.
- The counter resets to "0H00M00S" whenever a tape is reinserted.
- The counter stops counting when it comes to a portion with no recording.

## Recording TV programs

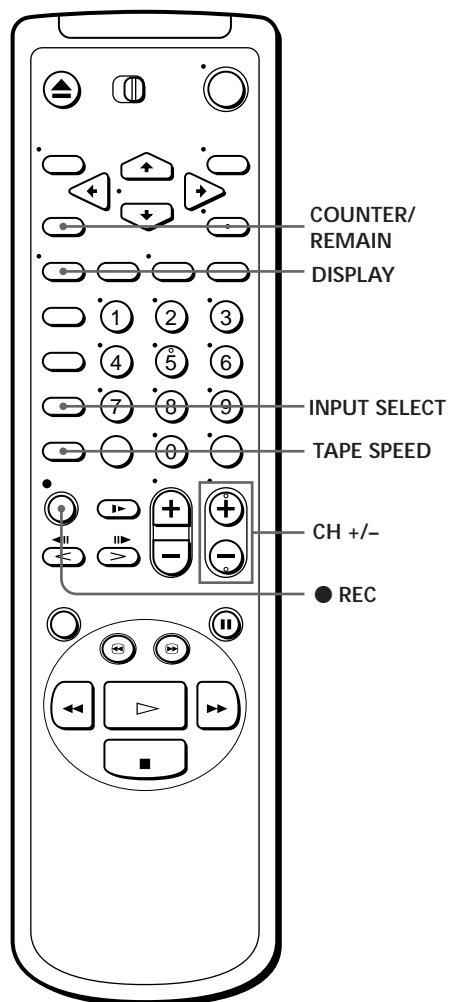


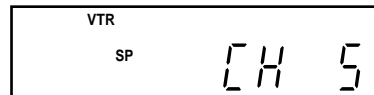 
---


**1** Turn on your TV and set it to the video channel.  
To record from a cable box, turn it on.

 
---


**2** Insert a tape with its safety tab in place.


- 3**  Press INPUT SELECT until a channel number appears in the display window.



- 4**  Press CH +/- to select the channel you want to record.

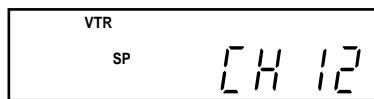

 - 5**  Press TAPE SPEED to select the tape speed, SP or EP. EP provides recording time three times as long as SP, however, SP produces better picture and audio quality.

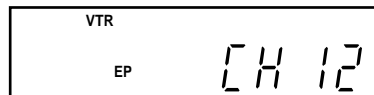


- 6**  Press ● REC to start recording.

#### To stop recording

Press ■ STOP.

#### To check the remaining time

Press DISPLAY. With the display on, press COUNTER/REMAIN to check the remaining time. Each time you press COUNTER/REMAIN, the time counter and the remaining time appear alternately. The remaining time indicator also appears in the display window.

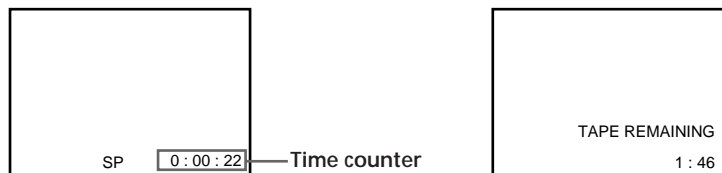

To check the remaining time of a T-140, T-180 or longer tape, set TAPE SELECT in the ADVANCED OPTIONS menu to "180." (For details, see page 58.)

continued

---

## Recording TV programs (continued)

### To watch another TV program while recording

- 1 Press TV/VTR to turn off the VTR indicator in the display window.
- 2 If the TV is connected to the VCR's LINE OUT jacks, set the TV to TV input; if not, skip this step.
- 3 Select another channel on the TV.

### To save a recording

To prevent accidental erasure, break off the safety tab as illustrated. To record on a tape again, cover the tab hole with adhesive tape.



### Tips

- To select a channel, you can use the number buttons on the remote commander. Enter the channel number, then press ENTER.
- You can select a video source from the LINE-1 IN or LINE-2 IN jacks using INPUT SELECT.
- The display appears on the TV screen indicating information about the tape, but the information won't be recorded on the tape.
- If you don't want to watch TV while recording, you can turn off the TV. When using a cable box, make sure to leave it on.

### Notes


- The remaining time may not be indicated accurately for:
  - short tapes less than T-20
  - T-130
  - T-210
  - tapes recorded in the LP mode.
- The display doesn't appear during still (pause) mode, search mode or slow-motion playback.
- It may take up to one minute for the VCR to calculate and display the remaining time after you press DISPLAY.

## Recording TV programs using VCR Plus+

Just enter the program's PlusCode listed in the TV program guide. The date, times and channel number of that program are set automatically. You can preset up to eight programs at a time.

### Before you start...

- Check that the VCR clock is set to the correct time.
- Turn on your TV and set it to the video channel. When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.

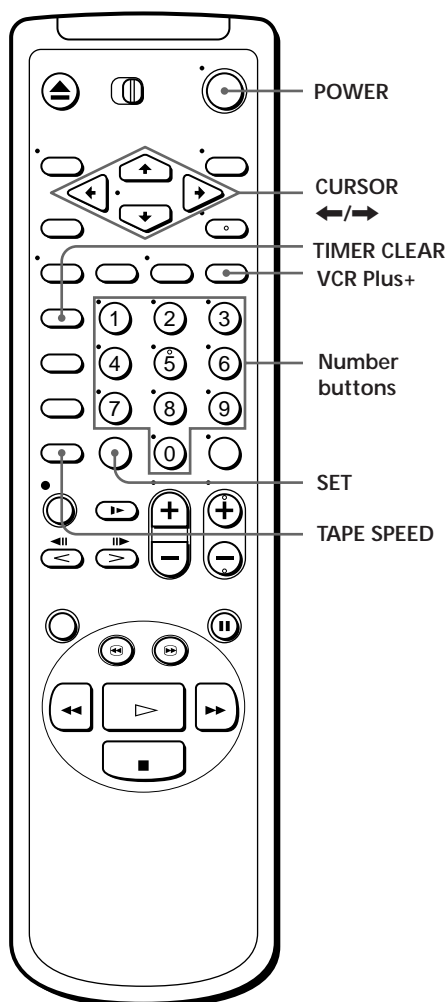


**1** VCR Plus+ Press VCR Plus+.

VCR PLUS+	
PLUSCODE	TAPE SPEED
-----	SP
ENTER PROGRAM'S PLUSCODE USING 0-9 KEYS	
TO CHANGE TAPE SPEED PUSH TAPE SPEED	

continued


## Recording TV programs using VCR Plus+ (continued)

 2

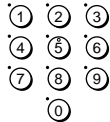

Press the number buttons to enter the program's PlusCode.


If you make a mistake, press **TIMER CLEAR** and re-enter the correct number.

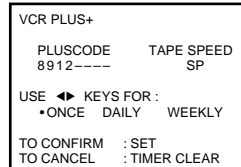


3



Press **TAPESPEED** to select **SP** or **EP**.

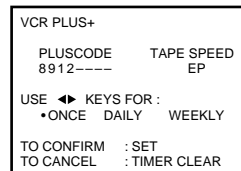


4

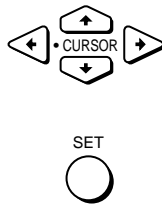

Select **ONCE**, **DAILY** or **WEEKLY** by using **CURSOR** ◀▶/↕, then press **SET**:

To record	Select
Only once	ONCE
Everyday Monday to Friday	DAILY
Once a week	WEEKLY

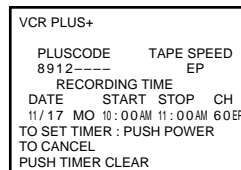

The date, start and stop times, channel number and tape speed appear on the TV screen. If the information is not correct, press **TIMER CLEAR** to cancel the setting.

5

To enter another setting, repeat steps 1 to 4.

6



Press **POWER** to turn off the VCR.

The **TIMER** indicator on the VCR lights up and the VCR stands by for recording. When using a cable box, leave it on.

**To stop recording**

To stop the VCR while recording, press **■STOP**.



---


#### To use the VCR after setting the timer


To use the VCR before a timer recording begins, just press POWER. The TIMER indicator turns off and the VCR switches on. Remember to press POWER to reset the VCR in timer recording standby after using the VCR.

You can also do the following tasks while the VCR is recording:

- Reset the counter.
- Display tape information on the TV screen.
- Check the timer settings.
- Watch another TV program.

#### To lock the VCR after setting the timer (Child Lock)

Hold down POWER on the VCR until the VCR beeps. The VCR turns off and the  indicator appears in the display window. The VCR will not work except for timer recording.

To unlock the VCR, hold down POWER on the VCR until the VCR beeps. The VCR turns on and the  indicator disappears from the display window.

#### Tip

- To cancel the procedure, press VCR Plus+ before pressing SET.

#### Note


- If the VCR doesn't accept the PlusCode, this means that:
  - The PlusCode is incorrect.
  - ONCE, DAILY or WEEKLY was selected incorrectly. You cannot select DAILY or WEEKLY for a program that airs more than seven days ahead.

## Setting the timer manually


If VCR Plus+ is not available in your area, follow the instructions below to set the timer to record programs.

Before you start...

- Check that the VCR clock is set to the correct time.
- Turn on your TV and set it to the video channel. When using a cable box, turn it on.
- Insert a tape with its safety tab in place. Make sure the tape is longer than the total recording time.

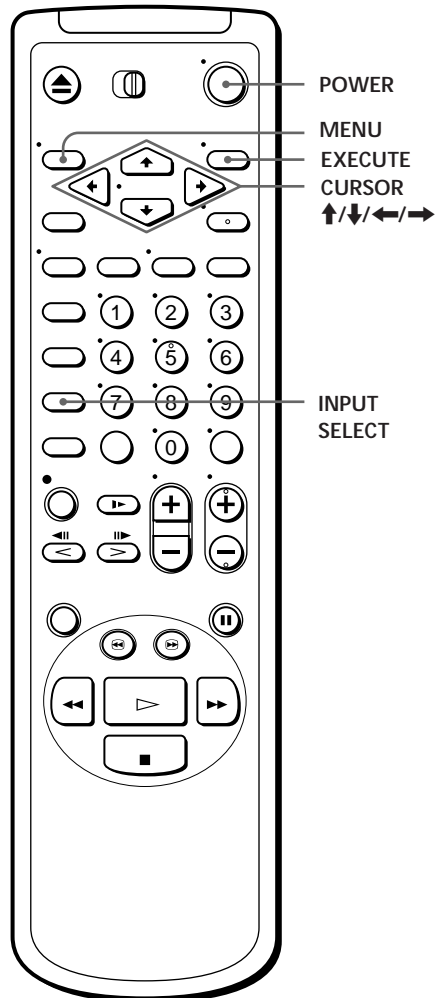


1

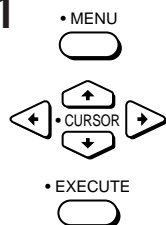

Press MENU and select TIMER SET/CHECK, then press EXECUTE.

TIMER SET / CHECK	11 / 16	SU
DATE	START	STOP CH
▶- / -	- : -	- : -
- / -	- : -	- : -
- / -	- : -	- : -
- / -	- : -	- : -
- / -	- : -	- : -
- / -	- : -	- : -
- / -	- : -	- : -
- / -	- : -	- : -

 2

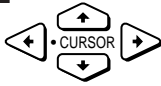

Set the date, start and stop times, channel number and tape speed:

1 Press CURSOR → to flash each item in turn.

2 Press CURSOR ↑/↓ to set each item.


To correct a setting, press CURSOR ← to return to that setting and reset.

To record the same program every day or the same day every week, press CURSOR ↓ while the date is flashing. For details, see “Daily/weekly recording” on this page.

To record from a source connected to the LINE IN jacks, press INPUT SELECT to display “L1” or “L2” in the “CH” position.

TIMER SET / CHECK		11 / 16	SU
DATE	START	STOP	CH
11 / 16 SU	---	---	---
12 / 12 11 11 11	---	---	---
- / -	---	---	---
- / -	---	---	---
- / -	---	---	---
- / -	---	---	---
- / -	---	---	---
- / -	---	---	---

 3

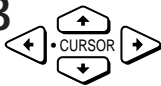

Press CURSOR → to confirm the setting.

The cursor (▶) appears at the beginning of the line. To enter another setting, move the cursor to the next line and repeat step 2.

4



Press EXECUTE.

5



Press POWER to turn off the VCR.

The TIMER indicator on the VCR lights up and the VCR stands by for recording. When using a cable box, leave it on.

#### Daily/weekly recording

In step 2 above, press CURSOR ↓ to select the recording pattern. Each time you press CURSOR ↓, the indication changes as shown below.

the current date → SU-SA → MO-SA → MO-FR → EVERY SA → ..... →  
 EVERY MO → EVERY SU → 1 month later → (dates count down) → the  
 current date


#### Tips

- To set the channel, you can also use the CH+/- or number buttons.
- To set the tape speed, you can also use TAPE SPEED.

#### Note

- If you are using cable box control, you cannot select “L1” or “L2”.

## Playing/searching at various speeds

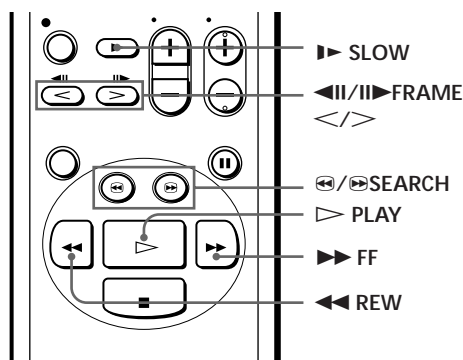

Playback options	Operation
Fast-forward/rewind	During stop, press ►► FF or ◀◀ REW.
View the picture during fast-forward or rewind	During fast-forward, keep pressing ►► FF. During rewind, keep pressing ◀◀ REW.
Play at high speed	During playback or pause, press ◀◀ SEARCH or ►► SEARCH. To change direction, press > or <.
Play in slow motion	During playback or pause, press ► SLOW. To change direction, press > or <.
Play frame by frame	During pause, press ►►FRAME or ◀◀FRAME. Hold the button down to play one frame each second.
Play in reverse	During playback, press <.
Rewind and start play	During stop, press ▷ PLAY on the VCR while pressing ◀◀ REW on the VCR.

### To resume normal playback

Press ▷ PLAY.

#### Tip


- Adjust the picture using the TRACKING +/- buttons on the VCR if:
  - Streaks appear while playing in slow motion.
  - The picture shakes while pausing.

#### Notes


- The sound is muted during these operations.
- Tapes recorded in the LP mode on other VCRs can be played back on this VCR but the picture quality cannot be guaranteed.
- The picture may have snow:
  - when playing at high speed in reverse
  - when playing in reverse slow motion
  - when playing in reverse.

## Recording TV programs using the quick timer


After starting recording in the normal way, you can have the VCR stop recording automatically after a specified duration.

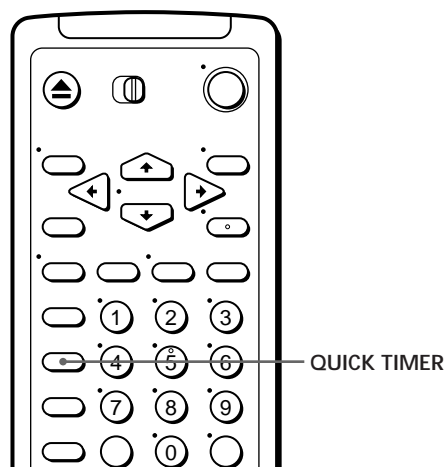

 - 1 While recording, press QUICK TIMER once.

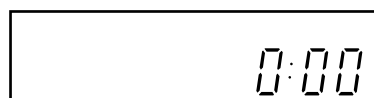

 - 2 Press QUICK TIMER repeatedly to set the duration.  
Each press advances the time in increments of 30 minutes.

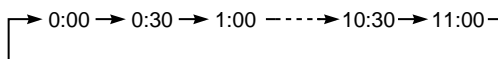

The duration decreases minute by minute to 0:00, then the VCR stops recording and turns off automatically.

### To extend the duration

Press QUICK TIMER repeatedly to set to the new duration.

### To stop the VCR while recording

Press ■ STOP.


## Using the quick timer during stop mode

- 1 Press QUICK TIMER.
- 2 Press CH +/- or INPUT SELECT to select the channel you want to record.
- 3 Press QUICK TIMER repeatedly to set the recording duration.  
The recording starts.

## Checking/ changing/ canceling timer settings

Before you start...

- Turn on your TV and set it to the video channel.

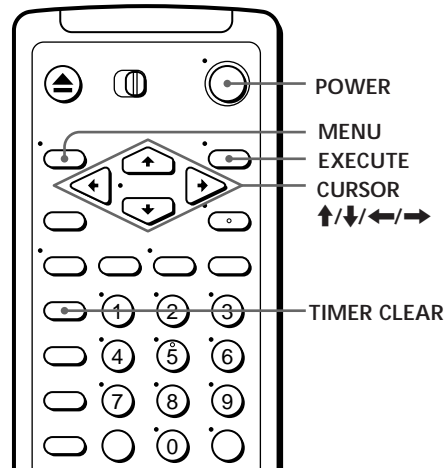


- 1 Press **POWER** to turn on the VCR.
- 2 Press **MENU** and select **TIMER SET/CHECK**:
  - If you want to change a setting, go on to the next step.
  - If you do not need to change the settings, press **EXECUTE**, then turn off the VCR to return to recording standby.

TIMER SET/CHECK	11/16	SU	
DATE	START	STOP	CH
▶11/17	MO 7:00AM	8:00AM	6SP
11/25	TU 10:30PM	11:15PM	50EP
MO - SA	1:00PM	3:00PM	L1EP
EVERYSU	11:55AM	1:30PM	42SP
-/-	-:-	-:-	-:-
-/-	-:-	-:-	-:-
-/-	-:-	-:-	-:-
-/-	-:-	-:-	-:-

- 3 Press **CURSOR** **↑/↓** to select the setting you want to change or cancel:
  - To change the setting, press **CURSOR** **←/→** to flash the item you want to change, and press **CURSOR** **↑/↓** to reset it. Then, press **CURSOR** **→** repeatedly until the cursor (▶) appears at the beginning of the line.
  - To cancel the setting, press **TIMER CLEAR**.
- 4 Press **EXECUTE**.  
If any timer settings remain, turn off the VCR to return to recording standby.

### When the timer settings overlap

The program that starts first has priority and the second program starts recording only after the first program has finished. If the programs start at the same time, the program listed first in the menu has priority.

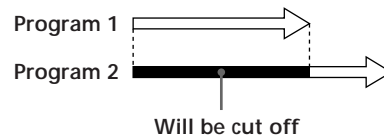

---

## Recording stereo and bilingual programs

### Recording stereo programs

This VCR automatically receives and records stereo programs. When a stereo program is received, the STEREO indicator lights up. If there is noise in the stereo program, set AUTO STEREO in the ADVANCED OPTIONS menu to OFF. The sound will be recorded in monaural (on both hi-fi and normal audio tracks) but with less noise. For details, see page 58.

### Recording bilingual programs

Normally, this VCR records only the main sound. When a SAP (Second Audio Program) is received, the SAP indicator lights up. To record only SAP sound, set TUNER AUDIO in the ADVANCED OPTIONS menu to SAP. For details, see page 58.

### Selecting the sound while playing

Press AUDIO MONITOR to select the desired sound. (The sound being recorded will not change.)

#### Stereo program

To listen to	Indicator on the TV screen
Stereo	STEREO
Left channel	L
Right channel	R
Monaural sound on the normal audio track*	No indicator appears

\* Usually the mixed sound of left and right channels

continued


---

---

## Recording stereo and bilingual programs (continued)

### How sound is recorded on a video tape

The VCR records sound onto two separate tracks. Hi-fi audio is recorded onto the main track along with the picture. Monaural sound is recorded onto the normal audio track along the edge of the tape.

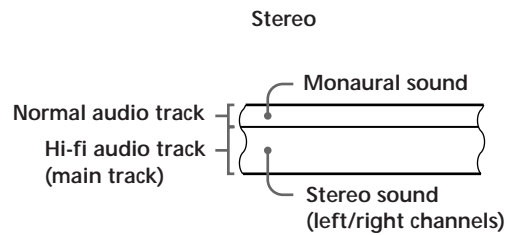

#### Notes


- To play a tape in stereo, you must use the A/V connections.
- When you play a tape recorded in monaural, the sound is heard in monaural regardless of the AUDIO MONITOR setting.




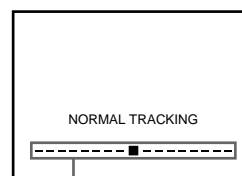
---

## Adjusting the picture

### Adjusting the tracking

Although the VCR automatically adjusts the tracking when playing a tape (the tracking indicator  flashes in the display window, then goes off), distortion may occur if the tape was recorded in poor condition. In this case, manually adjust the tracking.

Press the TRACKING +/- buttons on the VCR to display the tracking meter. The distortion should disappear as you press one of the two buttons (the  indicator lights up). To resume automatic tracking adjustment, eject the tape and reinsert it.



Tracking meter

### About Adaptive Picture Control (APC)

Adaptive Picture Control (APC) automatically improves recording and playback quality by adjusting the VCR to the condition of the video heads and tape. To maintain better picture quality, we recommend that you set APC to ON in the ADVANCED OPTIONS menu (with the APC indicator in the display window lit).

#### APC playback

The APC function automatically works on all types of tapes, including rental tapes and tapes that were not recorded with APC.

#### APC recording

Whenever you insert a tape and first start recording, the VCR adjusts to the tape using the APC function (the APC indicator flashes rapidly). This adjustment is retained until the tape is ejected.

#### Notes

- The auto tracking adjustment cannot be used on tapes recorded in LP mode on other VCRs.
- The APC function doesn't work if the tape speed is automatically changed from the SP to EP mode during a timer recording, unless the tape has been recorded in the EP mode with the APC function.
- There is a delay of a few seconds before the VCR actually starts recording while the VCR analyzes the tape. To avoid the delay, first set the VCR to recording pause (the APC indicator flashes slowly) and press ● REC to have the VCR analyze the tape. After the APC indicator stops flashing, press ■ PAUSE to start recording immediately. If you press ■ PAUSE before the APC indicator stops flashing, the APC function is canceled.

## Changing menu options

- 1 Press MENU and select **ADVANCED OPTIONS**.

ADVANCED OPTIONS		
▶AUTO STEREO	•ON	OFF
TUNER AUDIO	•MAIN	SAP
APC	•ON	OFF
TAPE SELECT	•AUTO	180
AUTO TAPE SPEED	•ON	OFF
SHARPNESS	L-■	--H

- 2 Press CURSOR **↑/↓** to select the option to change, then press CURSOR **←/→** to change the setting.
- 3 Press EXECUTE to return to the original screen.

### Menu choices


Initial settings are indicated in bold print.

Menu option	Set this option to
AUTO STEREO	<b>ON</b> to receive stereo programs. <b>OFF</b> to reduce noise; the sound changes to monaural.
TUNER AUDIO	<b>MAIN</b> to record the main sound. <b>SAP</b> to record the SAP (Second Audio Program) sound.
APC	<b>ON</b> to switch on the APC (Adaptive Picture Control) function and improve picture quality. <b>OFF</b> to switch off APC.
TAPE SELECT	<b>AUTO</b> or <b>180</b> (when using a T-140, T-180 or longer tape) to select the tape length and display the remaining time correctly.
AUTO TAPE SPEED	<b>ON</b> to change the timer recording tape speed automatically to the EP mode when the remaining tape becomes shorter than the recording time. <b>OFF</b> to keep the set tape speed.
SHARPNESS	L (Low) through H (High) to adjust the sharpness of the picture. L to turn off the sharpness control.

---

## Editing with another VCR

### How to hook up to record on this VCR

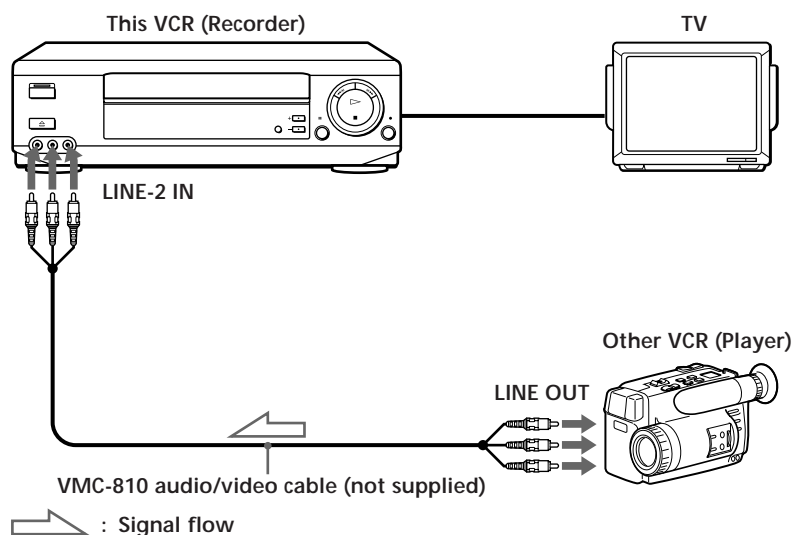

### How to hook up to a stereo system

Connect LINE-2 IN AUDIO on this VCR to the audio output jacks on the stereo system, using the RK-C510KS audio cable (not supplied).

#### Notes

- Make sure you connect the plugs to jacks of the same color.
- If the other VCR is a monaural type, connect the audio plug to the AUDIO L (white) jack. The sound is recorded on both right and left channels. When connecting to the AUDIO R (red) jack, the sound is recorded only on the right channel.
- If you connected this VCR to both the LINE IN and LINE OUT jacks of the other VCR, select the input correctly to prevent a humming noise.

continued


---

## Editing with another VCR (continued)

### Operation (when recording on this VCR)

#### Before you start editing

- Turn on your TV and set it to the video channel.
- Press INPUT SELECT on the remote commander to display "L1" or "L2" in the display window.
- Press TAPE SPEED on the remote commander to select the tape speed, SP or EP.

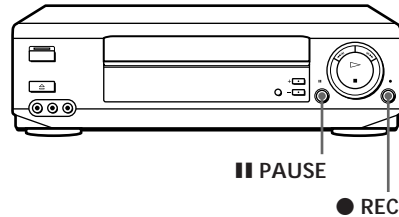

- 1** Insert a source tape with its safety tab removed into the other (playback) VCR. Search for the point to start playback and set it to playback pause.
- 2** Insert a tape with its safety tab in place into this (recording) VCR. Search for the point to start recording and press ■ PAUSE.
- 3** Press ● REC on this VCR and set it to recording pause.
- 4** To start editing, press the ■ PAUSE buttons on both VCRs at the same time.

#### To stop editing

Press the ■ STOP buttons on both VCRs.


#### Note

- If you start recording following the procedure above, the VCR won't start recording with the APC function. To record a tape with the APC function, press ● REC again during recording pause in step 3 so that the VCR analyzes the tape. Then when you start recording in step 4, press ■ PAUSE immediately after the APC indicator stops flashing. If you press ■ PAUSE before the APC indicator stops flashing, the APC function is canceled.

## General setup information

### Setting the RF unit

When connecting the VCR to the TV using only the antenna cable, you must set the RF UNIT switch on the rear of the VCR so that the TV can receive the correct signal from the VCR.

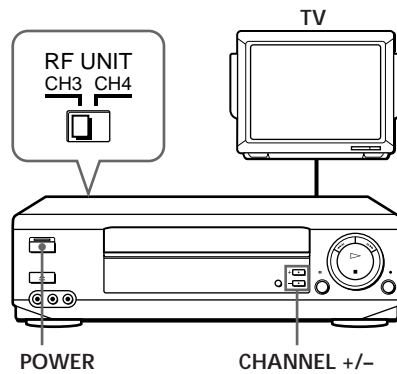

- 1 Set the RF UNIT switch on the rear of the VCR to CH 3 or CH 4, whichever channel is not used in your area. If both are used, set the switch to either channel.
- 2 Press POWER to turn on the VCR.
- 3 Press TV/VTR on the remote commander to turn on the VTR indicator in the VCR's display window.
- 4 Press CHANNEL +/- to display a channel number in the display window. Select an active channel number in your area.
- 5 Turn on your TV and set it to the channel you selected in step 1 (channel 3 or 4).

The selected TV channel broadcast appears on the TV screen. If the channels change when you press CHANNEL +/-, you have made the correct setting.

Whenever you use the VCR, set the TV to the channel selected in step 1.


continued

---

## General setup information (continued)

### Attaching the external antenna connector


When using a 300-ohm twin lead cable for VHF/UHF antenna, use the EAC-32 antenna connector (not supplied) to connect the antenna to the VCR.

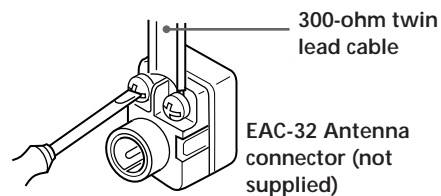

- 1 Loosen the screws on the antenna connector.
- 2 Wind the twin leads around the screws on the antenna connector.
- 3 Retighten the screws.

### Attaching a UHF/VHF band mixer


When using both 75-ohm coaxial cable and 300-ohm twin lead cable for VHF/UHF antenna, use the EAC-66 UHF/VHF band separator/mixer (not supplied) to connect the antenna to the VCR.

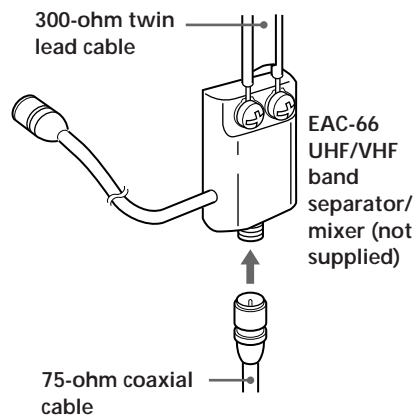


- 1 Loosen the screws on the mixer.
- 2 Wind the twin leads around the screws on the mixer.
- 3 Retighten the screws.
- 4 Connect the 75-ohm coaxial cable to the mixer.

# Troubleshooting

 If you have any questions or problems not covered below, please consult your nearest Sony dealer.

	Symptom	Remedy
Power	The POWER switch does not function.	<ul style="list-style-type: none"> <li>• Connect the AC power cord securely.</li> <li>• Make sure the VCR is not locked. To unlock, hold down POWER on the VCR until the VCR beeps and the  indicator disappears.</li> </ul>
	The power is turned on but the VCR does not operate.	<ul style="list-style-type: none"> <li>• Moisture condensation occurs. Turn the power off, unplug the AC power cord and leave the VCR to dry for over an hour.</li> </ul>
Clock	The clock has stopped and “:-: -” lights in the display window.	<ul style="list-style-type: none"> <li>• The clock stops if the VCR is disconnected from the wall outlet for more than one hour. Reset the clock (and timer).</li> </ul>
Playback	The playback picture does not appear on the TV screen.	<ul style="list-style-type: none"> <li>• Make sure the TV is set to the channel for the VCR. If you are using a monitor, set it to video input.</li> </ul>
	The picture is not clear.	<ul style="list-style-type: none"> <li>• Adjust the tracking with the TRACKING +/- buttons.</li> <li>• The video heads are dirty (see below). Clean the video heads using the Sony T-25CL video head cleaning cassette. If this cleaning cassette is not available in your area, have the heads cleaned at your nearest Sony service facility (a standard service charge will be required). Do not use a commercially available wet-type cleaning cassette, as it may damage the video heads.</li> <li>• The video heads may have to be replaced. Consult your local Sony dealer for more information.</li> </ul>
	The picture rolls vertically during picture search.	<ul style="list-style-type: none"> <li>• Adjust the vertical hold control on the TV or monitor.</li> </ul>
	The picture has no sound.	<ul style="list-style-type: none"> <li>• The tape is defective. Use a new tape.</li> </ul>

## Symptoms caused by contaminated video heads

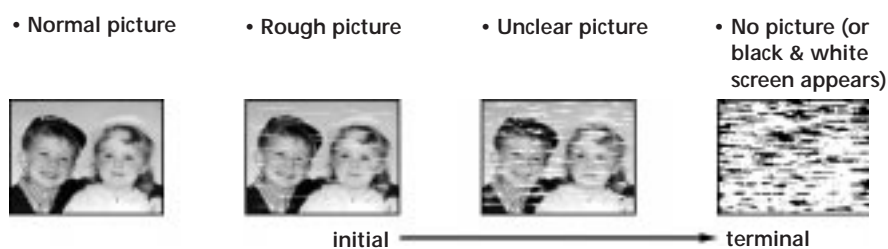

continued

## Troubleshooting (continued)

	Symptom	Remedy
Recording	A TV program does not appear on the TV screen.	<ul style="list-style-type: none"> <li>Make sure the TV is set to the channel for the VCR. If you are using a monitor, set it to video input.</li> </ul>
	TV reception is poor.	<ul style="list-style-type: none"> <li>Adjust the TV antenna.</li> </ul>
	The tape starts playing as soon as it is inserted.	<ul style="list-style-type: none"> <li>The safety tab has been removed. To record on this tape, cover the tab hole.</li> </ul>
	The tape ejects when you press ● REC.	<ul style="list-style-type: none"> <li>Check that the safety tab has not been removed.</li> </ul>
	Nothing happens when you press ● REC.	<ul style="list-style-type: none"> <li>Make sure the tape is not at its end.</li> <li>Select the correct source. Select a channel number with the CH +/- buttons when recording TV programs; select "L1" or "L2" with the INPUT SELECT button when recording from other equipment.</li> </ul>
Timer recording	The timer does not operate.	<ul style="list-style-type: none"> <li>Check that the clock is set.</li> <li>Make sure a tape has been inserted.</li> <li>Check that the safety tab has not been removed.</li> <li>Make sure the tape is not at its end.</li> <li>Make sure a program has been set for timer recording.</li> <li>Make sure your timer settings have not already passed the current time.</li> <li>Check that the cable box is turned on.</li> <li>The clock stops if the VCR is disconnected from the wall outlet for more than one hour. Reset the clock and timer.</li> </ul>
Others	A tape cannot be inserted.	<ul style="list-style-type: none"> <li>Check that a tape isn't already in the tape compartment.</li> </ul>
	The remote commander does not function.	<ul style="list-style-type: none"> <li>Make sure you are pointing the remote commander at the remote sensor on the VCR.</li> <li>Replace all the batteries in the remote commander with new ones if they are weak.</li> <li>Make sure the [TV]/[VTR] remote control switch is set correctly.</li> </ul>
	The tracking indicator does not appear on the screen.	<ul style="list-style-type: none"> <li>The recording condition of the tape is very poor and tracking cannot be adjusted.</li> </ul>
	You cannot control other TVs.	<ul style="list-style-type: none"> <li>Set your TV's code number. The code number resets to 01 when you replace the batteries of the remote commander.</li> </ul>
	The VCR needs to be cleaned.	<ul style="list-style-type: none"> <li>Clean the cabinet, panel and controls with a dry, soft cloth, or a soft cloth slightly moistened with a mild detergent solution. Do not use any type of solvent, such as alcohol or benzine.</li> </ul>



---

# Specifications

## System

- Format
  - VHS NTSC standard
- Video recording system
  - Rotary head helical scanning FM system
- Video heads
  - Double azimuth four heads
- Video signal
  - NTSC color, EIA standards
- Tape speed
  - SP: 33.35 mm/s ( $1\frac{3}{8}$  inches/s)
  - EP: 11.11 mm/s ( $\frac{7}{16}$  inches/s)
  - LP: 16.67 mm/s ( $\frac{11}{16}$  inches/s), playback only
- Maximum recording/playback time
  - 8 hrs. in EP mode (with T-160 tape)
- Fast-forward and rewind time
  - Approx. 3 min. (with T-120 tape)

## Tuner section

- Channel coverage
  - VHF 2 to 13
  - UHF 14 to 69
  - CATV A-8 to A-1, A to W, W+1 to W+84
- Antenna
  - 75-ohm antenna terminal for VHF/UHF

## Inputs and outputs

- LINE-1 IN and -2 IN
  - VIDEO IN, phono jack (1 each)
  - Input signal: 1 Vp-p, 75 ohms, unbalanced, sync negative
  - AUDIO IN, phono jack (2 each)
  - Input level: 327 mVrms
  - Input impedance: more than 47 kilohms
- LINE OUT
  - VIDEO OUT, phono jack (1)
  - Output signal: 1 Vp-p, 75 ohms, unbalanced, sync negative
  - AUDIO OUT, phono jack (2)
  - Standard output: 327 mVrms
  - Load impedance: 47 kilohms
  - Output impedance: less than 10 kilohms
- CABLE BOX CONTROL (CONTROL S OUT)
  - Stereo mini jack (plug in power) (1)

## Timer section

- Clock
  - Quartz locked
- Timer indication
  - 12-hour cycle
- Timer setting
  - 8 programs per month (max.)
- Power back-up
  - Built-in self-charging capacitor
  - Back-up duration: up to 1 hour at a time

## General

- Power requirements
  - 120 V AC, 60 Hz
- Power consumption
  - 24 W (max.)
- Operating temperature
  - 5°C to 40°C (41°F to 104°F)
- Storage temperature
  - 20°C to 60°C (-4°F to 140°F)
- Dimensions
  - Approx. 355 × 102 × 280 mm (w/h/d)
  - (Approx. 14 × 4  $\frac{1}{8}$  × 11  $\frac{1}{8}$  inches) including projecting parts and controls
- Mass
  - Approx. 4.0 kg (8 lb 13 oz)

## Supplied accessories

- Remote commander (1)
- Size AA (R6) batteries (2)
- 75-ohm coaxial cable with F-type connectors (1)
- Audio/video cable (3 phono to 3 phono) (1)


Design and specifications are subject to change without notice.

---

## Index to parts and controls


Refer to the pages indicated in parentheses ( ) for details.

### Front panel

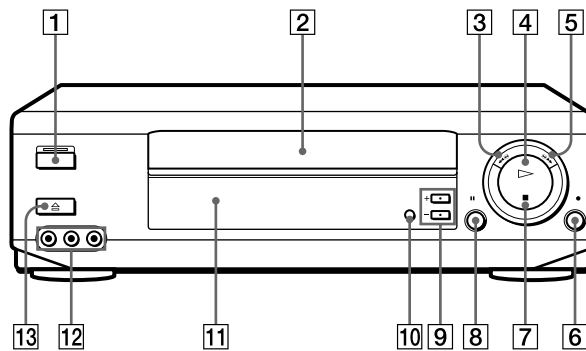


- |                                    |   |
|------------------------------------|---|
| <b>1</b> POWER switch/indicator    | <b>9</b> CHANNEL/TRACKING +/- buttons (45, 52, 57)    |
| <b>2</b> Tape compartment          | <b>10</b> EASY SET UP button (11, 14, 17, 20, 23, 25) |
| <b>3</b> ◀◀ ⏮ REW button (42, 52)  | <b>11</b> Remote sensor (5)                           |
| <b>4</b> ▷▶ ⏭ PLAY button (42, 52) | <b>12</b> LINE-2 IN VIDEO/AUDIO L/R jacks (59)        |
| <b>5</b> ▶▶ ⏭ FF button (42, 52)   | <b>13</b> ▲ EJECT button (42)                         |
| <b>6</b> ● REC button (45, 60)     |   |
| <b>7</b> ■ STOP button (42)        |   |
| <b>8</b>    PAUSE button (42, 60)  |   |

## Display window

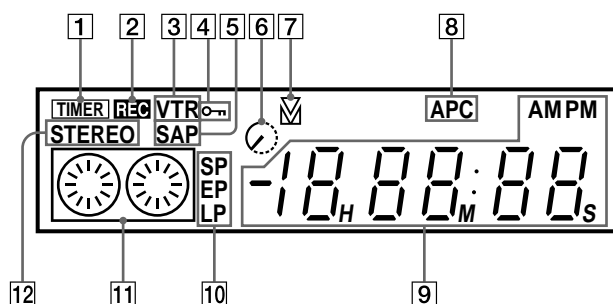

- |   |                               |    |  |
|---|-------------------------------|----|--|
| 1 | TIMER indicator (48, 51)      | 7  | ☒ (tracking) indicator (57)                        |
| 2 | REC (recording) indicator     | 8  | APC indicator (57)                                 |
| 3 | VTR indicator (46)            | 9  | Time counter/clock/line/channel indicator (43, 45) |
| 4 | ☐ (Child Lock) indicator (49) | 10 | Tape speed indicator (45)                          |
| 5 | SAP indicator (55)            | 11 | Tape indicator                                     |
| 6 | Remaining time indicator (45) | 12 | STEREO indicator (55)                              |

## Rear panel

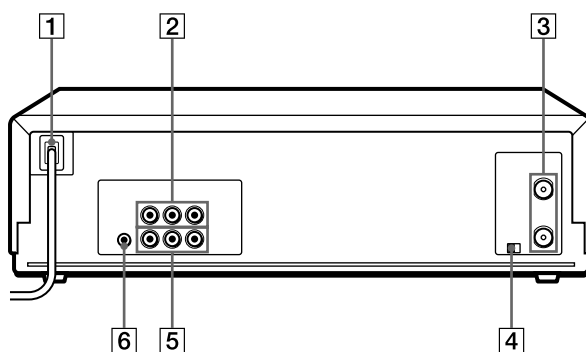


- |   |  |   |  |
|---|--|---|--|
| 1 | AC power cord                                      | 4 | RF UNIT switch (61)                        |
| 2 | LINE-1 IN AUDIO L/R/VIDEO jacks (22, 59)           | 5 | LINE OUT AUDIO L/R/VIDEO jacks (8)         |
| 3 | VHF/UHF IN/OUT connectors (10, 13, 16, 19, 22, 24) | 6 | CABLE BOX CONTROL CTRL S OUT jack (10, 22) |

continued

Additional Information | 67

**Index to parts and controls (continued)**

**Remote commander**

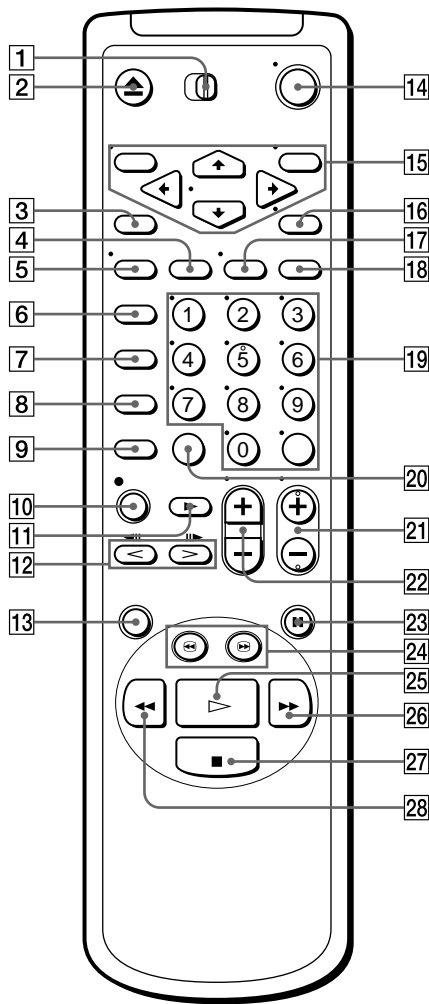

- 1 [TV]/[VTR] remote control switch (5)
- 2 ▲ EJECT button (43)
- 3 COUNTER/REMAIN button (44)
- 4 COUNTER RESET button (43)
- 5 DISPLAY button (45)
- 6 TIMER CLEAR button (48, 54)
- 7 QUICK TIMER button (53)
- 8 INPUT SELECT button (46, 51, 60)
- 9 TAPE SPEED button (45, 48)
- 10 ● REC button (45, 61)
- 11 ► SLOW button (52)
- 12 ◀||/||▶ FRAME </> buttons (52)
- 13 SMART CUE button (43)
- 14 POWER switch (48)
- 15 Menu operation buttons (17)  
MENU button  
CURSOR ↑/↓/←/→ buttons  
EXECUTE button
- 16 AUDIO MONITOR button (55)
- 17 TV/VTR button (6, 35, 61)
- 18 VCR Plus+ button (47)
- 19 Number buttons and ENTER button (37, 40, 48)
- 20 SET button (48)
- 21 CH +/- buttons (37, 45)
- 22 VOL +/- buttons
- 23 || PAUSE button (42, 52)
- 24 ◀/▶SEARCH buttons (43, 52)
- 25 ▷ PLAY button (42, 52)
- 26 ►► FF button (42, 52)
- 27 ■ STOP button (42)
- 28 ◀◀ REW button (42, 52)

---

# Index

## A, B

- Accessories supplied 4
- Adjusting
  - picture 38, 52, 57
  - tracking 52, 57
- AFT (Auto Fine Tuning) 38
- Antenna hookup 16
- APC (Adaptive Picture Control) 57
- Audio/video (A/V) hookup 8

## C

- Cable box control
  - cable box code number chart 31
  - setting 30
- Cable hookup 10
- Cable mouse 33
- Canceling timer settings 54
- Changing timer settings 54
- Channel line-up chart 39
- Child Lock 49
- Cleaning the video heads 63
- Clock setting 29
- Connecting
  - cable TV 10
  - external antenna connector 62
  - UHF/VHF band mixer 62
- Counter 43

## D

- Disabling channels 37
- DSS (Digital Satellite System) 30
- Dubbing. *See* Editing.

## E, F, G

- Easy Set Up 11, 14, 17, 20, 23, 25
- Editing 59
- EP mode 45

## H, I, J, K

- Hi-fi audio track 56

## L

- Language selecting 28
- Locking the VCR 49
- LP mode 43, 52

## M

- Monitoring audio 55

## N, O

- Normal audio track 56

## P

- Picture adjustment. *See* Adjusting.
- Playback 42
  - at various speeds 52
  - frame-by-frame 52
  - skip 43
  - slow motion 43
- Presetting channels 35

## Q

- Quick timer 53

## R

- Recording 44
  - bilingual programs 55
  - SAP broadcasts 55
  - saving 46
  - stereo broadcasts 55
  - using VCR Plus+ 47
  - while watching another program 46

## S

- Safety tab 46
- SAP (Second Audio Program) 55
- Searching at various speeds 52
- SP mode 45

## T, U

- Timer recording 50
  - cancelling timer settings 54
  - changing timer settings 54
  - checking timer settings 54
  - daily/weekly recording 51
  - overlapping timer recordings 52
  - using VCR Plus+ 47
- Tracking adjustment. *See* Adjusting.

## V, W, X, Y, Z

- VCR Plus+ 47
  - channel setup 30
  - recording 47

# Quick reference to using the VCR

## Hookup 1

### To play a tape

- 1 Set the TV to channel 3 or 4 (or to video input, if you made A/V connections.)
- 2 Insert a tape and press PLAY.

### To record a program

- 1 Turn on the cable box.
- 2 Press VCR Plus+ on the remote commander.
- 3 Enter the program's PlusCode number.
- 4 Select ONCE, DAILY, or WEEKLY, then press SET.
- 5 Insert a tape.
- 6 Press POWER to turn off the VCR.
- 7 Leave the cable box on.

### To watch TV

- 1 Turn off your VCR, or press the VCR's TV/VTR button until the VTR indicator in the display window goes off.
- 2 Turn on your cable box.
- 3 Set the TV to the cable box output channel (usually 2, 3, or 4).
- 4 Set the cable box to the channel you want to watch.

## Hookup 2

### To play a tape

- 1 If you made A/V connections, set the TV to video input.  
If you didn't use A/V hookup:
  - Turn on the cable box.
  - Set the cable box to channel 3 or 4.
  - Set the TV to the output channel of the cable box (usually 2, 3 or 4).

- 2 Insert a tape and press PLAY.

### To record a program

- 1 Press VCR Plus+ on the remote commander.
- 2 Enter the program's PlusCode number.
- 3 Select ONCE, DAILY, or WEEKLY, then press SET.
- 4 Insert a tape.
- 5 Press POWER to turn off the VCR.

### To watch TV

- 1 Turn off your VCR, or press the VCR's TV/VTR button until the VTR indicator in the display window goes off.
- 2 Select the channel with your cable box (if you have one) or with your TV.

## Hookup 3

### To play a tape

- 1 Set the TV to channel 3 or 4 (or to video input, if you made A/V connections.)
- 2 Insert a tape and press PLAY. If there's no picture on your TV, press the VCR's TV/VTR button until the VTR indicator comes on in the display window.

### To record a program

- 1 Press VCR Plus+ on the remote commander.
- 2 Enter the program's PlusCode number.
- 3 Select ONCE, DAILY, or WEEKLY, then press SET.
- 4 Insert a tape.
- 5 Press POWER to turn off the VCR.

## To watch TV

- 1 Turn off the VCR, or press the VCR's TV/VTR button until the VTR indicator in the display window goes off.
- 2 Set the TV to the channel you want to watch.

## Hookup 4

### To play a tape

- 1 Set the TV to channel 3 or 4 (or to video input, if you made A/V connections.)
- 2 Insert a tape and press PLAY.

### To record a program

- 1 Turn on the cable box.
- 2 Set the cable box to the channel you want to record.
- 3 Press VCR Plus+ on the remote commander.
- 4 Enter the program's PlusCode number.
- 5 Select ONCE, DAILY, or WEEKLY, then press SET.
- 6 Insert a tape.
- 7 Press POWER to turn off the VCR.
- 8 Leave the cable box on.

### To watch TV

- 1 Turn off your VCR, or press the VCR's TV/VTR button until the VTR indicator in the display window goes off.
- 2 Turn on your cable box.
- 3 Set the TV to the cable box output channel (usually 2, 3, or 4).
- 4 Set the cable box to the channel you want to watch.

If you have any questions about this product, you may call: **Sony Customer Information Center** 1-800-222-SONY (7669) or write to: **Sony Customer Information Center** Sony Drive, Mail Drop #T1-11, Park Ridge, NJ 07656

Sony Corporation Printed in Malaysia

SONY SLV-685HF (E) 3-859-040-11 (1)

SONY SLV-685HF (E) 3-859-040-11 (1)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>