

PTAB750: User Manual

02/07/2013

In the Box

Tablet, User Manual & Quick Start Guide, USB Cable, AC Adapter, Tablet Stand

Location of Controls

1. Power Button, 2. Home Button, 3. Back Button, 4. Volume Up, 5. Volume Down, 6. Speaker, 7. Camera, 8. Headset Jack, 9. Display Lock, 10. SD Card Slot, 11. USB Port

Display Lock

Use the Display Lock to prevent little ones from interrupting videos or interactive books. Slide the switch to the "ON" position as shown below, the tablet's display and buttons (except for volume) will be disabled.

Basic Operation

Charging the battery:

The adapter is not a toy and should be connected to the wall outlet by an adult. Connect the tablet to a wall outlet using the included AC adapter.

Power ON/OFF:

Press and hold the Power button until the startup screen appears, press and hold the Home button until the shutdown screen appears.

Unlock (enter) the tablet:

Slide the "Lock icon" to the right.

Lock (standby) the tablet:

To lock or unlock the tablet, briefly press the Home button. Lock the device to conserve the battery.

Apps Screen

Access the Apps screen by selecting the Apps icon on the top right of the Home screen display, or on the media widget (Home screen 3).

Home Screens

There are five Home screens that can be accessed by sliding left or right. Home screen 1: Empty Screen for App shortcuts. Home screen 2: Game widget (Main Home screen). Home screen 3: Media widget. Home screen 4: Creativity widget. Home screen 5: Settings widget.

Placing apps on the Home screen (Creating Shortcuts)

Press & hold an app to place it on Home screen 1.

Removing shortcuts

Press and hold the app and slide it as shown below.

Parental Controls

To control the apps that your children have access to, use the tablet's built-in Parental Controls. Select "Parental Controls" and create a password.

Setup the Password

The password can be 4-8 letters/numbers or both and is not case sensitive.

Restricting Apps

1. Select "Parental Controls Settings". 2. Select "Restricted Apps". 3. Select the apps you'd like to restrict, and select "Save".

Safe Mode

Safe Mode is a quick way to override your Parental Controls settings. When Safe Mode is "ON" all the apps that have been restricted will not appear on the Apps screen, and the tablet will default to the Safe Browser.

Wi-Fi Setup

1. To set up Wi-Fi select "Parental Control". 2. Enter the password. 3. Select "Wi-Fi Setup". 4. Turn Wi-Fi on and select a network. 5. If required, enter the correct password and select "Connect".

Safe Browser

Completely control your child's web environment using the Safe Browser. 1. Select Home screen 4 Creativity Widget. 2. Select the "i" icon on the bottom right of the screen. 3. Select "Safe Browser".

App Shop for Kids

The App Shop is a place where children can safely browse & download carefully curated, kid-safe content. Select "App Shop" on the Apps screen, and create an account.

Free Play

A unique way to display all the free games available for download on the App Shop using beautiful large icons. Select "Free Play" and follow the instructions to download free apps to the tablet.

Other App Stores

Download other App Stores to access more free/paid apps and games, we have provided links to several app stores that can be easily accessed by selecting the "Download App Stores" option in Parental Controls.

Transferring & Managing Files

Conserving Internal Memory!

It is strongly recommended to purchase and install an SD card before transferring or downloading media files.

Inserting an SD card (not included):

1. Insert the card face up into the card slot until it clicks and locks into place.

Unmount & remove the SD card:

1. Open "Settings". 2. Select "Storage". 3. Select "Unmount SD card". 4. It is now safe to remove the card from the tablet.

Connecting the tablet to a PC or Mac:

1. Connect the included USB cable to the "USB port" of the tablet and the USB port of the computer.

Browsing Files

File Manager: To view, open, copy or delete files on the internal memory of the tablet or inserted SD card, select "File Manager" on the Apps screen.

Settings

Settings app: Select and customize the options in "Settings" to increase battery performance, manage applications, setup Wi-Fi, change display options, set passwords and more.

Online Help

Select "Online Help" on the Parental Control Screen to access:

- Technical support
- Product registration

Reset & Restore

In the event that the tablet freezes or does not function properly, try correcting the problem by resetting. Hold the Power button down for three screen shuts off. Wait 10 seconds and Power ON the tablet.

Specifications, Care & Safety Precautions

CAUTION: Not recommended for children under 3 years of age. Do not use household cleaners, solvents, alcohol or abrasives to clean the device.

Legal Information

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

Limited Warranty

LIMITED WARRANTY TO ORIGINAL CONSUMER: This product (including any accessories included in the original packaging) is warranted by the manufacturer for a limited period of time.

FRONT

BACK

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>