

Intensifier Series

speco technologies speco technologies speco technologies speco technologies speco technologies speco technologies speco technologies speco technologies speco technologies speco technologies speco technologies speco technologies



Camera

HT - INTB8/9/10



Please read this manual thoroughly before operation and keep it handy for further reference.



| | | |
|---|---|---|
|  | CAUTION RISK OF ELECTRONIC SHOCK DO NOT OPEN |  |
| CAUTION: TO REDUCE THE RISK OF ELECTRONIC SHOCK DO NOT REMOVE COVER(OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL | | |



The lightning flash with and arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated " dangerous voltage " within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is to alert the user to the presence of important operating and maintenance (serviceing) intructions in the literature accompanying the appliance.

INFORMATION - This equipment has been tested and found to comply with limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential are is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

WARNING - Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

CAUTION : To prevent electronic shock and risk of fire hazards:

- ◆ Do NOT use power sources other than that specified.

This installation should be made by qualified service person and should conform to all local codes.



CONTENTS



| | |
|------------------------------|-----|
| Package Contents | P3 |
| Precautions | P4 |
| O S D Menu | P5 |
| Operating Your Camera | P6 |
| MENU SET UP | P6 |
| LENS SET UP | P7 |
| SHUTTER SPEED | P9 |
| MANUAL | P10 |
| E L C | P11 |
| B L C | P12 |
| A G C | P13 |
| WHITE BAL. | P14 |
| S L C | P16 |
| INTENSIFIER | P17 |
| NEXT | P18 |
| CAMERA TITLE | P19 |
| C O L O R | P21 |
| S Y N C | P22 |
| MOTION DET. | P23 |
| P R I V A C Y | P25 |
| R E V E R S E | P27 |
| D E T A I L | P28 |
| Troubleshooting | P30 |
| Specification | P32 |
| Camera Set Up | P33 |
| How to Install | P34 |
| Warranty | P35 |



PACKAGE CONTENTS

- 1 HT - INTB8 CAMERA**
- 1 SUNSHIELD**
- 4 MOUNTING SCREW**
- 1 MOUNTING BASE**
- 1 L - WRENCH**
- 1 USER'S MANUAL**
- 1 VIDEO TEST CABLE**
- 1 POWER PIGTAIL**

PRECAUTIONS



TO PREVENT A FIRE OR ELECTRICAL HAZARD PLEASE USE PROPER POWER CABLE



INSTALLATION SHOULD BE PERFORMED BY QUALIFIED PERSONNEL



PLEASE USE A UL APPROVED REGULATED 24 VOLT AC OR 12 VOLT DC POWER SUPPLY



PLEASE USE APPROPRIATE LOW VOLTAGE POWER CABLE TO PREVENT FIRE OR ELECTRICAL SHOCK.



PLEASE INSURE THAT YOUR INSTALLATION AREA CAN SUPPORT THE WEIGHT OF THE CAMERA



PLEASE HANDLE THIS CAMERA CAREFULLY:

- DON'T USE A STRONG OR ABRASIVE DETERGENT WHEN CLEANING THE CAMERA.**
- USE A SOFT TISSUE OR LENS CLOTH TO CLEAN THE FRONT GLASS.**
- DON'T EXPOSE THE CAMERA TO DIRECT SUN**

OSD MENU

◆ Function

SET UP MENU


- LENS OPTION
 - DC MANUAL
- SHUTTER
 - OFF F/L MANUAL
- WHITE BALANCE
 - ATW AWC MANUAL
- SLC - (Speco Light Compensation)
 - OFF LOW MIDDLE HIGH
- AUTO GAIN
 - OFF LOW MIDDLE HIGH
- REDUCE NOISE
 - OFF LOW MIDDLE HIGH
- INTENSIFIER
 - AUTO OFF
- NEXT PAGE
 - CAMERA TITLE DAY/ NIGHT SYNC
 - MOTION PRIVACY REVERSE
 - DETAIL DEFAULT PAGE1
- EXIT

MENU SET UP




► **Menu is adjusted by the OSD button on the camera**

- 1. Press the SET button to access the SETUP mode.
 - SETUP menu should be displayed on the monitor screen.

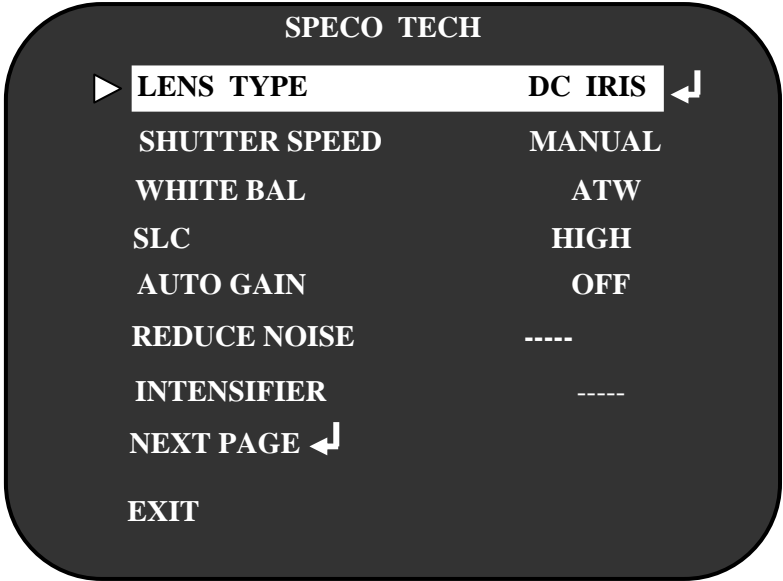


- 2. Select the desired feature using the UP or DOWN buttons
 - Move the arrow indicator UP or Down to indicate onto desired feature by pressing the UP or Down button.

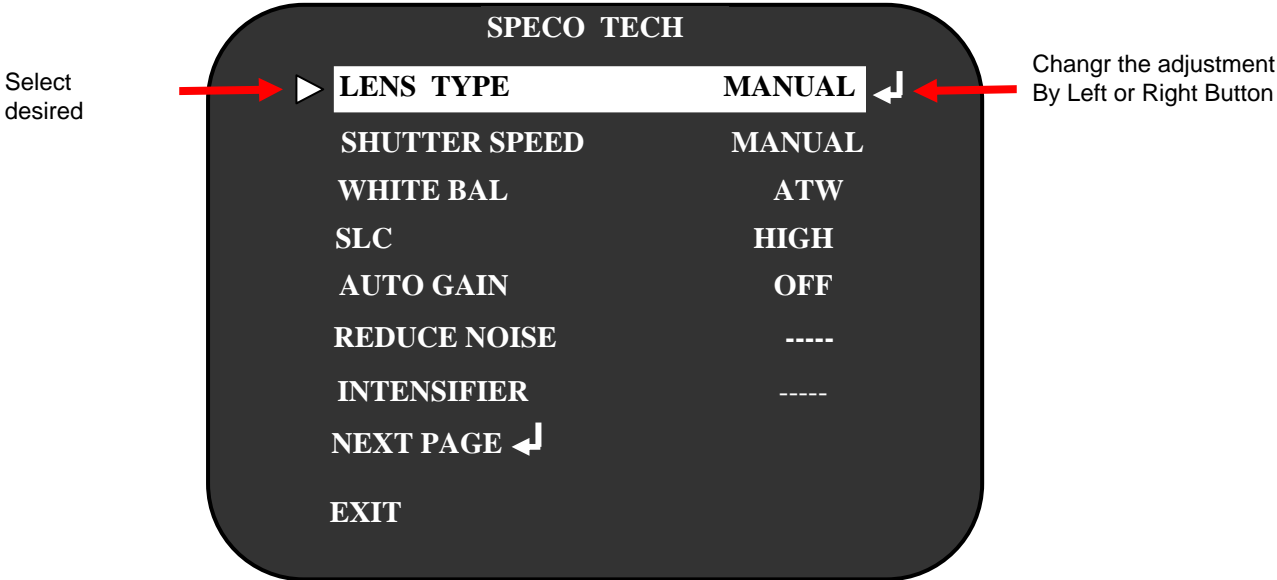

3. MENU SETUP change by using button
 - Available value or status should be displayed by pressing the Left or Right button.
 - Please press the button until desired features appears.
4. When adjustment is completed, move the arrow indicator to " EXIT " and press the "SET" button.

CAUTION



- Access to submenu by moving  arrow to desired feature
- Access is not available to submenu on the mode of " ----".

LENS SETUP

Select the lens by pressing the RIGHT button

1. Move the arrow indicator to " LENS " by UP or Down button on the SETUP menu.

SPECO TECH

| | | |
|---|---|---|
| ▶ | LENS TYPE | MANUAL  |
| | SHUTTER SPEED | ELC |
| | WHITE BAL | ATW |
| | SLC | HIGH |
| | AUTO GAIN | OFF |
| | REDUCE NOISE | ---- |
| | INTENSIFIER | ---- |
| | NEXT PAGE  | |
| | EXIT | |

 **MANUAL : Manual Lens**

LENS SETUP



2. Select the desired lens type by LEFT or RIGHT button.

SPECO TECH

| | |
|----------------------|------------------|
| ▶ LENS TYPE | DC IRIS ◀ |
| SHUTTER SPEED | ELC |
| WHITE BAL | ATW |
| SLC | HIGH |
| AUTO GAIN | OFF |
| REDUCE NOISE | ---- |
| INTENSIFIER | ---- |
| ◀ NEXT PAGE | |
| EXIT | |

→ **DC / VIDEO** : DC Auto IRIS Lens

CAUTION

- You can control the brightness when DC is selected, Brightness control range will be 1~70.

LENS

BRIGHTNESS 1-----1-----1 35

Press Set to Return

→ **MANUAL** : Manual Lens

CAUTION

- Color mode is not available when AGC OFF



SHUTTER SPEED CONTROL

You can control brightness of screen by the shutter speed.

- ① Press the SET button to display the setup menu and move the arrow indicator to " SHUTTER " by the UP or DOWN button.
- ② Set " SHUTTER " to the desired mode by the LEFT or RIGHT button

▶ OFF : Deactivation

| SPECO TECH | |
|-----------------|---------|
| LENS TYPE | DC LENS |
| ▶ SHUTTER SPEED | --- |
| WHITE BAL | ATW |
| SLC | HIGH |
| AUTO GAIN | OFF |
| REDUCE NOISE | ---- |
| INTENSIFIER | ---- |
| NEXT PAGE ↵ | |
| EXIT | |

▶ FLK (1/100):Flicker mode

| SPECO TECH | |
|-----------------|--------|
| LENS TYPE | MANUAL |
| ▶ SHUTTER SPEED | MANUAL |
| WHITE BAL | ATW |
| SLC | HIGH |
| AUTO GAIN | OFF |
| REDUCE NOISE | ---- |
| INTENSIFIER | ---- |
| NEXT PAGE ↵ | |
| EXIT | |

MANUAL

speco technologies speco technologie speco technologies speco technologie speco technologies speco technologie speco technologies speco technologie speco technologies speco technologie speco technologies speco technologies

- ▶ When setting the shutter speed manually,
You can select from " 1/60 " to " 1/200,000" sec

SPECO TECH

| | |
|-----------------|----------|
| ▶ LENS TYPE | MANUAL |
| ▶ SHUTTER SPEED | MANUAL ◀ |
| WHITE BAL | ATW |
| SLC | HIGH |
| AUTO GAIN | OFF |
| REDUCE NOISE | ---- |
| INTENSIFIER | ---- |
| NEXT PAGE ◀ | |
| EXIT | |

SHUTTER TYPE

| | | |
|----------|------|---|
| ▶ MANUAL | 1/60 | ◀ |
|----------|------|---|



Press SET to Return

speco technologies speco technologie speco technologies speco technologie speco technologies speco technologie speco technologies speco technologie speco technologies speco technologie speco technologies speco technologies



speco technologie speco technologie speco technologie speco technologie speco technologie speco technologie speco technologie speco technologie speco technologie speco technologie speco technologie speco technologie

▶ You can control the BRIGHTNESS.

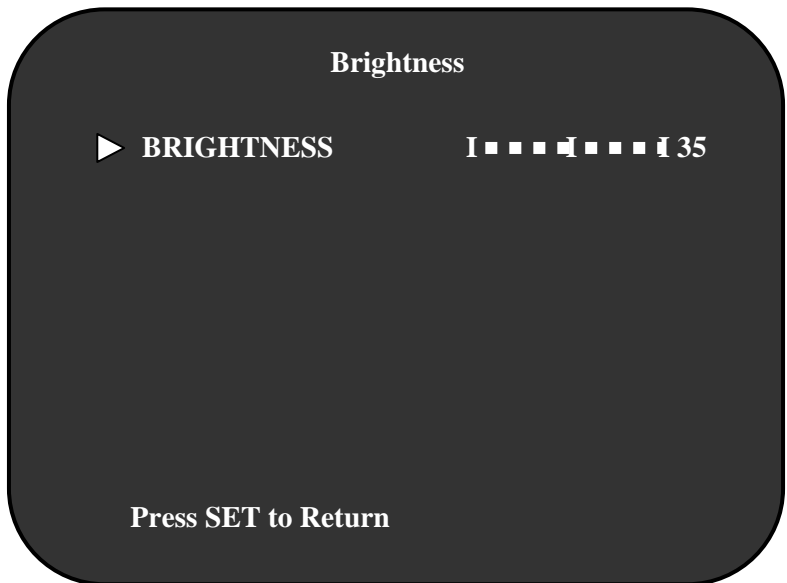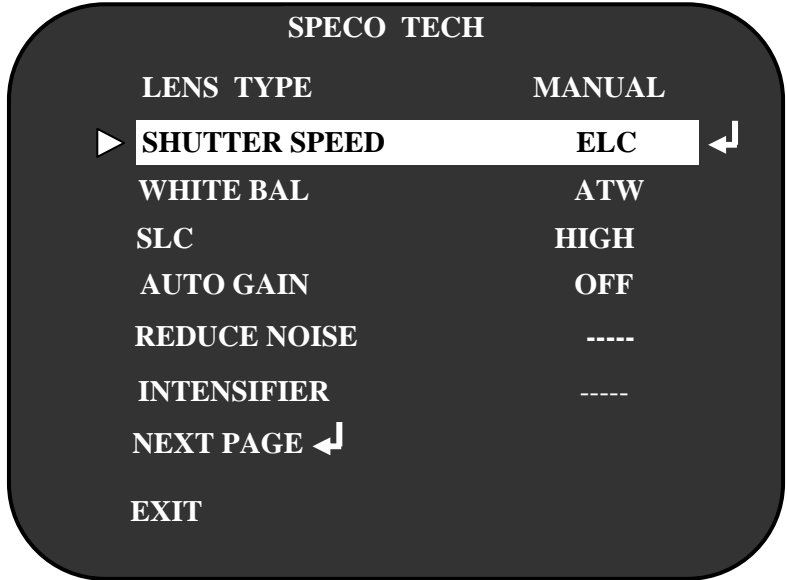

③ When completed, press " SET "

CAUTION

- Avoid pointing the camera directly at a fluorescent lamp.
- When the SUTTER menu is set to FLK mode, the INTENSIFIER will not work.



BLC(Back Light)




3) SLC (Speco Light Compensation)

A built - in SR chip provides intelligent light level control to overcome severe Backlight conditions.

- ① Press the SET button to display the SETUP menu and move the arrow indicator to " SLC " by the UP or DOWN button.
- ② SET " SLC " to desired mode by the LEFT or RIGHT button.

▶ OFF ▶ LOW ▶ MIDDLE ▶ HIGH

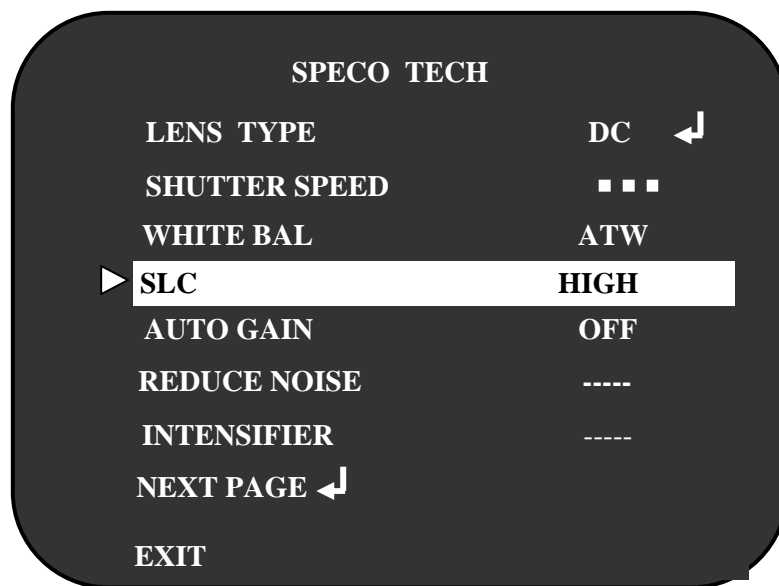

BLC ON



BLC OFF



AGC(Auto Gain



4) AGC (Auto Gain Control)

AGC allows a brighter picture in low light conditions. Higher GAIN level will yield a brighter screen, but you might notice an increase in noise.

- ① Press the SET button to display the SETUP menu and move the arrow indicator to " SLC " by the UP or DOWN button.
- ② SET " SLC " to desired mode by the LEFT or RIGHT button.

▶ OFF ▶ LOW ▶ MIDDLE ▶ HIGH

SPECO TECH

| | | |
|--------------------|------------|---|
| LENS TYPE | DC | ↵ |
| SHUTTER SPEED | ■ ■ ■ | |
| WHITE BAL | ATW | |
| SLC | HIGH | |
| ▶ AUTO GAIN | OFF | |
| REDUCE NOISE | ---- | |
| INTENSIFIER | ---- | |
| NEXT PAGE | | ↵ |
| EXIT | | |




WHITE BAL.



5) WHITE BALANCE

- ① Press the SET button to display the SETUP menu and move the arrow indicator to " WHITE BALANCE " by the UP or DOWN button.
- ② SET " WHITE BAL " to desired mode by the LEFT or RIGHT button.

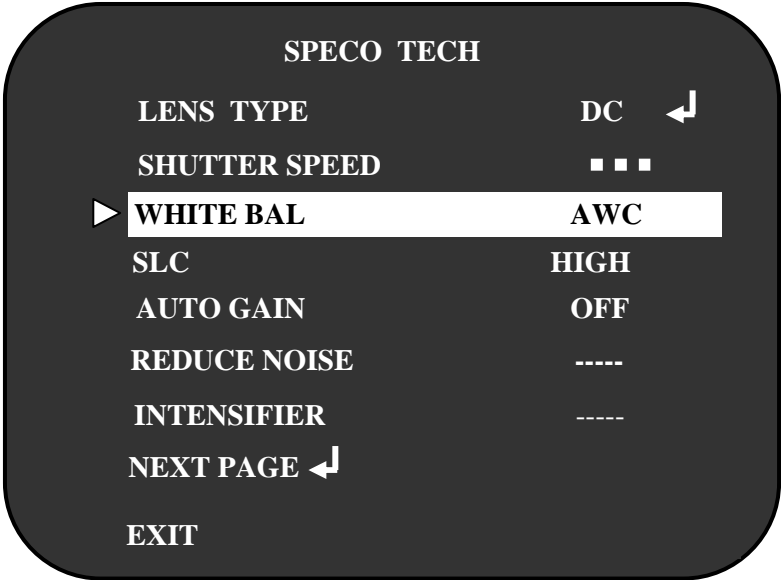

- ▶ ATW(Auto Tracking White Balance)
: When color temperature is 2400 ~ 12000K, select this mode.
(ex. A fluorescent lamp, or outdoors)

- ▶ AWC(Auto White Balance Control)
: The white balance is automatically adjusted in a specific environment.
In order to obtain the best result, press the set button while the camera focuses on the white paper. If the environment including the light source is changed, you have to adjust the white balance again.



WHITE BAL.



- ▶ **MANUAL** : To fine adjust, select the manual mode. You can increase the red or blue factor while monitoring the difference on the screen. Set the "MANUAL" mode and press the SET button. Increase or decrease the value for RED(R-Gain) and BLUE(B-Gain), watching the color of the picture and press the SET button when you obtain the best color.

CAUTION

- Proper White Balance may not be obtained under the following conditions. In these cases, select the AWC mode.
 - When the scene contains mostly high color temperature objects, such as blue sky or sunset.
 - When the scene is dim.
 - If your camera faces a fluorescent lamp directly or is installed in an area with constantly changing illumination.




DNR



6) REDUCE NOISE (Digital Noise Redution) DNR reduce the video noise on the screen.

- ① Press the SET button to display the SETUP menu and move the arrow indicator to " REDUCE NOISE " by the UP or DOWN button.
- ② SET " REDUCE NOISE " to desired mode by the LEFT or RIGHT button.

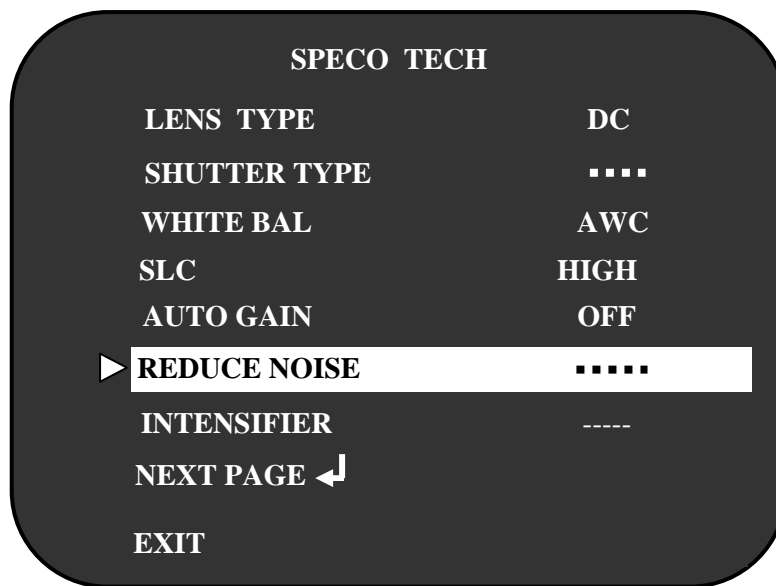

- ▶ OFF : Deactivation
- ▶ LOW : Low reduction of the noise
- ▶ MIDDLE : Middle reduction of the noise
- ▶ HIGH : High reduction of the noise

CAUTION

- If you change the "GAIN" menu from AGC-L to AGC-H, sensitivity is increased as well as noise on the screen.
- When the selected "GAIN" menu is OFF, REDUCE NOISE will not work.




INTENSIFIER



7) INTENSIFIER

Allows you to get clear images with this function under night or low light conditions.

- ① Press the SET button to display the SETUP menu and move the arrow indicator to " INTENSIFIER " by the UP or DOWN button.
- ② SET " INTENSIFIER " to desired mode by the LEFT or RIGHT button.

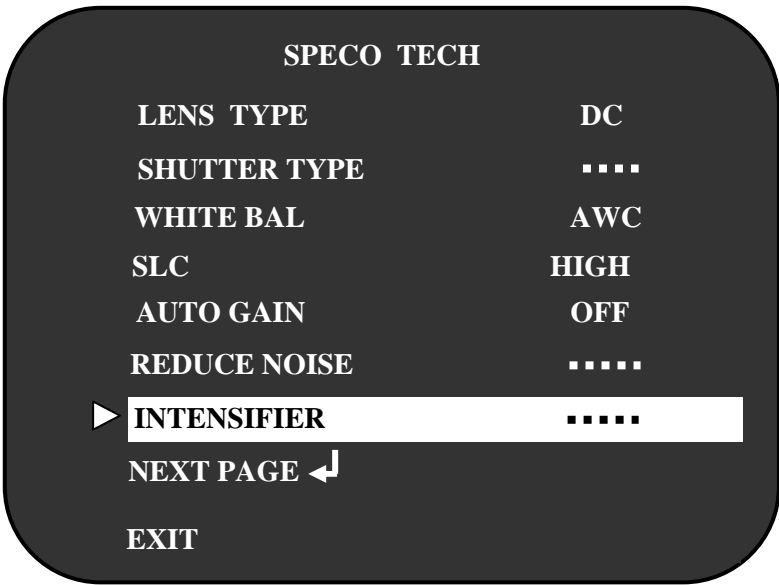

▶ AUTO : When your camera is under night or low light conditions, select this mode. This mode allows the camera to switch into B/W in low light conditions.

▶ OFF : Deactivation

CAUTION


- If you press "AUTO" button in the intensifier mode, you can control the amount of intensification from 2X ~ X128.
- Increasing the amount of intensification results in brighter pictures under low light conditions, and may increase image lag.
- Increasing the amount of intensification may cause image noise which is to be expected as a normal condition.





8) NEXT PAGE

- ① Press the SET button to display the SETUP menu and move the arrow indicator to " NEXT PAGE " by the UP or DOWN button.
- ② SET " NEXT PAGE " to desired mode by the LEFT or RIGHT button.

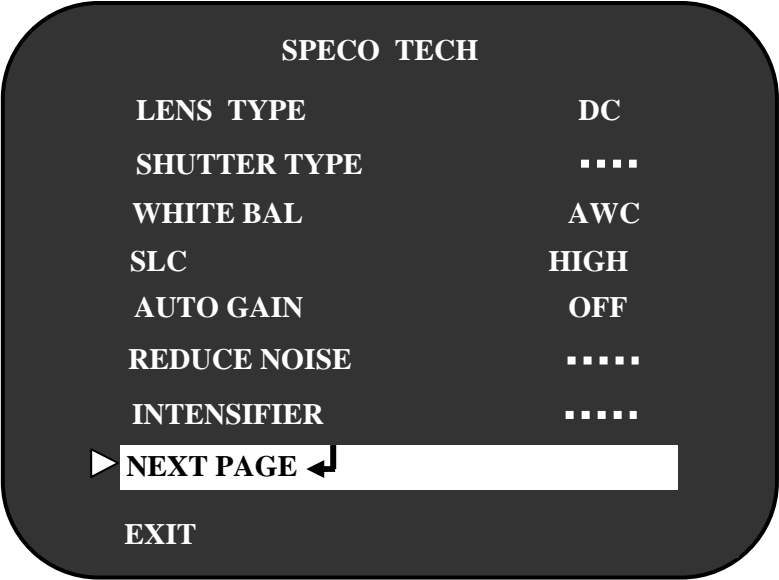

1) CAMERA TILTE


- ① Press the SET button to display the SETUP menu and move the arrow indicator to " CAMERA TITLE " by the UP or DOWN button.
- ② SET " ON " to desired mode by the LEFT or RIGHT button.

CAUTION

- If the CAMERA TITLE feature is set to " OFF", the name will not be displayed on the monitor.



CAMERA TITLE

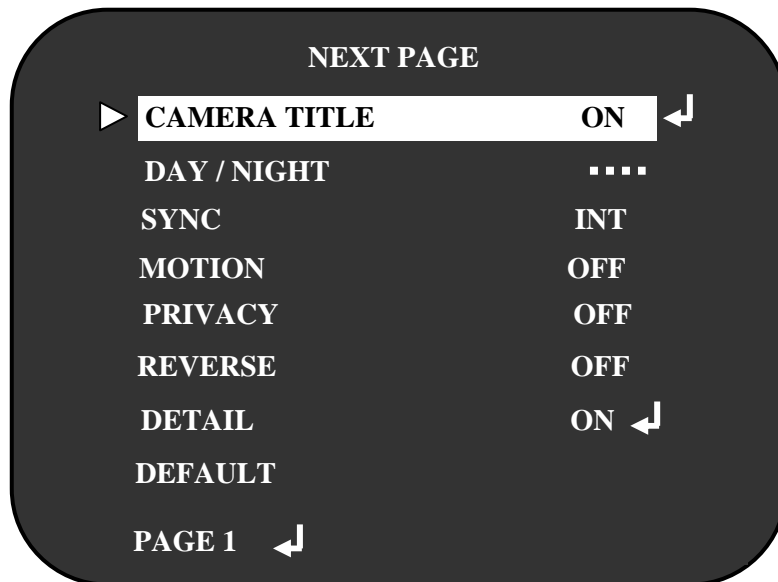


- ③ Press SET button to access the SETUP mode.
- ④ You can enter up to 15 characters.
 - Ⓐ Move the cursor to character-enter location by using LEFT or RIGHT button.
 - Ⓑ Select the desired character by using UP or DOWN button.
 - Ⓒ Press the SET button to confirm the blinking character. The first character is saved and the cursor in the bottom of the screen moves to the next position.



CAMERA TITLE

- d) Repeat above steps until you create the full name you want.
- e) Select the position at which the CAMERA TITLE will be located on the screen.
 - Move the cursor to "POS" and press SET button.
 - Select the position by using the 4-directional buttons, then press the SET button to confirm the position.
- f) When completed, move the cursor to "END" and press SET button.

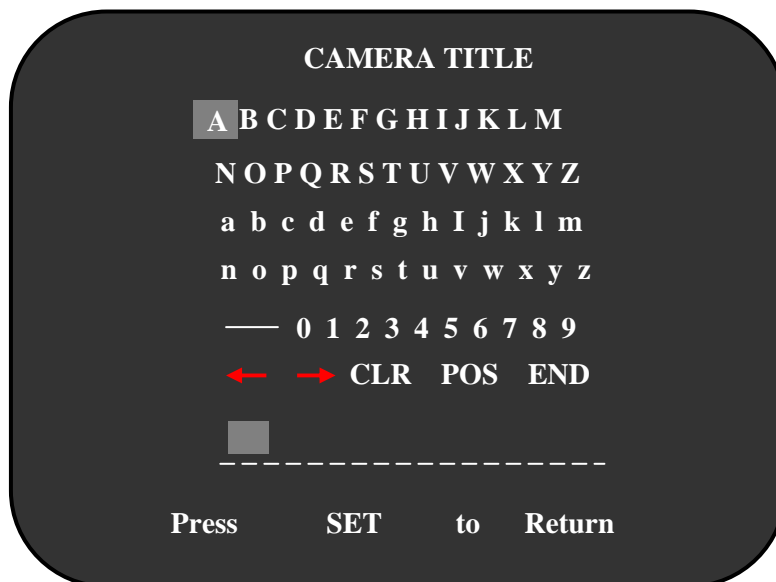

CAUTION


- If you make a mistake while entering a name, move the cursor to " CLR", press "SET" button.
After erasing the character from right to left, correct the character again.

COLOR



2) COLOR

- ① Press the SET button to display the SETUP menu and move the arrow indicator to " COLOR " by the UP or DOWN button.
- ② SET " COLOR " to desired mode by the LEFT or RIGHT button.

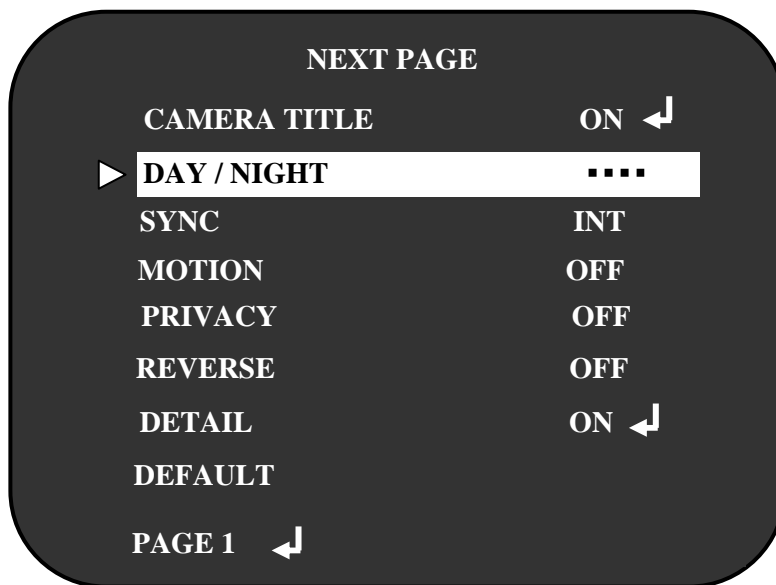

- ▶ COLOR : The camera will always display a color picture
- ▶ AUTO : The camera will switch Into B/W in the low light conditions.

CAUTION

- OSD key may not work for 3 seconds when COLOR /BW mode is changed




SYNC



3) SYNC

- ① Press the SET button to display the SETUP menu and move the arrow indicator to " SYNC " by the UP or DOWN button.
- ② SET to desired mode by the LEFT or RIGHT button.

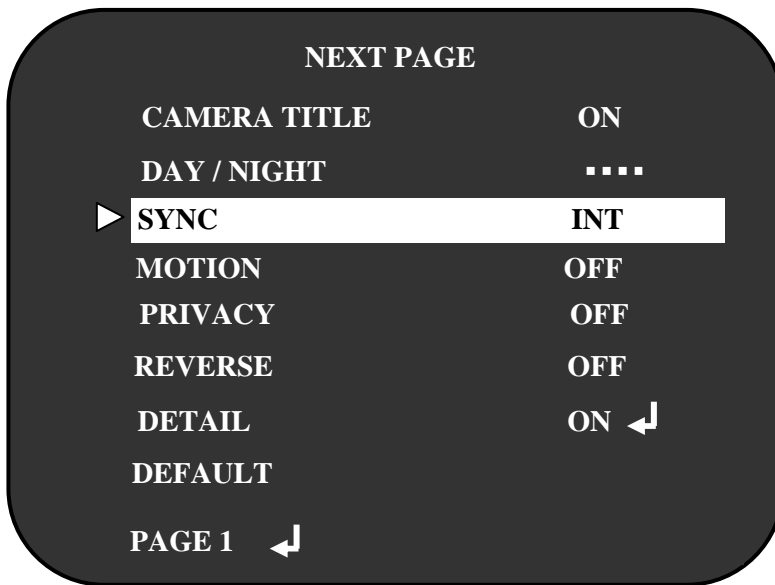

- ▶ INT : Internal synchronization
- ▶ L/L : If you choose "L/L", you can adjust the desired phase.
 - Press the SET button.
 - You can adjust the desired phase from 0 to 270.

CAUTION

- When it used in AC power, L/L mode can be used.
- In 12V DC, the SYNC menu defaults to "INTERNAL".



MOTION DETECTION



- 4) Whenever your camera detects motion, The words "motion detected" will appear on the screen.
- ① Press the SET button to display the SETUP menu and move the arrow indicator to " MOTION " by the UP or DOWN button.
 - ② SET " MOTION" to desired mode by the LEFT or RIGHT button.

NEXT PAGE

| | |
|-----------------|------------|
| CAMERA TITLE | ON |
| DAY / NIGHT | |
| SYNC | INT |
| ▶ MOTION | OFF |
| PRIVACY | OFF |
| REVERSE | OFF |
| DETAIL | ON ↵ |
| DEFAULT | |
| PAGE 1 ↵ | |





MOTION

| | | |
|------------|-----------|-----------|
| ▶ AREA SEL | | |
| AREA STATE | AREA1 | |
| TOP | ON | |
| DOWN | | 10 |
| LEFT | | 25 |
| RIGHT | | 20 |
| | | 40 |
| Press | SET | to Return |



MOTION DETECTION

- ▶ OFF : Deactivation
- ▶ ON : Activated
 - Press the SET button.
 - Move the arrow indicator to " AREA SET " using UP and DOWN button. And then press the SET button.
 - Set the areas you want to observe.

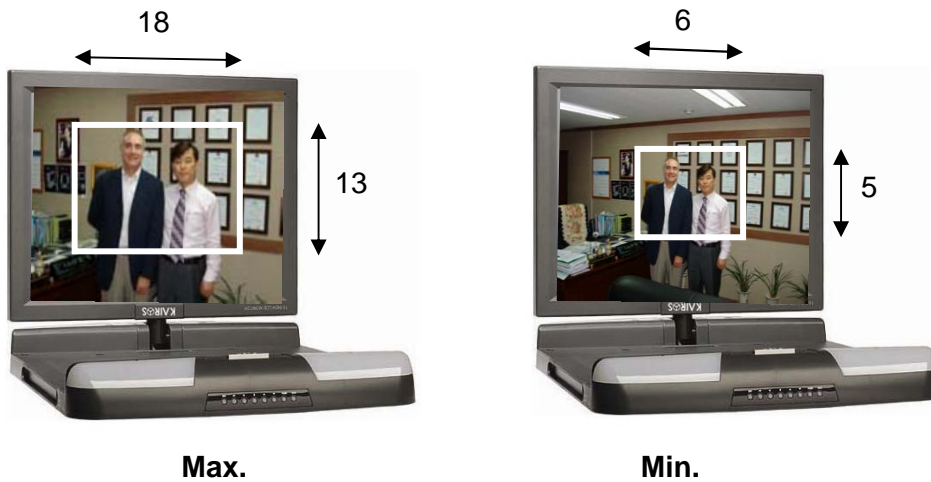
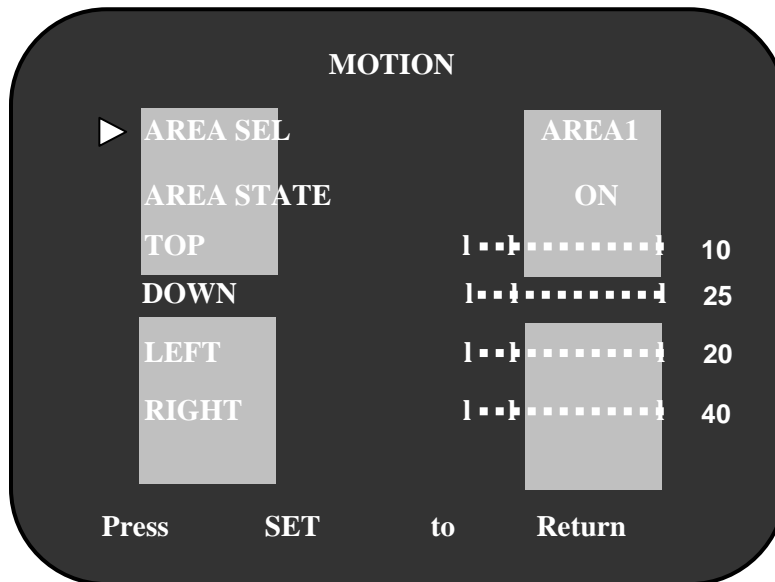


PRIVACY




5) PRIVACY: To make an area that you want to be private.

- ① Press the SET button to display the SETUP menu and move the arrow indicator to " PRIVACY " by the UP or DOWN button.
- ② SET " PRIVACY " to desired mode by the LEFT or RIGHT button.

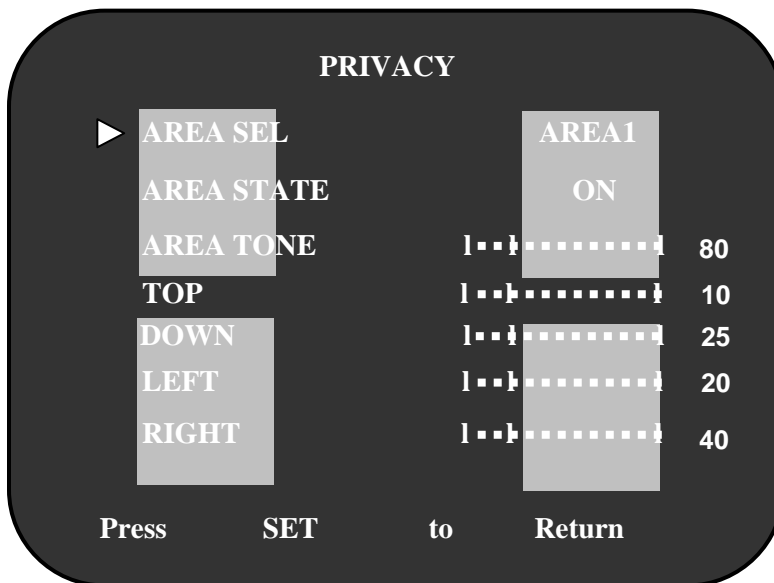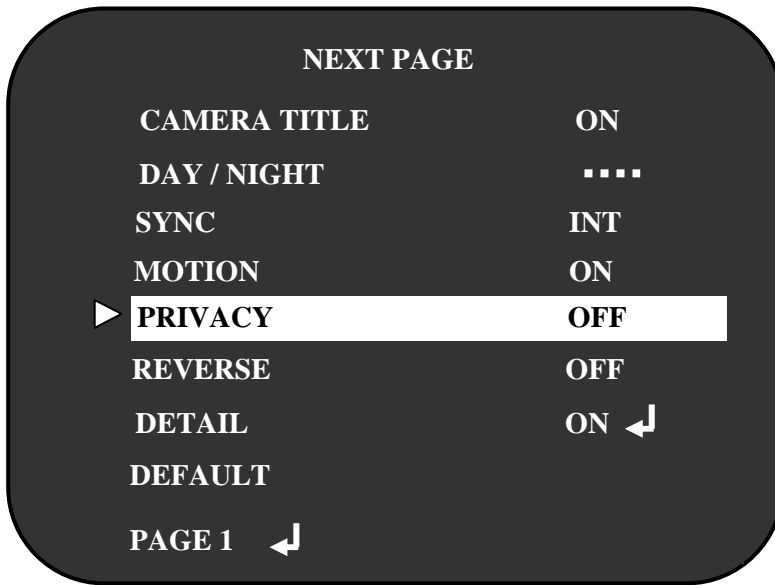

PRIVACY

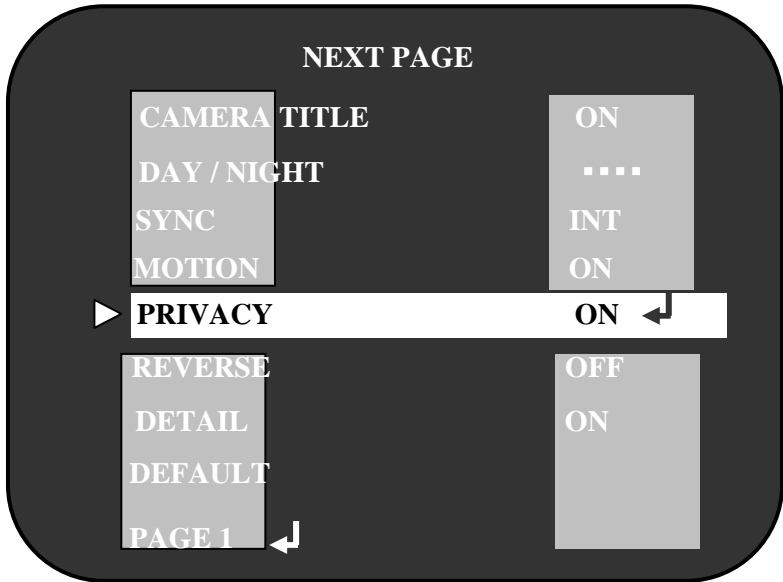

- ▶ OFF : Deactivation
- ▶ ON : Activated
 - Press the SET button.
 - Move the arrow to the area you want to mask.
 - Set "ON" using LEFT or RIGHT button.
 - Press the SET button and then set the area's bounds as for MOTION detection.




REVERSE



6) REVERSE:

- ① Press the SET button to display the SETUP menu and move the arrow indicator to " REVERSE " by the UP or DOWN button.
- ② SET " REVERSE " to desired mode by the LEFT or RIGHT button.

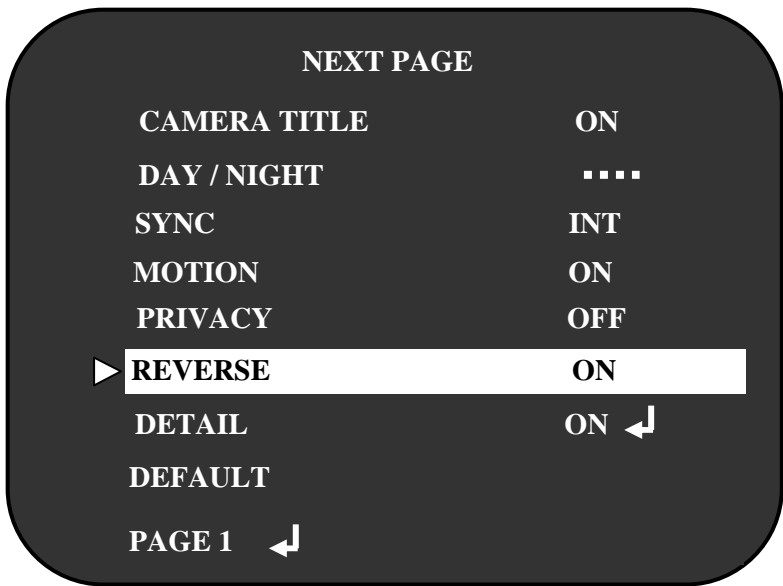

- ▶ OFF : Deactivation
- ▶ ON : Reverse the Image RIGHT or LEFT such as mirror.



REVERSE ON



REVERSE OFF





DETAIL



7) **DETAIL:**

- ① Press the SET button to display the SETUP menu and move the arrow indicator to " **DETAIL** " by the UP or DOWN button.
- ② SET " **DETAIL** " to desired mode by the LEFT or RIGHT button.

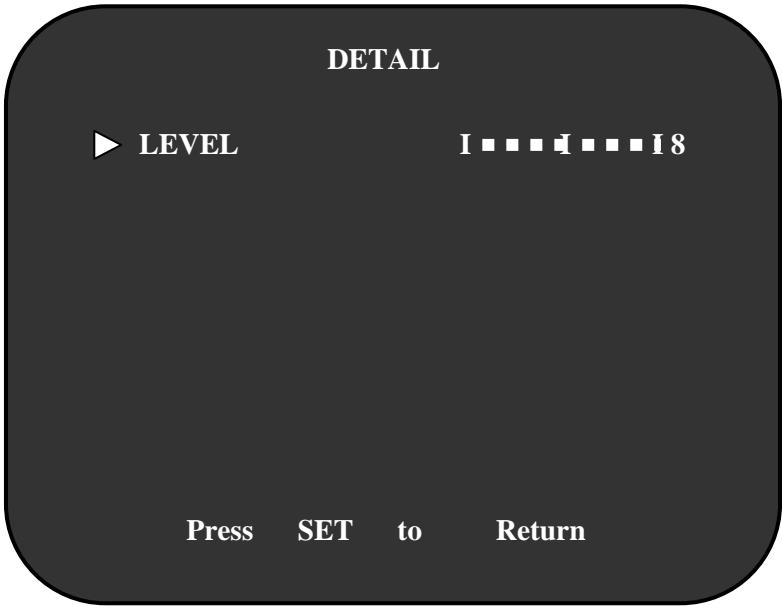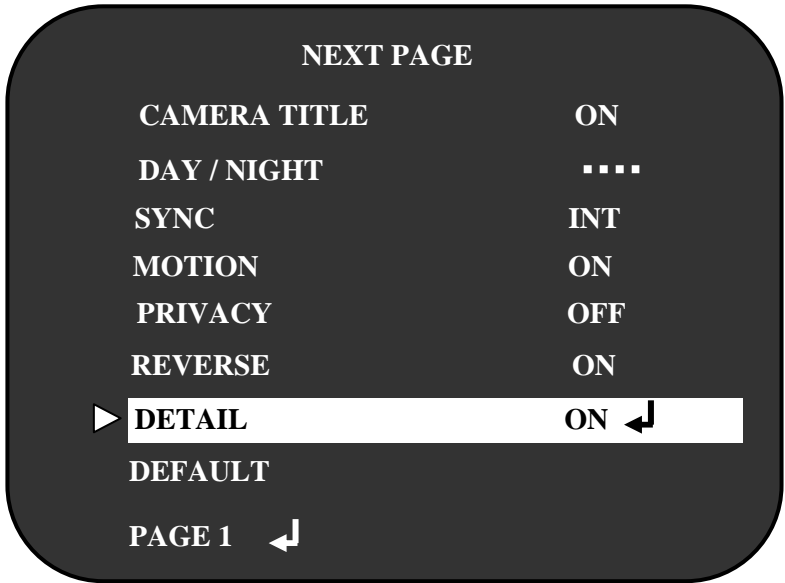

DETAIL



- ▶ OFF : Deactivation
- ▶ ON : DETAIL control mode (level 0 ~ 31)

When the level is up, the sharpness will increase.
Control this level to get your best picture quality.
If the level is to high, you can get an unnatural image.

RESET / RETURN

- 8) DEFAULT : Use to reset your camera to FACTORY DEFAULT setting.
- 9) PAGE 1: Save the setting of NEXT PAGE function and then move to SETUP menu.



TROUBLE SHOOTING



If you have trouble when operating your camera, please check the following

| PROBLEM | SOLUTION |
|--|---|
| Nothing appears on the screen | <ul style="list-style-type: none"> ● Check the power cable and line connection Between the camera and monitor. ● Check that you have properly connected the VIDEO cables |
| The image on the screen is dim. | <ul style="list-style-type: none"> ● Is the camera lens stained with dirt? Clean the lens with a soft and clean cloth. ● Adjust the monitor as required. ● If the camera is exposed to very strong light, Change the camera position. ● Adjust the lens focus properly. |
| The image on the screen is dark. | <ul style="list-style-type: none"> ● Adjust the contrast feature of the monitor ● If you have an interediate device, set the 75Ω / Hi-z properly. |
| The camera is not working properly and the surface of the camera is hot. | <ul style="list-style-type: none"> ● Check that you have properly connected the Camera to an appropriate power source. |
| MOTION DETECTION function is not active. | <ul style="list-style-type: none"> ● Have you set " MOTION DET" menu to off? ● Have you set " MD AREA " properly? |



TROUBLE SHOOTING

speco technologies speco technologie speco technologies speco technologie speco technologies speco technologie speco technologies speco technologie speco technologies speco technologie speco technologie speco technologies speco technologie speco technologies

If you have trouble when operating your camera, please check the following

| PROBLEM | SOLUTION |
|---|--|
| <p>The color of the picture is not matched.</p> | <ul style="list-style-type: none"> ● Check that you have properly set the "WHITE-BAL" menu |
| <p>The image on the screen flickers.</p> | <ul style="list-style-type: none"> ● Is the camera facing direct sunlight or fluorecent lighting? Change the camera position. |
| <p>L/L mode isn't able to be selected.</p> | <ul style="list-style-type: none"> ● Have you connected the camera to DC power source? Connect it to AC power source. |





SPECIFICATION

speco technologies speco technologie speco technologies speco technologie speco technologies speco technologie speco technologies speco technologie speco technologies speco technologie speco technologies speco technologies

| LOW LIGHT INTENSIFIER / BUILT IN - SELECTABLE TO 128 X | |
|---|---|
| MODEL | HT - INTB8 |
| Image Pick-Up Device | 1/3" SONY SUPER HAD CCD - 410K |
| TV System | NTSC |
| Total Pixels | NTSC = 811(H) * 508(V) |
| Effective Pixels | NTSC = 768(H) * 494(V) |
| Scanning Frequency | NTSC = 15.734KHz(H) / 59.94Hz(V) |
| Scanning System | 2:1 Interlaced |
| Synchronization | Internal / Line Lock |
| Resolution | 560 TV Lines |
| Minimum Illumination | 0.002 LUX Intensifier @ 128 X |
| S / N Ratio | More than 50db (Weight On) |
| White Balance | ATW / AWC / MANUAL (1800'K ~ 10,500'K) |
| Video Output | Composite Video 1.0Vp - p75ohm / Test Connection |
| Electronic Shutter Speed | NTSC = Auto / Manual (1/60 sec ~ 1/120,000 sec) |
| OSD | Built - In - Controlled by Internal Buttons |
| SLC(Speco Light Compensation) | Low - Middle - High - Off Selectable |
| Auto Gain | Low - Middle - High - Off Selectable |
| Reduce Noise | Low - Middle - High - Off Selectable |
| Day & Night (Color) | On / Auto Selectable (Electrical) |
| Sharpness | On / Off (Level Adjustable) |
| Privacy | On / Off (4 Programmable Zone) |
| Power Supply | Dual Voltage 12 V DC & 24V AC |
| Power Comsumption | 350mA |
| Lens | DC Auto iris Varifocal Lens (2.8mm ~ 12mm) |
| Operation Temp. | - 10 ~ 50 Deg C., RH 95% Max. |
| Storage Temp. | - 20 ~ 60 Deg C., RH 95% Max. |
| Demension | 100mm(W) * 125mm(H) * 208mm(D) |
| Weight | Approx. 1400(g) |




* Cable Connection

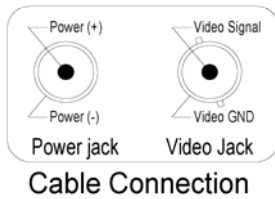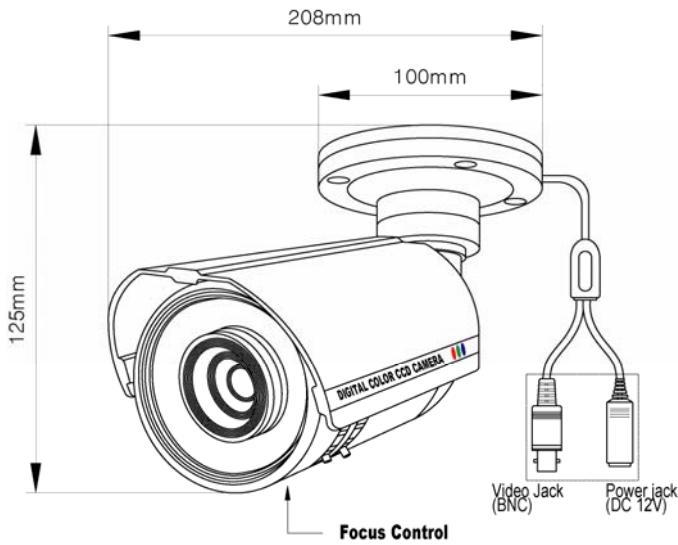

* OSD Settings

- * Settings can be made using the 5 buttons on the front of the camera.
- * Unscrew the front of the camera to gain access to these controls and the video test connector

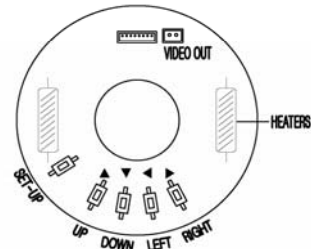


OSD CONTROL BOARD

CAMERA OPERATION (SET-UP DOWN RIGHT)


| | | | |
|---|-------------|--------------------|----------|
| LENS (selection) | * MANUAL | * DC / VIDEO | |
| SHUTTER (condition and speed control) | * ESC | * MANUAL | * FLK |
| WHITE BALANCE control | * ATW | * AWC | * MANUAL |
| SLC (Backlight compensation) | * OFF | * LOW | * MIDDLE |
| Auto Gain | * HIGH | * LOW | * MIDDLE |
| REDUCE NOISE (Digital noise reduction) | * OFF | * LOW | * MIDDLE |
| INTENSIFIER | * OFF | * AUTO | |
| NEXT PAGE | * CAMERA ID | * COLOR | |
| | * SYNC | * MOTION DETECTION | |
| | * PRIVACY | * MIRROR | |
| | * SHARPNESS | * RESET | |
| | * RETURN | * AUTO | |
| EXIT | | | |

HOW TO INSTALL

Dimension & Installation

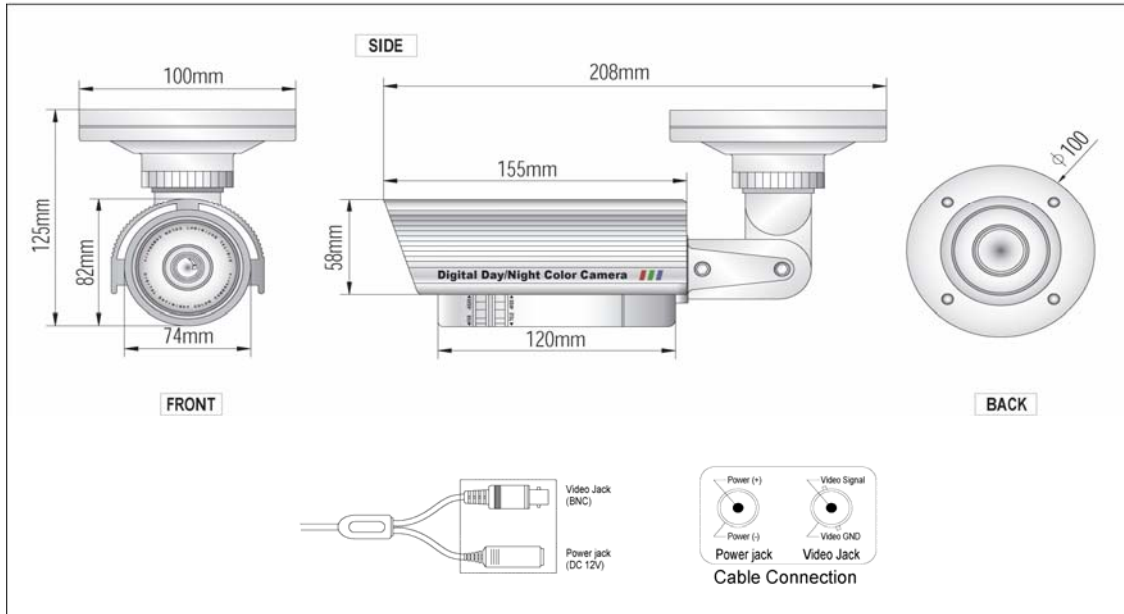

How to install

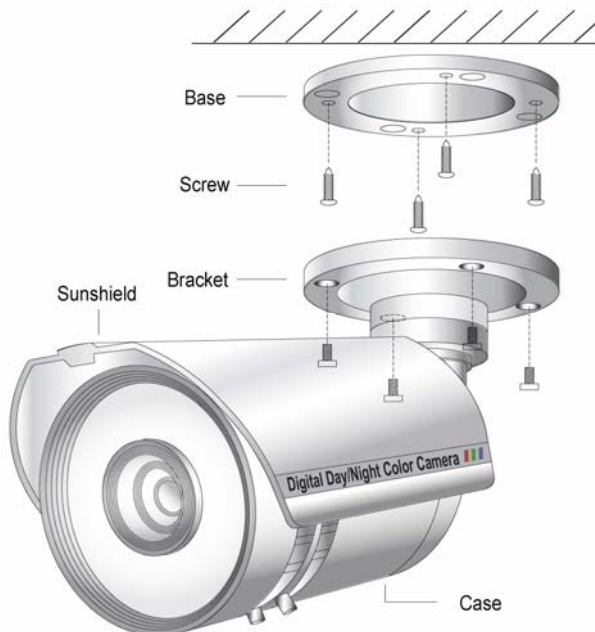

Camera adjustment

- ① Connect Video & Power Line
- ② Please set the position where you want to connect the camera.
- ③ Loosen the locking screws and adjusting camera angle.
- ④ Combine each camera parts and lock & tight the each locking screws.

WARRANTY



LIMITED WARRANTY

| VIDEO | | AUDIO | |
|---|---------|---|----------|
| CAMERA | 5 Years | In Door Speaker | 15 Years |
| MONITOR | 1 Year | Out Door / Weatherproof Speaker | 2 Years |
| IR LEDs | 90 Days | Amplifiers | 5 Years |
| Time Labse VCR Drum Assembly & Heads | | PA Horns, Micro Phones, Metal Detectors, Volume Controls | 2 Years |
| DVRs | | Megaphones | 90 Days |
| TN, TT,TS, PC Series | 3 Years | Electrical Equipment, Not Listed Above & Balance of Line | 90 Days |

Warranty

We warranty all products to be free from any manufacturing or material defects. This warranty will not extend to any products which have been subjected to misuse, neglect, accident, or improper installation, used in violation of instructions furnished by us; or to units which have been repaired or altered outside of the factory. this limited warranty does not apply to broken cases, batteries, or other physically damaged parts. Upon request by the customer, the company will at the customer's expense repackage merchandise in new cartons, replace missing accessories, and return in resalable conditional. Unless requested, the company will replace and return all merchandise in the packaging in which it was received. This warranty is in lieu of all expressed warranties, expressed or implied, and of all obligations or liability on our part, And we neither assume nor authorize any representative or other person to assume for us any obligation or liability. In no event shall we be liable for incidental or consequential damages arising from the use of the product, or for any delay in the use of this product do to causes beyond our control. Some states do not allow limitations of how long an implied warranty lasts and/or do not allow the exclusion or limitation of consequential damages. The above limitations on implied warranty and consequential damages may not apply to you. This warranty gives you specific legal rights. You may have other rights which vary from state to state. See actual warranty statement included with product for limitations and exclusions where applicable. This limited warranty extends to products listed in the company's current price schedule.



MEMO

MEMO

MEMO



200 New Highway
Amityville, NY 11701
631-957-8700
www.specotech.com



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>