



2-Slice Wide Slot Toaster



OWNER'S MANUAL

KT5211

IMPORTANT SAFEGUARDS

When using electrical appliance, basic safety precautions should ALWAYS be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or Toaster in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug Toaster from outlet when not in use and before cleaning.
Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, turn any control to "Off", then remove plug from outlet.
12. Do not use appliance for other than intended use.
13. Oversize foods, metal foil packages, or utensils must not be inserted in Toaster as they may involve a risk of fire or electric shock.
14. A fire may occur if Toaster is covered or touching flammable material, including curtains, draperies, walls and the like, when in operation.
15. Do not attempt to dislodge food when Toaster is plugged in.

SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

Note on Cord Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of injury this plug can only be inserted into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.



Functions and Controls

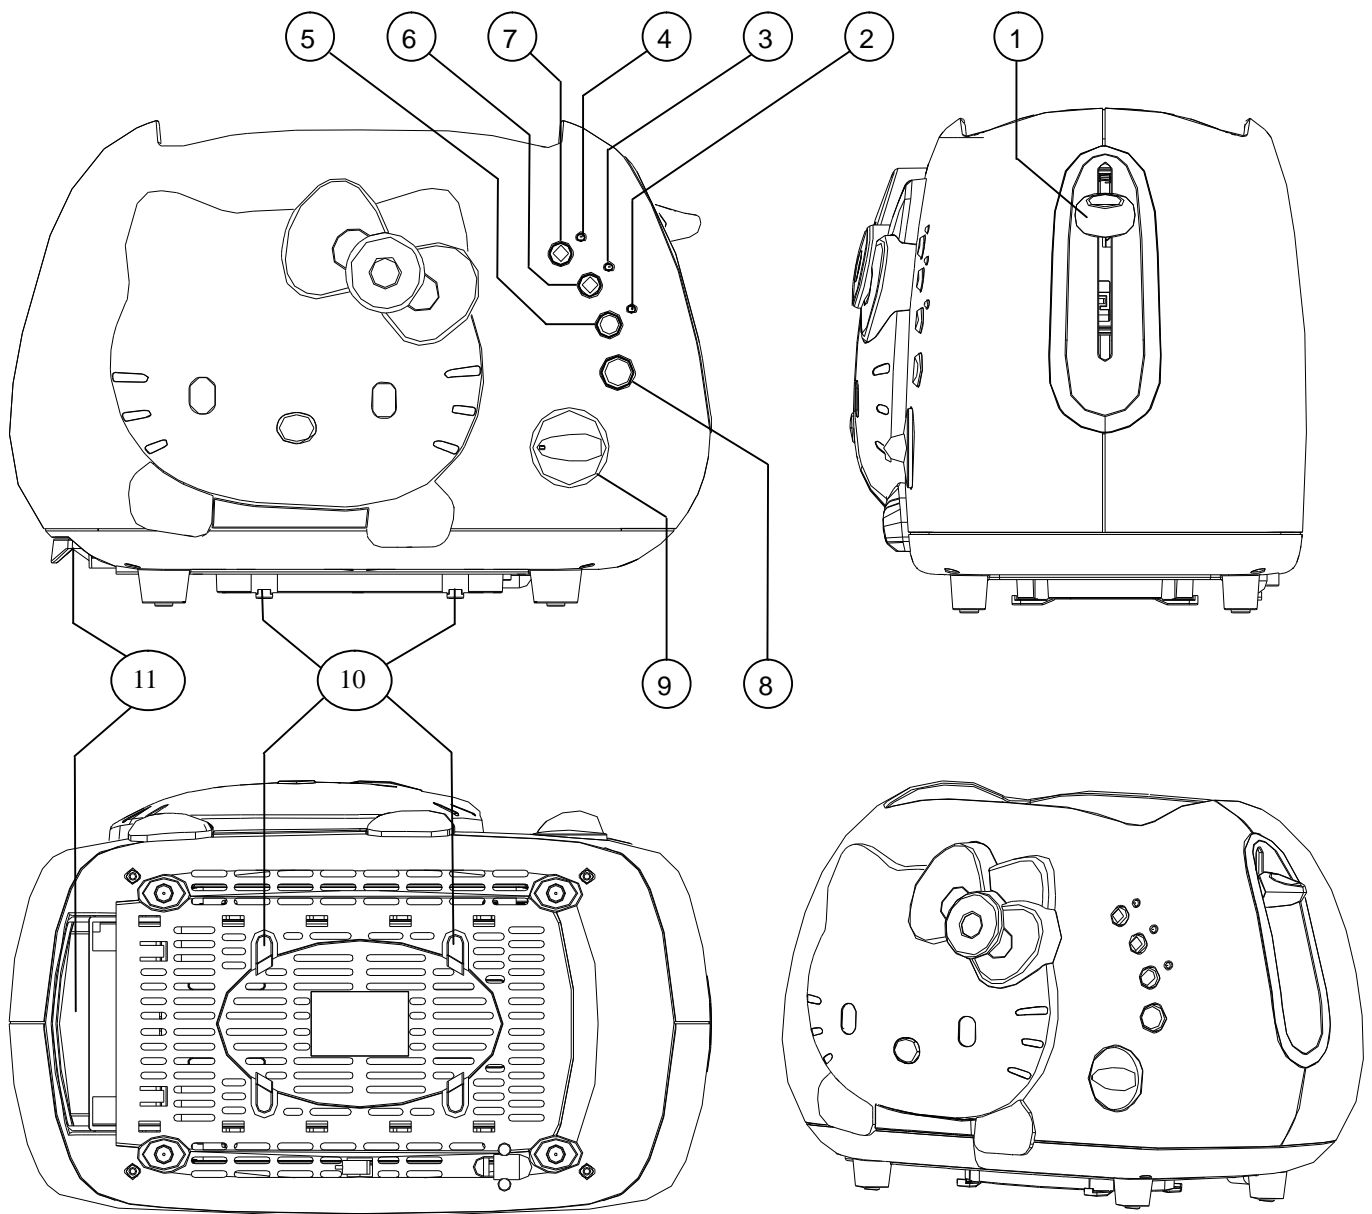

1. Bread Carriage Lever
2. Reheat Setting Indicator
3. Defrost Setting Indicator
4. Bagel Setting Indicator
5. Reheat Setting Button
6. Defrost Setting Button

7. Bagel Setting Button
8. Cancel Button
9. Browning Control – 7 Shade Settings
10. Under Base Cord Wrap
11. Removable Crumb Tray

Browning Level:

7 Continuous adjustable toasting levels (9); ranging from lightest to darkest color.

Toasting Function Buttons:

Bagel (7): is specially designed for toasting bagels. Press this button once to activate this function and the indicator (4) above it will light.

Defrost (6): is suitable for defrosting frozen bread or bagels. Press this button once to activate this function and the indicator (3) above it will light. If the items are already at room temperature, no need to press this button.

Reheat (5): is specially designed to re-heat the toasted bread or bagels. Press this button once to activate this function and the indicator (2) above it will light.

Cancel (8): Pressing this button will stop the toasting cycle and reset the toaster to the previous setting. The bread carriage (1) will be raised.

Operation:

1. Plug the power cord into a standard (AC120V~60Hz) AC outlet.
2. Set the browning control (9) to a desired shade level.
3. Be sure the carriage lever (1) is in raised (up) position. Insert a slice of bread or bagel into the top slot for toasting.
4. Press the carriage lever (1) down gently until it latches, toasting will begin.
5. Set the toasting function by pressing Bagel (7), Defrost (6) or Reheat (5) setting button. Otherwise, the toaster will work with normal.
6. After cycling (toasting time depends on browning level setting and function button selected), the toaster will auto stop and the toast will be pop-up.
7. Toasting can also be stopped manually at any time by pressing the cancel button (8) or by unplugging the power cord out from the AC outlet.

Toasting Tips:

1. Dry/ thin slices will toast faster than moist or thicker slices.
2. If toast starts to smoke, stop the toasting cycle and unplug the unit.
3. Bread or bagels must be toasted dry. Never use butter or other spreads prior to toasting.

Caution:

1. Do not place foil wrapped articles in the toaster.
2. Remove all protective wrapping prior to placing into toaster.
3. Avoid using items with frosting or other types of coatings that may soften or liquefy when toasted.

Cleaning Instruction:

1. Unplug the toaster from the AC outlet and let cool.
2. Wipe the outside with a soft, dry cloth. Never use metal polish or other solvents.
3. Remove the crumb tray (11) on the bottom of the toaster and brush out crumbs. If the toaster is used frequently, accumulated bread crumbs should be removed regularly (at least once a week). Make sure the crumb tray (11) is completely reinserted before using the toaster again.
4. Do not attempt to dismantle the appliance, no user serviceable parts inside. If problems occur, contact an authorized service center for repair.
5. Never attempt to remove bread or bagels that have jammed in the slots without unplugging the toaster from the electrical outlet first. Care should be taken while removing items from the toaster to avoid internal damage to the mechanism or heating elements.
6. Wrap the cord around the tabs located on the bottom of the unit (10) to store the power cord when the toaster is not in use.

Technical Information:

Input Voltage:	AC 120V ~ 60Hz
Max. Power Consumption:	850W
Min. Toasting Time:	45 seconds
Max. Toasting Time:	240 seconds

Service

Please refer to the instructions on the enclosed warranty card for returning your unit for services.

Distributed by:

Spectra Merchandising International, Inc.

Chicago Industry Tech park

4230 North Normandy Avenue

Chicago, IL60634, U.S.A.

Please have model number ready, for Customer Service, call 1-800-777-5331

Printed in China

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>