




SPEED QUEEN®

DRYER OPERATING INSTRUCTIONS

MODELS DE3270 & DE3271

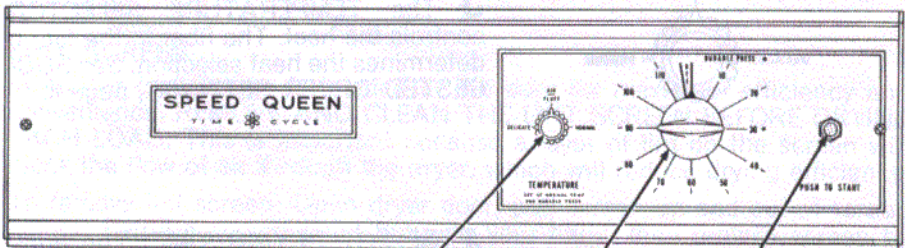

**TEMPERATURE
SELECTOR**

**TIMER
KNOB**

**START
BUTTON**



SPEED QUEEN®

A DIVISION OF MCGRAW-EDISON COMPANY
RIPON, WISCONSIN 54971

Part No. 53936R1


Read complete instructions before using dryer. Refer often to the special information in the Speed Queen Handbook to Better Automatic Drying. Before using dryer for the first time, wipe the inside of the drum with a damp cloth to remove shipping dust. The dryer must be properly installed according to the installation instructions.

TO DRY CLOTHES

1 LOAD DRYER: Open door and place properly sorted laundry from washer into dryer. See Helps and Hints, page 5.


2 CLOSE DOOR: Dryer will not operate with door open.

3 SELECT DRYING TEMPERATURE: The TEMPERATURE SELECTOR controls the heat. The fiber in the fabric determines the heat selection. See SUGGESTED DRYER SETTINGS, page 4.

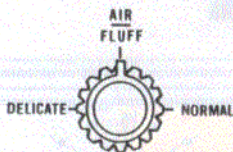

4 SELECT DRYING TIME: The numbers on the timer dial (0 to 110) represent the minutes of drying time. The DURABLE PRESS cycle starts at "30" as a reminder that these fabrics will dry in a shorter time than regular fabrics. See SUGGESTED DRYER SETTINGS, page 4. The timer setting may be changed at any time during the drying period.

The last 5 minutes of the cycle is an automatic cool-down (no heat) period to condition the clothes and to lessen wrinkling for durable press loads. Dryer will not heat if set for 5 minutes or less.

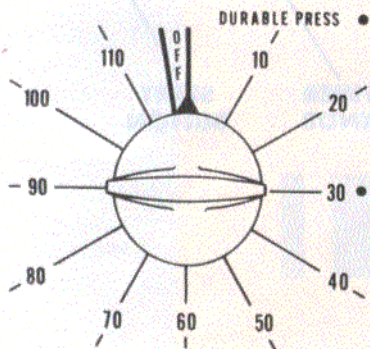

5 START DRYER: With door closed and timer set, press the safety **PUSH-TO-START** button. Dryer will operate until the end of the cycle (when timer knob indicator reaches the OFF position).

TO STOP DRYER AT ANY TIME: Open dryer door or turn timer knob to OFF position.

TO RESTART DRYER: Close door, reset timer if necessary and press **PUSH-TO-START** button. Speed Queen dryers are designed so they will not operate if the door is open. The **START** button, which is out of the reach of small children, **MUST** be pressed to start the dryer if it has been stopped for any reason. This provides a safety feature.



PUSH TO START

ABOUT YOUR SPEED QUEEN DRYER

LINT SCREEN

In-A-Door Lint Screen is located in the door for maximum efficiency and convenience. **REMOVE AND CLEAN THE LINT SCREEN BEFORE DRYING EACH LOAD.** This is important because a layer of lint on the screen will block the flow of air through the dryer, which will reduce drying efficiency.

To remove lint screen: Open dryer door, pull screen up and out of screen holder. Remove accumulated lint with your hand, then replace screen by sliding back into holder.

EXHAUST SYSTEM

We recommend that Speed Queen dryers should be exhausted to the outside atmosphere to remove the heat and moisture from the dryer. The duct pipe should be cleaned periodically to remove any obstructions. Check occasionally to make sure the flapper on the outside weather hood moves freely, is not pushed in and that nothing has been shoved against it. Check too that the flapper is not standing open. If it is open, leaves or even snow could plug it. Any restriction of the air from the dryer will decrease drying efficiency.

If the room where the dryer is installed is adequately ventilated, it may be operated without an outside exhaust, but outside exhausting is the preferred method. The necessary suggestions and directions for exhausting are given in the Installation Instructions which are included with the dryer. See your Speed Queen dealer for full particulars.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>