 


Speed Queen

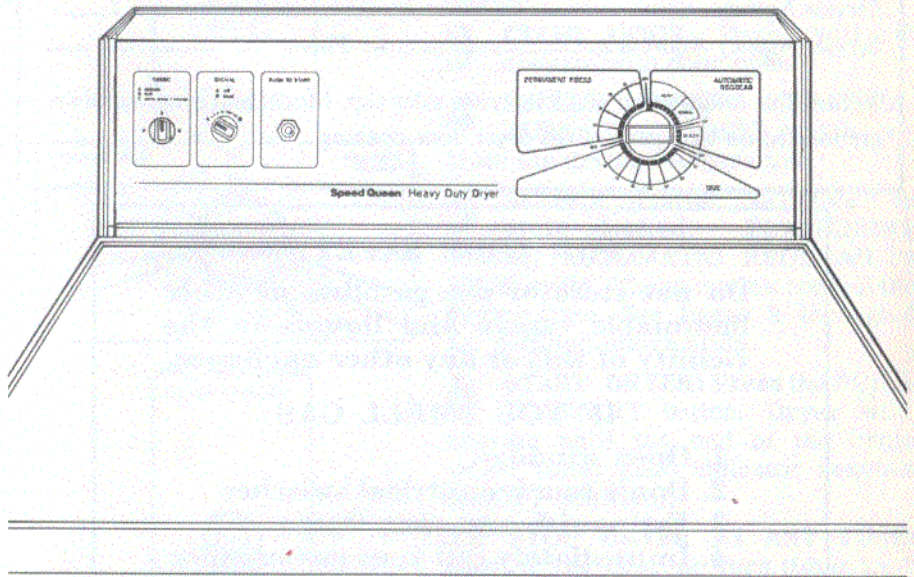

AUTOMATIC DRYER OPERATING INSTRUCTIONS

Models
HE6434
and
HG6494

 
 
 
Speed Queen Company
Ripon, WI. 54971

Part No. 57088


5/80

A Raytheon Company

TO DRY CLOTHES

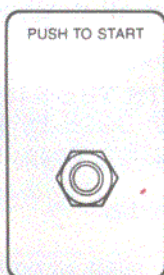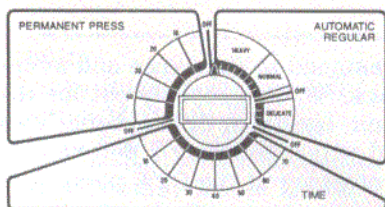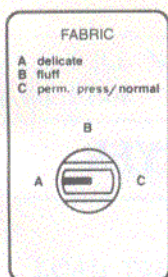

 TO RESTART DRYER: Close door, reset timer if necessary and press PUSH-TO-START button. Speed Queen dryers are designed so they will not operate if the door is open. The PUSH-TO-START button, which is out of the reach of small children, MUST be pressed to start the dryer if it has been stopped for any reason. This is a safety feature.

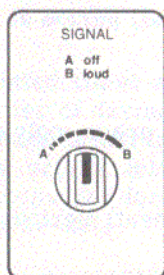

1 CLEAN LINT FILTER: See Page 7.

2 LOAD DRYER: Open dryer door. Shake out laundry and place in dryer. See Helps and Hints, Pages 8 and 9.

3 CLOSE DOOR: Dryer will not operate with door open.

4 SELECT DRYING TEMPERATURE: The FABRIC switch controls the drying temperature.

5 SELECT TIMER SETTING in cycle desired: PERMANENT PRESS, AUTOMATIC REGULAR or TIME cycle. These cycles control the drying time. See Pages 2 through 6 for detailed information.

6 START DRYER: Press the PUSH-TO-START button. Dryer will operate until the end of the cycle (when timer knob indicator reaches the OFF position).

TO STOP DRYER AT ANY TIME: Open dryer door or turn timer knob to OFF position.

 
7 SET SIGNAL CONTROL: Turn selector to "B" loud (loudest sound) or to "A" off (no sound) or to any level between. The signal will buzz for one to two minutes before the dryer stops at the end of each cycle as a reminder to remove the clothes from the dryer. The signal will also stop when the door is opened. Unless you want to change the sound level, the signal need not be set for each load. It will buzz automatically.

ABOUT YOUR AUTOMATIC CYCLES

The timer does not advance at an even pace in the automatic cycles as it does in the time cycle.

For instance you may notice the timer remains in the same position for 15 minutes before it begins to move. THE TIMER IS NOT MALFUNCTIONING. This only means it took 15 minutes for the load to become dry enough to start advancing the timer.

The length of time it takes for the timer to begin advancing depends on the type and size of load being dried. The following are examples of settings used in the various automatic cycles.


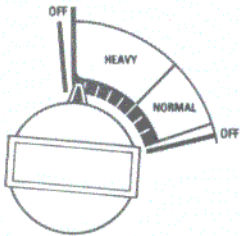


HEAVY

Use this setting when drying relatively full loads of rugs (cotton backed), cotton mattress pads, quilts and other heavy cottons.

NORMAL

  Use this setting for bath towels, cotton work clothes, cotton sheets, dresses and shirts. For large loads set indicator higher in the normal cycle.

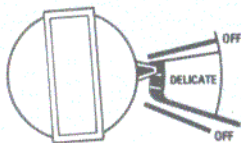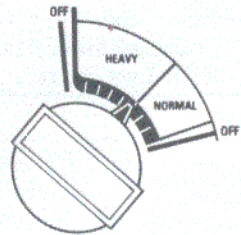


DELICATE

Use this setting for sheer and very lightweight cottons and those items labeled "Dry With Low Heat".

COOL DOWN PERIODS

 Each automatic cycle has a cool down period at the end of the cycle. During that time, the load is tumbled with no heat. This helps reduce wrinkling. Setting the timer in either of these positions will result in the load being tumbled with no heat.

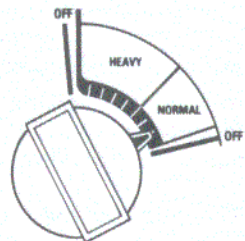

TIME CYCLE

This cycle will operate the dryer for the number of minutes for which it is set (up to 70). Use for any load desired. Use for items you might want to remove while still damp, such as knits, woolens or clothes to be ironed.

Turn the timer knob for the number of minutes required for drying. This cycle has a 5 minute cool-down (no-heat) period. The dryer will not heat if set for 5 minutes or less.

SUGGESTED DRYER SETTINGS

LOAD TYPE	FABRIC SETTING (Temperature)	MINUTES (Approximate)
COTTONS		
Heavyweight	C permanent press/normal	40-60 average load
Medium Weight	C permanent press/normal	35-45 average load
Lightweight	C permanent press/normal or A delicate	15-30 average load
WOOL		
Machine Washable	C permanent press/normal	10-15 for blankets (Use "stuffers" and remove wool damp.)
PILLOWS (Except Foam Rubber)	C permanent press/normal	2 hours or more (reset timer)

The times suggested are approximate. Your loads, installation and drying requirements will determine the setting you should use. To dry for ironing dampness, use less time. For wringer washer loads, increase the time 10 to 15 minutes.

FLUFF

Set FABRIC selector at "B" fluff. Set the timer knob on the TIME cycle for the period of fluff desired.

Do not use "B" fluff setting with AUTOMATIC cycles. Use for any items that should not be dried with heat. Use also for fluffing shag rugs, bedspreads, pillows, blankets and other items. Add dry bath towels when drying plastic or rubber in this cycle.

SUGGESTED DRYER SETTINGS

LOAD TYPE	FABRIC SETTING	MINUTES
NO-HEAT ITEMS Plastic, Foam Rubber, Rubber and any item to be dried with no heat.	B fluff	5-15

Add dry towels to absorb moisture when drying plastic and rubber items in this cycle.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>