


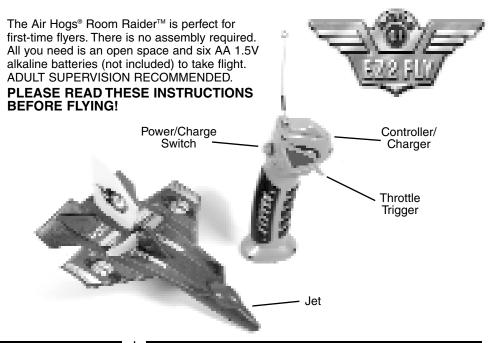

#### INSTRUCTIONS


# Check to make sure contents are complete:

- 1 Air Hogs® Room Raider™ with Motor/Propeller
- 1 Controller/Charger
- 1 Instruction Manual




## **CONTROLLER/CHARGER BATTERY INSTALLATION**

- Use a Phillips screwdriver (not included) to unscrew and remove the battery holder from the controller.
- 2. Install six AA 1.5V alkaline batteries (not included) in the controller. Be careful to align the positive (+) and negative (-) polarities with the corresponding markings inside the battery holder.
- 3. Reinstall the battery holder and tighten the screw.

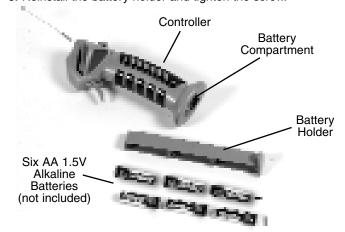

Familiarize yourself with the position of the "ON/OFF" switch, and Charge Port.

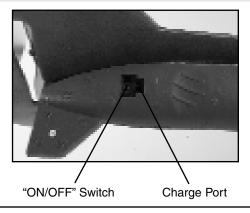

### **IMPORTANT BATTERY INFORMATION**

- Batteries should always be replaced by an adult.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Please retain this information for future reference.

CAUTION: Do not dispose of batteries in fire. Batteries may explode or leak.

#### **FLYING INDOORS**


**Location** – Fly in a wide open room, away from breakable items. Avoid flying near vents and/or fans, as these may overpower the Room Raider™ and make it difficult to control. **NOTE:** Always get permission to fly your Room Raider™ indoors.

**WARNING:** Never fly near your face. Keep propeller away from your fingers, hair, eyes and other body parts. Always lift off from a flat surface. Never hold the Room Raider™ by the bottom fin. Do not launch jet near people or animals. Stay away from obstacles and electric hazards.

#### **CHARGING YOUR ROOM RAIDER™**


- 1. Open door on the controller to access the charge cable.
- 2. Plug charge cable into the charge port.
- 3. Slide the power switch on the controller to "CHARGE". The charge light will flash while charging and stop flashing when the battery is fully charged.
- 4. Remove the charge cable from the charge port, store it in the charger and close the storage door.

NOTE: For best flight performance, fully charge your Room Raider™ before each flight.

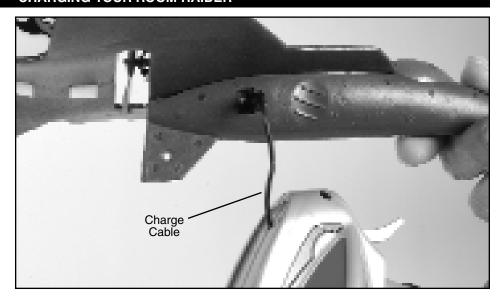

#### **FLYING YOUR ROOM RAIDER™**

- 1. Turn the jet "ON/OFF" switch to "ON".
- 2. Turn the controller "ON".
- 3. Hold the controller in one hand and jet as shown.
- 4. Squeeze the throttle trigger about 1/2 way and gently toss the Room Raider™ into the air. The Room Raider™ will begin flying in circles to the left.
- 5. Control the altitude by squeezing the throttle trigger.

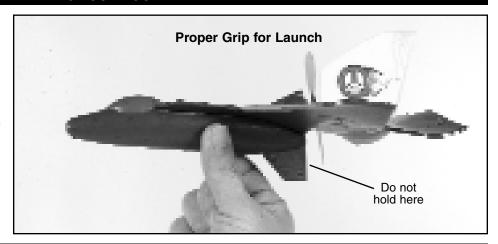

#### **FCC REQUIREMENTS**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference.

2) This device must accept any interference received, including interference that may cause undesired operation. WARNING: Changes or modifications not expressly approved by the party responsible for its compliance could void the user's authority to operate the equipment.

TROUBLESHOOTING		
PROBLEM	CAUSE	SOLUTION
Room Raider™ will not start or has lost power.	<ol> <li>You have not set the motor switch to "ON".</li> <li>Battery power is low.</li> <li>Batteries (+) or (-) are not correctly placed inside the battery compartment.</li> <li>Room Raider™ battery is low.</li> <li>Safety auto-cutoff is activated.</li> </ol>	<ol> <li>Push motor switch to "ON".</li> <li>Replace the controller batteries.</li> <li>Be sure to align the (+) and (-) polarities with the corresponding markings inside the battery compartment.</li> <li>Recharge Room Raider™.</li> <li>Turn jet off, wait 3 seconds then turn back on.</li> </ol>
Room Raider™ is flying too low.	<ol> <li>Needs more power.</li> <li>The batteries in the controller are drained.</li> <li>Room Raider™ battery is low.</li> </ol>	<ol> <li>Squeeze the throttle trigger more.</li> <li>Install new batteries.</li> <li>Recharge Room Raider™.</li> </ol>

Spin Master Ltd., 450 Front Street West, Toronto, ON M5V 1B6 Canada Spin Master, Inc., PMB #10053, 300 International Drive, Suite 100, Williamsville, NY 14221, USA

Williamsville, NT 14221, USA Spin Master Toys Far East Limited, Rm #1113, 11/F, Chinachem Golden Plaza, 77 Mody Rd., Tsimshatsui E., Kowloon, HK

Item #44210 #20004655, #20004658 44210-ENG-IS-2 REV 2 US English

TM and © 2006 Spin Master Ltd. Air Hogs ® is a registered trademark of Spin Master Ltd. All rights reserved. Conforms to product safety standards ASTM F963-03, EN71 regulatory requirements. Products and colors may vary. Please retain this information for future reference. Patent Pending. MADE IN CHINA.





Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com