


User Quick Guide

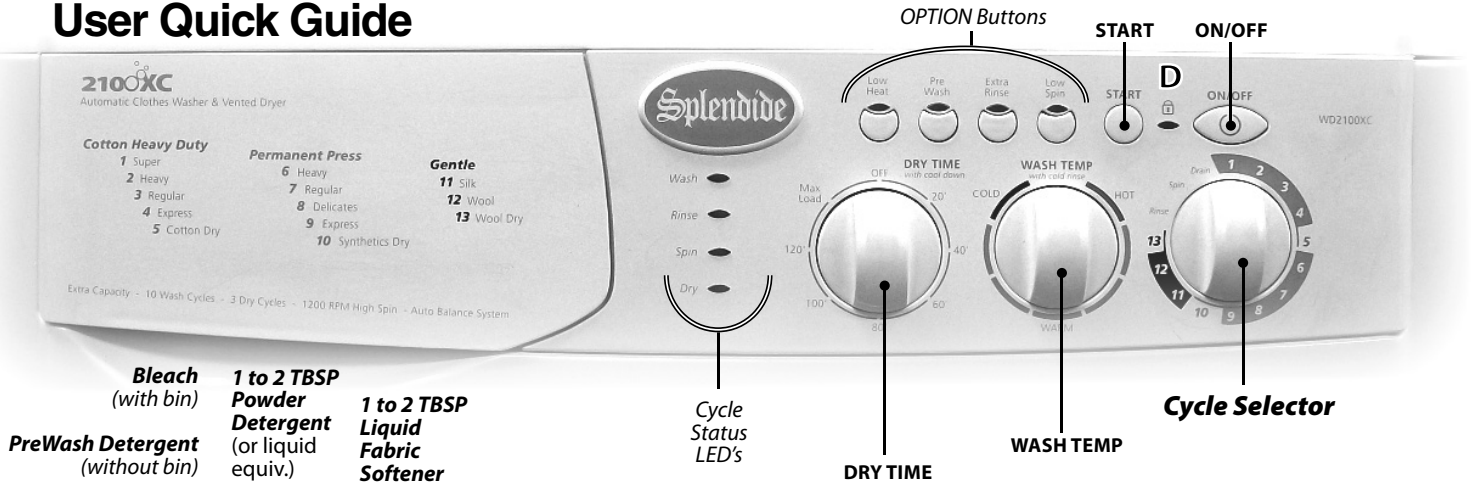

LOAD SIZES

For best results, DO NOT load the drum more than 1/2 to 2/3 full when DRYING.

WASH	Fabric Type	Maximum Load
	Cottons	2 to 15 lbs.
	Synthetics	2 to 9 lbs.
	Delicates	2 to 8 lbs.
	Wools	2 to 3 lbs.

DRY	Fabric Type	Maximum Load*
	ALL TYPES	8 to 11 lbs.

* MAX LOAD on the DRY TIME knob is meant only for very full/11lb-loads and will run for 180 minutes.

DRYING RESULTS

Your washer-dryer operates on 110V and has a 1300W dryer. It will take longer to dry than a traditional dryer (which operates on 220V, 5000W). However, you can increase the efficiency of the dryer by following these tips:

- Try to keep the **door closed** during the dry cycle. This conserves energy by trapping heat,
- use a **LOW SUDSING DETERGENT**.
- use **FABRIC SOFTENER** or a detergent with built-in softeners,
- **DO NOT OVERLOAD** the drum,
- **DO NOT OVERDRY** your laundry.

Before setting the controls, always make sure,

- the drum is loaded correctly (see left);
- the door is closed;
- the ON/OFF button has been pressed, so power is ON;
- laundry aids have been added to the Dispenser Drawer (see left);
- the DOOR LOCK LED (D) is flashing.

WASH-TO-DRY AUTOMATICALLY

- | | |
|--|--|
| WASH | <ul style="list-style-type: none"> • Select the wash cycle using the Cycle Selector; • select the wash water temperature using the WASH TEMP knob; • if desired, press any available OPTION button(s); |
| DRY | <ul style="list-style-type: none"> • select the length of drying time using the DRY TIME knob; |
| <ul style="list-style-type: none"> • press START. <p><i>You will hear a 'click' when the Child Door Lock engages and the cycle will start. When the wash cycle ends, the appropriate dry cycle will begin automatically.</i></p> | |

NOTE: To CANCEL a cycle and clear the controls, press and hold the START button.

WASH ONLY

- | | |
|---|---|
| WASH | <ul style="list-style-type: none"> • Select the wash cycle, temperature and any wash options (see WASH above); |
| DRY | <ul style="list-style-type: none"> • set the DRY TIME knob to the OFF position; |
| <ul style="list-style-type: none"> • press the START button. <p><i>When the wash cycle ends, the machine will stop.</i></p> | |

DRY ONLY

- | | |
|-------------|--|
| WASH | <ul style="list-style-type: none"> • Set the Cycle selector to position 5, 10, or 13; • select the length of drying time using the DRY TIME knob; |
| DRY | <ul style="list-style-type: none"> • press the START button. <p><i>When the dry cycle ends, the machine will stop.</i></p> |

CHILD DOOR LOCK

Your washer-dryer is equipped with a Child Door Lock. For your child's safety, the door stays locked for the duration of the WASH and DRY cycles. However, the 'Add-An-Item' feature allows you to unlock the door when needed.

NOTE: The 'Add-An-Item' feature is not available whenever it is unsafe to open the door (i.e. during high spins, if water level is to high, etc.)

'Add-An-Item'

- | | |
|---------------|--|
| Unlock | <ul style="list-style-type: none"> • Press the ON/OFF button; <p><i>You will hear 2 'clicks' when the door unlocks. It is now safe to open the door.</i></p> |
| Resume | <ul style="list-style-type: none"> • Close the door; • press the ON/OFF button to resume the cycle. |

IMPORTANT: Never attempt to open the door when the Door Lock LED (D) is LIT SOLID.

COMBO WASHER-DRYER LAUNDRY TIPS

DOING LAUNDRY IN A COMBO

- **Don't let laundry pile up.** Keep up with laundry by doing a small load every day or two. Make it part of your routine to throw a load in after your workout or before you go to bed and let your Splendide do the rest!
- Because your washer-dryer is **front-loading and operates on 110V**, cycle times may be longer than what you're used to: 40 to 80 minutes to wash. 90 to 110 minutes to dry.
- Your washer-dryer is extremely efficient. You might not be able to see water in the drum during wash. **This is normal.**
- Once set, the Dry Time, Water Temp, and Cycle **knobs WILL NOT move.** The 'Status LED's' will let you know the progress of your cycle.
- **Always use fabric softener** for WASH-TO-DRY LOADS. Using softener assures that the laundry falls easily from the drum after high spin and tumbles freely during the dry cycle.

FOR BEST RESULTS,

- **NEVER OVERLOAD THE DRUM.**
- **NEVER EXCEED** the recommended detergent and softener amounts.
- **USE FABRIC SOFTENER**, or a detergent with built-in softeners.
- **NEVER OVERDRY LAUNDRY.** Moisture is what makes fabrics soft and fluffy.
- Use 'Cotton Heavy Duty' cycles **ONLY** for heavy cottons (towels, jeans, etc.)
- For items that may wrinkle, use 'LOW SPIN' in wash and/or 'LOW HEAT' with 'Synthetics Dry.'
- For mixed loads, remove items that may wrinkle while still damp (dress shirts, etc.) Hand press and hang them. Then, continue drying the rest of the load (underwear, towels, etc.)
- After washing, shake out **LARGE ITEMS** (pants, sheets, etc.) Loosely fold them and place them back in the drum. Then dry them. This will improve drying times and reduce fabric wrinkling.

WHERE'S THE LINT FILTER?

Your washer-dryer is so gentle on fabrics, that very little lint is produced. It passes safely through a special, 'self-cleaning' pump system and then out the drain and/or dryer vent of your washer-dryer. There's no filter for you to clean!

However, if your washer-dryer is vented (Model 2100XC), it's recommended that you occasionally, go outside and check the dryer vent for proper airflow. Assure that the vent and ducting are lint-free.

ABOUT VENTLESS DRYING

If your washer-dryer is ventless, (Model 7100XC), when you remove items after the self-condensing drying process, they may feel slightly damp. **THIS IS NORMAL.** Simply shake items out to allow any steam to dissipate (a few seconds) before folding or hanging them as you usually would. **NOTE: Splendide's self-condensing drying process will not add heat or humidity to the surrounding area.**

SPECIAL WINTERIZATION INSTRUCTIONS FOR RV/MARINE INSTALLATIONS:

	To winterize your washer-dryer,	To use your washer-dryer again,	Optional Winterization instructions
WINTERIZE	<ol style="list-style-type: none"> 1. With washer-dryer power OFF, pour ½ quart of RV-type antifreeze into washer drum; 2. Close door. Advance Cycle Selector to 'Spin'; 3. Press ON/OFF button, then press START. let the washer-dryer run for 1 to 2 minutes; 4. Press ON/OFF button to turn power OFF. 	<ol style="list-style-type: none"> 1. Reconnect water inlet hoses to corresponding HOT/COLD faucets. Turn faucets ON. <i>NOTE: Check water inlet hoses and pump periodically (see Users Guide);</i> 2. Plug washer-dryer into appropriate electrical outlet (see Users Guide) - OR reconnect power supply; 3. With washer-dryer power OFF, pour 1/2 TBSP. of powder detergent (or liquid equiv.) into compartment '2' inside Dispenser Drawer; 4. Advance Cycle Selector to position '9'; 5. Press ON/OFF button, then press START. 	<p>If you're currently pumping antifreeze through your fresh water system, you can follow these steps to winterize your washer-dryer:</p> <ol style="list-style-type: none"> 1. With machine power OFF, turn WASH TEMP knob to 'HOT'; 2. Advance Cycle Selector to position '3'; 3. Press ON/OFF button, then press START. Let machine fill until the drum turns (could take up to 1 to 2 minutes); 4. Press ON/OFF button to turn power OFF; 5. Advance Cycle Selector to 'Spin'; 6. Press ON/OFF button, then press START.
END	<ol style="list-style-type: none"> 5. Unplug washer-dryer from electrical outlet (or disconnect power); 6. Turn water supply faucets OFF. Disconnect inlet hoses from faucets; 7. Drain remaining water from the hoses. FINISHED. 	<ol style="list-style-type: none"> 6. Allow machine to run through the complete cycle to clean out any remaining antifreeze. FINISHED. 	Winterization Option
END		END	<ol style="list-style-type: none"> 7. After letting antifreeze drain completely from drum, press the ON/OFF button to turn power OFF. FINISHED.



www.splendide.com

IMPORTANT! DO NOT DISCARD!
Keep this page with your owners manual for future reference

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>