

## Front-Loading Washer-Dryer

### Addendum to Users Guide

**Models:** WD2000S  
WD2100  
WDC6200CEE

#### QUESTIONS?

##### Westland Sales

15650 SE 102nd Ave (PO BOX 427)  
Clackamas, OR 97015

**Call: 1-800-356-0766**

Local: 503-655-2563  
Service Fax: (503) 722-9202  
E: service@splendide.com

[www.splendide.com](http://www.splendide.com)

## No Dryer Lint Filter

No more messy lint filter cleanings! Lint passes safely through a 'self-cleaning pump' and then out the drain or dryer vent in your Splendide.

If small items (like keys or hair clips) accidentally fall into the pump, they're safely withheld in a coin trap that you can easily access (*see Users Guide*).

**WD2000S, WD2100 Models:** Occasionally, go outside and check the dryer vent for proper airflow. Assure that the vent and ducting are lint-free.

## Winterization (for RV or marine installs)

### A) To winterize your washer-dryer

- 1) With machine power OFF, pour ½ quart of RV-type antifreeze into washer drum
- 2) Close door. Advance **Program Dial** to a 'Spin' position
- 3) Press **ON-OFF** Button (IN). Wait 1-2 minutes
- 4) Press **ON-OFF** Button (OUT). Unplug washer-dryer from electrical outlet (or disconnect power)
- 5) Turn water supply faucets OFF. Disconnect inlet hoses from faucets. Drain remaining water from the hoses. **FINISHED.**

### Optional RV Winterization - If currently pumping antifreeze through a fresh water system

- 1) With machine power OFF, turn **WASH TEMP** knob to HOT
- 2) Advance **Program Dial** to REGULAR in Cotton Heavy Duty
- 3) Press **ON-OFF** button (IN). Let machine fill until antifreeze is in the drum
- 4) Advance **Program Dial** to 'RESET'. Wait 5 seconds (Status/Door Lock LED will blink)
- 5) Advance **Program Dial** to a 'Spin' position. Let the antifreeze drain from the drum
- 6) Advance **Program Dial** to 'RESET'. Wait 5 seconds (Status/Door Lock LED will blink)
- 7) Press the **ON-OFF** button (OUT)
- 8) Turn **WASH TEMP** knob to COLD
- 9) Repeat steps 2 through 7. **FINISHED.**

### B) To use again, flush water pipes, then

- 1) Reconnect water inlet hoses to corresponding HOT/COLD faucets. Turn faucets ON. NOTE: Check water inlet hoses and pump periodically (*see Users Guide*).
- 2) Plug washer-dryer in to appropriate electrical outlet (*see Users Guide*) - or reconnect power supply

- 3) With **ON-OFF** button in the OFF (OUT) position, pour ½ TBSP. of powder detergent (or liquid equiv.) into the 'Detergent' compartment inside the Dispenser Drawer (*see Users Guide*).
- 4) Advance **Program Dial** to an EXPRESS position
- 5) Press **ON-OFF** button (IN). Allow machine to run through complete cycle to clean out any remaining antifreeze. **FINISHED.**

## Opening the Door

### To open the door during a WASH cycle

- 1) Advance **Program Dial** to 'RESET'. Wait 5 seconds.
- 2) Advance **Program Dial** to 'Drain' (8 o'clock) and allow the machine to drain completely.
- 3) Advance **Program Dial** to 'RESET' ('Status/Door Lock' LED will blink quickly to indicate that the cycle has stopped, but the door is STILL LOCKED)
- 4) When the 'Status/Door Lock' LED blinks SLOWLY (takes 1-2 minutes), you can open the door

### To open the door during a DRY cycle

- 1) Advance **Program Dial** to 'RESET' (The 'Status/Door Lock' LED will blink FAST to indicate the cycle has stopped).
- 2) Wait for the 'Status/Door Lock' LED to blink SLOWLY (takes 1-2 minutes). Open the door.



**IMPORTANT: DO NOT attempt to open the door until the 'Status/Door Lock' LED is blinking SLOWLY!**




## DO NOT DISCARD!


This information supersedes the information found in your owners manual.  
Keep this page with your owners manual for future reference



# User Quick Guide

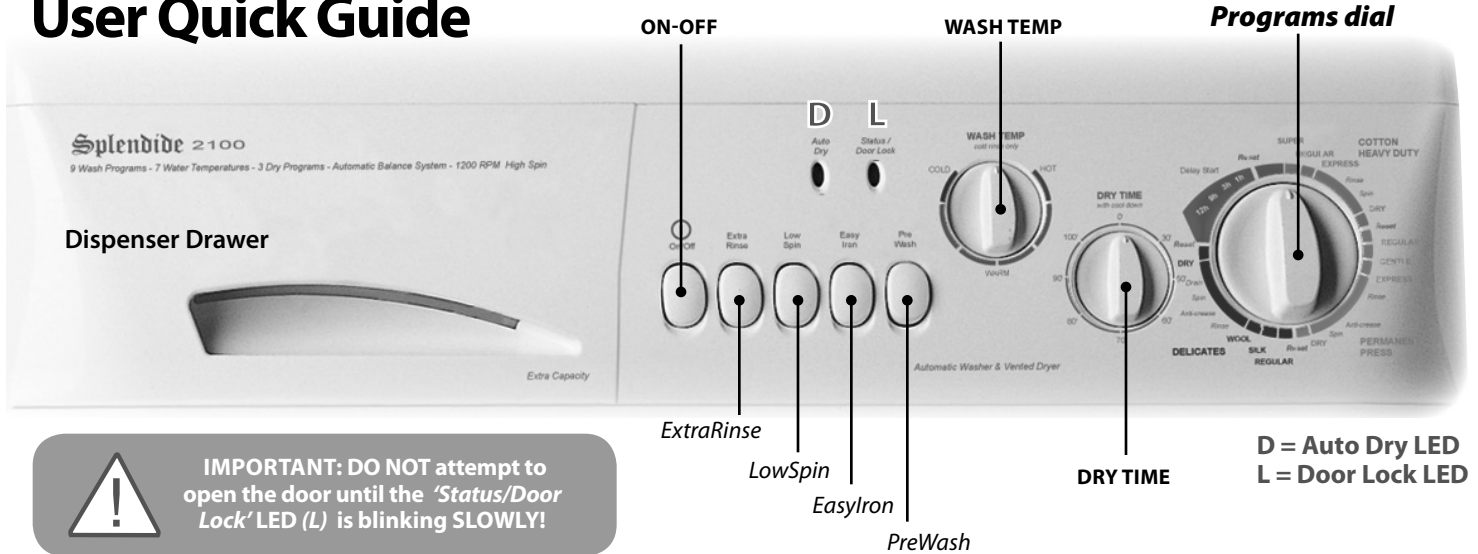

**IMPORTANT: DO NOT attempt to open the door until the 'Status/Door Lock' LED (L) is blinking SLOWLY!**

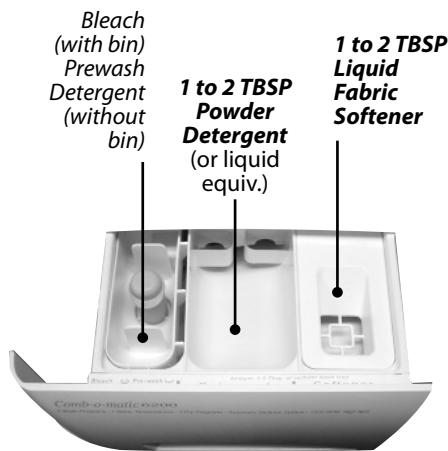

## LAUNDRY LOAD SIZES

### Washing capacity - 12 lbs. max.

Fabric	Max load.
Cottons	12 lbs.
Synthetics	6 lbs.
Delicate Fabrics	5 lbs.
Wools	3 lbs.

### Drying capacity - 6 to 8 lbs. max.

Always allow space for air to flow around the clothes when drying. If going from wash to dry automatically, load the drum according to drying capacity.

### BEFORE SETTING THE CONTROLS Always make sure,

- the door is closed
- the ON-OFF button is in the OFF (OUT) position
- the **Programs Dial** is in a "RESET" position
- laundry aids have been added to the **Dispenser Drawer** (see above)

## SET A WASH TO DRY CYCLE

### 1) WASHING

- Select a washing cycle by rotating the **Programs Dial** clockwise
- Set the wash water temperature with the **WASH TEMP** knob.
- To further customize the wash program, press one of the four **WASH OPTIONS** buttons

### 2) DRY TIME

- Select drying minutes with the **DRY TIME** knob.

### 3) Press the ON-OFF button (IN). After washing, Splendide will start drying.

## SET A WASHING CYCLE

### 1) WASHING

- See **WASHING** (above)

### 2) DRY TIME

- Set the **DRY TIME** knob to **0'**

### 3) Press the ON-OFF button (IN). After washing is complete, Splendide will stop.



## SET A DRYING CYCLE

### 1) DRYING

- Select a dry cycle by rotating the **PROGRAMS** dial clockwise
- ### 2) DRY TIME
- Select drying minutes with the **DRY TIME** knob (**30' to 120'**)

### 3) Press the ON-OFF button (IN). After drying, Splendide will stop.



## LAUNDRY TIPS

### Don't let laundry pile up

- Place a load in Splendide every 1-2 days and return to clean, dry laundry. **Note:**
- Wash cycles are **40-80 min.** and use 7.5 to 18 gal. of water. **You may not see water in the drum.** This is normal.
  - Avg. dry times are **90-110 min.**
  - Once set, the **DRY TIME** knob won't move

### Door lock

Once a cycle begins, the door will lock and **STAY LOCKED** until it ends. When the **'Status/Door Lock LED'** blinks **SLOWLY** (one to two-minutes later) you can open the door. To open the door during a cycle, see **'Opening the Door'** (opposite page).



### FOR BEST RESULTS,

- DON'T OVERLOAD the drum.
- DON'T EXCEED laundry aid amounts.
- ALWAYS USE A FABRIC SOFTENER.
- ONLY use **'Cotton Heavy Duty'** for heavy cottons (towels, jeans, etc.)
- For items that may wrinkle, use **'LOW SPIN'** in wash and **'Delicates Dry'**
- After washing, shake out **LARGE ITEMS** (pants, sheets, etc.) Loosely fold them and place them back in the drum. Then dry them.
- For mixed loads, set a shorter dry time and remove items that may wrinkle while still damp (dress shirts, etc.) Hand press and hang them. Continue drying the rest (underwear, towels, etc.)
- DON'T OVERDRY LAUNDRY. A certain amount of moisture is what makes fabrics soft and fluffy.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>