

Professional performance mixer



OWNER'S MANUAL



STANTON MAGNETICS, LLC

2821 Evans St. Hollywood, FL 33020 (954) 929-8999 - Fax: (954) 929-0333 info@stantonmagnetics.com

Thank you for making Stanton your first choice in professional DJ mixers.

This new, innovative family of mixers has been developed with input from the professional DJ community, bringing to the marketplace a previously unavailable, affordable combination of user-friendly, functional design, rugged construction, and professional quality features.

Stanton and your authorized Stanton dealer are dedicated to your complete satisfaction by offering benchmark service and support throughout the long life of your Stanton product.

Again, we appreciate your patronage, and look forward to many years of making music together.

PLEASE READ CAREFULLY BEFORE USE OF THIS PRODUCT

FAILURE TO FOLLOW THE INSTRUCTIONS PRINTED BELOW MAY VOID WARRANTY


- Follow all security advice printed on your mixer
- When removing the unit's AC plug from the power source, grasp and pull the plug, NEVER the cord itself!
- Avoid placing your mixer near heat sources, such as power amplifiers.
- When in use, place your mixer on a stable surface, away from vibration. Always use care when carrying your mixer. Impact, or heavy vibration may compromise the unit's mechanical integrity. The manufacturer is not responsible for damage resulting from an impact, or misuse.
- When in use, place your mixer away from sources of hum or noise, such as transformers, or electric motors.
- To prevent overheating, always provide your mixer with adequate ventilation air space.
- Avoid stepping on your mixer's AC cord. Repeated compression of the cord may lead to electrical shorting.
- To avoid damage due to AC voltage peaks, always disconnect your mixer from the power source during electrical storms.
- Your mixer contains no user-serviceable parts. The manufacturer is not
 responsible for any damage or personal injury resulting from unauthorized
 user-servicing or modifications. In addition, the warranty will be void if any
 unauthorized service by the user is detected. Always return you mixer to an
 authorized Stanton dealer for servicing.


TROUBLESHOOTING


Problem	Cause	Solution
Excessive hum when using phono source.	Poor ground connection.	Properly connect turntable ground wire to mixer ground terminal.
	Loose cartridge/headshell connection.	Check cartridge connection to headshell. Check headshell shell connection to tonearm.
Low frequency hum while operating source unit.	Poor AC source ground. Loose input/output connection. Shorted cable.	Properly ground the AC source. Check all input and output connections for secure fit. Isolate and replace the damaged cable.
Program volume can't be adjusted with master volume control.	Amplifier or outboard gear connected to the record output.	Connect amplifier or outboard gear to master output.
No power.	Improperly connected AC cord or power line source not on.	Properly connect AC cord to AC power source. Turn power on.
The amplifier is turned up, but there is no signal.	Faulty output connections	Properly connect amplifier, or outboard gear to mixer.
	Improper level adjustment.	Properly set crossfader, channel faders, gain controls, and input selector toggles.
No signal in headphones.	Improper connection.	Check headphone connection to mixer. Tighten if necessary.
	Improper level or cue mix settings.	Adjust headphone level and cue mix to the proper level and channel settings.

SPECIAL PROTEKTION

Your SK FIVE comes with a special PROTEKTTM aluminum panel designed to make the surface of the mixer is as smooth as possible while still enabling you to field-replace key components. The PROTEKTTM panel covers all screws that may get in the way of your performance. You can still easily remove the front panel to replace any of the modular parts which are subject to wear and tear: crossfader, input faders and input toggle switches.

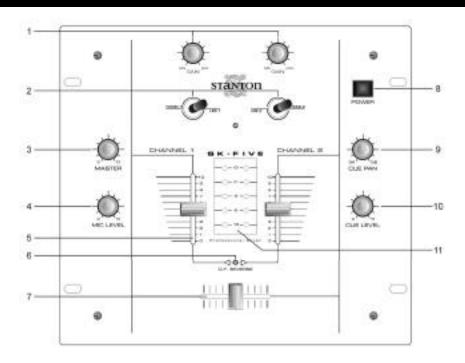

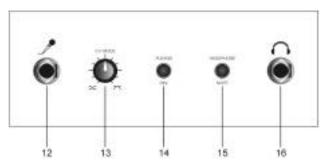

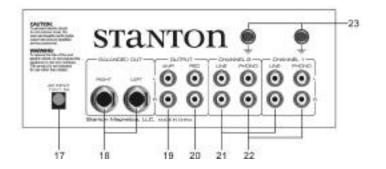

DESCRIPTION OF FUNCTIONS

- 1. Gain control: Controls the input sensitivity of each channel.
- 2. Input selector switches: Selects phono or line inputs.
- 3. Master level control: Controls the overall signal output level.
- 4. Mic gain control: Controls the overall microphone output level.
- 5. Channel fader: Controls the input channel level.
- 6. Crossfader Reverse LED: Bi-color LED indicates the status of the crossfader reverse function. When LED is green, the crossfader is normal. When LED is red, the crossfader direction is reversed.
- 7. Crossfader: Fades the master output between channels 1 and 2.
- 8. Power switch: Selects power "ON" or "OFF".
- 9. Cue pan: Fades the headphone output between channels 1 and 2, effectively allowing the user to preview a mix.
- 10. Headphone level control: Controls the overall headphone output level. It is recommended headphones with an impedance rating of 200 ohms or less be used for maximum volume.
- 11. Input Level Meter: Monitors each channel's input level.
- 12. Microphone input: 1/4" connector
- 13. Crossfader Curve adjustment: Adjusts the shape of the crossfader curve from a quick cut for scratching and cutting to a longer fade for mixing.
- 14. Crossfader Reverse: Reverses the direction of the crossfader. Bi-color LED indicates the status of the crossfader reverse function. When LED is green, the crossfader is normal. When LED is red, the crossfader direction is reversed.
- 15. Headphone Mute: Mutes the headphone signal output
- 16. Headphone output: Connection for 1/4 inch headphone. Recommended headphone impedance is 32-200 ohms for maximum volume.
- 17. Power supply connector: Input connection for the accompanying power supply.
- 18. Master output: TRS balanced (1/4").
- 19. Master output: unbalanced RCA connector
- 20. REC output: record output connects directly to recording source (tape deck, CD...)
- 21/22. Channel inputs: Line and phono signal inputs. Line inputs are used to connect to line level sources such as CD players, samplers, tape players, etc. Phono inputs are used to connect to turntables.
- 23. Ground connector: Connects to the turntable ground connector to eliminate electrical hum. Ground connectors usually supplied with turntables.

FADER CLEANING

The SK FIVE faders may need lubrication from time to time. This will extend the fader life and eliminate any potential damage due to extended heavy usage.

Cleaning Instructions

- 1. Remove the 3 fader knobs and 4 screws located in the corners of the PROTEKTTM (see "SPECIAL PROTEKTION" inside) panel and take the panel off the mixer.
- 2 . Remove the fader to be cleaned by unscrewing the 2 outer screws (removing the 2 inner screws will detach the fader from the fader plate) and disconnect the

cable coming from the mixer.

- 3. Spray a small amount of cleaner or lubricant into both ends of the fader and slide the fader back and forth a few times to spread the fluid evenly throughout the fader.
- 4. Shake and wipe off excess fluid before re-assembling the fader.

REPLACEMENT PARTS

To replace the cross or channel faders, follow steps 1 and 2 of the cleaning instructions. The following replacement parts are available from Stanton or your local Stanton dealer.

PL-SK1	Iwo way input toggle switch	PP-SK5	PROTEKT™ panet
3PL-SK1	Three way input toggle switch with FLASH™	PS-13US	US Power Supply (110v)
LF-SK5	Channel input fader	PS-13EU	European Power Supply (220v)
CF-SK5	Crossfader	PS-13UK	UK only Power Supply (240v)

ROTATING AND REPLACING THE INPUT TOGGLE SWITCHES

ROTATING INSTRUCTIONS

- 1 . Remove the PROTEKT™ panel (Cleaning instructions step 1)
- 2. Remove the 2 outer screws from the toggle switch plate (removing the 2 inner screws will detach the switch from the plate)
- 3. Rotate the plate to the desired position and tighten the screws back in the top and bottom holes

REPLACING INSTRUCTIONS

- 1. Remove the PROTEKT™ panel (Cleaning instructions step 1)
- 2. Remove the 2 outer screws from the toggle switch plate (removing the 2 inner screws will detach the switch from the plate)
- 3. Remove the switch assembly and disconnect the cable coming from the mixer.
- 4. Set the replacement switch assembly in the desired position and place the screws back in the top and bottom holes.

TECHNICAL SPECIFICATIONS

Line inputs: 2 (RCA), 150 mV / 27K ohm **Phono inputs:** 2 (RCA), 3 mV / 47K ohm

Master output: 1 (1/4" TRS Balanced/RCA unbalanced),

775 mV / 1K ohm

Record output: 1 (RCA), 245 mV / 10K ohm

Headphone output: 1 (1/4 inch), 32 - 200 ohms recommended

Frequency Response: 20 Hz - 20 kHz, +/- 2 dB

Gain Control: 0-20dB

S/N Ratio: Less than 7odB **T.H.D:** less than 0.2%

Dimension(LxWxD): 9" x 9.75" x 3.5" (226 x 248 x 87 mm)

Weight: 7 lbs (3.2 Kg)

WARRANTY

This unit has been designed and manufactured using quality components. Therefore, it is warranted to be free from defects in materials (limited as specified below), and workmanship for a period of twelve (12) months from the original purchase date. During this period, all service and parts necessary to repair a defect will be free of charge. This limited warranty applies to mechanical parts which are subject to wear and tear as specified:

- Faders, specified durability: 15,000 cycles
- Rotary potentiometers, specified durability: 10,000 cycles
- Switches, specified durability: 10,000 cycles

Consequently, the parts listed above are warranted to be free from defects in materials and workmanship for a period of thirty days (30) days from the original purchase date.

FOR THE WARRANTY TO BE VALID, PLEASE COMPLETE THE ONLINE WARRANTY REGISTRATION FORM FOUND AT WWW.STANTONMAGNETICS.COM

Stanton Magnetics, LLC, 2821 Evans Street • Hollywood, FL 33020

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com