

Sunbeam

Headlines

1600W Hairdryer

Instruction Booklet
HD7600

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	1
Features of your Headlines 1600W Hairdryer	2
Using your Headlines 1600W Hairdryer	4
Care and Cleaning	5

تأكد من تفهيم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری یکنید که احتیاطهای بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenliک önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM HAIRDRYER.


- This hairdryer must not come into contact with water or any other liquid.
- Always switch off your hairdryer at the power outlet and remove the plug when not in use.
- Do not store your hairdryer near tubs, basins, baths or other vessels which contain water.
- When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard, even when the unit is switched off.

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Close supervision is necessary when your appliance is being used near children or infirm persons.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.


Features of your Sunbeam Headlines 1600W Hairdryer

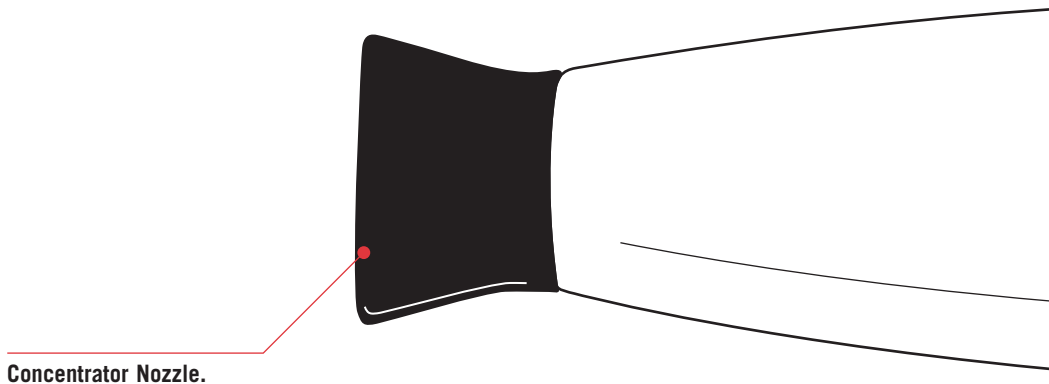

Concentrator Nozzle.

Cool Shot Button.

Heat and Speed Switches.

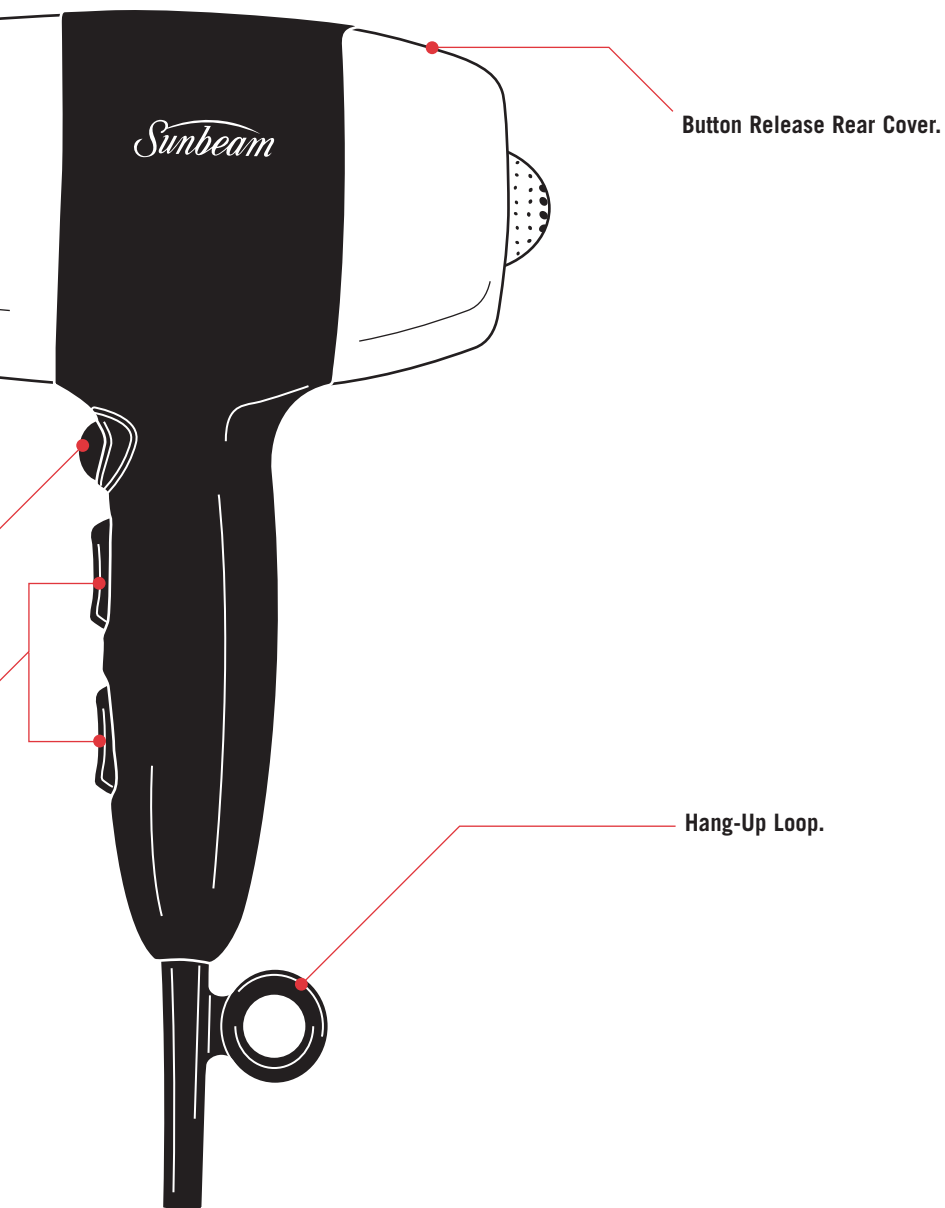

Using your Headlines 1600W Hairdryer

Your 1600W Hairdryer has 2 heat and 2 speed settings. This combination allows for greater versatility and control when drying and styling your hair.

The switch marked with red numbers controls the temperature of the airflow as follows:-

I = Low heat

II = Medium/High heat

The switch marked with blue numbers controls the strength of the airflow as follows:-

0 = Off

I = Gentle airflow

II = Strong airflow

A combination of high temperature and strong airflow is ideal for fast drying. Lower temperature and gentle airflow settings give greater control when styling.

The cool shot button provides a burst of cool air to set the style in place once styled.

To dry hair

- After shampooing and conditioning the hair, squeeze excess moisture from your hair using a dry towel.
- Comb hair free of all tangles with a wide tooth comb.
- Plug your dryer into a power outlet and turn the power on.
- Select the desired heat and speed combination and using your fingers dry hair from the roots to the ends.
- Use the concentrator nozzle onto specific areas of hair for spot drying or styling.
- Always hold the dryer at least 30 cm away from the hair when drying.

Please refer to the enclosed Guide to Styling for a step by step guide on how to achieve a range of looks

Help Line

If you have any additional questions about using the 1600W Hairdryer, please call the Sunbeam help line in Australia on 1 800 025 059. In New Zealand please call 09 912 0747.

Care and Cleaning

- Turn your hairdryer off after use. Always turn the power OFF and remove the plug before cleaning.
- Do not immerse the hairdryer in water or any other liquid.
- To clean the exterior, simply wipe over with a dampened cloth and wipe dry.

To clean the Removable Cover

- Detach the rear cover by pressing the rear cover release switch.
- Remove any hair and lint from the grille.
- To replace the rear cover, simply click back into position.
- Clean the inside of the cover regularly to maximize the long life of the motor.
- Do not wind the power cord around the hairdryer as this may strain and damage the wiring.

'Sunbeam' is a registered trademark
of Sunbeam Corporation.

Made in China. Due to minor changes in design or
otherwise, the product may differ from the one shown
in this leaflet. Backed by Sunbeam's 2 Year
Replacement Guarantee and National Service
Network.

© Copyright. SUNBEAM CORPORATION LIMITED 2002.

(INCORPORATED IN N.S.W.) A.C.N. 000 006 771

For more information or advice on this or any other
Sunbeam appliance, visit www.sunbeam.com.au or
contact the Sunbeam Consumer Service Line.

Australia 1800 025 059

New Zealand (09) 912 0747.



Consumer Hotline

Australia

1800 025 059

New Zealand

(09) 912 0747

Consumer information:

1800 025 059 or www.sunbeam.com.au

 is a registered Trademark of Sunbeam Corporation Limited. ACN 000 006 771.

© Sunbeam Corporation Limited 2002.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>