

Salon Technique[®] Wet to Dry Straightener with Ionic Technology

Instruction Booklet WD5800 / WD5810



Contents

Sunbeam's Safety Precautions	1
Features of your Wet to Dry Straightener with lonic Technology	4
Using your Wet to Dry Straightener with lonic Technology	6
Help Line	9
Care and Cleaning	9

تأكد من تفيَّم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

كارى بكنيد كه احتياطهاي بالا حتماً درك بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันอี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Accertatevi che le suddette norme di sicurezza siano

Xin kiểm chắc rằng những biện pháp làm an toàn

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR WET TO DRY STRAIGHTENER WITH IONIC TECHNOLOGY

- This hairstyler must not come into contact with water or any other liquid.
- Always switch off your hairstyler at the power outlet and remove the plug when not in use.
- Do not place on a soft surface such as a bed or pillow. During use, rest the styler on a hard, flat surface.
- Do not store or use your hairstyler near tubs, basins, baths or other vessels containing water or any other liquid.
- When the hairstyler is used in the bathroom, unplug it after

use as the proximity of water presents a hazard even when the unit is switched off.

- Do not touch the heating plates when in use as they will become extremely hot.
- Do not use this hairstyler if hair is treated with flammable products such as hair spray.
- Do not use on hair extensions.
- This styler reaches very high temperatures very quickly. Once the styler is plugged in and switched on, DO NOT touch with your fingers. DO NOT allow the styler to touch the skin.
 WARNING – The vent holes must be held away from the

face and head as the steam escaping through them is very hot.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

DEvisional framally one Safet pupe canti Alls Vanuals Seatch And Download.

Sunbeam's Safety Precautions

Sunbeam are very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:


- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug – do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.

- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible adult to ensure that they can use the appliance safely.
- Never leave an appliance unattended while in use.
- Young children should be supervised to ensure that they do not play with the appliance.


Sunbeam's Safety Precautions continued

- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- For safety reasons and to avoid maintenance by unskilled persons, some appliances are 'sealed' using tamperproof screws. Such appliances should always be returned to the nearest Sunbeam Appointed Service Centre for adjustment or repair if required.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.

Features of your Wet to Dry Stra

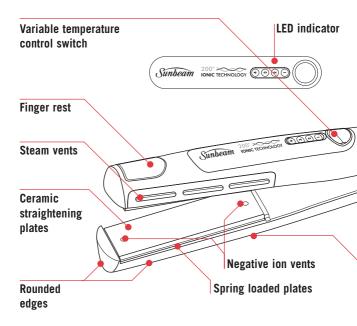

ightener with Ionic Technology

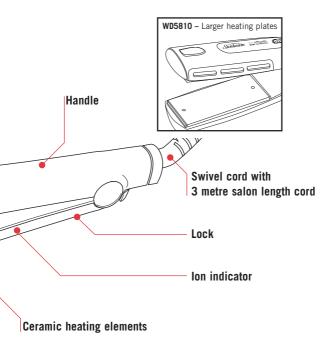

Using your Wet to Dry Straightener with Ionic Technology

- Before you start to style your hair, comb through so that there are no tangles.
- For best results, towel dry hair. Do not use on dripping wet hair.
- Plug in to a suitable supply and switch on. The top neon green light will come on. This is the hottest setting at 200 degrees.
- There is no need to pre heat the styler. The styler will get very hot very quickly so do not touch with your fingers.
- Apply a styling lotion. We recommend PPS professional products.
- Beginning at the back, use clips to section the hair. Take a section

approximately 5cms wide and comb or brush it through. Working from root to the ends, place the section between the plates and squeeze the handle shut. Be careful not to touch your skin.

- Hold the styler in place for 3 to 5 seconds depending on your hair type (3 seconds for fine hair and up to 5 seconds for thicker hair).
- Once the hair is heated, carefully slide the styler along the direction of separated hair making sure that the hair is heated and straightened all the way to the ends.

Using your Wet to Dry Straightener with lonic Technology continued

- Select another section of hair and repeat the process until all the hair has been straightened.
- Finish with a few drops of D Frizz Smootheez Serum from PPS.
- Switch off the appliance and remove the plug from the power outlet. Allow to cool completely before storing.
- Please note that your styler can be used on dry hair.

Changing the temperature settings

- When you plug in and switch on, the styler will automatically set at the hottest setting of 200 degrees (setting 4).
- If you wish to use a lower setting, push the temperature control switch.

This will reduce the temperature to 175 degrees (setting 3).

- Pushing the switch again will reduce the temperature to 150 degrees (setting 2).
- Pushing the switch again will reduce the temperature further to 130 degrees (setting 1).
- Pushing the switch again will turn the unit off.
- To increase the temperature, switch the unit back on.
- Allow 30 seconds for each setting to reach the correct temperature.
- We recommend that you do not use a higher temperature than necessary to straighten your hair. Start on a lower setting and move up if required.

Using your Wet to Dry Straightener with lonic Technology continued

sound and see steam. This is normal as the styler dries your hair.

Setting $1 = 200^{\circ}$ C Setting $2 = 175^{\circ}$ C Setting $3 = 150^{\circ}$ C Setting $4 = 130^{\circ}$ C

Ionic Technology

- The built-in ionic generator automatically produces a constant stream of negative ions whenever the styler is switched on.
- The ion indicator light will light up whilst your styler is in use.

Creating Flicks and Curls

• Once the hair is heated, as you work towards the end of the section of hair, lift the styler up and out to • For a more choppy look, choose pieces at random.

Auto off function

- For added safety, your hairstyler will automatically switch off after approximately 45 minutes.
- After 44 minutes the LED will flash to indicate that you have one minute of styling left before the appliance switches off.
- If you want to continue styling, simply switch off at the socket and then on again.

Please note that this is an added safety feature. Always switch off after use and unplug from the mains.

Help Line

If you have any additional questions about using the Wet to Dry Straightener with Ionic Technology, please call the Sunbeam help line in Australia on 1800 025 059. In New Zealand, please call 0800 786 232.

Care and Cleaning

- After use, remove the plug from the power outlet and allow the hairstyler to cool before storing.
- The ceramic plates and the outside of the styler can be wiped with a soft cloth.
- Do not wrap the cord around the appliance when not in use.
- Store in a dry place.



Consumer Hotline

Australia 1800 025 059

New Zealand 0800 786 232

www.sunbeam.com.au

'Sunbeam', is a registered trademark of Sunbeam Corporation. Made in China. Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet. Backed by Sunbeam's 2 Year Replacement Guarantee and National Service Network.

© Copyright. SUNBEAM CORPORATION LIMITED 2005.

(INCORPORATED IN N.S.W.) A C.N. 000 006 771

Sunbeam Corporation is a division of GUD Holdings Ltd.

For more information or advice on this or any other Sunbeam appliance, visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Australia 1800 025 059 New Zealand 0800 786 232.

08/05



is a registered Trademark of Sunbeam Corporation Limited. ACN 000 006 771.

Corporation Limited 2005. All Manuals Search And Download.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com