

# Sungale

Mini eReader/Tablet

Model: ID430WTA

User Manual



# Contents

<b>Safety Precautions</b>	-----3
<b>Product Overview</b>	-----4
Functions of Button and Port	
Battery Charge	
Accessories	
<b>Getting Started</b>	-----6
Application Introduction	
Status Icon Briefing	
Touch Screen Operation	
Home Screen Management	
Keyboard Use Guide	
<b>Connectivity</b>	-----9
Insert Micro SD Card	
Connect to PC	
<b>Setting</b>	-----11
Wi-Fi Setting	
Language Setting	
Screen Rotation	
Clear Data History	
<b>Network Functions</b>	-----12
Browser	
Facebook	
YouTube	
Market	
Email	
<b>Tools</b>	-----15
Sound Recorder and Touch Calibration	
<b>Troubleshooting</b>	-----16
<b>Warranty</b>	-----17

## Safety Precautions

Please read the safety precautions and user manual carefully before using your device to ensure proper use.

Images and screenshots used in this user manual may differ in appearance from the actual product.

Content in this user manual may differ from the product, or from software provided by service providers or carriers, and is subject to change without prior notice.

Keep your device dry.

Do not use or store your device in dusty, dirty areas.

Do not place your device on slopes. If your device falls, it can be damaged.

Do not place your device in too hot or too cold areas.

Do not place your device with metal objects such as keys and necklaces.

Do not place your device near magnetic fields.

Do not place your device near or in heaters, microwaves, hot cooking equipment, or high pressure containers.

Simply put, do not drop, throw, or sit on your device, for obvious reasons.

Do not use your device near other electronic devices.

Please do not use your device in thundery days.

 
Keep your device away from liquid substance.

For advanced operations such as Dev tools, it is suggested to be operated by professional engineers.


## Product Overview

This section is to tell you functions of each button and port, battery charge and replacement.

### Functions of Button and Port


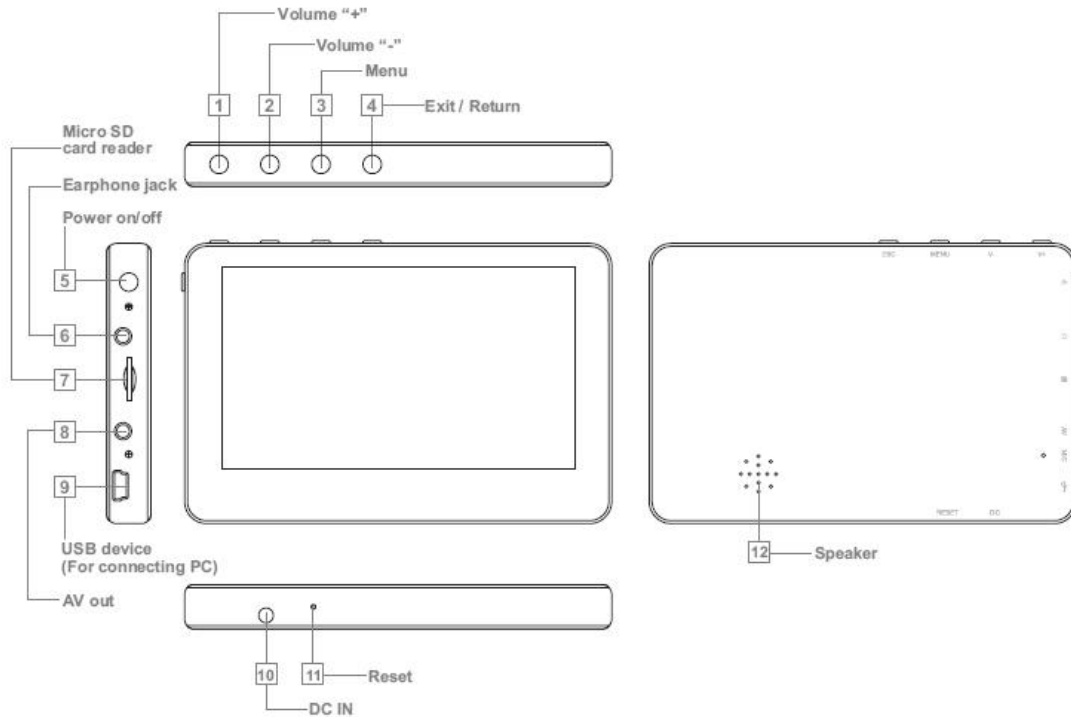


### Battery Charge and Replacement

Use the power adapter or USB cable to charge the battery of your tablet. The indicator icon  will show flickering green light when charging and still green color when charging finished.

### Accessories

  Accessories are listed as following:

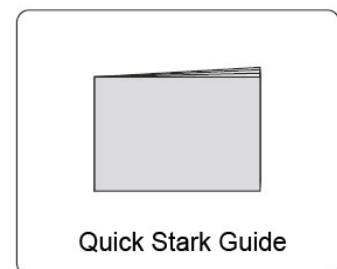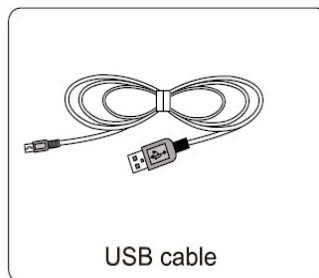

## Getting Started

This section is to introduce general application of main menu, touch screen, keyboard, etc. Press and hold the power button for more than 3 seconds to boot up.



Slide the Lock icon to unlock the screen, then you will obtain the main menu as below:



Now, you can touch on the icons to enjoy your photos, music, video, ebooks, games..... Touch the middle icon listing on the right screen, you can enjoy more APPs.

### Application Introduction

Music: Meditate in your beloved songs.

Moon+ Reader: Read ebooks in various formats.

Browser: Browse websites on the internet, search content you want to know.

Maps: Search for maps.

YouTube: Watch YouTube videos updated everyday, register or log in to YouTube.

Facebook/Twitter: Share your photos and other information with your friends

Market:	Android market for you to download thousands of applications.
Media Player:	Play your favorite videos.
Notepad:	Arrange your schedule and events.
Wifi Setting:	Configur the wifi network and connect to Wifi.
Library:	A collection of popular reading tools like FBReader, IReader, RepliGo Reader, Kobo, Borders, Amazon Kindle, Wattpad, Ebook, etc.
Gallery:	Manage and play pictures, music and video.
Documents:	View and edit WORD, EXCEL, SLIDESHOW and PDF files.
File Manager:	Manage the files in the memory or SD card.

## Status Icon Briefing



Shows the menu under an interface.



Means the machine is running several Apps.



Means that the router is available and shows the signal intensity.



Means that your battery is being charged.



Shows that you are downloading some applications or files.



Means that your device is connecting with computers.



Adjust volume.



Exit or Return.

## Touch Screen Operation

For better performance of the touch screen, please remove the protective film first.

Select: Tap an icon to select and run an application.

Slide: Use your finger or stylus to gently slide on the screen to up or down, right or left horizontally to move items on the screen. If you enter an item by mistake while

sliding on the screen, just tap the  to go back to last interface.

Drag: Touch and hold the icon for about 2 seconds and move your finger or stylus to the destination.

Lock: Press power button once to lock the screen.

## Home Screen Management

1. Touch and hold any application icon to create shortcut icon on home screen
2. Touch and hold the shortcut icon until there is a trash can icon appearing at the right edge of your screen, drag the application shortcut icon to the trash can and it will be deleted from your home screen.




Note: You can only create shortcut icon of an application but not a folder contains more than one application.

3. You can create 4 home screens at most. If you want to go to another home screen, just tap the blank area of the screen and slide left or right.

## Keyboard Use Guide



Tap  to switch between lowercase letters and capital letters.

Tap  to switch to numbers and symbols. Tap “ALT” (which is former ) for more symbols. Tap  to delete data.

## Connectivity

This section is to tell you about connecting with external device such as Micro SD card and computer.

### Insert Micro SD Card

Insert a Micro SD Card into the card slot with the label side face up, push the card until it locks into place, and “preparing SD card” will appear on the upper left corner of the screen.

When you want to remove the Micro SD card, press the card in the slot and it will pop up, take it out gently.

 
Note: This device supports Micro SD Card up to 32GB.

### Connect to PC

After booting up, connect the device to computer with the USB cable, tap the white blank status area at the top of the screen and slide it downwards as following:

April 25, 2011

2:21 AM

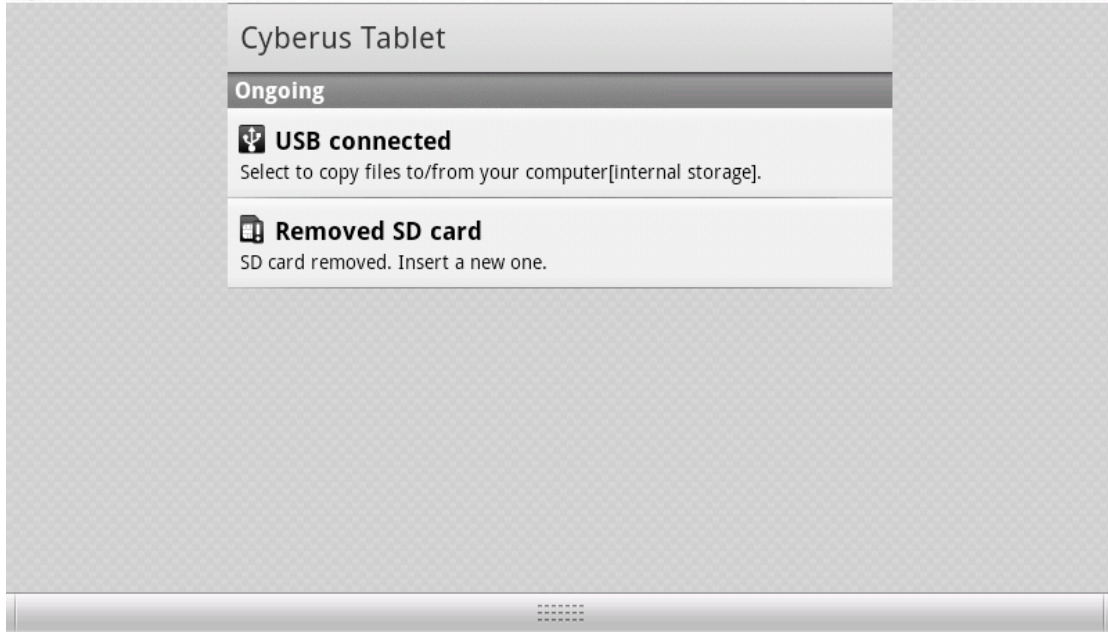

Tap "Select to copy files to/from your computer." and then "Turn on USB storage' to manage files between your computer and internal memory.

Note: For the first time you connect this device to your computer, you might be asked to install driver of your device so that it can be recognized by your computer. Please follow the installation guide or contact your computer service provider for help.

Please safely remove your device from computer after file management to prevent data lose.


## Setting

 This section is to tell you settings like Wi-Fi, language, screen rotation, and how to clear data history.

### Wi-Fi Setting


Starting from the main menu,

1. Touch "wifi Manager"

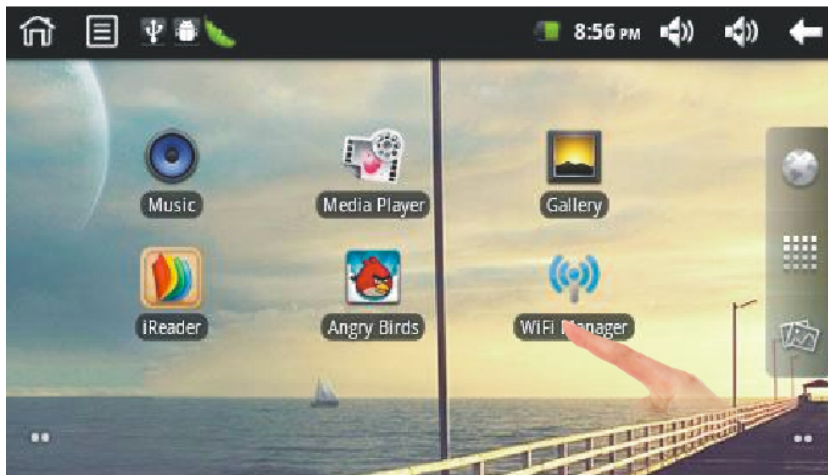




 
2. Touch “wi-Fi”and “wi-fi setting” on next line

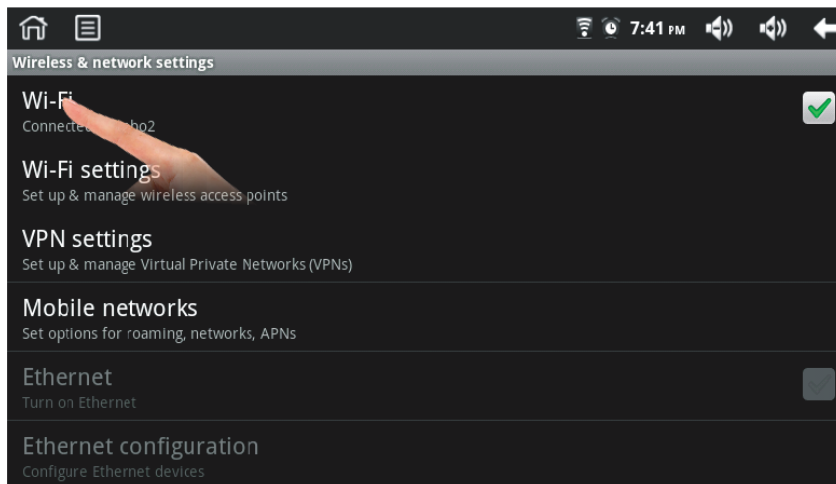

 
3. Your device will search wireless router in your surrounding, and your router will appear on the screen, touch on Your Router.

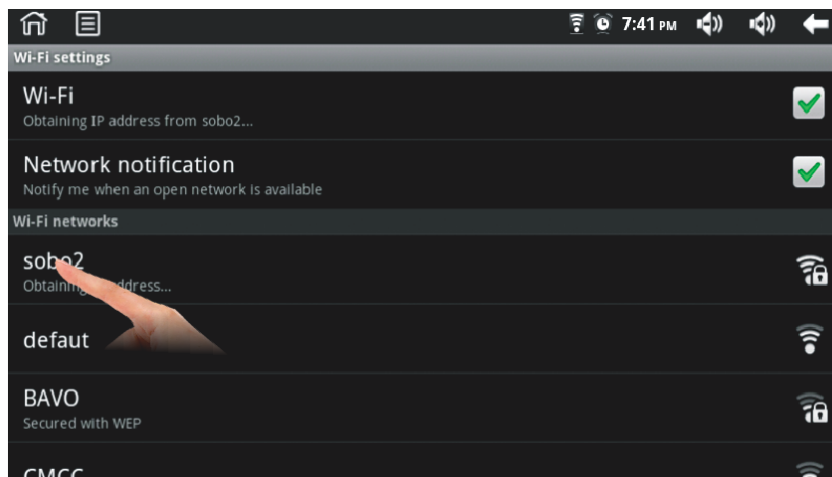

 
4. If you did not set a password for your router, the device will link to internet automatically. If you have set a password for your router, the below square will appear on screen, touch on the Password bar,

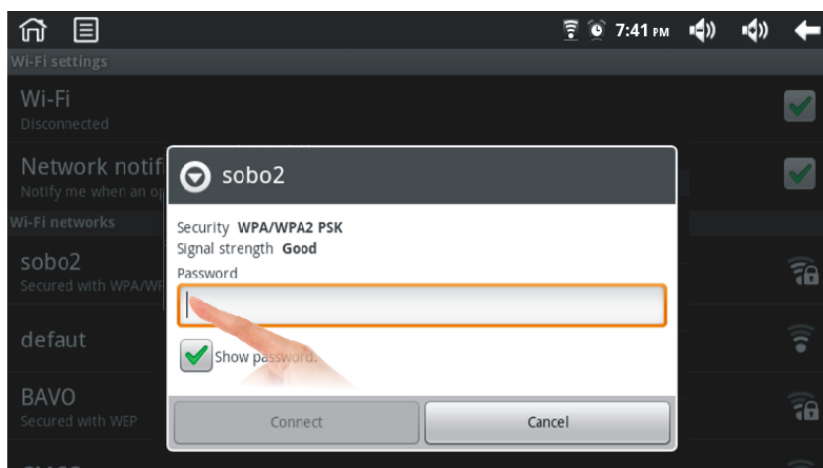

 
5. Soft Keyboard will appear on screen, input the password you set for your router, then, touch “connect” on the screen,

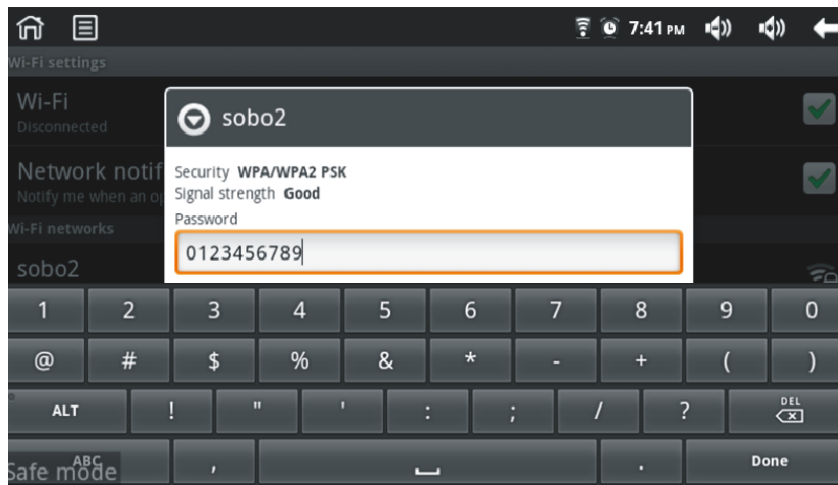

 
Now, you can see your router has been connected, which means your device has been linked to internet. You can enjoy all the networked functions.

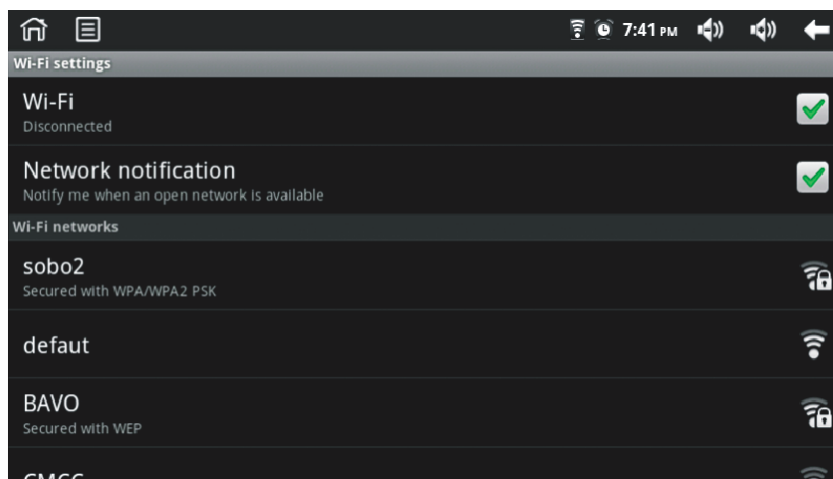

## Language setting

In the home screen, tap “” → tap “Settings” → slide and tap “Language & Keyboard” in the eighth row → tap “Select language” → slide downwards or upwards to find the language that you want and tap the language.

Tap  to return after setting.

## Screen Rotation

This device has built-in motion sensor to automatically adjust screen display between portrait and landscape.


If you want to default this function, please set as following:


In the home screen, tap “” → tap “Settings” → tap “Display” → tap “Auto-rotate

screen” to turn the green tick to grey.

You may also find “Screen timeout” in the “Display” to set screen backlight time.

## Clear Data history


If you want to clear data that have been made on your Cyberus Tablet, go to “” → “Settings” → “Applications” → “Manage applications” → tap the application whose data that you want to clear → tap “Clear data” and “OK” and the related data will be deleted from your device.

If you want to clear all operation data, go to “” → “Settings” → “Privacy”→ “Factory data reset”→ “Reset device”→ Erase everything” and your device will be reset.

## Network Functions

This section is to tell you some operation about Browser, Facebook, YouTube, Market and App store, etc. Please note that all these applications need Wi-Fi connection, for how to link to Wi-Fi, please refer to “Setting→Wi-Fi Setting” section.

### Browser


When you have opened a web page, tap “” touch key to find menus like “Bookmarks,New Window, Refresh, Forward and More”.



Tap “More” to find more functions like “Find on page , Select text, etc”.


### Facebook

Tap “Facebook” and login or sign up if you don’t have an account.

Tap “” touch key to find some information about your facebook.

If you want to clear your facebook data, please refer to content in “Setting→Clear Data History” section.

## **YouTube**

Tap “YouTube” to view videos, and tap “” touch key to find more operations like “Upload, My account, Categories, etc”.

## **Market**

In the home screen, tap “Market” → tap “Next” to set up your google account.

Sign in your google account or creat a google account and then sign in.

After a few minutes, it will enter into interface of “Android Market Terms of Service”. Tap “Accept” after reading and your accept the terms to enter Market. There will be three options listed: Apps, Games and Downloads.

Tap “Apps” to download and install apps from the Market.

Tap “Games” to download and install games from the Market

 
Tap “Downloads” to find the apps that have been downloaded to your device.

## **Email**

Set up your email accounts. You will need to contact your email server supplier for your email’s POP3 and SMTP server related information, some of which can be found on the internet. Take gmail as a sample, search content “gmail pop3 smtp server” on internet, you will find gmail’s pop3 server is “pop.gmail.com”, related port is 995. Need “SSL” security.


SMTP server is “smtp.gmail.com”, related port is 465 if use SSL security. If choose TLS security, related port will be 587.

In the main menu, tap “Mail”→tap “Next”→Input your Gmail account and pass word→Tap “Manual setup”→tap “POP3 account” and you will enter into an interface similar with the following picture.

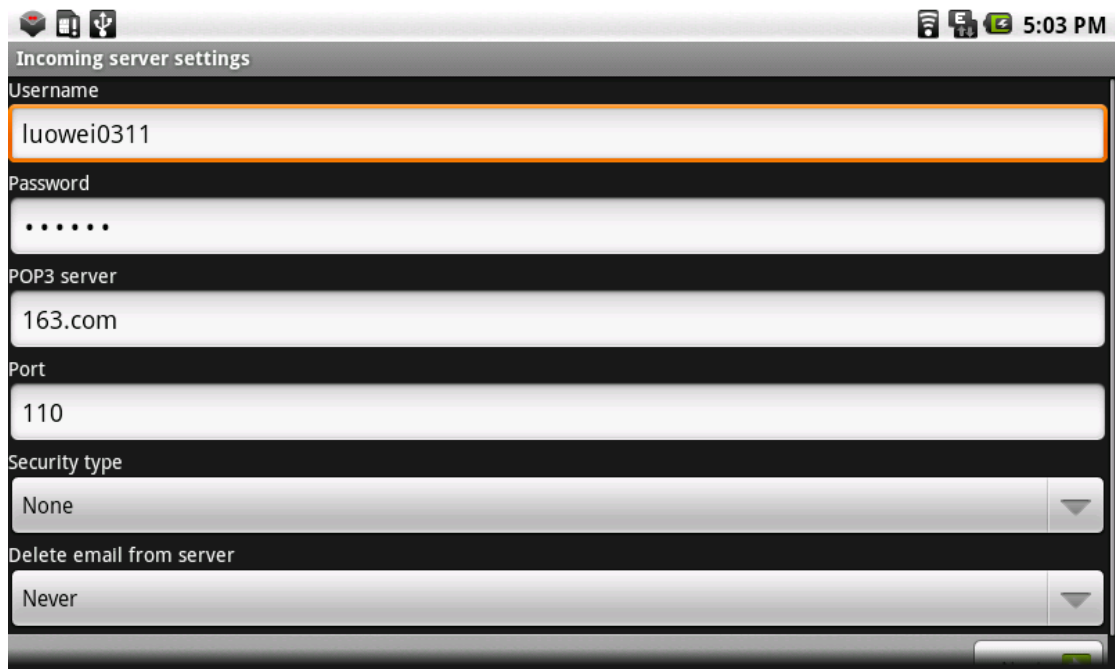

Check your username to see if it has been filled completely with “@gmail.com”. If not, please add “@gmail.com” after your gmail account.

 
Tap “gmail.com” under POP3 server item to change it to “pop.gmail.com”. And then change port to “995”, tap item “Security type” to choose “SSL if available” and tap “Next” to set up SMTP server. The interface is similar with the following picture.

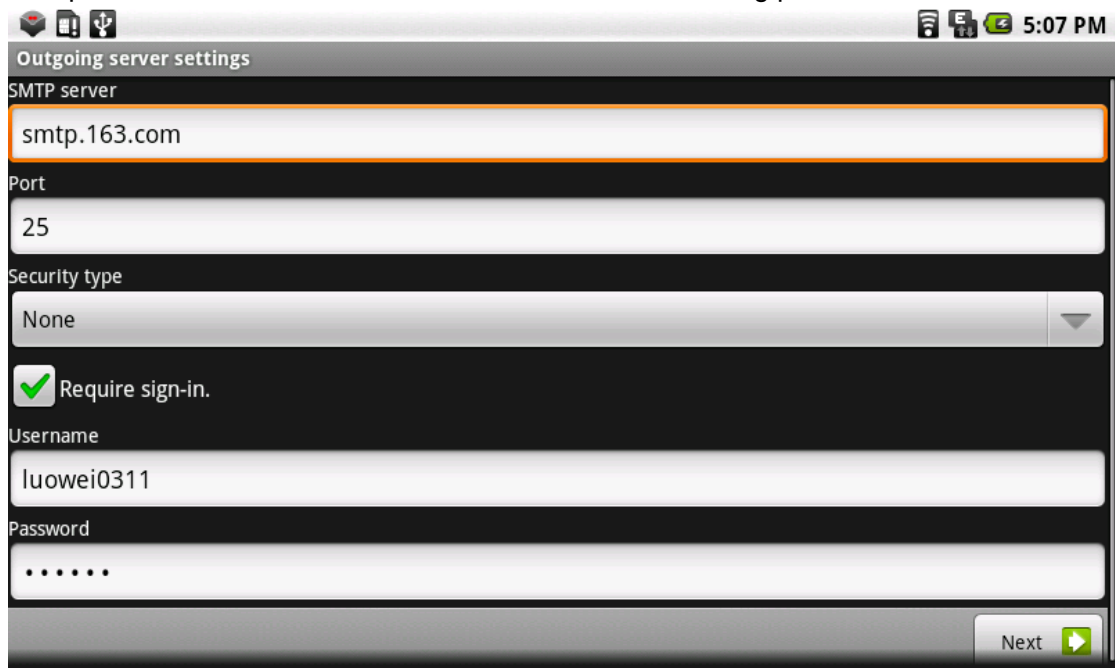

Change “SMTP server” to “smtp.gmail.com” and “port” to “465” or “587”, choose security type to “SSL(if available)” or “TLS(if available)” respectively.

Then tap “Next” to finish setting. It will enter into your email account after a few minutes. Then you will need to give this account a name and input the name which will appear on the email that have been sent out by you.



Tap “☰” touch key to find more operations like composing a message.

When writing a message, tap “” touch key to get more operations like “Add Cc/Bcc”,etc.

If you want to clear your email account and related data, please refer to “Clear data history” in “Setting” section.


## Tools

This section is to tell you how to operate Sound Recorder and Touch Calibration.

**Sound Recorder:** In the home screen, tap “ Applications” and find “Sound Recorder” → tap “Sound Recorder” to enter, and tap  to start recording. Tap  to stop recording. Tap “Use this recording” and the record will automatically be stored. Go to Multimedia in the home screen, tap “Music player” to find the records.

### Touch Calibration:


In case you find your touch on the screen can not create a corresponding action, or respond wrongly, you need to calibrate your screen.

Touch on “  “/ “Touch Calibrator”/, then, touch on each of the “+” marks appeared in order on the screen, after that, you will get the APP list Menu again, now, the screen calibration ended.

## Trouble shooting

FAQs:


Q 1 : Why can't I link to Wi-Fi?

A: Please check if you have turned on Wi-Fi. Go to “  ”→ “Setting”→ “Wireless controls” → tap “Wi-Fi” to turn it on.

Please check if you have input the right password.

For more Wi-Fi related questions, please go to [www.sungale.com](http://www.sungale.com) and find Support→ Wi-Fi related FAQ.

Q2 : Why can't I install applications downloaded from the Market?

A: Please check your settings. Go to “  ”→ “Setting”→ “Applications”. Check if there's a green tick after Unknown sources. If there's not, tap “Unknown sources” to turn the tick green.

Q3: How to find more operations when running an application?

A: Tap “  ” touch key.

## **Support:**

1. Visit the support site.

For manual download and FAQs: [www.sungale.com](http://www.sungale.com)

More supports about WIFI: [www.sungalewifi.com](http://www.sungalewifi.com)

2. Contact Sungale Support team

Toll Free Call in the USA: 800-473-5156

Service email: [info@sungale.com](mailto:info@sungale.com)

## **LIMITED WARRANTY**

The limited warranty set forth below is given by the manufacturer with respect to Sungale brand DPF players and other consumer electronics products purchased and used in the United States of America. The manufacturer warrants this product against defects in material or workmanship as follows:

**LABOR:** For a period of ninety (90) days from the date of purchase, if this product is, defective, the manufacturer will repair or replace the product, at its option, at no charge. After this ninety (90) days period up to one year, a labor charge of US\$30.00 will be charged for each service.

**PARTS:** For a period of one year from the date of purchase, the manufacturer will supply, at no charge, new or rebuilt replacement parts in exchange for defective parts. After this one year period, the manufacturer will charge the new or replacement parts.

This warranty does not cover: (1) customer instruction, installation or set up; (2) cosmetic damage or damage due to accident, misuse, abuse, or negligence; (3) commercial use of the product; (4) modification of any part of the product; (5) damage due to improper operation, improper maintenance, or connection to an improper voltage supply; (6) damage due to an attempted repair of the product by anyone other than a facility authorized by the manufacturer to service the product; (7) consumables (such as fuses and batteries).

This warranty is valid only in the United States.

This product must be accompanied by a copy of the original retail purchase receipt. If no proof of

purchase is attached, the warranty will not be honored and repair cost will be charged.

This warranty is valid with attach written documentation detailing the complaint to the outside or inside of the carton.

This warranty is invalid if the factory applied serial number has been altered or removed from the product.

The manufacturer reserves the right to modify any design of this product without prior notice.

To obtain warranty service, you must deliver the product freight prepaid, in either its original packaging or packaging affording an equal degree of protection, plus proof of purchase, to

**Service Center**

13941 Central Ave, Chino, CA91710

Tel: 800-473-5156

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THE SERVICE CENTER SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>