

Mr. Induction®

INDUCTION COOKTOP INSTRUCTION MANUAL



SR-1851



SR-1881 B/W/S

LIST OF SUITABLE/UNSUITABLE COOKWARE

<p>Suitable Cookware</p> <p>Iron, cast iron, stainless steel and enameled wares with diameter over 12cm(4.5in) are recommended.</p> <ul style="list-style-type: none"> Stainless Steel Cookware Iron/Steel Fry pan Cast Iron pot Iron pan Iron/Steel Tray Enameled ware 	<p>Unsuitable Cookware</p> <p>Ceramic, GLASS, copper, bronze, aluminum bottom, or bottom of less than 12cm(4.5in) cookware.</p> <ul style="list-style-type: none"> Copper, bronze and aluminum cookware Pans with legs or with a concave bottom Ceramic cookware (without special coating) Glass cookware Bowl-shaped cookware Cookware with diameter less than 12cm(4.5in)
--	--

Maintaining the product

Unplug the cord before any cleaning is done. To clean the ceramic plate, use a sponge with dishwashing liquid then use clean damp towel to wipe clean.



Warning

Do not place the cooktop directly in water to soak. This will damage the cooktop.

Under the What to Check for if the Cooktop is not Working Properly	<ul style="list-style-type: none"> Is the unit plugged in correctly? Are the buttons broken? Is it a breakout? Any sounds when pushing buttons?
If Buttons Don't Work:	<ul style="list-style-type: none"> Does the cookware fit the cooktop? Is the cookware in the center of the cooktop? Is the surrounding temperature high? Is the air inlet blocked? Was it unattended for more than 2 hours? Is the voltage too low. Is an extension cord being used? Are other electric appliances in use at the same time? Is the plug too hot?
Warm light flashing and no heat:	<ul style="list-style-type: none"> Is the fan not working properly? Is the air inlet blocked?
When Cooktop suddenly stops:	<ul style="list-style-type: none"> Is the surrounding temperature high? If none of the above, then it will operate normally when the cooktop has adjusted its temperature.
When Red Light Flashes:	
Heat light keeps flashing:	

SPECIFICATIONS

Model	SR-1851	SR-1881 B/W/S(SILVER)
Voltage	120V~ /60Hz	
Consumption	1200W	
Dimension	13.78 X 11.81 X 2.68 inches	
Weight	5.95lbs	
Power Range	260~1200W	
Cord Length	6.56 ft	
PROTECTION DESIGNS	Overheat Protection, Automatic Hazard Detection, Circuit Protection Sensor, High Voltage, 20A Fuse, Small Object Heat Prevention, Thermostat, Pan Material Detection	

WARRANTY

If this product is found to be defective as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired or replaced at free of charge.

Please DO NOT return to your retail store. Please contact our service Dept. Directly with any technical assistance. Contact us toll free at : 1-800-330-0388 or

E-mail : service@sunpentown.com

Proof of purchase (or copy of) must be presented along with the unit when sending in for repair.



 
New Jersey
TEL:(201) 678-9828
FAX:(201) 678-9839
E-mail : service@sunpentown.com

Los Angeles
TEL:(626) 581-1818
FAX:(626) 581-1398

San Francisco
TEL:(510)487-6288
FAX:(510)487-5552

Control panel and its Function

SR-1881

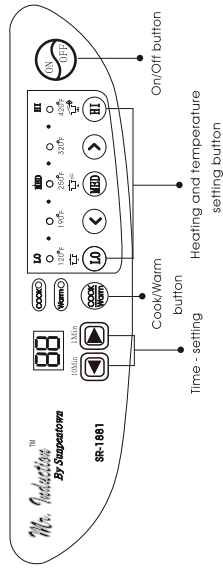

To Use The Cooktop

Power On/Off Function

Press on/off key to turn on the power. Press any of the temperature keys to start cooking. The fan start to indicate the cooktop is in standby mode. The power will shut off in 10 seconds if the temperature key is not selected. To turn off the cooktop. Push the on/off button again. The fan will run for 30 seconds after the cooktop has been shut off to cool the inside of the cooktop.

Cook / Warm Function

The function of pushing the cook/temp button is "cook", will add heat and the "warm" will keep the temperature that was selected. The cooking and warming power is divide into 9 sections. 1 being the lowest and 9 being the highest power. There are 5 lights indicating the amount of power. The 1st light for low. The 3rd light for medium. The 5th light for high.

*If is cook or warm light flashes either the cookware is not suitable or there is was no cookware placed on the unit.

Time Setting Function

The Time Setting Function is designed to set cook time. This function is preceded by selecting Cook/Warm function and then set the cook time.

- Press 1Min. key to set cook time from 0 to 9 minutes.
- Press 10Min. key to set cook time from 10 minutes to 90 minutes.

When the timer is set, the minute key indicator will flash. Each flash count as a second and the cooking time decrease as the indicator light continue to flash. When the time is up, the unit will shut off immediately.

Cook / Warm Setting

The Warming function is conducted by selecting this button. The function has 3 temperature settings L/M/H (120F/250F/420F).

 
- Press < key to decrease the heating temperature.
- Press > key to increase the heating temperature.

Under Safety Protection

- Use at least 3.2 inches or above in diameter cook wares on the cooktop. The reason for this is so that utensils in the pot will not heat and cause danger.
- If utensils are on the cooktop, the "keep warm" light will blink and the unit will turn off after 10 minutes.
- Under pressure Protection
If the voltage is too high, the temperature will decrease to prevent high temperature from over heat. A light will flash warning to check the cooktop.
- Automatic Shut-Off Function
If the user forgot to turn off the cooktop, the cooktop will automatically shut off in 2 hours.
- Overheat Protection
When the cooktop is in use, the heat will decrease automatically when it reaches 446F to prevent it from over heat. The light will switch from heat to keep warm function. When the temperature of the cookware decreases, the cooktop will automatically return to heat function.
- The cooktop will decrease in temperature if it overheats. It will restart again once the cooktop have lowered its temperature. A light will blink to warn user to check the cooktop.

Under the Key points before using the cooktop

Before Use :

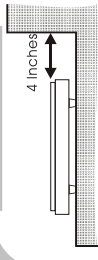

Place cooktop on flat surface, and keep away from all objects. For best results, leave at least 4 inches from all sides. When the air entrance or the air outlet is blocked, the internal temperature of the cooktop rises and may automatically shut off during cooking.



Keep away from gas range or coal oil stove. If the surrounding temperature is high, cooktop will stop heating.

During use :



Do not place a sealed can on the cooktop. It may explode.

 


If the cooking oil is not enough or an empty pan is left on the cooktop for too long, it will damage the cookware.

Please plug this cooktop in the correct 15 Amp outlet. Do not share the outlet with other appliances and make sure it is correctly plugged in.

Do not insert anything in the inlet of outlet in case of the electric shock.

Do not damage the ceramic plate. If the ceramic plate is broken, please turn off the unit and unplug the plug immediately.

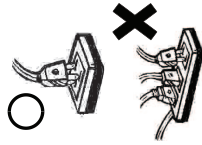

Important :

(Cookware must be used in order for the cooktop to work) If the electric cord is damaged, please contact our service center for a replacement.

- Although there's a safety protector function to protect the cooktop from over heating, please do not put any small metal objects on the ceramic plate. For example, knife, fork, spoon and cover. These types of item will generate heat if it is placed on the cooktop.
- Anyone using the Pacemaker should contact his or her doctor for authorizations before using this item. If the cooktop surface is broken, do not use this product. It may cause electric shock.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>