 
 
 





**EN**



# THOMSON

 u s e r  
m a n u a l

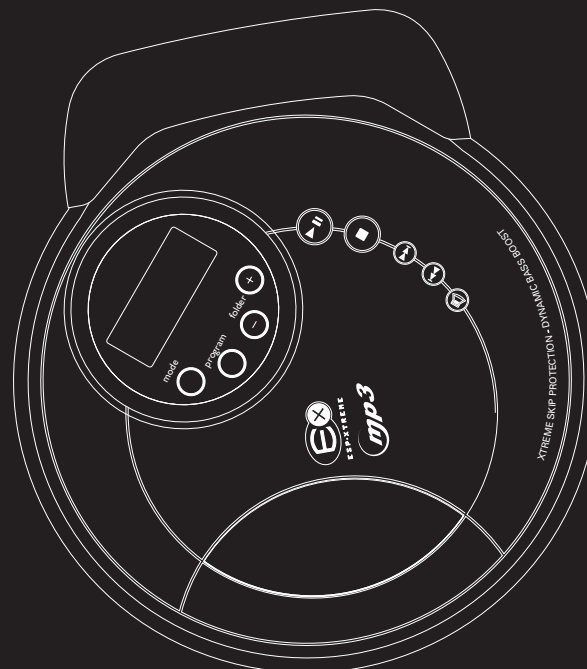


**THOMSON**  
46, quai Alphonse Le Gallo  
92648 Boulogne  
Cedex FRANCE  
[www.thomson.net](http://www.thomson.net)

55913240

**PDP2030**  
**PDP2035**

 IT IS IMPORTANT TO READ THIS INSTRUCTION BOOK PRIOR TO USING YOUR NEW PRODUCT FOR THE FIRST TIME.



# Safety Information

EN

## CAUTION!

Invisible laser radiation when open. Avoid exposure to beam. Class 1 laser product. This system must be opened only by qualified technicians to prevent accidents caused by the laser beam.

LASER  $\lambda = 780 \text{ nm}$ ,  $P_{\text{max}} = 5 \text{ mW}$

Rating Information: At bottom of the unit this unit comply with the existing requirements



In accordance with the rating plate of the unit, this unit complies with current standards concerning electrical safety and electromagnetic compatibility.



ADVARSEL  
 ØSYNLIG LASERSTRÅLING VED ÅBNING NÅR  
 SIKKERHEDSÅBRYDERE ER UDE AF FUNKTION.  
 UNGDÅ UDSÆTTELSE FOR STRÅLING.  
 VORSICHT!  
 UNSICHTBARE LASERSTRALUNG  
 WENN ABDECKUNG GEÖFFNET UND SICHERHEITS-  
 VERREGELUNG ÜBERBRÜCKT.  
 NICHT DEM LASERSTRAHL AUSSETZEN!

CAUTION - INVISIBLE LASER RADIATION  
 WHEN OPEN AND INTERLOCKS FAILED OR  
 DEFEATED. AVOID EXPOSURE TO BEAM.  
 ATTENTION - RAYONNEMENT LASER INVISIBLE  
 DANGEREUX EN CAS D'OUVERTURE ET LORSQUE  
 LA SECURITE EST NEUTRALISEE.  
 EXPOSITION DANGEREUSE AU FAISCEAU.

 


 
CLASS 1 LASER PRODUCT  
 LASER KLASSE 1  
 APPAREIL A LASER DE CLASSE 1  
 LUOKAN 1 LASERLAITE  
 KLASSE 1 LASERAPPARAT

WARNING-  
 ØSYNLIG LASERSTRÅLING NÅR DENNA DEL  
 ÅR ÖPPNAD OCH SPÄRRAN ÅR URKOPPLADE.  
 BETRÄKTA EJ STRÅLEN.  
 VARO!  
 AVAINTAESSA JA SOJALLUKUTUSOHITETTAESSA  
 OLET ALLTIIN NÄKYMÄTTÖMÄLLE.  
 LASERSÄTEILYLLE ÄLÄ KATSO SÄTEESSEEN.

 THE LIGHTNING FLASH AND ARROW-HEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.	<p><b>CAUTION</b>                  RISK OF ELECTRIC SHOCK                  DO NOT OPEN</p> CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.	 THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.
---	--	---

**WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.**





# Table of Contents

EN

## Safety Information

**Before you begin** ..... 2

**CD Player**

General Control ..... 3

Power Supply ..... 4

    AC Outlet Power Supply ..... 4

    Battery Power Supply ..... 4

    Recharge function ..... 4

The Display ..... 5

Listening to Compact Disc ..... 5

Playback ..... 5

Listening to a mp3 disc ..... 6

Folder selection ..... 6

Skip/Search ..... 6

Playmode ..... 6

Resume ..... 7

Skip/Search ..... 7

Pause ..... 7

Stop ..... 7

Bass Boost / EQ, setting ..... 7

Program ..... 8

    Edit Program ..... 8

    Select all files in a folder ..... 8

    Cancel Program ..... 8

    Enter/exit Program Mode ..... 8

Lock ..... 8

## More Information

Useful Advice ..... 9

Notes on CD-R/RW Discs ..... 9

Please Respect The Environment ..... 10

Headset Safety ..... 10

Technical Specification ..... 10

# Before you begin

 
## Unpacking Your Unit

You should have the following:


- one main unit
- one remote control (PDP2035 only)
- AC/DC power adapter
- one set of clip phones
- one user's guide

## How to Use Your Clip Phones (The e.clipz)


The right ear clip phone is labeled R while the left ear clip phone is labeled L.

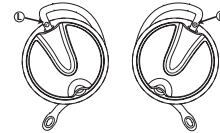

 
1. Pull the ear hook away from the ear pad slightly. You will hear a click sound.

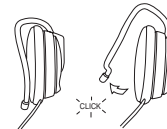

 2. Slide the ear hook behind the ear with the ear pad on the front of the ear. Rotate the clip phone so the ear pad fits closely with the ear.

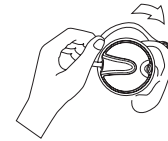

 
3. Lock the clip phone in place by pushing down on the top of the ear hook until it locks.

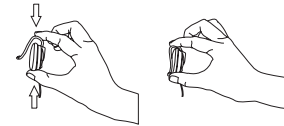

4. For best sound quality, make sure the earpad fits closely with your ear.



 
EN



# CD Player

EN
 
## General Control

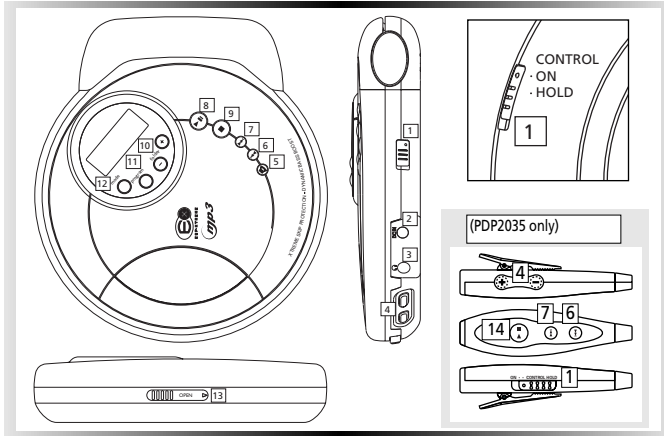

1. **control** switch - To lock or unlock the buttons.
2. DC jack - You can insert the adapter instead of batteries for indoor use.
3. Line Out / Headphones Jack / Remote control- Insert your headphones and remote control (PDP2035 only) here.
4. Volume buttons - To adjust the volume.
5. Bass boost - Selects Bass Boost and EQ. options.
6. ⏮ - Skip / search backward track
7. ⏭ - Skip / search forward track
8. ▶|| play/pause button - Press to play or pause CD.
9. ■ stop button- Press to stop CD playback, press and hold to turn off the unit.
10. folder + / - - Selects folder.
11. program button - Enters program mode.
12. mode button - For different playmode selection.
13. open switch - Slide to open CD door.
14. ▶■ play/stop button - Press to start or stop CD playback.

3

# CD Player

EN

## Power Supply

Model Number	AC/DC Adapter	Batteries
PDP2030 / PDP2035	5-4090A (Included) (230V 50Hz)	2 x 1.5V IEC R6 (UM3) (Included)

### AC Outlet Power Supply

You can power your CD player with an AC/DC adapter. Refer to the table for details of the operating voltage. AC/DC adapter is purposed for indoor use in dry rooms only. Remove the jack from the device to use it with the batteries.



**Note:**  
Power is fed to the unit even when it is not functioning. To cut the power supply off, the AC/DC adapter must be unplugged.

### Recharge function

To charge Ni-Cd batteries:

1. Insert 2 rechargeable batteries into the battery compartment on the main unit.
2. Connect the main adapter.
3. Press **stop** ■ on the unit to start recharging. An battery indicator will be displayed when recharging is in progress.
4. Unplug the AC/DC adapter to stop recharge, or press **play** to stop recharge and enter playback mode directly.

 
### Battery Power Supply

Refer to the table for details of the batteries required to operate your unit.

4

## CD Player

### EN The display

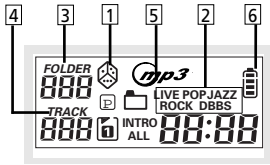

1. Random Playback
2. Displayed when different EQ. setting is set.
3. Folder number
4. Track number
5. Displayed when in mp3 mode
6. Battery Indicator.

\* For different playmode icons, please refer to the playmode section.

### Listening to a Compact Disc

Slide the **open** switch to the right to open the door. Insert a disc and press lightly on the centre to lock. Close the door.

### Playback

Press **play/pause** ►|| button on the main unit to start playback.

**Rd DISC** will appear on the display. Then, the total number of tracks and time of the CD will be displayed. If the disc compartment is empty or the disc cannot be read, No Disc will appear on the display.

The **Electronic Shock Protection\*** (ESP) system prevents sound interruptions when impacts or vibrations occur. Electronic anti-shock consumes less power and increases the battery life. Therefore, the **ESP** function is always **ON**. After many successive impacts, the buffer might be emptied causing a brief sound interruption for the memory to reload.

**ESP 45 seconds buffer** - Press **play/pause** ►|| on the main unit to power on the unit. The display will show 45 sec.

**ESP 10 seconds buffer** - For better listening quality, press **mode** while pressing **play/pause** ►|| to turn the unit on. The display will show 10 sec.

## CD Player

### Listening to a mp3 Disc

Press **play/pause** ►|| button on the main unit to start playback. **Rd DISC** will appear on the display. Then the total number of folders and files will be displayed. If the disc compartment is empty or the disc cannot be read, No Disc will appear on the display.

### Folder selection

Press **folder** - to skip to the previous folder.  
Press **folder** + to skip to the next folder.

### Skip / Search

Press ◀ to skip to the previous file.  
Press and hold to search backward in a file.  
Press ▶ to skip to the next file.  
Press and hold to search forward in a file.

### Playmode

You can replay the entire CD or one track as many times as you wish as well as listen to the beginning of each track for 10 seconds.

In CD mode, press **mode** repeatedly to

- ▣ Play the current track repeatedly.
- ▣<sup>ALL</sup> Play the entire CD repeatedly.
- ⊗ Play tracks randomly.
- ⊗ Play random track repeatedly.
- ▣ Play the beginning of each track for 10 seconds.

In mp3 mode, press **mode** repeatedly to

- ▣ Play the current file repeatedly.
- ▣<sup>ALL</sup> Play the entire disc repeatedly.
- ▣ Play the current folder repeatedly.
- ⊗ Play all files randomly.
- ⊗ Play all files in the current folder randomly.
- ⊗<sup>ALL</sup> Play random file repeatedly.
- ▣ Play random file in the current folder repeatedly.
- ▣ Play the beginning of each track for 10 seconds.

## CD Player

### EN Resume

When you power off the unit (without disconnecting power supply), resume is automatically activated. It stores the following settings and modes: Mode (Repeat/Repeat All/ Random) and EQ setting (Bass Boost). When play mode is on again, the unit resumes to the original settings.

To automatically store current track when you stop CD playback, press **stop** button twice.

### Skip /Search

Press **⏮** to skip to the previous track. Press and hold to search backward in a track.

Press **⏭** to skip to the next track. Press and hold to search forward in a track.

### Pause

During playback, press **play/pause** **▶||** on the main unit to pause playback. The minutes and seconds flash when interrupted.

### Stop

Press **stop** **■** on the main unit.

### Bass Boost / EQ. setting

Press bass boost **🔊** repeatedly to select NORMAL, DBBS, ROCK, JAZZ, POP and LIVE.



#### Note:

To prevent excessive battery consumption, the unit switches off automatically in all modes after 30s if no key has been activated.

## CD Player

### Program

This function lets you listen to the tracks you selected in the order you want. You can program up to 30 tracks. The CD player must be in Stop mode.

1. Press **program** to enter program mode. P icon will flash in the display.
2. Press **folder + / -** to select a folder. (mp3 disc only)
3. Press **▶▶** or **⏮** to select a track to store.
4. Press **program** to confirm your selection.
5. Repeat steps 2 and 3 to store another track.
6. Press **play/pause** **▶||** to listen to your programming.

### Select all files in a folder

1. Press **program** to enter program mode. P icon will flash in the display.
2. Press **folder + / -** to select a folder. (mp3 disc only)
3. Press mode to select all files in the current folder.
4. Press **program** to confirm your selection.
5. Press **play/pause** **▶||** to listen to your programming.



#### Note:

Remember to slide the control switch to ON position to activate the control again.

### Cancel Program

To cancel your program, press and hold the **mode** key when you are in the stop mode or program mode. ERASE will appear in the display. The program will be automatically cancelled. (Program will also be cancelled when you change disc.)

### Enter / Exit Program mode

To enter or exit program mode, press **program** in stop mode.

### Lock

Slide **control** switch on the main unit to **HOLD** position to lock the button on the main unit to avoid accidental activation of unwanted functions. "HOLD" will show on the display when the control is locked.

## More Information

EN

Clean the player with a soft cloth, or a damp chamois leather. Never use solvents.

### Useful advice

- Do not store CDs in damp areas.
- Do not expose CDs to high temperatures.
- Do not put any tape or adhesives on either side of the disc.
- You should avoid leaving the CD door open. Dust is liable to impair performance of the laser optical unit.
- Do not use your set immediately after transport from a cold place to a warm place: there may be condensation problems.
- Do not touch the playing surface. Make sure that you keep your set away from water and high temperatures.
- If you do not use your set on battery power for more than one month, we advise you to take out all the batteries.
- To prevent personal injury, do not reverse any battery and do not mix battery types.
- Discard leaking batteries immediately. Leaking batteries can cause skin burns or other personal injury.
- This apparatus shall not be exposed to dripping and splashing.

- Prolonged use of the CD player at full volume can damage the user's ear.

**SPC:** Sound Pressure Control at 100dB maximum (only for Thomson models)

### Notes on CD-R/RW Discs

- Do not affix any type of labels to either side (recordable or labeled side) of a CD-R/RW disc as this may result in the unit malfunctioning.
- To avoid damages to the CD-R/RW disc, do not open the disc compartment door while the disc is being read.
- Do not load an unrecorded CD-R/RW disc into the unit. This may take a longer time to read the disc.
- Playback capability for CD-RW discs may vary due to variations in the quality of the CD-RW disc and the recorder used to create the disc.

## More Information

### Please respect the environment !



Before throwing any batteries away, consult your distributor who may be able to take them back for specific recycling.

### Headset Safety



Have a Blast- Just Not in Your Eardrums  
Make sure you turn down the volume on the unit before you put on headphones. Increase the volume to the desired level only after headphone is in place.

- Do not play your headset at high volume. Hearing experts warn against extended high-volume play.
- If you experience ringing in your ears, reduce volume or discontinue use.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice. The English version serves as the final reference on all products and operational details should any discrepancies arise in other languages.

- You should use with extreme caution or temporarily discontinue use in potentially hazardous situations. Even if your headset is an open-air designed to let you hear outside sounds, do not turn up the volume so high that you are unable to hear what is around you.

EN

### Technical specifications

\* **Frequency response: 20Hz to 20kHz**

#### Power Supply

- 4.5V DC through AC/DC adapter
- 2 "AA" batteries
- 2 "AA" rechargeable Ni-cd batteries (Recharge function on Thomson models)
- 4.5V DC (through car DC adapter)



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>