

## For UK Only

**CONNECT THE MAIN LEAD INTO A MAINS POWER SOCKET**

**POWER SUPPLY 230V.** It must not be connected to D.C. mains.

Note: The mains lead of the set is fitted with a moulded plug. If the mains socket are not compatible or if for any reason the plug is removed please follow the directions below. The moulded plug cannot be rewired and if removed must be disposed of safely.

**DO NOT** under any circumstances plug the severed plug into any mains socket as this could result in electric shock.

**Important:** If the plug is removed, rewire the new plug as follows:

The wires in the mains plug are coloured in accordance to the following code:  
**BLUE** = NEUTRAL/**BROWN** = LIVE

If the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

**BROWN** wire to the terminal coded N (Neutral) or coloured black.

**BROWN** wire to the terminal coded L (Live) or coloured red.

**DO NOT** make any connection to the terminal in the plug which is marked

by the letter E or by the earth symbol or coloured green or green and yellow.

A fused plug must be fitted with a 3A fuse approved by ASTA or BS1362 and fuse covers must always be securely replaced. If you set does not work, the fuse may be blown.

This symbol means that your inoperative electronic appliance must be collected separately and not mixed with the household waste. The European Union has implemented a specific collection and recycling system for which manufacturers are responsible.

This appliance has been designed and manufactured with high quality materials and components that can be recycled and reused.

Electrical and electronic appliances are liable to contain parts that are necessary in order for the system to work properly but which can become a health and environmental hazard if they are not handled or disposed of in the proper way. Consequently, please do not throw out your inoperative appliance with the household waste.

 
If you are the owner of the appliance, you must deposit it at the appropriate local collection point or leave it with the vendor when buying a new appliance.

If you are a professional user, please follow your supplier's instructions.

If the appliance is rented to you or left in your care, please contact your service provider.

Help us protect the environment in which we live!

Main plug is used as the disconnect device, it shall remain readily operable and should not be obstructed during intended use. To be completely disconnected the apparatus from supply mains, the main plug of the apparatus shall be disconnected from the mains socket outlet completely.




## Unpacking Your System

- You should have:
- One main unit (with 2 speakers);
- One remote control;
- One user's guide;
- One Thomson Warranty Card

## Installation

 To ensure sufficient ventilation, keep the spacing shown as below:

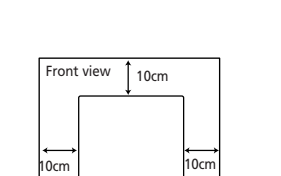

## Using the Antenna

Before you use your audio system, you'll want to make sure the FM antenna is positioned properly. The FM antenna is the coiled wire connected to the back of the unit. Uncoil it, making sure it is fully extended (you may even want to tape it to the wall behind the unit, if possible. The higher the better.) You'll also need to connect the AM antenna loop to the back of the unit if you listen to AM stations. Rotate the AM loop antenna for better reception.

## AC & DC Power Input

Make sure you have connected all cables before plug in. For AC power, connect the power plug to an AC power outlet (230V-50Hz).

You can also power the unit with a 12V DC adapter (not included). Connect the adapter to the input jack at the back of the unit.

Note: DC power input will be disconnected whenever AC power is connected. Do not connect both DC and AC power at the same time.

Refer to the actual unit or remote control while you are reading below descriptions.

## Front View

**ONECO** - Turns on/off the unit.  
**Vol** - Adjusts volume.  
- Stops playback.  
- Starts and pauses playback.  
- Skips backward or forward track/file; searches down or up radio frequency.  
**Preset EQ** - Selects EQ effects.  
**Stereo** - Selects stereo on or off extra bass effect.  
**Display** - Press repeatedly to select clock or playback displays.  
- Starts and pauses stereo on or off in tuner mode.  
**Folder Preset** - Selects tuner preset stations in tuner mode; selects folders (if any) in mp3/WMA playback.  
**Prog-Set** - Enters program mode; confirms selections.  
**Band+APP** - Selects band in tuner mode; starts auto-preset programming.  
**Source** - Selects CD, tuner and AUX mode.  
**Repeat** - Selects repeat playback modes.  
**Intro** - Turns on or off track sampling.  
**Alarm On/Off** - Turns on or off alarm function.  
**Adj Time** - Enters clock time adjusting mode.  
**Adj Alarm** - Enters alarm time adjusting mode.

## Top View

**OPEN** - Press to open the CD compartment door. Push the door downwards to close it.  
**ALARM** - Press once to check alarm time, press and hold to switch on or off alarm function.  
**DISPLAY** - Press once to select analogue or digital clock display. Press and hold to activate or deactivate dimmer function.  
**ADJUST** - Adjusts clock and timer. Press and hold to change display background colours.

## Remote Control

**ONECO** - Turns on/off the unit.  
**Vol** - Adjusts volume.  
- Stops playback.  
- Starts and pauses playback.  
- Skips backward or forward track/file; searches down or up radio frequency.  
**Preset EQ** - Selects EQ effects.  
**Stereo** - Selects stereo on or off extra bass effect.  
**Display** - Press repeatedly to select clock or playback displays.  
- Starts and pauses stereo on or off in tuner mode.  
**Folder Preset** - Selects tuner preset stations in tuner mode; selects folders (if any) in mp3/WMA playback.  
**Prog-Set** - Enters program mode; confirms selections.  
**Band+APP** - Selects band in tuner mode; starts auto-preset programming.  
**Source** - Selects CD, tuner and AUX mode.  
**Repeat** - Selects repeat playback modes.  
**Intro** - Turns on or off track sampling.  
**Alarm On/Off** - Turns on or off alarm function.  
**Adj Time** - Enters clock time adjusting mode.  
**Adj Alarm** - Enters alarm time adjusting mode.

Refer to the following for basic playback and radio listening. For detailed operations and more advanced features, please refer to relevant sections.

## Listening to CD/mp3/WMA Discs

- Press **ONECO** to switch on the unit.
- Press **SOURCE** to select TUNER mode.
- Press **BAND** (or **Band+APP**) on the remote control to select radio band.
- Press **▶▶** or **◀◀** to tune down or up radio frequency. Press and hold for automatic channel search. "AUTO" shows on the display when searching is in progress.
- Press **▶▶** or **◀◀** to start playback. Press again to pause playback and again to resume.
- If the song is a mp3 or WMA file, the mp3 or WMA icon lights on the display.
- During playback, elapsed playback time and current track number show on the display alternately.
- Press **▶▶** or **◀◀** to select previous or next track / file. Press and hold to search through the disc while it is playing.
- Press **■** to stop playback.

## Listening to Radio

- Press **ONECO** to switch on the unit.
  - Press **SOURCE** to select TUNER mode.
  - Press **BAND** (or **Band+APP**) on the remote control to select radio band.
  - Press **▶▶** or **◀◀** to tune down or up radio frequency. Press and hold for automatic channel search. "AUTO" shows on the display when searching is in progress.
- Notes on CD-R/W**
- Do not affix any type of labels to either side of a CD-R/W disc as this may result in the unit malfunctioning.
  - Playability capability for CD-R/W discs may vary due to variations in the quality of the CD-R/W disc and the recorder used to create the disc.
- Note:** Be sure to remove all discs from the disc compartment before moving or transporting the unit!

This unit is compatible with audio CD-R/RW discs.

**Notes on mp3/WMA Disc:**

- Use **▶▶** or **◀◀** when converting audio files into mp3 for saving onto CD-R(W) or CD-ROM, e.g. ABCD.mp3. Do not use any other extension, e.g. doc, pdf.
- Do not use the .mp3 extension for other text or non-audio data files as this may result in serious malfunction or harmful noise interference.
- For better quality in mp3 disc playback, the CD quality should be recorded 128Kbps or above.
- Disc data size > 50MB is not recommended.
- Total files should not exceed 412 and the total folders should not exceed 100. It also depends on the length of the file/folder names.
- For mixed mode discs, only one mode will be selected for playback depending on the recording format.
- To ensure good performance, wait until the disc changer completely reads the disc before proceeding.
- mp3 files in CD ROM EXTRA format disc cannot be recognized.

## Basic Listening

Refer to "Quick Start" for selecting radio mode, band and searching channels.

## Auto Channels Presetting

Press and hold **BAND** (or **Band+APP**) on the remote control to scan stations. A maximum of 30 stations can be stored. Beware of your preset channels being erased accidentally because the scanning and storing process is automatic upon pressing the button. "Prog" icon flashes during programming. Press **Band+APP** to stop scanning.

## Manual Channels Presetting

A maximum of 30 stations can be stored.

- Press **BAND** (or **Band+APP**) on the remote control to select band.
- Press **▶▶** or **◀◀** to select station to be stored.
- Press **Prog-Set** on the remote control to enter program mode.

## Listening to the Preset Channels

Press **Folder/Preset** (up or down) on the remote control repeatedly to select your desired memory location.

## Suppressing Stereo Signal

Press **Stereo** on the remote control to switch between FM mono and stereo for FM broadcast. If FM stereo reception is weak, select mono sound may reduce noise.

## Connecting External Device

Remove the **AUX IN** cover on unit front and insert audio cables (not included) to the L (left channel) and R (right channel) input jacks.

## Selecting and Playing External Device

Press **SOURCE** to select AUX mode. Control playback on your external device. Adjust volume by rotating the volume control knob on unit front.

Refer to "Quick Start" for basic playback.

## Random Playback

Press **□** on the remote control to turn on or off random playback. "Random" shows on the display when activated.

## Repeat Playback

Press **Repeat** repeatedly on the remote control to select, the corresponding icon shows on display when activated:

Repeat 1: repeat current songs;  
Repeat All: repeat all songs;  
No icon: normal playback.

## Problem Solution

**System will not turn on**

- Check power cord for a secure connection.
- Unplug the unit for a moment, and then plug into power source again.
- Check the outlet by plugging in another device.

**No sound**

- Increase the volume setting.
- Check connection to speakers.
- Check that you have selected the appropriate function: CD, Tuner.
- Make sure headphones are not plugged in.

**Poor radio reception**

- Check antenna connection.
- Move antenna.
- Turn off nearby electrical appliances, such as hair dryer, vacuum cleaner, microwave, fluorescent lights.

**CD does not play**

- Check that CD is in the tray.
- Check that CD label is facing up.
- Check that PAUSE mode is not on.
- Check that CD function is selected.
- Use CD lens cleaner.
- Clean the disc.
- Try another disc.

## Problem Solution

**CD sound skips**

 
- Clean the disc.
- Check disc for warping, scratches, or other damage.
- Check if something is causing the system to vibrate. If so, move the system.
- Make sure the speakers are at least 3 feet away or on a different surface from the main unit.

**CD button will not respond**

- Switch to another function (Tuner) and then back to CD.

**Remote control does not work**

- Check that the batteries are properly installed.
- Replace weak batteries.
- Check the system is plugged into power source.
- Point the remote directly at the system's front panel.
- Move closer to the system.
- Remove any obstacles between the remote and the system.

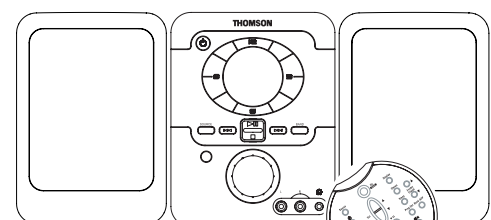

It is important to read this instruction book prior to using your new product for the first time.

## Activating the Timer

Press and hold **ALARM** (or **Alarm On/Off**) on the remote control on the main unit to activate and deactivate the timer function. "ALARM" shows on the display when activated. Timer cannot be set or activated if clock time is not set. Follow instructions under "Setting Clock" to set clock.

 
## Sleep Function

You can select the time interval in minutes before the unit turns off automatically.

- Press **Sleep** on the remote control to select among OFF, 90, 80, 70, 60, 50, 40, 30, 20, and 10 minutes. "SLEEP" icon flashes on the display when activated.
- When Sleep is activated, press **Sleep** once to view remaining sleep time in minutes.
- Press **Sleep** again when the remaining sleep time is displayed to change sleep time.

## Analogue and Digital Clock Display

Two clock display modes are available: analogue and digital. Press **DISPLAY** to toggle between the two display modes. At the center of the analogue clock, "P" stands for PM time, "A" stands for AM time.



## Preset Equalizers

Press **Preset EQ** on the remote control to toggle among FLAT, JAZZ, ROCK, POP and CLASSICAL. The selection is highlighted on the display.

## Changing Display Brightness

Press and hold **DISPLAY** on the top of the unit to change the brightness level of the display.

## Changing Display Colors

Press and hold **ADJUST** on the top of the unit to change the display colors.

## X-Bass

Press **X-Bass** on the remote control to turn on/off the X-Bass feature. The X-Bass icon is displayed.

## Headset Safety

Do not play your headset at high volume. Hearing experts warn against extended high-volume play.

- If you experience ringing in your ears, reduce volume or discontinue use.
- You should use with extreme caution or temporarily discontinue use in potentially hazardous situations. Even if your headset is an open-air designed to let you hear outside sounds, do not turn up the volume so high that you are unable to hear what is around you.

## ESD Remark:

In case of malfunction due to electrostatic discharge just reset the product (disconnect and reconnect of the power source may be required) to resume normal operation.

## Important Battery Information

- Remove the batteries to avoid leakage if you do not use your remote control for more than one month.
- Discard leaky batteries immediately as leaking batteries may cause skin burns or other personal injuries. Dispose of batteries in the proper manner, according to provincial and local regulations.
- Any battery may leak electrolyte under the following circumstances:
  - If mixed with a different battery type,
  - If inserted incorrectly,
  - If all batteries are not replaced at the same time,
  - If disposed of in fire, or
  - If an attempt is made to charge a battery not intended to be recharged.

## Don't Infringe

This product should only be used for the purposes for which it is sold, that is, entertainment, violating no copyright law. Any attempts to use this product for unintended purposes are unlawful and therefore not condoned by Thomson.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>