 


# Technika

EXCLUSIVELY FROM **TESCO**

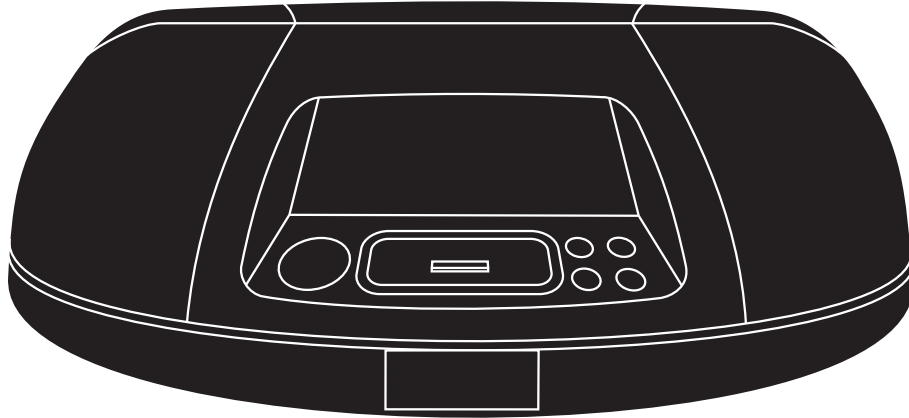

SP114

## Owner's Handbook

Portable speaker for iPhone with FM radio





## IMPORTANT SAFETY INFORMATION



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

Read these instructions.  
Keep these instructions.  
Heed all warnings.  
Follow all instructions.

Do not use this apparatus near water.  
Clean only with a slightly damp cloth.  
Do not block any ventilation openings.  
Install in accordance with the manufacturer's instructions.  
Do not install or operate near any heat sources such as radiators, stoves, or other apparatus that produce heat.  
Unplug this apparatus during lightning storms or when unused for long periods of time.  
Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**Warning:** To reduce the risk of fire or electrical shock, do not expose this product to rain or moisture. The product must not be exposed to dripping and splashing and no object filled with liquids such as a vase of flowers should be placed on the product.

 
No naked flame sources such as candles should be placed on the product.

**Caution:** Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device.

**Caution:** Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure.

### ELECTRICAL INFORMATION

Rating plates: The mains operating voltage of the AC Adaptor is marked on a rating plate on the plug face of the AC Adaptor. The rating plate of the main unit is located on the underside.

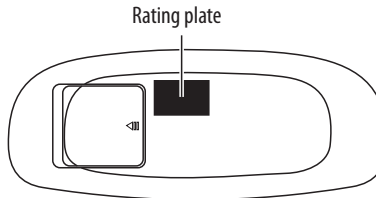

Use this appliance only with the supplied AC Adaptor. Using non-approved power supplies will void the warranty.

The means of disconnecting this appliance from the mains supply is the AC adaptor/mains plug. This should be unobstructed and readily operable at all times.

### IMPORTANT

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

## INDEX

### INDEX

Introduction .....	2
Unpacking .....	2
Connecting power .....	2
Controls & connections .....	3
Fitting the batteries .....	5
Selecting a source and setting the volume .....	5
Sound equaliser .....	5
Listening to the radio .....	5
iPod docking and compatibility .....	6
Playing an iPod .....	7
AUX input .....	7
Care & Maintenance .....	8
Specifications .....	8
Warranty .....	8

## INTRODUCTION

The SP114 is a high quality docking station for an iPhone or iPod with a built-in stereo FM radio. The SP114 will also accept stereo analogue audio signals from audio sources via a Line input (Aux In).

Portable operation is possible when batteries are fitted.

## PRELIMINARIES

### UNPACKING

Carefully unpack the unit. If it is damaged, please return it to your nearest Tesco store for replacement. Remember to take your purchase receipt with you.

Retain the User Handbook. If you pass the unit on to a third party make sure you pass on the handbook.

We suggest you retain the packaging. If you dispose of it, do so having regard to any recycling regulations in your area.

### CONTENTS

The carton should contain:

- The SP114 docking station
- AC adaptor
- 2 x iPhone docking adaptors
- Operating Manual

If any items are missing or damaged, contact your nearest TESCO store for a replacement. Have your receipt ready when you call. Retain the packaging. If you dispose of it, do so having regard to any recycling regulations in your area.

### LOCATION

 
Place the unit on dry stable surface away from heat and damp and where it is unlikely to fall or be knocked over.

## GETTING STARTED

### CONNECTING POWER

Check that the mains voltage on the rating plate of the AC adaptor is the same as the voltage in your area.

Plug the DC cord from the adaptor into the DC jack, plug the mains plug into the wall socket and switch the mains power on. The unit is now ready for use.

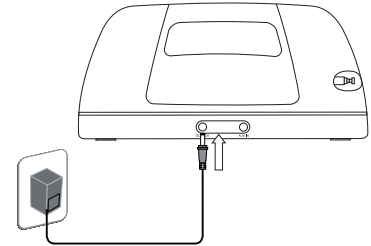

NOTE:- The AC adaptor may become warm during operation – this is normal.

### POWER CONTROL

**To switch the unit on:**

- Press the  button.

*The unit will switch on and the display will light up.*

 
**To set the unit to standby:**

- Press the  button.

*The unit will switch off.*

## CONTROLS AND CONNECTORS


### FRONT VIEW

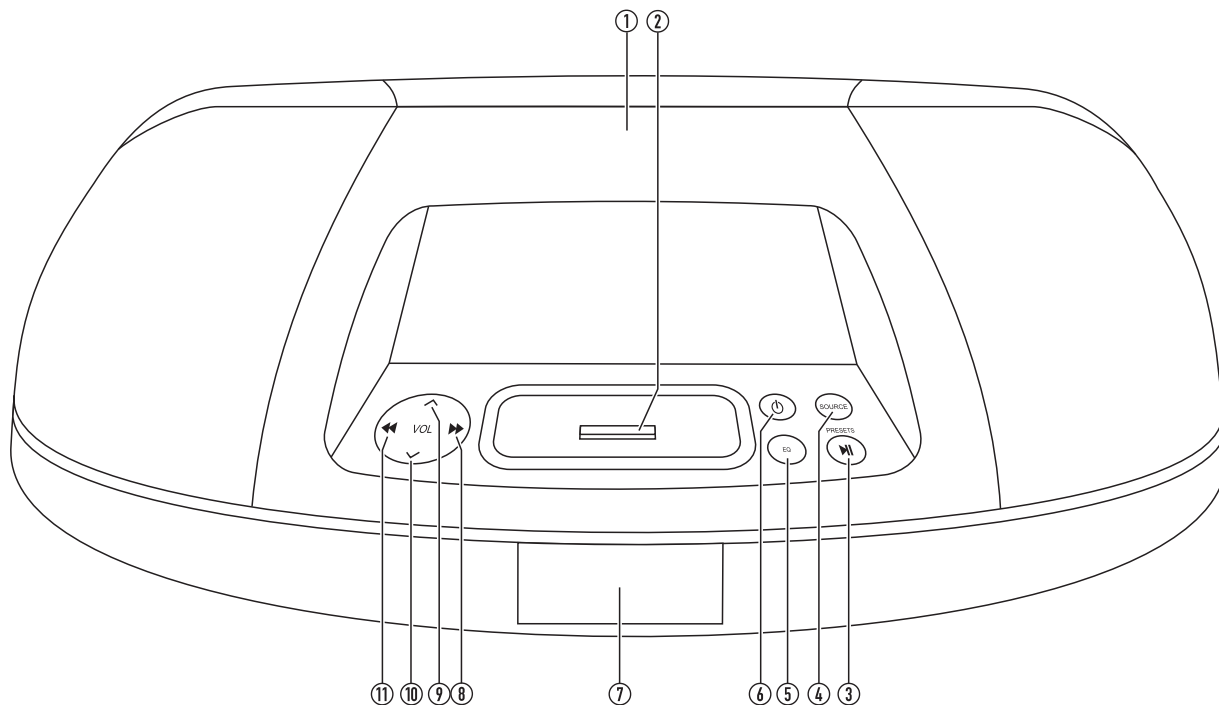

- |                        |                         |                      |
|------------------------|-------------------------|----------------------|
| ① Handle               | ⑤ EQ button             | ⑨ Volume up button   |
| ② iPod docking bay     | ⑥ Standby On/Off button | ⑩ Volume down button |
| ③ Play/Pause button    | ⑦ Display               | ⑪ Previous button    |
| ④ Source select button | ⑧ Next button           |                      |


## CONTROLS AND CONNECTORS
 
### BACK VIEW

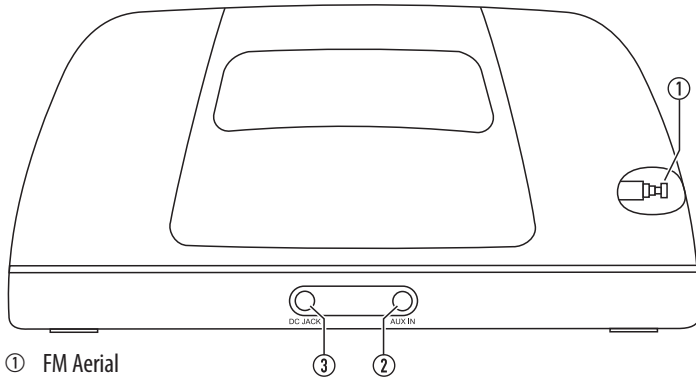

- ① FM Aerial
- ② Aux In jack
- ③ DC Jack

## DISPLAY

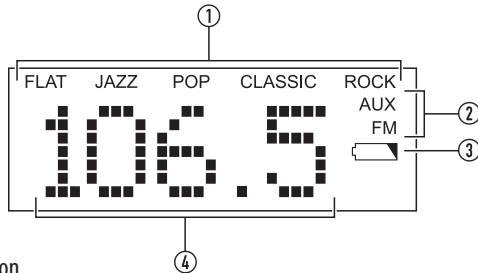 


- ① Equaliser settings
- ② Aux/FM mode indication
- ③ Low battery indicator
- ④ Mode/Frequency/Volume display


## EXTENDING THE AERIAL
 
### To extend the aerial:


- Extend the aerial fully out of the main unit.

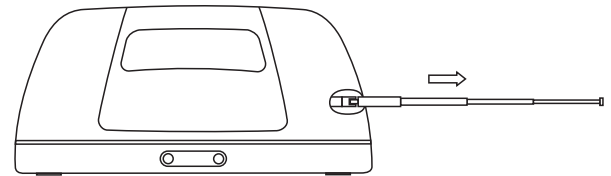

 - Rotate the base of the aerial until the pivot screw is visible from the back (arrowed).

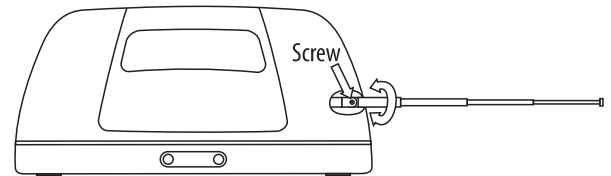


 - Raise the aerial into a vertical position.

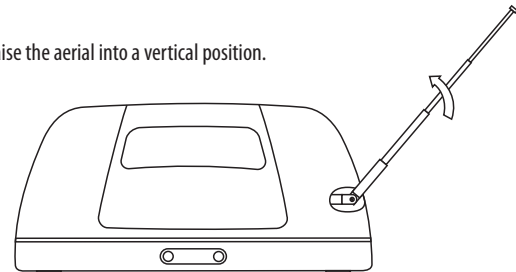


## FITTING BATTERIES

 Batteries may be fitted to power your docking station for portable operation and also to provide backup power to retain preset memories when mains power is disconnected.

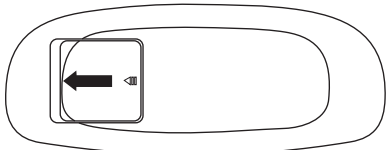

### To fit batteries:

 1. Slide the battery cover in the direction shown to unlatch the latch. Lift off the battery cover.

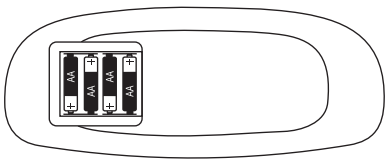

2. Fit four 'AA'/UM3' batteries into the battery compartment, observing polarity as shown.
3. Re-fit the battery cover and slide it to lock it into place.

NOTE: The battery indicator will flash if there are no batteries fitted or if the battery level is low and needing replacement.

### BATTERY CAUTIONS

Remove the batteries if the unit will not be used for a long time to avoid the danger of leakage.

NOTE: Never mix old and new batteries or batteries of different types. Batteries should always be replaced as sets. Dispose of used batteries with regard to the recycling regulations in your area. Do NOT short circuit batteries or throw them into water, the general rubbish or in a fire.

Weak batteries can leak and damage the unit. Replace them in good time!

## SELECTING A SOURCE

You can choose to play music from a docked iPod, FM radio or a personal audio player or other source connected to the AUX IN jack on the rear panel.

### To select a source:

- Press the **SOURCE** button to step through the sources.
- If iPod is selected, the display will show 'iPod.'*  
*If FM is selected the display will show the tuned frequency.*  
*If the Aux input is selected, the display will show 'AU.'*

## ADJUSTING THE VOLUME

### To increase the volume:

- Press the  $\wedge$  button.

### To decrease the volume:

- Press the  $\vee$  button.

*When the volume is adjusted, the volume level is displayed briefly on a scale of 0 (minimum) to 20 (maximum).*

## SOUND EQUALISER

Your docking station includes a sound equaliser with five different preset responses.

### To change the sound equaliser setting:

- Press the **EQ** button repeatedly.

*The equaliser mode selected will change in the sequence -*



In the FLAT setting, no equalisation is applied.

## LISTENING TO THE RADIO

- If FM mode is not selected, press the **SOURCE** button to select FM mode.

*The tuned frequency is shown on the display and the radio will play.*

### To tune to a station:

- Press the  $\blacktriangleright$  or  $\blacktriangleleft$  buttons to tune the radio up or down the band. Pressing these buttons briefly will move the frequency by one step, holding the buttons for longer will start a search which will stop automatically at the next station in the band.

*The display will show the tuned frequency in MHz.*

### FM PRESETS

Your radio can store up to 10 of your favourite stations as presets for quick recall.

### To store any preset 1-10

- Tune to the station you want to store as a preset.
- Press and **hold** the **PRESETS** button.

*The preset display will flash.*

- Press the  $\blacktriangleright$  or  $\blacktriangleleft$  button repeatedly to find the preset number you want to store.
- Press the **PRESETS** button again to confirm and store the preset.

### To browse the station presets 1-10

 
- Press the **PRESETS** button repeatedly.

*The preset number playing will be displayed.*

NOTE: If batteries are not fitted, any stored presets will be erased if the power is disconnected from the unit.

## iPod ADAPTORS

Before docking your iPod you must first check if your iPod has a docking connector. Early iPod models and iPod shuffle do not have one and cannot be docked to your unit. The docking connector is located on the base of the iPod as shown below.

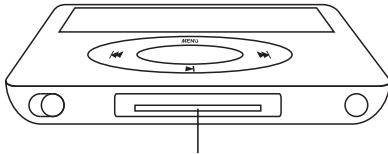

Docking Connector

Before docking your iPod, you must first fit the correct iPod adaptor to the docking bay. Each iPod adaptor matches the shape of a particular iPod and is necessary to ensure that your iPod is securely held when docked.

## FINDING AN ADAPTOR

### iPhone adaptors

 
Two adaptors are supplied with your docking station. One adaptor is compatible with iPhone 1st generation, the other with iPhone 2nd/3rd generation. These may be used if you are docking an iPhone.

### iPod adaptors

If you are docking an iPod, the iPod may have been supplied with a standard dock adaptor in the packaging when new.

### If you don't have a dock adaptor

If your iPod was not supplied with a standard dock adaptor, or if you have lost the adaptor, you can buy one from Apple on-line. To determine the exact model of your iPod, refer to this web-link - <http://support.apple.com/kb/HT1353>. You can then browse the iPod accessories page on the Apple website to find an adaptor for your iPod model that can be purchased on-line.

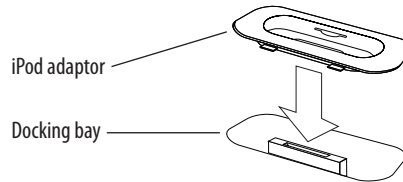

### FITTING THE iPod ADAPTOR

Fit the adaptor by pressing it gently into the Docking Bay as shown above.

NOTE: Do not dock an iPod without fitting the correct adaptor, you may damage the iPod and your unit.

## DOCKING AN iPod

### DOCKING YOUR iPod

#### To dock your iPod:

- Check that the correct iPod adaptor is fitted to the docking bay.
- Locate the iPod on the Docking Connector and press it gently home.

#### To remove your iPod from the dock:

- Grip the iPod at the sides.
- Lift the iPod gently from the dock.

## CHARGING AN iPod

When an iPod is docked, the iPod will begin to charge automatically.

NOTE:- The iPod will charge at all times that the unit is connected to mains power.



## PLAYING FROM AN iPod

Once an iPod is docked, you can play the iPod and operate some of the functions from the controls on your docking station.

### Selecting iPod playback mode:

- Press the **SOURCE** button repeatedly to select iPod mode.

NOTE: iPod mode will select automatically if an iPod is docked while the unit is set to FM or AUX mode. The unit will revert back to the original selected mode when the iPod is removed.

### Playback functions:

When you dock an iPod it will switch on, set to pause mode.

 
- Press the ►|| button to toggle between Play and Pause mode at any time.
- Press the ►► or ◀◀ button to select the next or previous track on your iPod.

### iPod menu functions:

iPod menu functions should be navigated using the controls on the iPod.

## CONNECTING OTHER iPod MODELS (INC SHUFFLE)

If you own an iPod Shuffle or a model without a dock connector, you can still connect the sound output to the AUX IN jack on the back panel.

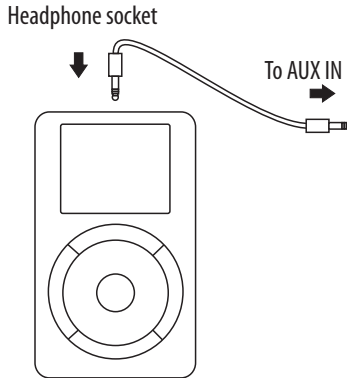

- Using a 3.5mm stereo jack to jack cable (not supplied), connect one end of the cable to the headphone socket of the iPod, and the other end to the AUX IN socket on the back panel.
- To listen to your iPod, follow the instructions in the 'AUX INPUT' section to select and play from the AUX input.

NOTE:- The volume control of the iPod must be turned up when playing through AUX IN.

## AUX INPUT

The AUX input may be used to connect sound sources with a Line or Headphone analogue output to play through your player. These may include -

- iPod models that cannot be docked to the unit
- MP3 players without USB plug connection
- CD walkman players
- Tape walkman players
- Personal computers or laptops

### Connecting a source to the AUX input

- Using a 3.5mm jack cable (not supplied), connect the cable between the headphone or LINE/AUX output of the personal audio player and the AUX IN jack on the back panel.

### Playing from the source

- With the cable connected, press the **SOURCE** button to select AUX.

*AUX will be shown on the display.*

- Set your personal audio player/computer to PLAY.
- Set the listening volume to the level you want with the ^ or v button.

If there is no sound or if the volume level is not loud enough, you may need to increase the volume setting on your personal audio player/computer.

## CARE AND MAINTENANCE

### AFTER USING THE DOCKING STATION

- Set to Standby.
- Switch the unit off at the mains and unplug it if you are leaving it unattended for a long period (holidays etc).

### CARE AND CLEANING

All care and cleaning operations should be carried out with the unit unplugged from the mains power.

Occasionally wipe the cabinet with a lint free duster. Never clean the unit with liquids or solvents.

## SPECIFICATIONS

### SPECIFICATIONS

AC Adaptor input:..... 100-240V~, 50-60Hz, 0.5 A

AC Adaptor output: ..... 6.5V==, 2A

DC input : ..... 6.5V==, 2A

DC battery power: ..... 4 x AA/UM-3 batteries

Tuning frequency: ..... 87.5 - 108MHz

Net Weight: ..... 0.83kg



Class II construction double insulated.

This product must not be connected to earth.



UK: Waste electrical products should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities see [www.recycle-more.co.uk](http://www.recycle-more.co.uk) or in-store for details.

ROI: Produced after 13th August 2005. Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

## WARRANTY

Your Tesco appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please contact the TESCO electrical help line on 0845 456 6767. Please have your original purchase receipt with you when you call. This warranty in no way affects your consumer rights.



# Technika

Tesco Stores Ltd,  
Delamare Road, Cheshunt, Herts, EN8 9SL

► **Technika Helpline: 0845 456 6767** (Calls cost up to 4p per minute from a BT landline, other providers may vary)

SP114 V0.4

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>