

**Ages 5+**

**31030**

# HANNAH MONTANA

## LCD Video Game

### OPERATING INSTRUCTIONS

#### BATTERY INSTALLATION

- Unscrew the battery cover with a Phillips screwdriver (⊕).
- Insert 2 “AAA/LR03” (1.5V) batteries with the positive (+) and negative (-) ends facing in the proper direction as indicated in the battery compartment. (see Fig. 1)
- Replace the cover.

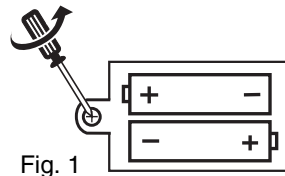 


Fig. 1

#### SAFETY BATTERY USAGE

- Different types of batteries or new and used batteries are not to be mixed.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not dispose the batteries in fire, batteries may leak or explode.
- Batteries should be replaced by an adult.
- Please keep details for future reference.
- Alkaline batteries are recommended.

#### CAUTION

- Adults should replace batteries.
- Not suitable for children under 3.
- May contain small parts.
- This product contains glass, which may cause injury if broken.

#### CARING FOR YOUR DEVICE


- If the display becomes dim or malfunctions, replace the batteries.
- After replacing batteries, press the **ON/OFF** button to ensure proper functioning. (In most cases, game malfunctions are due to weak batteries.)
- In an environment with electrostatic discharge, the product may malfunction and lose memory. In this case, press the **ON/OFF** button or **RESET** button on the back of the unit with a blunt instrument to reset the product.

 
**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

### BUTTON DESCRIPTION

1. **ON/OFF Button:** Turns the game on and off.
2. **SOUND (  ) Button:** Turns the sound on and off.
3. **DIRECTIONAL ARROW Buttons:** Moves Hannah/Miley up and down the screen.
4. **SWITCH! Button:** Hannah Montana switches to her alter ego, Miley Stewart, so she can sneak by the photographers and fans.

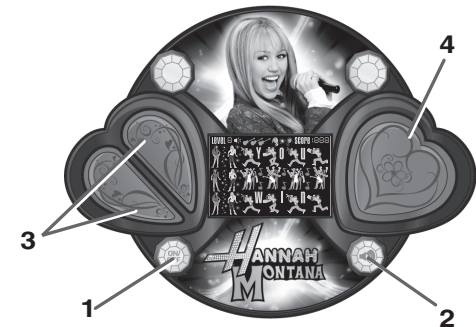

#### OBJECTIVE

Hannah Montana's on tour and needs to change her outfit before the next set! Help Hannah quickly get to her dressing room and back onstage to rock out with her fans!

#### GAME PLAY

 
- Press the **ON/OFF** button to turn the unit on and start the game.
- Press the **SOUND** button at any time during the game to turn the sound on or off.
- Hannah Montana begins the game on the left side of the screen. Use the **DIRECTIONAL ARROW** buttons to move her up and down the screen as she races back to her dressing room.
- Fans and photographers will walk towards Hannah from the right side, hoping to get an autograph or picture of her. She has to start the next song, so quickly move up or down to dodge them!
- If Hannah runs into a photographer or fan, she won't make it back onstage in time and you will lose a chance.
- Become an undercover pop star when you're caught in a tight spot by pressing the **SWITCH!** button. Hannah will change into Miley to hide her celebrity. While she is Miley, she can sneak by the photographers and fans, even if they bump into her! It will only last for a short time, so use it wisely!
- You begin the game with three chances. If you lose all of your chances, the game is over.
- When you successfully reach the dressing room in level 7, you win and Hannah Montana will complete her show with a rockin' finish!
- Auto shutoff after 60 seconds of inactivity.

#### SCREEN



Disney elements © Disney 2008.  
All rights reserved. All brands and product names mentioned are trademarked or registered trademarks of their respective companies.

© 2008 Techno Source.  
All rights reserved.  
30 Canton Road, Kowloon,  
Hong Kong  
Made in China

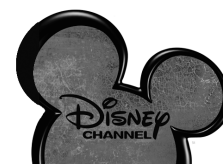

IM-31030



Visit the Disney website  
at [www.disney.com](http://www.disney.com)



Check out our award-winning products at:  
[www.technosourceusa.com](http://www.technosourceusa.com)

Product specifications and colors may vary.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>