

OPERATOR'S MANUAL

and MAINTENANCE INSTRUCTIONS for **TECUMSEH**

MODELS HSK845, 850, 600

HSK845/850



SNOW BLOWER ENGINE

HORIZONTAL CRANKSHAFT AIR COOLED -TWO-CYCLE ENGINE



THIS SYMBOL POINTS OUT IMPORTANT SAFETY INSTRUCTIONS WHICH IF NOT FOLLOWED COULD ENDANGER THE PERSONAL SAFETY AND/OR PROPERTY OF YOURSELF AND OTHERS. READ AND FOLLOW ALL INSTRUCTIONS IN THIS MANUAL AND ANY PROVIDED WITH THE EQUIPMENT ON WHICH THIS ENGINE IS USED BEFORE ATTEMPTING TO OPERATE YOUR TECUMSEH ENGINE.



THESE SYMBOLS **MAY APPEAR ON** THE ENGINE:
















CHOKE



California Proposition 65 WARNING: The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

> 181-807-14 2-1-99

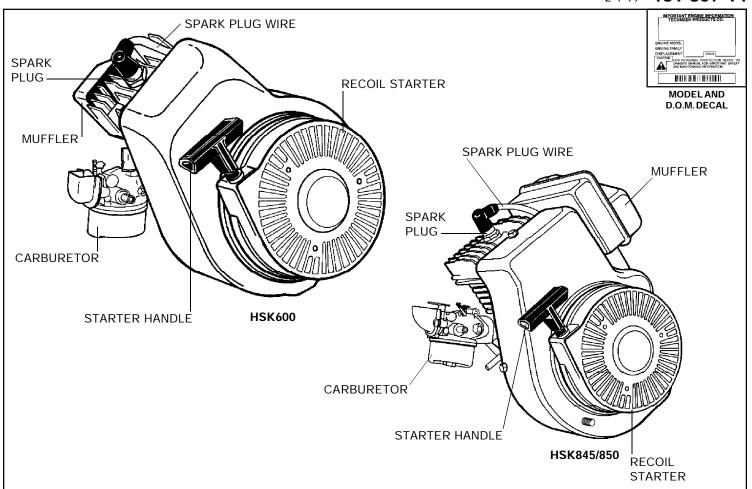

ENGINES WHICH ARE CERTIFIED TO COMPLY WITH CALIFOR-NIA AND U.S. EPA EMISSION REGULATIONS FOR ULGE EN-

Are certified to operate on regular unleaded gasoline / oil mix. Include the following emission control system(s): EM, TWC (if so equipped); Do not include any user adjustable features - therefore no other adjustments are need.

OIL & FUEL RECOMMENDATIONS

A USE CLEAN, HIGH QUALITY 2 CYCLE OIL, NMMA TC-WII, OR TC-W3.

TECUMSEH SPECIALLY FORMULATED OIL IS RECOMMENDED AND AVAILABLE FROM ANY AUTHORIZED TECUMSEH SERVICE OUTLET BY SPECIFYING PART NUMBER 730227.

DO NOT USE MULTI-VISCOSITY OIL!

A A FRESH, CLEAN, UNLEADED REGULAR, UNLEADED PREMIUM, OR REFORMULATED AUTOMOTIVE GASOLINE ONLY. DO NOT **USE LEADED GASOLINE.**

NOTE: Do not use gasoline containing methanol (wood alcohol) fuel containing up to 10% ethanol (gasohol) or up to 15% MTBE (Methyl Tertiary Butyl Ether) may be used but requires special care when the engine is not used for extended periods. See "Storage" instructions.

MIXING OIL & GASOLINE

THE FUEL/OIL MIX RATIO IS 50:1 WITH THE USE OF A NMMA CLASSIFIED OIL.

FOR NEW ENGINES: USE TWICE THE NORMAL OIL QUANTITY FOR THE FIRST GALLON OF FUEL.

NOTE: 32:1 fuel/oil mix ratio is recommended with non

NMMA oils. (Due to differences in fuel and oil availability worldwide, Tecumseh recommends a 32:1 mix ratio if NMMA oil is not available.)

	FUEL MIX CHART	Mixture 50:1		
	U.S.	S.I. (METRIC)		
Gas	Oil To Be Added	Petrol	Oil To Be Added	
1 Gal.	2-1/2 oz.	4 Liters	80 ml	
2 Gal.	5 oz.	8 Liters	160 ml	
5 Gal.	13 oz.	20 Liters	400 ml	

	FUEL MIX CHART	Mixture 32:1		
	U.S.	S.I. (METRIC)		
Gas	Oil To Be Added	Petrol	Oil To Be Added	
1 Gal.	4 oz.	4 Liters	125 ml	
2 Gal.	8 oz.	8 Liters	250 ml	
5 Gal.	20 oz.	20 Liters	625 ml	

DO NOT MIX DIRECTLY IN ENGINE FUEL TANK.

- 1. Fill approved, clean container one quarter full with recommended gasoline.
- 2. Add recommended oil to gasoline per FUEL MIX CHART below at
- 3. Screw cap on container and shake vigorously. Then unscrew cap and fill container with gasoline as shown in FUEL MIX CHART. Once mixed oil and gasoline will not separate.



NEVER MIX OR STORE GASOLINE/OIL MIXTURE IN DOORS OR IN ENCLOSED, POORLY VENTILATED AREAS, WHERE FUEL FUMES MAY REACH AN OPEN FLAME, SPARK OR PILOT LIGHT AS ON A FURNACE, WATER HEATER, CLOTHES DRYER OR OTHER GAS APPLIANCE.

BEFORE STARTING

A READ ALL INSTRUCTIONS PROVIDED WITH THE EQUIP-MENT ON WHICH THIS ENGINE IS USED.

A FILL FUEL TANK:

- A. Clean area around fuel fill cap, remove cap.
- Add FUEL MIX specified in the preceding "OIL & FUEL RECOMMENDATIONS", item 3. Use a funnel to help avoid spillage.
 - Never use "stale" gasoline left over from last season or stored for long periods.
- Install fuel fill cap and wipe up any spilled FUEL MIX.



NEVER FILL FUEL TANK INDOORS. NEVER FILL FUEL TANK WHEN ENGINE IS RUNNING OR HOT. DO NOT SMOKE WHEN FILLING FUEL TANK.



NEVER FILL FUEL TANK COMPLETELY. FILL TANK TO 1/2" BELOW BOTTOM OF FILLER NECK TO PROVIDE SPACE FOR FUEL EXPANSION



WIPE ANY FUEL SPILLAGE FROM ENGINE AND **EQUIPMENT BEFORE STARTING ENGINE.**

A CHECK THE FOLLOWING:



BE SURE EQUIPMENT IS IN NEUTRAL GEAR WITH **CLUTCHES, BELTS, CHAINS AND SAFETY SWITCHES** DISENGAGED. (FOLLOW EQUIPMENT MANUFACTUR-ER'S INSTRUCTIONS.) THIS SHOULD PLACE ANY SAFETY SWITCHES IN SAFE STARTING POSITION.

- Be sure spark plug wire is attached to spark plug (see Figure 2).
- Be sure any ignition switch on engine or equipment is in "ON", "RUN" or "START" position.

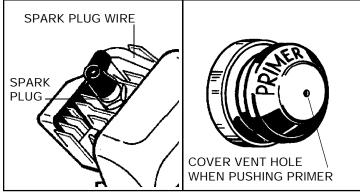


Figure 2

STARTING

A

NEVER RUN ENGINE INDOORS OR IN ENCLOSED, POORLY VENTILATED AREAS. ENGINE EXHAUST CONTAINS CARBON MONOXIDE, AN ODORLESS AND DEADLY GAS.



KEEP HANDS, FEET, HAIR AND LOOSE CLOTHING AWAY FROM ANY MOVING PARTS ON ENGINE AND EQUIPMENT. NEVER LEAVE EQUIPMENT UNATTENDED WHEN ENGINE IS RUNNING.



WARNING - TEMPERATURE OF MUFFLER AND NEARBY AREAS MAY EXCEED 150°F (65°C). AVOID THESE AREAS.

NOTE: If engine is remotely controlled, see equipment manufacturer's instructions for control positions which correspond to engine control positions in Figure 3.

À RECOIL STARTER:

Move choke lever on engine or equipment (see Figure 3) to "FULL CHOKE".

NOTE: IF RESTARTING A WARM ENGINE AFTER A SHORT SHUTDOWN:

 MOVE CHOKE TO "NO CHOKE" INSTEAD OF "FULL CHOKE".

2. DO NOT USE PRIMER.

B. Push primer 3-5 times (see Figure 2). Wait about two (2) seconds between each push. ALWAYS COVER "VENT HOLE" when pushing primer. See warm engine restart "NOTE" above.

NOTE: Additional priming may be required, for initial start only, if temperature is below 15°F/-10°C.

C. Grasp starter handle (see Figure 1) and pull rope out, slowly, until it pulls slightly harder. Let rope rewind slowly. Then pull rope with a rapid full arm stroke. Let rope return to starter slowly.

NOTE: If engine fails to start after three (3) pulls, push primer two (2) times and pull starter rope again.

- When engine starts, move choke lever gradually to "NO CHOKE".
- E. If engine falters, move choke lever immediately to "FULL CHOKE" and then gradually to "NO CHOKE".

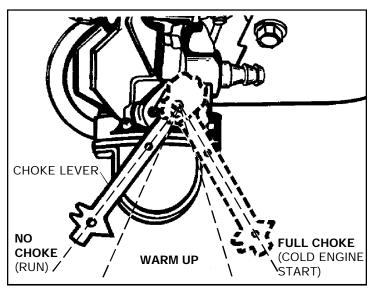


Figure 3

STARTING (Continued)

Á ELECTRIC STARTER (see Figure 4)



WARNING: THE 120V A.C. STARTER IS EQUIPPED WITH A TWO-WIRE POWER CORD AND PLUG, AND IS DESIGNED TO OPERATE ON 120V A.C. HOUSEHOLD CURRENT. THE STARTER MUST BE PROPERLY GROUNDED AT ALL TIMES TO AVOID THE POSSIBIL-ITY OF INJURY OR DEATH FROM ELECTRICAL SHOCK.

NOTE: If your engine is equipped with a 12V battery-operated electric starter, disregard instructions regarding power cord.

- A. Connect power cord to switchbox on engine.
- Plug other end of power cord (see Figure 4) into wall receptacle.

IMPORTANT: When connecting power cord, always connect power cord to switch box on engine first; then into wall receptacle.

- C. Move engine choke to "FULL".
- D. Push primer two or three times, making sure to cover vent hole when pushing (see Figure 2). In temperatures below 15°F (-10°C), additional priming may be required.

NOTE: If restarting a warm engine after a short shutdown:

- 1. Leave choke in "OFF" position.
- 2. Push primer one time only.
- E. Push starter button (see Figure 4) or turn ignition switch key (see equipment manufacturer's instructions) to crank engine.
- F. When engine starts, release starter button and move choke gradually to "OFF".
- G. If engine falters, move choke immediately to "FULL" and then gradually to "OFF".
- H. Disconnect power cord (see Figure 4) from wall receptacle first, and then from switchbox on engine.

IMPORTANT: When disconnecting power cord, always unplug wall receptacle end first; then unplug switchbox on engine.

NOTE: The electric starter is thermally protected. If overheated, it will stop automatically and can be restarted only when it has cooled to a safe temperature (a wait of approximately 5-10 minutes is required).

If, after following the preceding instructions, the engine does not start, have it checked by your Authorized Tecumseh Service Outlet.

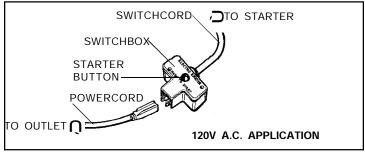


Figure 4

STOPPING

A BEFORE STOPPING:

- A. Run engine for a few minutes to help dry off any moisture on engine.
- B. To help avoid possible freeze-up of starter, proceed as follows:

RECOIL STARTER:

With engine running, pull starter rope with a rapid continuous full arm stroke three or four times.

NOTE: The unusual sound made by pulling starter rope will not harm engine or starter.

ELECTRIC STARTER:

- 1. Connect power cord to switchbox, then to wall outlet.
- 2. With engine running, push starter button and spin starter for several seconds.

NOTE: The unusual sound made by spinning starter will not harm engine or starter.

3. Disconnect power cord from receptacle first, and then from switchbox.

Move remote control on equipment or any ignition stop switch on engine to "STOP" or "OFF" position (see equipment manufacturer's instructions).

AFTER ENGINE IS STOPPED:



DISCONNECT SPARK PLUG WIRE FROM SPARK PLUG AND KEEP IT AWAY FROM SPARK PLUG



TURN IGNITION SWITCH KEY (IF SO EQUIPPED) TO "OFF" POSITION AND REMOVE KEY FROM SWITCH. THIS WILL REDUCE THE POSSIBILITY OF UNAUTHO-RIZED STARTING OF ENGINE WHILE EQUIPMENT IS **NOT IN USE.**



NEVER STORE ENGINE WITH FUEL IN TANK IN-DOORS OR IN ENCLOSED, POORLY VENTILATED AREAS, WHERE FUEL FUMES MAY REACH AN OPEN FLAME, SPARK OR PILOT LIGHT AS ON A FURNACE, WATER HEATER, CLOTHES DRYER OR OTHER GAS APPLIANCE.

MAINTENANCE





A SPARK PLUG (see Figure 5):

This spark ignition system meets all requirements of the Canadian Interference-Causing Equipment Regulations. This engine complies with all current Australian and New Zealand limitations regarding electromagnetic interference.

Check spark plug yearly or every 100 operating hours.

- Clean area around spark plug.
- B. Remove and inspect spark plug.
- Replace spark plug if electrodes are pitted, burned or porcelain is cracked. For replacement use Champion RCJ8Y or equivalent.

NOTE: A resistor spark plug must be used for replacement.

- Check electrode gap with wire feeler gauge and set gap at .030 if necessary.
- Install spark plug, tighten securely.

MAINTENANCE (Continued)

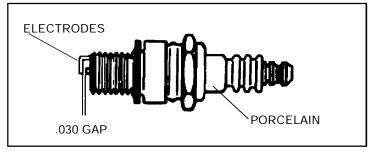


Figure 5

A MUFFLER AND CYLINDER EXHAUST PORTS:

The muffler, cylinder exhaust and compression release ports re quire cleaning after 75 to 100 hours of operation. For this maintenance procedure we recommend that you take your engine to your Authorized Tecumseh Service Dealer.



CHECK ENGINE AND EQUIPMENT OFTEN FOR LOOSE NUTS, BOLTS AND ATTACHMENTS AND KEEP THESE ITEMS TIGHTENED.

ADJUSTMENTS

DO NOT MAKE UNNECESSARY ADJUSTMENTS. FACTORY SETTINGS ARE SATISFACTORY FOR MOST CONDITIONS.

A CARBURETOR:

If you think your carburetor needs adjusting, see your nearest AUTHORIZED TECUMSEH SERVICE OUTLET. Engine performance should not be affected at altitudes up to 7,000 feet. For operation at higher elevations, contact your AUTHO-RIZED TECUMSEH SERVICE OUTLET.

A ENGINE SPEED:



NEVER TAMPER WITH ENGINE GOVERNOR WHICH IS FACTORY SET FOR PROPER ENGINE SPEED. **OVERSPEEDING ENGINE ABOVE FACTORY HIGH SPEED** SETTING CAN BE DANGEROUS. CHANGING OF ENGINE GOVERNED SPEED WILL VOID ENGINE WARRANTY.

For engine adjustments and/or repairs not covered in this "OPERA-TOR'S MANUAL" see "WARRANTY & REPAIR" on Page 6.

STORAGE



NEVER STORE ENGINE WITH FUEL IN TANK INDOORS OR IN ENCLOSED, POORLY VENTILATED AREAS, WHERE FUEL FUMES MAY REACH AN OPEN FLAME, SPARK OR PILOT LIGHT AS ON A FURNACE, WATER HEATER, CLOTHES DRYER OR OTHER GAS APPLIANCE.

IF ENGINE IS TO BE UNUSED FOR 30 DAYS OR MORE, PRE-PARE AS FOLLOWS:

A DRAIN FUEL SYSTEM:

Remove all gasoline from carburetor and fuel tank to prevent gum deposits from forming on these parts and causing possible malfunction of engine.



DRAIN FUEL INTO APPROVED CONTAINER OUT-DOORS, AWAY FROM OPEN FLAME, BE SURE **ENGINE IS COOL. DO NOT SMOKE.**

Run engine until fuel tank is empty and engine stops due to lack of fuel.

NOTE:

If "Gasohol" has been used, complete above instructions and then put 1/2 pint of gasoline properly mixed with oil per FUEL MIX CHART on Page 2 into fuel tank and repeat above instructions.

NOTE: Tecumseh "SMART START™" gasoline preservative and stabilizer is an acceptable alternative in minimizing the formation of fuel gum deposits during storage. Add stabilizer to gasoline in fuel tank or storage container. Always follow mix ratio found on stabilizer container. Run engine at least 10 minutes after adding stabilizer to allow it to reach carburetor.

STORAGE (Continued)



A DRAIN CARBURETOR (if so equipped):

Drain carburetor by pressing upward on bowl drain (see Figure 6), which is located below carburetor (see Figure 1).



DRAIN FUEL INTO APPROVED CONTAINER OUTDOORS, AWAY FROM OPEN FLAME. BE SURE ENGINE IS COOL. DO NOT SMOKE.

NOTE: Do not drain carburetor if using fuel stabilizer.

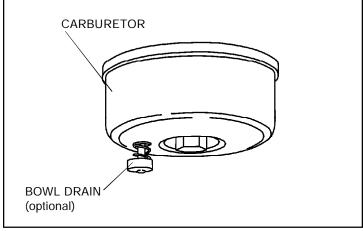


Figure 6

A CYLINDER BORE:

- Pull starter handle slowly until resistance is felt due to compression pressure, then stop.
- Release starter tension slowly to prevent engine from reversing due to compression pressure. The position will close both the intake and exhaust ports to prevent corrosion of the piston and cylinder bore.

WARRANTY AND REPAIR



For engine adjustment, repairs, or warranty service not covered in this manual, contact you nearest AUTHORIZED TECUMSEH SERVICE OUTLET. It is listed in your telephone book yellow pages under "Engines, Gasoline."

If you have a general understanding of internal combustion engines and wish to repair and service your engine yourself, a "MECHANICS HANDBOOK" which covers repairs and adjustments not covered in this OPERATOR'S MANUAL is available from your AUTHORIZED TECUMSEH SERVICE OUTLET. Order as Part No. 692508 (HSK600) or 694988 (HSK840).

Tecumseh manufactures and is responsible only for the engine used on this power equipment. If repair or service is needed for unit, other than engine, contact service source as recommended by equipment manufacturer.

Warranty requirements for engines sold outside of the USA may vary from country to country. For warranty details for your specific country, contact your national Tecumseh Service Distributor. If help is needed in locating your national service distributor, you may contact Tecumseh c/o International Service Coordinator, Engine & Transmission Group Service Division, 900 North Street, Grafton, Wisconsin USA 53024-1499. Telephone in USA is 414-377-2700.



LIMITED WARRANTY FOR NEW TECUMSEH ENGINES AND ELECTRONIC IGNITION MODULES

For the time period shown below from the date of purchase, Tecumseh Products Company will, at its option as the exclusive remedy, either repair or replace for the original purchaser, free of charge, any part of any new Tecumseh engine which is found, upon examination by any Tecumseh Authorized Service Outlet or by Tecumseh's factory in Grafton, Wisconsin, to be **DEFECTIVE IN MATERIAL AND/OR WORKMANSHIP**, except as provided below. This Limited Warranty **DOES NOT COVER** (i) any Tecumseh engine or part(s) thereof used to power any vehicle in competitive racing and/or used on any commercial or rental track, or (ii) defects or damage caused by alterations or modifications of new Tecumseh engines or parts or by normal wear, accidents, improper maintenance, improper use or abuse of the product, or failure to follow the instructions contained in an Instruction Manual for the operation of the new Tecumseh engine or part. The cost of normal maintenance or replacement of service items which are not defective shall be paid for by the original purchaser. At the time warranty service is requested, evidence must be presented of the date of purchase by the original purchaser. Any charge for making service calls and/or for transporting any engine or part(s) thereof to and from the place where the inspection and/or warranty work is performed is payable solely by the purchaser. The purchaser is responsible for any damage or loss incurred in connection with the transportation of any engine or part(s) thereof submitted for inspection and/or warranty work. **WARRANTY SERVICE CAN ONLY BE PERFORMED BY A TECUMSEH AUTHORIZED SERVICE OUTLET OR BY TECUMSEH AT ITS FACTORY IN GRAFTON, WISCONSIN.** Warranty service can be arranged by contacting either a Tecumseh Authorized Service Outlet (any Tecumseh Registered Service Dealer, Tecumseh Master Service Dealer, Tecumseh Contral Warehouse Distributor) or by contacting Tecumseh Co Service Manager, Engine and Transmission Group Service Division, 900 North Street, Grafton, Wisconsin 53024-1499.

ENGINE WARRANTY PERIOD					
	"CONSUM	ER USE" +	"COMMERCIAL USE" ++		
Warranty Category†	Within U.S.A. and Canada	Outside U.S.A. and Canada	Within USA and Canada	Outside USA and Canada	
(A)	90 day	90 day	No Warranty	No Warranty	
(B)	1 Year	1 Year	1 Year	1 Year	
(C)	2 Years	1 Year	1 Year	1 Year	
(D)	2 Years	2 Years**	1 Year	1 Year	
(E)	2 Years	2 Years	1 Year	1 Year	
(H)	2 'n 10*	2 'n 10*	1 Year	1 Year	
(K)	2 'n 10*	2 'n 10*	2 'n 10*	1 Year	

- 2 years on engine, 10 years on electronic ignition.
- ** 1 year for Australia/New Zealand for rotary mower engines.
- + For purposes of this warranty policy, "consumer use" shall mean consumer's personal, residential, household use by the original retail purchaser.
- ++ For purposes of this warranty policy, "commercial use" shall mean all other uses, including use for commercial, income producing, or rental purposes. †The engine warranty category of your engine can be determined by review of the engine model number on the "Important Engine Information" decal. One letter in the engine model number will be surrounded by parens (A), (B), (C), (D), (E), (H) or (K) and that letter is your engine warranty category designation. IN CALIFORNIA ONLY, THIS EXPRESS WARRANTY IS SUPPLEMENTED BY THE TECUMSEH CALIFORNIA EMISSION CONTROL WARRANTY STATEMENT.

THIS EXPRESS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. Neither Tecumseh nor any of its affiliates makes any warranties, representations, or promises, written or oral, as to the quality of the engine or any of its parts, other than as set forth herein. ANY IMPLIED WARRANTY OF MARKETABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT THAT EITHER MAY APPLY TO ANY TECUMSEH ENGINE OR PART(S) THEREOF, SHALL BE LIMITED IN DURATION TO THE PERIODS OF THE EXPRESS WARRANTIES SHOWN IN THE WARRANTY PERIOD CHART ABOVE AND TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED. IN NO EVENT WILL TECUMSEH BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES AND/OR EXPENSES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you. This Limited Warranty gives you specific legal rights and you may also have other legal rights which vary from state-to-state.

6-1-95

FILL IN:					EXAMPLE: HSK600	1620S	(D)	5213G
	ENGINE	SPEC.	WARRANTY	SERIAL	ENGINE	SPEC.	WARRANTY	SERIAL
	MODEL	NUMBER	PERIOD	NUMBER	MODEL	NUMBER	PERIOD	NUMBER



TECUMSEH PRODUCTS COMPANY

Engine & Transmission Service Group Service Division • 900 North Street • Grafton, WI, USA • 53024-1499

CALIFORNIA & US EPA EMISSION CONTROL WARRANTY STATEMENT

The U. S. Environmental Protection Agency ("EPA"), the California Air Resources Board ("CARB") and Tecumseh Products Co. are pleased to explain the Federal and California Emission Control Systems Warranty on your new utility or lawn and garden equipment engine. In California, new 1995 and later utility and lawn and garden equipment engines must be designed, built and equipped to meet the State's stringent anti-smog standards. In other states, new 1997 and later model year engines must be designed, built and equipped, at the time of sale, to meet the U.S. EPA regulations for small non-road engines. Tecumseh Products Co. will warrant the emission control system on your utility or lawn and garden equipment engine for the periods of time listed below, provided there has been no abuse, neglect, unapproved modification, or improper maintenance of your utility or lawn and garden equipment engine.

Your emission control system may include parts such as the carburetor, ignition system and exhaust system. Also included may be the compression release system and other emission-related assemblies.

Where a warrantable condition exists, Tecumseh Products Co. will repair your utility or lawn and garden equipment engine at no cost to you for diagnosis, parts and labor.

MANUFACTURER'S EMISSION CONTROL SYSTEM WARRANTY COVERAGE

Emission control systems on 1995 and later model year California utility and lawn and garden equipment engines are warranted for two years as hereinafter noted. In other states, 1997 and later model year engines are also warranted for two years. If, during such warranty period, any emission-related part on your engine is defective in materials or workmanship, the part will be repaired or replaced by Tecumseh Products Co.

OWNER'S WARRANTY RESPONSIBILITIES

As the utility or lawn and garden equipment engine owner, you are responsible for the performance of the required maintenance listed in your Owner's Manual, but Tecumseh Products Co. will not deny warranty solely due to the lack of receipts or for your failure to provide written evidence of the performance of all scheduled maintenance.

As the utility or lawn and garden equipment engine owner, you should, however, be aware that Tecumseh Products Co. may deny you warranty coverage if your utility or lawn and garden equipment or a part thereof has failed due to abuse, neglect, improper maintenance or unapproved modifications.

You are responsible for presenting your utility or lawn and garden equipment engine to a Tecumseh Authorized Service Outlet (any Tecumseh Registered Service Dealer, Tecumseh Authorized Service Distributor or Tecumseh Central Warehouse Distributor) as soon as a problem exists. The warranty repairs should be completed in a reasonable amount of time, not to exceed 30 days.

Warranty service can be arranged by contacting either a Tecumseh Authorized Service Outlet or by contacting Tecumseh Products Co., c/o Service Manager, Engine and Transmission Group Service Division, 900 North Street, Grafton, WI 53024-1499. Telephone 1-414-377-2700, or see your local telephone yellow pages under "Engines, Gasoline" for the name, address and telephone number of a Tecumseh Authorized Service Outlet near you.

IMPORTANT NOTE

This warranty statement explains your rights and obligations under the Emission Control System Warranty ("ECS Warranty") which is provided to you by Tecumseh Products Co. pursuant to California law. Tecumseh Products Co. also provides to original purchasers of new Tecumseh Products Co. engines. The Tecumseh Products Co. Limited Warranties for New Tecumseh Engine and Electronic Ignition Modules ("Tecumseh Products Co. Warranty") which is enclosed with all new Tecumseh Products Co. engines on a separate sheet. The ECS Warranty applies only to the emission control system of your new engine. To the extent that there is any conflict in terms between the ECS Warranty and the Tecumseh Products Co. Warranty, the ECS Warranty shall apply except in any circumstances in which the Tecumseh Products Co. Warranty may provide a longer warranty period. Both the ECS Warranty and the Tecumseh Products Co. Warranty describe important rights and obligations with respect to your new engine.

Warranty service can only be performed by a Tecumseh Products Co. Authorized Service Outlet, or by Tecumseh Products Co. at its factory in Grafton, WI. At the time of requesting warranty service, evidence must be presented of the date of sale to the original purchaser. The purchaser shall pay any charges for making service calls and/or for transporting the products to and from the place where the inspection and/or warranty work is performed. The purchaser shall be responsible for any damage or loss incurred in connection with the transportation of any engine or any part(s) thereof submitted for inspection and/or warranty work.

If you have any questions regarding your warranty rights and responsibilities, you should contact Tecumseh Products Co. at 1-414-377-2700.

EMISSION CONTROL SYSTEM WARRANTY

Emission Control System Warranty ("ECS Warranty") for 1995 and later model year California utility and lawn and garden equipment engines (for other states, 1997 and later model year engines):

- A.APPLICABILITY: This warranty shall apply to 1995 and later model year California utility and lawn and garden equipment engines (for other states, 1997 and later model year engines). The ECS Warranty Period shall begin on the date the new engine or equipment is delivered to its original, end-use purchaser, and shall continue for 24 consecutive months thereafter.
- B.GENERAL EMISSIONS WARRANTY COVERAGE: Tecumseh Products Co. warrants to the original, end-use purchaser of the new engine or equipment and to each subsequent purchaser that each of its utility and lawn and garden equipment engines is:
 - 1. Designed, built and equipped so as to conform with all applicable regulations adopted by the Air Resources Board pursuant to its authority in Chapters 1 and 2, Part 5, Division 26 of the Health and Safety Code, and
 - 2. Free from defects in materials and workmanship which, at any time during the ECS Warranty Period, will cause a warranted emissions-related part to fail to be identical in all material respects to the part as described in the engine manufacturer's application for certification.
- C. The ECS Warranty only pertains to emissions-related parts on your engine, as follows:
 - 1. Any warranted, emissions-related parts which are not scheduled for replacement as required maintenance in the Owner's Manual shall be warranted for the ECS Warranty Period. If any such part fails during the ECS Warranty Period, it shall be repaired or replaced by Tecumseh Products Co. according to Subsection 4 below. Any such part repaired or replaced under the ECS Warranty shall be warranted for any remainder of the ECS Warranty Period.
 - 2. Any warranted, emissions-related part which is scheduled only for regular inspection as specified in the Owner's Manual shall be warranted for the ECS Warranty Period. A statement in such written instructions to the effect of "repair or replace as necessary", shall not reduce the ECS Warranty Period. Any such part repaired or replaced under the ECS Warranty shall be warranted for the remainder of the ECS Warranty Period.
 - 3. Any warranted, emissions-related part which is scheduled for replacement as required maintenance in the Owner's Manual, shall be warranted for the period of time prior to the first scheduled replacement point for that part. If the part fails prior to the first scheduled replacement, the part shall be repaired or replaced by Tecumseh Products Co. according to Subsection 4 below. Any such emissions-related part repaired or replaced under the ECS Warranty, shall be warranted for the remainder of the ECS Warranty Period prior to the first scheduled replacement point for such emissions-related part.
 - 4. Repair or replacement of any warranted, emissions-related part under this ECS Warranty shall be performed at no charge to the owner at a Tecumseh Authorized Service Outlet.
 - 5. The owner shall not be charged for diagnostic labor which leads to the determination that a part covered by the ECS Warranty is in fact defective, provided that such diagnostic work is performed at a Tecumseh Authorized Service Outlet.
 - 6. Tecumseh Products Co. shall be liable for damages to other original engine components or approved modifications proximately caused by a failure under warranty of an emission-related part covered by the ECS Warranty.
 - 7. Throughout the ECS Warranty Period, Tecumseh Products Co. shall maintain a supply of warranted emission-related parts sufficient to meet the expected demand for such emission-related parts.
 - 8. Any Tecumseh Products Co. authorized and approved emission-related replacement part may be used in the performance of any ECS Warranty maintenance or repair and will be provided without charge to the owner. Such use shall not reduce Tecumseh Products Co. ECS Warranty obligations.
 - 9. Unapproved add-on or modified parts may not be used to modify or repair a Tecumseh Products Co. engine. Such use voids this ECS Warranty and shall be sufficient grounds for disallowing an ECS Warranty claim. Tecumseh Products Co. shall not be liable hereunder for failures of any warranted parts of a Tecumseh Products Co. engine caused by the use of such an unapproved add-on or modified part.

EMISSION-RELATED PARTS INCLUDE THE FOLLOWING:

- 1. Carburetor Assembly and its Internal Components
 - a) Fuel filter
 - b) Carburetor gaskets
 - c) Intake pipe
- 2. Air Cleaner Assembly
 - a) Air filter element
- 3. Ignition System, including:
 - a) Spark plug
 - b) Ignition module
 - c) Flywheel assembly

- 4. Catalytic Muffler (if so equipped)
 - a) Muffler gasket (if so equipped)
 - b) Exhaust manifold (if so equipped)
- 5. Crankcase Breather Assembly and its Components
 - a) Breather connection tube

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com