 


vtech®

User's Manual

SWITCH & GO DINOS®

AKUNA THE VELOCIRAPTOR™

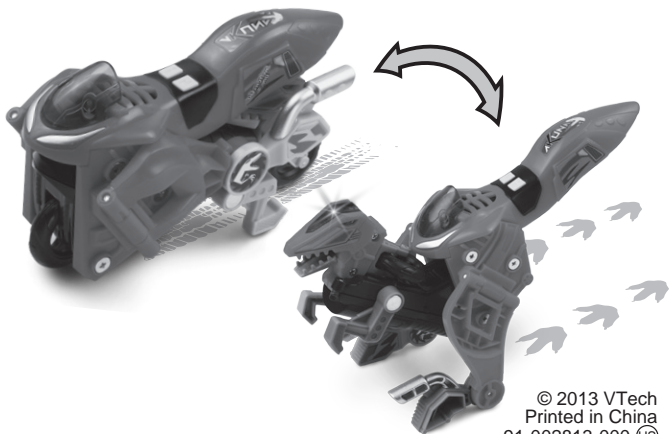

© 2013 VTech
Printed in China
91-002813-000 (US)

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.



Hi Friend,

You're about to embark on a "dino-mite" adventure with me, **Akuna the Velociraptor™**! Just so you know, I've been specially created just for you and am part of the **VTech® Switch & Go Dinos®** crew! **Switch & Go Dinos®** are a special breed of dinosaurs that transform from vehicle to dino in a few easy steps. You're going to love playing with me!

Not only can you help me do some wicked transformations, but you can help me do other cool things, too! Try pushing me on the ground or pressing a button and you'll hear me make awesome sounds! Press another button to hear me talk, and I'll tell you all about my wild life as a dinosaur! Maybe you'll even learn a thing or two.

For more fun, be sure to check out the rest of the **Switch & Go Dinos®** crew (each sold separately)! And remember, with me you're in for some dino switchin', road racing fun!

Your pal,

Akuna the Velociraptor™

INTRODUCTION

Hiii-yaaa! I am **Akuna the Velociraptor™**, and my ninja fighting skills will amaze you! I use my lightning fast speed to outrun my prey. And when I catch them, watch out! I have a long, curved claw on each foot that can end a fight with one strike.

But I've saved my most impressive skill for last. I can change shape and transform into a motorcycle! Now watch me disappear! Vroom, vroom! Sayonara!



On/Off Switch & Volume Control

Sound Button

Light-up
Eyes

Talk Button



INCLUDED IN THIS PACKAGE

- One VTech® SWITCH & GO DINOS®: Akuna the Velociraptor™
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

 
NOTE:

Please keep the user's manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Install 1 new "AA" (LR6/AM-3) battery following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover to secure it.

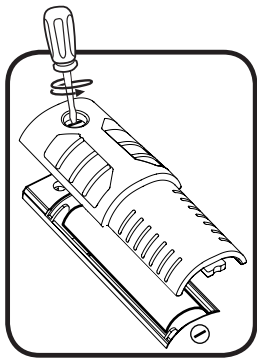

NOTE:

When the battery runs low, the toy will no longer respond. If this happens, please replace the battery.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

PRODUCT FEATURES

1. ON/OFF SWITCH & VOLUME CONTROL

This product has a single switch that turns the unit **ON** or **OFF** and controls the volume.

 
To turn the unit **ON** or adjust the volume, slide the switch to Low/High.

To turn the unit **OFF**, slide the switch to **OFF**.



2. TALK BUTTON

Press the **Talk Button** to hear the dino or driver talk.

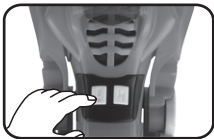

3. SOUND BUTTON

 
Press the **Sound Button** to hear cool sound effects.




4. AUTOMATIC SHUT-OFF

To preserve battery life, the unit will automatically power-off after several minutes without input.


HOW TO SWITCH THE DINO TO A MOTORCYCLE

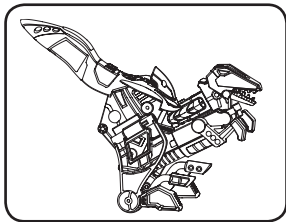

 
1. Dinosaur shape.

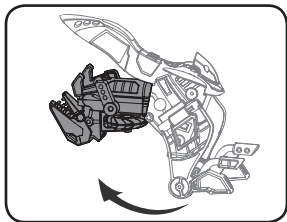

 
2. Rotate the body all the way back until it meets the tail.

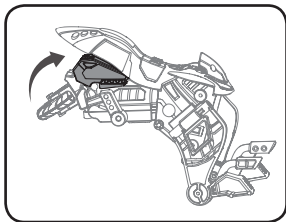

 
3. Move the head forward as far as it will go.

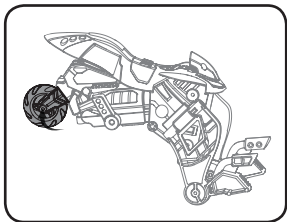

 
4. Turn the back wheel 90 degrees.

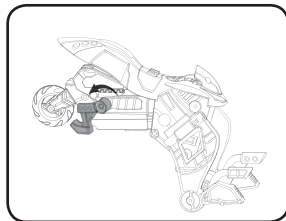

 
5. Pull down the kickstands so that the motorcycle can stand up.

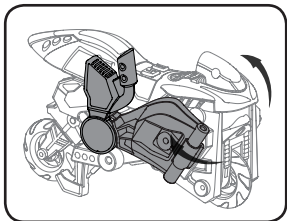

 6. Flip the legs up.

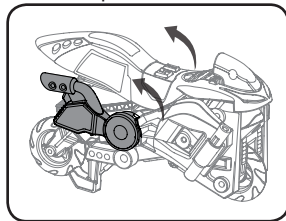

 7. Move the tail pipes down.

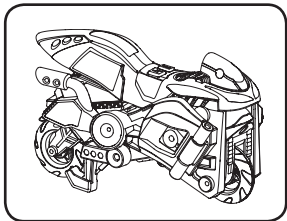

8. Motorcycle shape.

Note:

To change the motorcycle back into a dino, reverse the order of the steps above.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

NOTE:

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, it may cause interference to radio and television reception. It has been type tested and found to comply within the limits for a Class B computing device in accordance with the specifications in Sub-part J of Part 15 FCC rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference
Download from www.Somanuals.com. All Manuals Search And Download.

will not occur in a particular installation. If this equipment does cause interference with radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

CLASS 1
LED PRODUCT

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>