



User's Manual

Touch & Swipe Baby Phone™



© 2013 VTech
Printed in China
91-002845-000 (USA)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**® created the **Infant Learning**® series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**® with the important job of helping your child learn and grow!

Sincerely,

Your friends at **VTech**®

To learn more about the **Infant Learning**® series and other **VTech**® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Touch & Swipe Baby Phone™** learning toy!

The **Touch & Swipe Baby Phone™** by **VTech®** introduces baby to the smartphone world. Special apps allow baby to call home or animal friends, check the weather or even organize their day just like mom and dad.



INCLUDED IN THIS PACKAGE

- One **Touch & Swipe Baby Phone™**
- One user's manual

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

 
NOTE:

Please keep this instruction manual as it contains important information.

INSTRUCTIONS

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. Install 2 new 'AAA' (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure the battery cover.

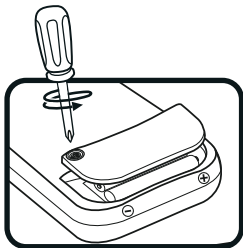


BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
 - Use only batteries of the same or equivalent type as recommended.
 - Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
 - Do not use damaged batteries.
 - Insert batteries with the correct polarity.
 - Do not short-circuit the battery terminals.
 - Remove exhausted batteries from the toy.
 - Remove batteries during long periods of non-use.
 - Do not dispose of batteries in fire.
 - Do not charge non-rechargeable batteries.
 - Remove rechargeable batteries from the toy before charging (if removable).
 - Rechargeable batteries are only to be charged under adult supervision.
- Downloaded from www.Somanuals.com. All Manuals Search And Download.

PRODUCT FEATURES

1. ON/OFF SWITCH

 To turn the unit **ON**, slide the **ON/OFF SWITCH** to the **ON** (⏻) position. To turn the unit **OFF**, slide the **ON/OFF SWITCH** to the **OFF** (●) position.

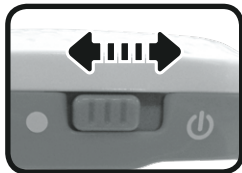


2. AUTOMATIC SHUT-OFF

To preserve the battery life, the **VTech® Touch & Swipe Baby Phone™** will automatically power-down after approximately 18 seconds without input. The unit can be turned on again by sliding the mode switch or pressing any of the three buttons below the touch screen.

3. MODES OF PLAY

 Switch between Apps Mode and Music Mode by sliding the mode switch left or right.

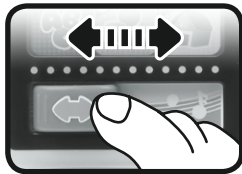

4. APPS MODE

 
TOUCH SCREEN ICONS

Press the 12 touch screen apps icons for pretend play and to learn about letters, numbers, shapes and more. These icons also act as phone keys to dial numbers. Slide your finger on the touch screen continuously for playful sound effects with various light patterns.



HOME ICON

You can record a special number to the **Touch & Swipe Baby Phone™**. Press and hold the home icon (🏠) for three seconds, then dial the number you want to record. Press the star button to save the number. After recording, press the home icon again to play the saved number.

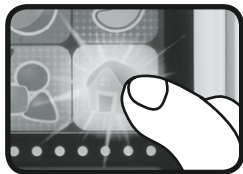

5. MUSIC MODE

TOUCH SCREEN ICONS

Press the music note and instrument icons to hear short tunes and sounds from different instruments.



PLAY PREVIOUS/PLAY & PAUSE/PLAY NEXT BUTTON

Press the **Play Previous** button (◀) to play the previous melody or song. Press the **Play/Pause** button (▶) to play or pause the melody or song. Press the **Play Next** button (▶) to play the next melody or song.



6. ADDITIONAL FUN ACTIVITIES

 
STAR BUTTON

When you press the **star button** (★), you will be asked to touch the flashing light. Touching the correct icon will result in rewarding sound effects.



CALL & HANG-UP BUTTONS

Press the **call** (☎) and **hang-up** (☎) buttons to imitate using the phone for calls.

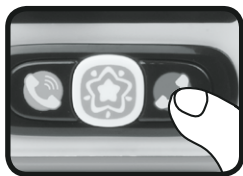

MELODY LIST

1. Mary Had a Little Lamb
2. Teddy Bears' Picnic
3. Pat-a-Cake
4. Here We Go 'Round the Mulberry Bush
5. Yankee Doodle
6. A-Tisket, A-Tasket
7. Camptown Races
8. Bingo
9. Polly Put the Kettle On
10. London Bridge

SONG LYRICS

SONG 1

Hello, hello! It's learning on the go!

SONG 2

Music? Check! Dancing's in effect!

SONG 3

One, one two, one two three four five. Six, seven, eight and nine.

SONG 4

Circle, square, triangle, all these shapes are wonderful.

SONG 5

Wake up. Wake up. The sun is rising. Good morning!

SONG 6

A-B-C, sing with me!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call VTech® at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)



**CLASS 1
LED PRODUCT**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>