



# User's Manual

## Count & Colors Bouncing Frog™



© 2013 VTech  
Printed in China  
91-002954-000 (S)

Dear Parent,

Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, **VTech**<sup>®</sup> created the **Infant Learning**<sup>®</sup> series of toys.

These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, **VTech**<sup>®</sup>'s **Infant Learning**<sup>®</sup> toys develop baby's mental and physical abilities by inspiring, engaging and teaching.

At **VTech**<sup>®</sup>, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**<sup>®</sup> with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at **VTech**<sup>®</sup>

To learn more about the **Infant Learning**<sup>®</sup> series and other **VTech**<sup>®</sup> toys, visit [www.vtechkids.com](http://www.vtechkids.com)

# INTRODUCTION


Thank you for purchasing the **VTech® Count & Colors Bouncing Frog™** learning toy!

Get baby hopping while learning with the **Count & Colors Bouncing Frog™** by **VTech®**! This cute frog-designed bouncer lets your little one leap into learning early language skills about colors, insects, music and more. The **Count & Colors Bouncing Frog™** rewards your child's movements with plenty of engaging songs and sounds while enhancing their coordination, motor and balancing skills. Get ready for some amphibious fun ... it's time to bounce!

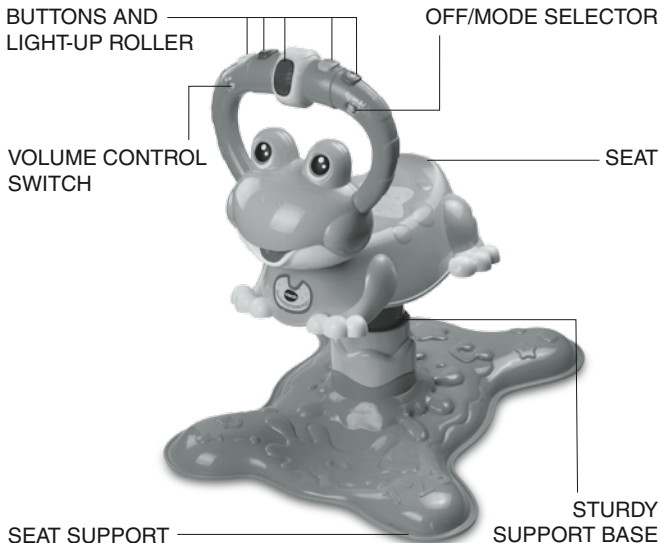

# INCLUDED IN THIS PACKAGE

 - One VTech® Count & Colors Bouncing Frog™
- One electronic frog head
- One frog seat

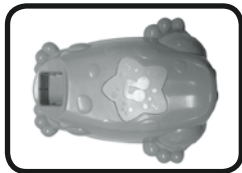

- One sturdy support base
- One seat support



- One instruction manual

## WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

## ATTENTION:

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

## NOTE:

 
Please keep this instruction manual as it contains important information.

Download from [Www.Somanuals.com](http://Www.Somanuals.com). All Manuals Search And Download.

# INSTRUCTIONS

## BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the head. Use a screwdriver to loosen the screw.
3. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

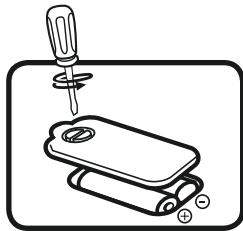

## BATTERY NOTICE

 
 
 
- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).

- Rechargeable batteries are only to be charged under adult supervision.

# PRODUCT ASSEMBLY

With the **VTech® Count & Colors Bouncing Frog™**, safety comes first. To ensure your child's safety, adult assembly is required. Product should only be used under adult supervision.

1. Insert the seat support into the bottom of the seat. You will hear a loud 'click' sound, which indicates that the seat support is securely fixed into the seat.
2. Insert the other side of seat support into the recessed slot of the support base. Again, once the seat support is securely in place, you should hear a loud 'click.'
3. Insert the electronic frog head into the corresponding slot of the seat. Once the electronic head is securely in place, you should hear a loud 'click.'

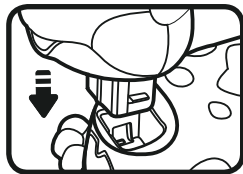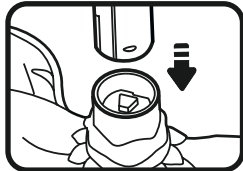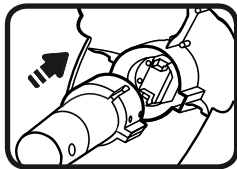

## WARNING:


 
**Not to be used by children over 36 months. Insufficient strength. Regularly check for signs of wear and tear on the snap-in or locking devices. If damaged do not use until repaired or replaced.**

## ATTENTION:

**Nedoit pas être utilisé par des enfants de plus de 36 mois pour cause de résistance insuffisante. Vérifier que les grosses vis vertes sont fermement serrées avant chaque utilisation.**

# PRODUCT FEATURES

## 1. OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **OFF/MODE SELECTOR SWITCH** to the **LEARNING MODE** (  ) or **MUSIC MODE** (  ) position. To turn the unit **OFF**, slide the **OFF/MODE SELECTOR SWITCH** to the **OFF** ( **OFF** ) position.



## 2. LIGHT-UP ROLLER

Spin the roller to hear fun phrases, sounds, sing-along songs and short tunes. When melodies are playing, pressing buttons will interrupt the melodies to play the buttons' responses.



## 3. AUTOMATIC SHUT-OFF

 
To preserve battery life, the **VTech® Count & Colors Bouncing Frog™** will automatically power-down after approximately 30 seconds without input. The unit can be turned on again by any input.

# ACTIVITIES


1. Slide the **OFF/MODE SELECTOR SWITCH** to turn the unit ON. You will hear fun sounds, a song and a phrase and sound effect. The light will flash with the sound.




2. Press the **4 INSECT BUTTONS** to hear fun sounds, melodies, and phrases. In Learning Mode, pressing the buttons will teach colors and insects. In Music Mode, pressing the buttons will play sing-along songs and fun sounds.

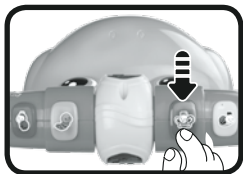

 3. Spin the **LIGHT-UP ROLLER** to hear fun sounds, melodies, and phrases. When melodies are playing, pressing buttons will interrupt melodies and play self response. The lights will flash with the sounds.

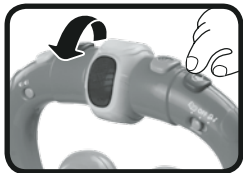

 4. Bounce on the **SEAT** to activate phrases and music. The lights will flash with the sounds.

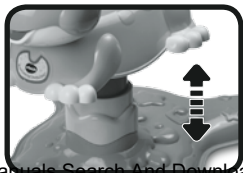



5. If there is no input after approximately 6 seconds, you will hear a fun sound and phrases. If there continues to be no input after another 6 seconds, you will hear a sung song and fun sound. If there continues to be no input after another 6 seconds, you will hear a closing short tune and the unit will automatically power down. The unit can be re-activated by pressing any button or spinning the roller.

## MELODY LIST

1. Pease Porridge Hot
2. Skip to My Lou
3. The Glow Worm
4. London Bridge
5. Hot Cross Buns
6. Polly Wolly Doodle
7. Shoo, Fly
8. Little Miss Muffet
9. Three Blind Mice
10. Bingo
11. Three Little Kittens
12. Teddy Bears Picnic
13. Mary Had a Little Lamb
14. Humpty Dumpty

## SONG LYRICS

### SONG 1

It's time to learn and bounce and play!  
Let's get started, hip, hip, hooray!

### SONG 2

Fly, purple butterfly, flying in the air.  
Can you see her, flying there?

### SONG 3

See the yellow snail, slowly moving by.  
When he takes a break, stop and say, "Hi."

### SONG 4

Bounce, bounce, up and down.  
Let's sing and bounce, all around!

## SONG 5

The red ladybug is ready to fly.  
Up, up she goes - she's flying high!

## SONG 6

The green worm inches back and forth, to and fro.

# CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call VTech® at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada.

### **IMPORTANT NOTE:**

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **Note:**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:  
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND  
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

*CAN ICES-3 (B)/NMB-3(B)*



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>