

vtech[®]

User's Manual

Touch & Teach Elephant[™]



© 2014 VTech

Printed in China

91-002924-000 ^{US}

Download from www.Somanuals.com. All Manuals Search And Download.

Dear Parent,

*Ever notice the look on your baby's face when they learn something new through their own discovery? These self-accomplished moments are a parent's greatest reward. To help fulfill them, VTech® created the **Infant Learning**® series of toys.*

*These unique interactive learning toys directly respond to what children do naturally – play! Using innovative technology, these toys react to baby's interactions, making each play experience fun and unique as they learn age-appropriate concepts like first words, numbers, shapes, colors and music. More importantly, VTech®'s **Infant Learning**® toys develop baby's mental and physical abilities by inspiring, engaging and teaching.*

At VTech®, we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting VTech® with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at VTech®

To learn more about VTech® toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Touch & Teach Elephant™** learning toy!

Go on an adventure with the **Touch & Teach Elephant™** by **VTech®** and learn numbers, letters, first words and more while exploring 16 interactive pages. Press the 8 number buttons to learn about animals, animal sounds, numbers and hear musical notes.

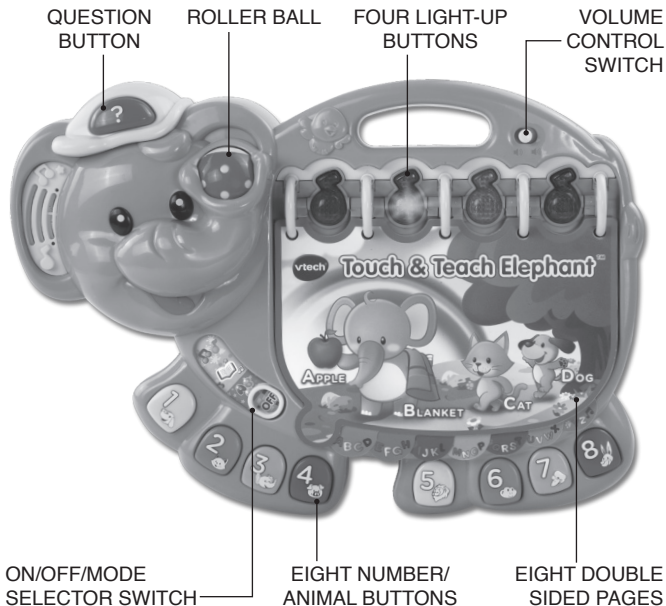

INCLUDED IN THIS PACKAGE

 
- One VTech® Touch & Teach Elephant™ learning toy
- One instruction manual

WARNING: All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

ATTENTION: Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches et étiquettes. Ils ne font pas partie du jouet.

NOTE: Please keep this instruction manual as it contains important information.

Unlock the packaging locks:

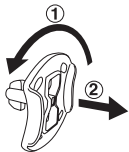


- ① Rotate the packaging lock counterclockwise 90 degrees.
- ② Pull out the packaging lock.

GETTING STARTED

BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a coin or a screwdriver to loosen the screw.
3. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)

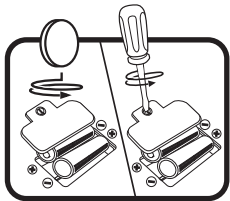

Download from www.Southern.com All Manuals Search And Download.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.



PRODUCT FEATURES

1. ON/OFF/MODE SELECTOR SWITCH

To turn the unit **ON**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **LETTER MODE**, **STORY MODE** or the **MUSIC MODE** position. To turn the unit **OFF**, slide the **ON/OFF/MODE SELECTOR SWITCH** to the **OFF** position.



2. VOLUME CONTROL SWITCH

Slide the **VOLUME CONTROL SWITCH** to the **LOW VOLUME** () or **HIGH VOLUME** () position to adjust the volume.



3. AUTOMATIC SHUT-OFF

 
To preserve battery life, the **VTech® Touch & Teach Elephant™** will automatically power-down after approximately 45 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Slide the **mode selector switch** to choose a mode of play. You will hear a cheerful song and an instructional phrase. The lights will flash along with the sounds.
2. Press the **light-up buttons** to do the following: learn letters, animals names and sounds, objects and more in Letter Mode; read interesting short stories with fun sounds and short tunes in Story Mode; and hear a variety of short tunes and melodies in Music Mode. In all modes, the lights will flash with the sounds.




3. Turn the **book pages** to hear magical sounds, short tunes, or some playful phrases, depending on the selected mode. The lights will flash along with the sounds.

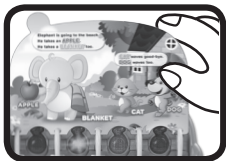

4. Press the **number/animal buttons** to do the following: learn numbers and counting 1 through 8 in Letter Mode; learn animal names and sound effects in Story Mode; and play piano notes in Music Mode. While a melody is playing, press the number buttons again to play the melody one note at a time. In all modes, the lights will flash with the sounds.



 5. Press the **question button** to hear random questions about numbers, letters, shapes, animals or objects, depending on the selected mode and page. Press the number/animal buttons or the light-up buttons to answer the questions. In all modes, the lights will flash with the sounds.

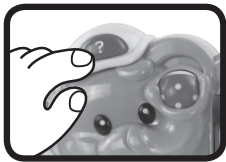

6. Spin the **roller ball** to hear fun sounds. The lights will flash along with the sounds.



MELODY LIST

1. Animal Fair
2. Teddy Bears' Picnic
3. The Entertainer
4. Camptown Races
5. While Strolling Through the Park
6. Yankee Doodle
7. A-Tisket, A-Tasket
8. Old MacDonald Had a Farm
9. Bicycle Built For Two
10. Oranges and Lemons
11. Ring Around the Rosy
12. Pop! Goes The Weasel
13. Three Little Kittens
14. Humpty Dumpty
15. Bear Went Over the Mountain
16. Little Bo Peep
17. The Mulberry Bush
18. Goosey Goosey Gander
19. Frog Went A Courtin'
20. This Little Piggy

SUNG SONG LYRICS

SONG 1

Elephant wants you to go on a learning adventure.
Open the book, there's lots to explore!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

For information on this product's warranty, please call **VTech**® at 1-800-521-2010 in the U.S., or 1-877-352-8697 in Canada.

IMPORTANT NOTE:

Creating and developing **Infant Learning** products is accompanied by a responsibility that we at **VTech**® take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>