

vtech[®]

User's Manual

Slide & Talk Smart Phone[™]



© 2010 VTech
Printed in China

91-002463-000-000 (美)

Dear Parent,

At **VTech**[®], we know how important the first day of school is for your child. To help prepare preschoolers for this important event, **VTech**[®] has developed the **Preschool Learning**[™] series of interactive toys.

Preschool Learning[™] features fun characters and inviting school themes that use technology to capture a child's attention and teach important preschool skills like spelling, counting and the alphabet. These vital skills are taught in a way that's both fun and highly engaging to maintain a child's interest. Children will also be introduced to fun school subjects such as art class, music class and even recess! With **Preschool Learning**[™], learning is fun from day one!

At **VTech**[®], we know that a child has the ability to do great things. That's why all of our electronic learning products are uniquely designed to develop a child's mind and allow them to learn to the best of their ability. We thank you for trusting **VTech**[®] with the important job of helping your child learn and grow!

Sincerely,

 
Your friends at **VTech**[®]

To learn more about **Preschool Learning**[™] series and other **VTech**[®] toys, visit www.vtechkids.com

INTRODUCTION

Thank you for purchasing the **VTech® Slide & Talk Smart Phone™**!

The **Slide & Talk Smart Phone™** is a fun, educational toy flip-phone with two great ways to play: Phone Mode, where you can learn numbers through role-play fun, and Message Mode, where you can learn letters while using the ABC keypad. With 8 fun-filled activities, a “friends” phonebook, great pre-set messages and fun melodies, the **Slide & Talk Smart Phone™** makes learning fun.

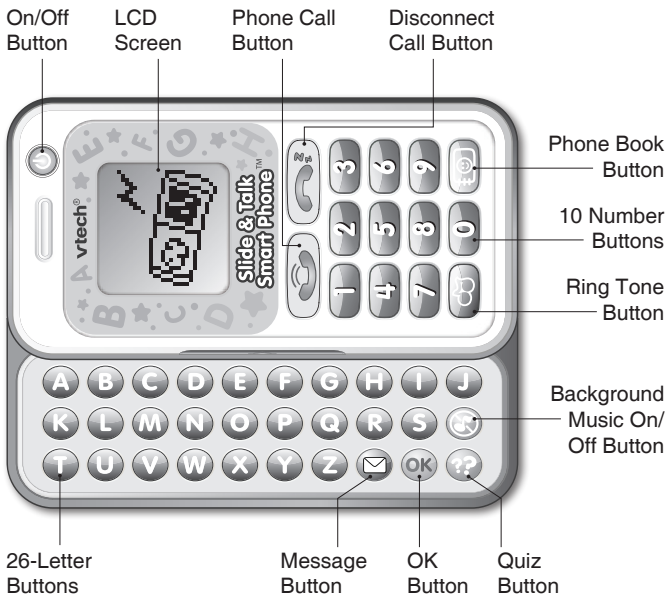

INCLUDED IN THIS PACKAGE

- One VTech® Slide & Talk Smart Phone™
- One user's manual

WARNING: All packing materials such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

DEMO STRIP REMOVAL:

 
When the product is taken out of the packaging, please remove the demo strip from the unit to activate normal play mode.

NOTE: Please keep instruction manual as it contains important information.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw.
3. Install 3 new "AAA" (LR03/AM-4) batteries following the diagram inside the battery box. (The use of new, alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

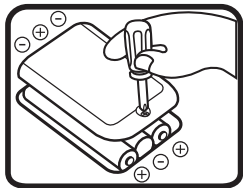

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.

• Non-rechargeable batteries are not to be recharged.

 
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

PRODUCT FEATURES

1. ON/OFF BUTTON

Press the **On/Off Button** to turn the unit on.
Press it again to turn the unit off.

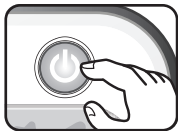

2. PHONE MODE/MESSAGE MODE

The toy is automatically in **Phone Mode** when the keypad is closed.

Slide the number keypad over to open the



ABC keypad. The toy will then be in **Message Mode** and the visual angle of the screen will change for easier viewing.

 
3. 10-NUMBER BUTTONS

Press the **Number Buttons** to learn numbers and count objects or answer the questions in the number-related activity.



4. 26-LETTER BUTTONS

Press the **Letter Buttons** to learn letters, or answer questions in the letter-related activities.

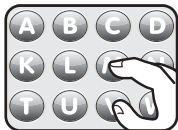

5. OK BUTTON

Press the **OK Button** to confirm the choice in the number-related activity or to send the message that you've typed or selected.



6. BACKGROUND MUSIC ON/OFF BUTTON

Press the **Background Music On/Off Button** to turn the background music on or off. The unit is set to play with background music turned on by default.



7. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech® Slide & Talk Smart Phone™** will automatically turn off after several minutes without input. The unit can be turned on again by pressing the **On/Off Button**.

ACTIVITIES

Phone Mode

Activity: Receive a Call

Somebody is calling! Press the green phone call button to answer the call when the phone is ringing.



Activity: Make a Call

Call your pal! Press the green phone call button at any time to call one of your pals whenever you want!



Activity: My Ring Tone

Press the blue ring tone button to hear some fun songs and watch the friendly owl dance.



Activity: Phone Book

Press the green phone book button to scroll through your pals and hear some fun information about each of them.



Activity: Number Explore

Press any of the 0-9 number buttons to learn the numbers and count some objects.



Message Mode

 
Activity: Message Fun

You've got a message from your pal! Watch the message, and then press the red message button to choose a pre-set message to send back, or press the Letter Buttons to type your own message and then press the OK Button to send it.



Activity: Capital Letters

Press any of the A-Z letter buttons to call the A-Z letter.

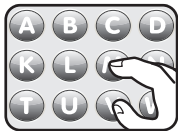

Activity: Quiz Time

Press the green quiz button to enter Quiz Time. Different questions will appear on screen and you will have to use the letter and number buttons to answer them.



CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, and a service representative will be happy to help you.

Note:

When you turn on the unit after this product is removed from the packaging, the volume in phone mode will be reduced to a level that complies with safety regulations for 'close-to-the-ear' toys for children ages 2+. The volume level of the product in phone mode is set higher when inside the packaging to enable the customer to hear the product demonstration better while in the store.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct.

Download from www.Somanuals.com. All Manuals Search And Download.

the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution : Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

IMPORTANT NOTE:

Creating and developing **Preschool Learning** products is accompanied by a responsibility that we at **VTech®** take very seriously. We make every effort to ensure the accuracy of the information that forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department at 1-800-521-2010 in the U.S. or 1-877-352-8697 in Canada, with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>