

VULCAN

INSTALLATION & OPERATION MANUAL

MG SERIES GAS RESTAURANT MODULAR RANGE

MODEL

<i>MG12</i>	<i>ML-52549</i>
<i>MG24</i>	<i>ML-52514</i>
<i>MG36</i>	<i>ML-52522</i>
<i>MG48</i>	<i>ML-52523</i>
<i>MG60</i>	<i>ML-52524</i>



VULCAN-HART COMPANY, P.O. BOX 696, LOUISVILLE, KY 40201-0696, TEL. (502) 778-2791

FORM 30832 Rev. E (Sept. 2000)

IMPORTANT FOR YOUR SAFETY

THIS MANUAL HAS BEEN PREPARED FOR PERSONNEL QUALIFIED TO INSTALL GAS EQUIPMENT, WHO SHOULD PERFORM THE INITIAL FIELD START-UP AND ADJUSTMENTS OF THE EQUIPMENT COVERED BY THIS MANUAL.

POST IN A PROMINENT LOCATION THE INSTRUCTIONS TO BE FOLLOWED IN THE EVENT THE SMELL OF GAS IS DETECTED. THIS INFORMATION CAN BE OBTAINED FROM THE LOCAL GAS SUPPLIER.

IMPORTANT

IN THE EVENT A GAS ODOR IS DETECTED, SHUT DOWN UNITS AT MAIN SHUT-OFF VALVE AND CONTACT THE LOCAL GAS COMPANY OR GAS SUPPLIER FOR SERVICE.

FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS OR LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.


WARNING

IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE PROPERTY DAMAGE, INJURY OR DEATH. READ THE INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS THOROUGHLY BEFORE INSTALLING OR SERVICING THIS EQUIPMENT.


IN THE EVENT OF A POWER FAILURE, DO NOT ATTEMPT TO OPERATE THIS DEVICE.

MG SERIES GAS RESTAURANT MODULAR RANGE MODELS


TOP VIEWS

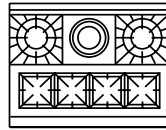


MG36ER

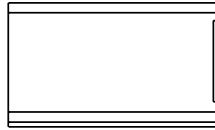


MG48Z
MG48ZT

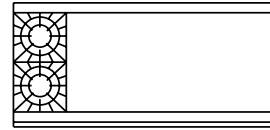


MG60Z
MG60ZT

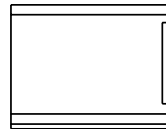


MG36X
MG36XT

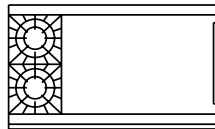


MG48X
MG48XT

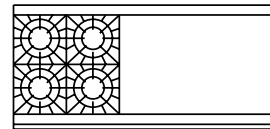


MG60X
MG60XT

 


MG24F
MG24FT

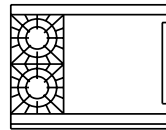


MG36F
MG36FT

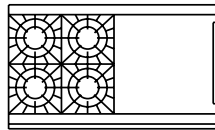


MG48F
MG48FT

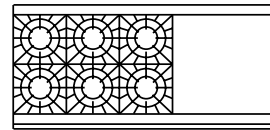


MG60F
MG60FT

 


MG24S
MG24ST

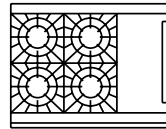


MG36S
MG36ST

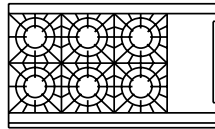


MG48S
MG48ST

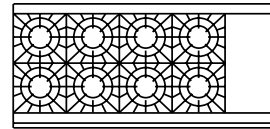


MG60S
MG60ST

 


MG12

 


MG24

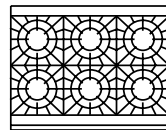

MG36

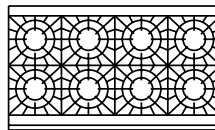

MG48

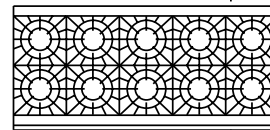


MG60


Indicates step up burner construction



 
MG12




MG24

 

MG36

 

MG48

 

MG60

PL-53565

FRONT VIEWS

MODEL SUFFIX DESIGNATIONS

S = 12" Griddle
F = 24" Griddle
X = 36" Griddle

Z = 48" Griddle
T = Thermostatic Control

NOTE:
RANGE MAY BE ORDERED WITH ONE 12" HOT TOP SECTION
IN PLACE OF TWO OPEN TOP BURNERS (FRONT TO REAR
ONLY)

TABLE OF CONTENTS

MG SERIES GAS RESTAURANT MODULAR RANGE MODELS	3
INSTALLATION	5
Uncrating	5
Location	5
Installation Codes and Standards	6
Assembly	6
Leveling	11
Gas Connections	11
Testing the Gas Supply System	12
Flue Connections	12
Lighting and Shutting Down Pilots	12
OPERATION	14
Controls	14
Before First Use	14
Preheating	14
Cleaning	14
MAINTENANCE	16
OPTIONAL FIELD INSTALLABLE ACCESSORIES	16

Installation, Operation and Care of MG SERIES GAS RESTAURANT MODULAR RANGE

KEEP THIS MANUAL FOR FUTURE REFERENCE

Vulcan ranges are produced with quality workmanship and material. Proper installation, usage and maintenance of your range will result in many years of satisfactory performance.

The manufacturer suggests that you thoroughly read this entire manual and carefully follow all of the instructions provided.

INSTALLATION

UNCRATING

This range was inspected before leaving the factory. The transportation company assumes full responsibility for safe delivery upon acceptance of the shipment. Immediately after unpacking, check for possible shipping damage. If the range is found to be damaged, save the packaging material and contact the carrier within 15 days of delivery.

Carefully uncrate range and place in a work-accessible area as near to its final installed position as possible. Remove all shipping wire and wood blocking.

Before installing, verify that the type of gas supply (natural or propane) agrees with the specifications on the rating plate located under the left-hand cooking top, mounted to the side wall of the range.

If the supply and equipment requirements do not agree, do not proceed with the installation. Contact your dealer or Vulcan-Hart Company immediately.

LOCATION

CAUTION: The equipment area must be kept free and clear of combustible substances.

A standard 20,000 BTU burner input range must have a minimum clearance from combustible construction of 6" (15 cm) at the sides and 6" (15 cm) at the rear.

A standard 26,000 BTU burner input range must have a minimum clearance from combustible construction of 10" (25 cm) at the sides and 6" (15 cm) at the rear.

Step-up ranges using 20,000 or 26,000 BTU input burners must have a minimum clearance from combustible construction of 10" (25 cm) at the sides and 6" (15 cm) at the rear.

The installation location must allow adequate clearances for servicing and proper operation.

The range must be installed so that the flow of combustion and ventilation air will not be obstructed. Adequate clearance for air openings into the combustion chamber must be provided. Make sure there is an adequate supply of air in the room to allow for combustion of the gas at the burners.

INSTALLATION CODES AND STANDARDS

For proper installation procedures in the United States of America, refer to:

1. State and local codes.
2. National Fuel Gas Code, ANSI-Z223.1 (latest edition). Copies may be obtained from The American Gas Assn., Inc., 1515 Wilson Blvd., Arlington, VA 22209.
3. National Electrical Code ANSI/NFPA-70 (latest edition). Copies may be obtained from The National Fire Protection Assn., Batterymarch Park, Quincy, MA 02269.

In Canada, refer to:

1. Local codes.
2. CAN/CGA-B149.1 Installation for Natural Gas Burning Appliances and Equipment (latest edition).
3. CAN/CGA-B149.2 Propane Installation Code (latest edition), available from The Canadian Standards Association, 178 Rexdale Blvd., Etobicoke, Ontario, Canada M9W 1R3.

ASSEMBLY

Installation of Standard Griddle Top Bricks

The griddle top section is extremely heavy. It will require three people to install the griddle and griddle brick — two people to lift the griddle plate and one person to set the bricks and griddle thermostat capillary bulb(s) in place.

The range griddle top section utilizes a two-fold baffle assembly to support the composite/mortar fire bricks. There will always be only one small 6½" (16 cm) wide baffle assembly with every griddle top order. There will be at least one 9⅞" (24 cm) wide baffle assembly per griddle, possibly more, depending on the griddle width.

The 6½" (16 cm) wide baffle will utilize two 10" x 4" (25 cm x 10 cm), and two 7" x 4" (17 cm x 10 cm) brick sets.

The 9⅞" (25 cm) wide baffle assembly will utilize two 10" x 4" (25 cm x 10 cm), and two 7" x 4" (17 cm x 10 cm) brick sets.

1. The griddle bricks are shipped in a rectangular cardboard box. Locate the box and carefully inspect quantities as explained above.

NOTE: If a brick has been broken into two pieces, it can still be used. Just place the pieces into position as shown in Fig. 1. However, if a brick is broken into more than two pieces, it will need to be replaced. Contact your local Vulcan servicer.

2. Clean anti-rust coating from top of griddle, following the procedures described in the CLEANING - GRIDDLE PLATE section of this manual.
3. Remove griddle plate. With one person at either side of the griddle, gently lift griddle straight up. **DO NOT** pull griddle forward until the third person has checked to ensure that the capillary bulb(s) (thermostatically controlled models only) are freed from the underside of the griddle plate. If bulb(s) are still attached to the griddle, pull capillary bulb(s) wire gently through the "V" shield(s) until the bulbs are free.

4. Rest the griddle plate in a secure place.
5. Thermostatically controlled griddles are shipped without the thermostat bulb in the "V" shield. The bulb must be installed by the installer to prevent damage to the griddle and the thermostat (not covered by the warranty). Exercise caution when placing brick in a thermostatically controlled griddle section. DO NOT hit thermostat bulb while installing bricks. The thermostat bulb is a sensitive device and may be easily knocked out of adjustment.

Into the 6½" (16 cm) wide baffle, install:

- a. Two 10" x 4" (25 cm x 10 cm) bricks, placing the miter edge, one to each side of the front burner baffle area (Fig. 1).
- b. Two 7" x 4" (17 cm x 10 cm) bricks, one to each side of the rear burner baffle area (Fig. 1).

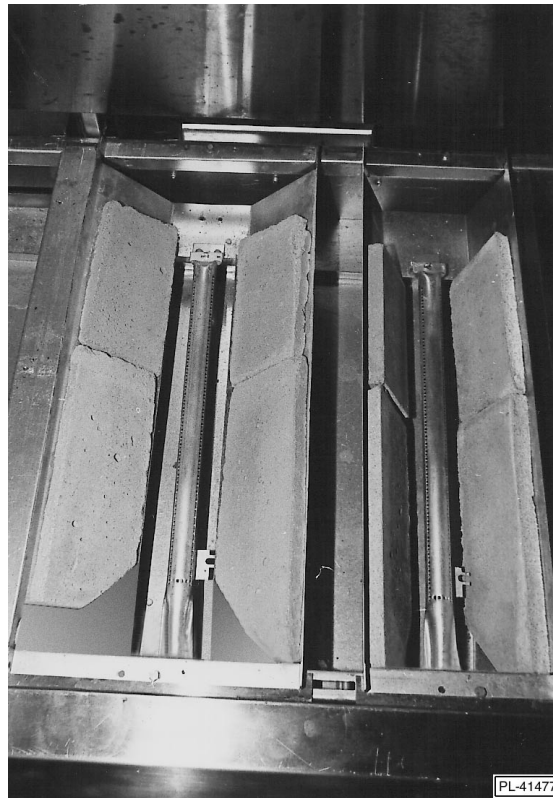


Fig. 1

6. Into the 9⅞" (24 cm) wide baffle, install:
 - a. Two 10" x 4" (25 cm x 10 cm) bricks, placing the miter edge, one to each side of the front burner baffle area (see Fig. 1).
 - b. Two 7" x 4" (17 cm x 10 cm) bricks, one to each side of the rear burner baffle area (see Fig. 1).
7. If the burner has been strapped down, use wire cutters to remove the wire strapping device.

8. Check to ensure that all bricks and burners are secure.
9. Carefully replace the griddle top section. Be sure that the griddle capillary and bulb(s) are not in a position to be damaged.
 - a. Gently pull the griddle capillary toward the front of the range and out from under the griddle area.
 - b. While two people (one to each side of the griddle) are lowering the griddle into place, the third person must gently feed the griddle thermostat bulb(s) through the "V" shield(s) until completely covered. Ensure that the capillary is not positioned over the burner flame pattern.
 - c. Continue to lower the plate into place until it is resting evenly on top of the range.

Installation of Hot Top Bricks

The range hot top sections utilize composite/mortar fire bricks for heat distribution to the burners. Install these bricks before connecting the gas supply line or installing the back riser.

There should be one box of bricks per hot top section.

1. The composite/mortar bricks are shipped in a rectangular cardboard box. Locate the box and carefully remove two 10" x 4" (25 cm x 10 cm), and two 7" x 4" (17 cm x 10 cm) bricks.
NOTE: If a brick has been broken into two pieces, it can still be used. Just place the pieces into position as shown in Fig. 1. However, if a brick is broken into more than two pieces, it will need to be replaced. Contact your local Vulcan servicer.
2. Rest the hot top plate in a secure area.
3. Install two 10" x 4" (25 cm x 10 cm) composite/mortar bricks, placing the miter edge, one to each side of the front burner baffle area (see Fig.1).
4. Install two 7" x 4" (17 cm x 10 cm) bricks, one to each side of the rear burner baffle area (see Fig. 1).
5. If the burner has been strapped down, use wire cutters to remove the wire strapping device.
6. Check to ensure that all bricks and the burner are secure. Carefully replace the hot top section on top of the range.

Backsplash

1. Remove the backsplash components from the crating materials.
2. Check the backsplash component parts against the list below to ensure that all the required parts for the backsplash installation have been obtained.
 - If any parts are missing, contact your dealer or closest parts depot immediately.

Backsplash Component Parts

MODELS					
MG12	MG24	MG36	MG48	MG60	MG36ER
Std. 4" (10 cm) High Backsplash (1)	Std. 4" (10 cm) High Backsplash (1)	Std. 11" (27 cm) High Backsplash (1)	Std. 11" (27 cm) High Backsplash (1)	Std. 11" (27 cm) High Backsplash (1)	Std. 5" (12 cm) High Backsplash (1)
Backsplash Channel (2)	Backsplash Channel (2)	Backsplash Channel (2)	Backsplash Channel (2)	Backsplash Channel (2)	Backsplash Channel (2)
Heat Shield (1)	Heat Shield (1)	Heat Shield (1)	Heat Shield (1)	Heat Shield (1)	Heat Shield (1)



Fig. 2

3. Assemble the required components as shown in Fig. 2.
4. Lift the assembly up and slide the channels into the space provided at the rear of the range – this may require two people.

5. It may be necessary to pull the heat shield bottom out slightly in order to clear the flue box. Be sure the backsplash is resting evenly and the channel holes are lining up with the holes provided in the right- and left-hand body side (see Fig's. 3 & 4).

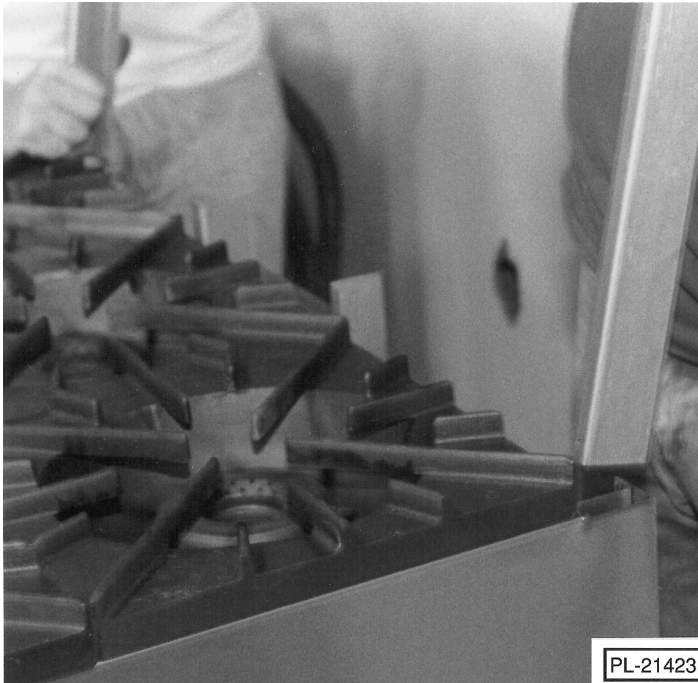


Fig. 3

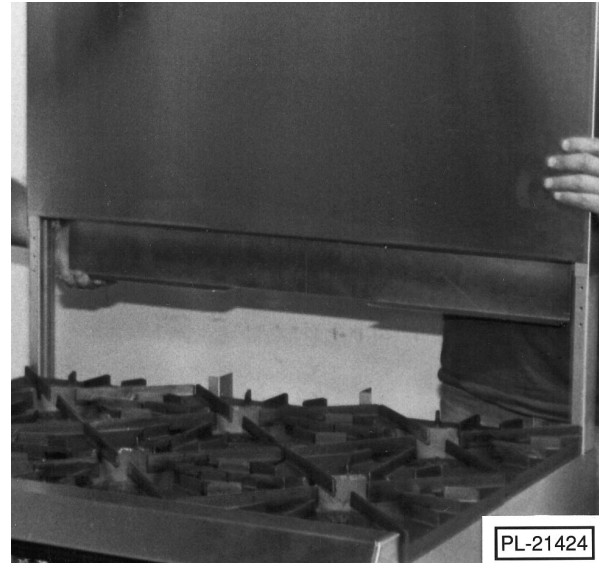


Fig. 4



Fig. 5

6. Install six #10 sheet metal screws (3 to each channel leg) (Fig. 5).

LEVELING

Check the leveling of the range. Place a carpenter's level across the range top plates. Level front to back and side to side.

To adjust the leveling, tilt the range to one side and, using channel locks, unscrew the adjustable leg insert as required. Repeat this procedure as necessary for each leg.

GAS CONNECTIONS

CAUTION: All gas supply connections and any pipe joint compound used must be resistant to the action of propane gases.

Connect gas supply. Make sure the pipes are clean and free of obstructions.

Codes require that a gas shutoff valve be installed in the gas line ahead of the range.

Standard ranges are equipped with fixed burner orifices which coincide with installation elevation.

Install the gas pressure regulator.

Before installing, ensure that regulator supplied agrees with rating plate gas supply.

The gas pressure regulator is **NOT** factory installed. The regulator for this gas type is sealed within a plastic bag and packaged with the range. This regulator must be field installed by a qualified installer.

Natural gas regulators are preset for 4.0" W.C. (Water Column); propane gas regulators for 10.0" W.C.

1. Locate $\frac{3}{4}$ " (1.9 cm) gas connection pipe extending from rear of range.
2. Cover pipe threads with leak sealant.
3. Screw regulator hand-tight onto pipe with regulator arrow pointing towards range body back (Fig. 6).
4. Using pipe wrench, tighten regulator securely in an upright position (Fig. 6).



Fig. 6

The arrow on the regulator shows the direction of the gas flow (Fig. 6). The pressure regulator must be mounted horizontally to ensure proper preset outlet pressure. If the regulator is installed in any other position, the outlet pressure must be reset for proper operation.

A leak limiter is supplied with every regulator to allow excess gas pressure to escape. Do not obstruct leak limiter on gas pressure regulator, because obstruction may cause regulator to malfunction.

WARNING: PRIOR TO LIGHTING, CHECK ALL JOINTS IN THE GAS SUPPLY LINE FOR LEAKS. USE SOAP AND WATER SOLUTION. DO NOT USE AN OPEN FLAME.

After piping has been checked for leaks, all piping receiving gas should be fully purged to remove air.

TESTING THE GAS SUPPLY SYSTEM

When gas supply pressure exceeds $\frac{1}{2}$ psig (3.45 kPa), the range and its individual shutoff valve must be disconnected from the gas supply piping system.

When gas supply pressure exceeds $\frac{1}{2}$ psig (3.45 kPa) or less, the range should be isolated from the gas supply system by closing its individual manual shutoff valve until the range is ready for start-up.

FLUE CONNECTIONS

DO NOT obstruct the flow of flue gases from the flue located on the rear of the range. It is recommended that the flue gases be ventilated to the outside of the building through a ventilation system installed by qualified personnel.

From the termination of the flue to the filters of the hood venting system, a minimum clearance of 18" (45 cm) must be maintained.

Information on the construction and installation of ventilating hoods may be obtained from the standard, "Vapor Removal from Cooking Equipment," NFPA No. 96 (latest edition), available from The National Fire Protection Association, Batterymarch Park, Quincy, MA 02269.

LIGHTING AND SHUTTING DOWN PILOTS

All adjustment procedures associated with initial start-up should be performed **by an authorized Vulcan-Hart installation or service person.**

Hot Top and Griddle Top Burners

1. Turn main gas supply ON.
2. Turn all top burner valve knobs ON to purge gas line of air.
3. Turn top burner valve knobs OFF.
4. Wait 30 seconds.
5. Using a taper, light the hot top or griddle top pilot.
6. If pilot fails to light, wait 5 minutes and repeat Steps 1 through 5.
7. Turn one hot top or griddle top burner valve ON to ensure that all gas lines are completely purged of air. Turn burner valve OFF when gas begins to flow.

Nightly Shutdown: Turn burner valve OFF; pilot will remain lit.

Complete Shutdown

1. Turn burner valve OFF; pilot will remain lit.
2. Turn main gas supply OFF.

Open Top Burners

1. Turn main gas supply ON.
2. Turn all top burner valve knobs ON to purge gas line of air.
3. Turn top burner valve knobs OFF.
4. Wait 30 seconds.
5. Using a taper, light the open top pilot (Fig. 7).



Fig. 7

6. If pilot fails to light, wait 5 minutes and repeat Steps 1 thru 5.
7. Turn one open top burner valve ON to ensure that all gas lines are completely purged of air. Turn burner OFF when gas begins to flow.

Nightly Shutdown: Turn burner valve OFF; pilot will remain lit.

Complete Shutdown

1. Turn burner valve OFF; pilot will remain lit.
2. Turn main gas supply OFF.

OPERATION

WARNING: THE RANGE AND ITS PARTS ARE HOT. BE VERY CAREFUL WHEN OPERATING, CLEANING OR SERVICING THE RANGE.

CONTROLS

OPEN TOP BURNER KNOB — Regulates gas flow to top burners. To increase heat, turn knob counterclockwise; to decrease, turn knob clockwise.

HOT TOP OR GRIDDLE TOP BURNER KNOB — Regulates gas flow to the hot top or griddle top burner. To increase heat, turn knob counterclockwise; to decrease, turn knob clockwise.

BEFORE FIRST USE

Griddle Seasoning

CAUTION: This griddle plate is steel, but the surface is relatively soft and can be scored or dented by the careless use of a spatula or scraper. Be careful not to dent, scratch, or gouge the plate surface. Do not try to knock off loose food that may be on the spatula by tapping the corner edge of the spatula on the griddle surface.

A new griddle surface must be seasoned to do a good cooking job. The metal surface of the griddle is porous. Food tends to get trapped in these pores and stick; therefore, it is important to “season” or “fill up” these pores with cooking oil before cooking. Seasoning gives the surface a slick, hard finish from which the food will release easily.

To season, heat griddle top section at a low burner setting. Pour one ounce of cooking oil per square foot of surface over the griddle top section. With an insulated cloth, spread the oil over the entire griddle surface to create a thin film. Wipe off any excess oil with an insulated cloth.

Repeat this procedure 2 to 3 times until the griddle has a slick surface.

PREHEATING

Hot Top and Griddle Top Burners

Turn burner “ON” to highest heat to heat hot top section quickly. Hot top or griddle top will be ready to cook on in about 10 minutes. After top section has reached operation temperature, turn some of the burners down. You will save as much as 80% of gas consumption and notice very little difference in cooking performance as long as you have allowed the entire hot top or griddle top section to preheat properly.

Open Top Burners

Open top burners ignite quickly and do not require any preheating time. When food comes to a rolling boil, cut back to slower boil to conserve energy, yet continue boiling. Turn burners ON only when in use.

CLEANING

Do not use Dawn® dish detergent to clean the exterior or interior components of the range.

Do not use scouring powder; it is extremely difficult to remove completely and can build up accumulations that will damage the oven.

Vulcan painted surfaces may be cleaned using a soft cloth and mild detergent solution.

Ranges

Daily:

While still warm, wipe top with a soft cloth or other grease absorbing material to remove spillovers, grease, etc., before they burn in. A crust on top of the hot top range looks unsightly and slows down cooking speed because it reduces the flow of heat to the utensil.

Empty the grease pan daily or as often as necessary. **CAUTION: Remove the grease pan slowly and be careful of liquid wave action.** It is recommended that the grease pan be emptied whenever it is $\frac{3}{4}$ filled. The drip shield, grids and grease pan should be washed with a mild grease-dissolving solution.

Clean cast iron open top grates with a mild soap and water solution. Rinse thoroughly and dry with a clean, water-absorbent towel. Immediately after drying (with grates still removed from the range top), season grates lightly with liquid vegetable or Pam[®] spray-type cooking oil.

After seasoning, replace grates onto the range. Turn all open top sections ON LOW and allow them to burn for at least 15 minutes before using pots or pans on the range top.

Season the open top grates after each cleaning. Failure to season grates will cause grates to rust.

Weekly:

Boil burners in a solution of washing soda. Rinse and dry parts thoroughly. Flash rusting may occur. This is a normal condition and will not affect performance or the product.

When reinstalling the burner back onto the range, be sure the burner heads are properly connected. Do not light the pilot or turn burner valve ON with the burner head removed.

Griddle Plate

Cleaning the griddle section will produce evenly cooked, perfectly browned griddle products and will keep the cooking surface free from carbonized grease. Carbonized grease on the surface hinders the transfer of heat to the food. This results in loss of cooking efficiency and spotty browning which gives foods an unappetizing appearance. To keep the griddle clean and operating at peak efficiency, follow these simple instructions:

After Each Use:

Carefully clean griddle with wire brush or flexible spatula.

Daily:

Thoroughly clean backsplash, sides and front. Remove grease drip tray and pan, empty and wash out in the same manner as any ordinary cooking utensil.

Clean griddle surface thoroughly. If necessary, use a griddle stone, wire brush or steel wool over the surface. Rub with the grain of the metal while still warm. A detergent may be used on the plate surface to help clean it, but the cleaner must be thoroughly removed. After removal of detergent, the surface of the plate must be reseasoned with a thin film of oil to prevent rusting and food sticking.

If the griddle is to be shut down for an extended period, put a heavy coat of grease over the griddle plate.

MAINTENANCE

WARNING: THE RANGE AND ITS PARTS ARE HOT. BE VERY CAREFUL WHEN OPERATING, CLEANING OR SERVICING THE RANGE.

VENT

When cool, check the flue vent every six months for obstructions.

SERVICE AND PARTS INFORMATION

To obtain service and parts information concerning this modular range, contact the Vulcan-Hart Service Agency in your area (refer to listing supplied with the modular range), or Vulcan-Hart Service Department at the address or phone number shown on the front cover of this manual.

OPTIONAL FIELD INSTALLABLE ACCESSORIES

DESCRIPTION	OPTIONS
Flue Devices	<ol style="list-style-type: none">1. Stainless steel backsplash.2. Stainless steel 11" (28 cm) low riser.3. Stainless steel 4" (10 cm) low riser (use with open tops only).
Flex Hose and Quick Disconnects	<ol style="list-style-type: none">1. 3/4" (1.9 cm) flex hose/disconnect – 3 ft. (0.9 m) long.2. 3/4" (1.9 cm) flex hose/disconnect – 4 ft. (1.2 m) long.3. 3/4" (1.9 cm) flex hose/disconnect – 5 ft. (1.5 m) long.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>