


furniture company

Item #: W52C32 Assembly Instructions

 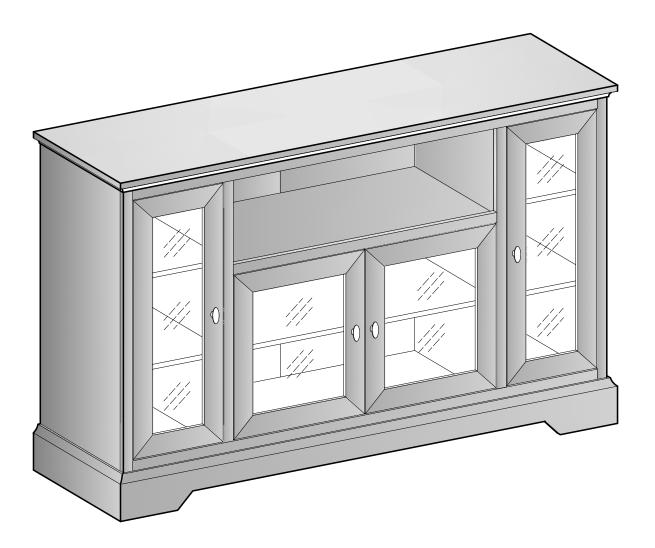


For our most current instructions, to request missing, lost, or broken parts, or for any other Customer Service issues, please visit our website at **www.walkeredison.com** or call us at 877-207-5906.

Revised 07/2012

General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The main types of hardware used to assemble this product are wood dowels, cam bolts and locks, bolts and screws.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.




VI. A Phillips head screwdriver is required for the assembly of this product.




 VII. Power tools should not be used to assemble this product.



VIII. The hinges of this product can be adjusted three ways:

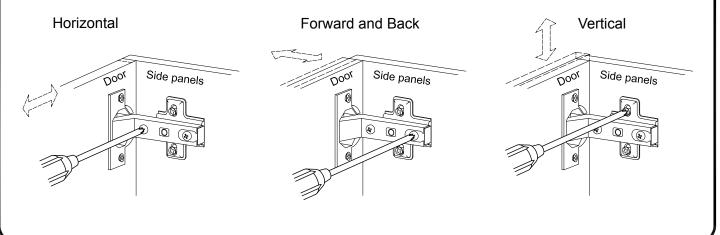


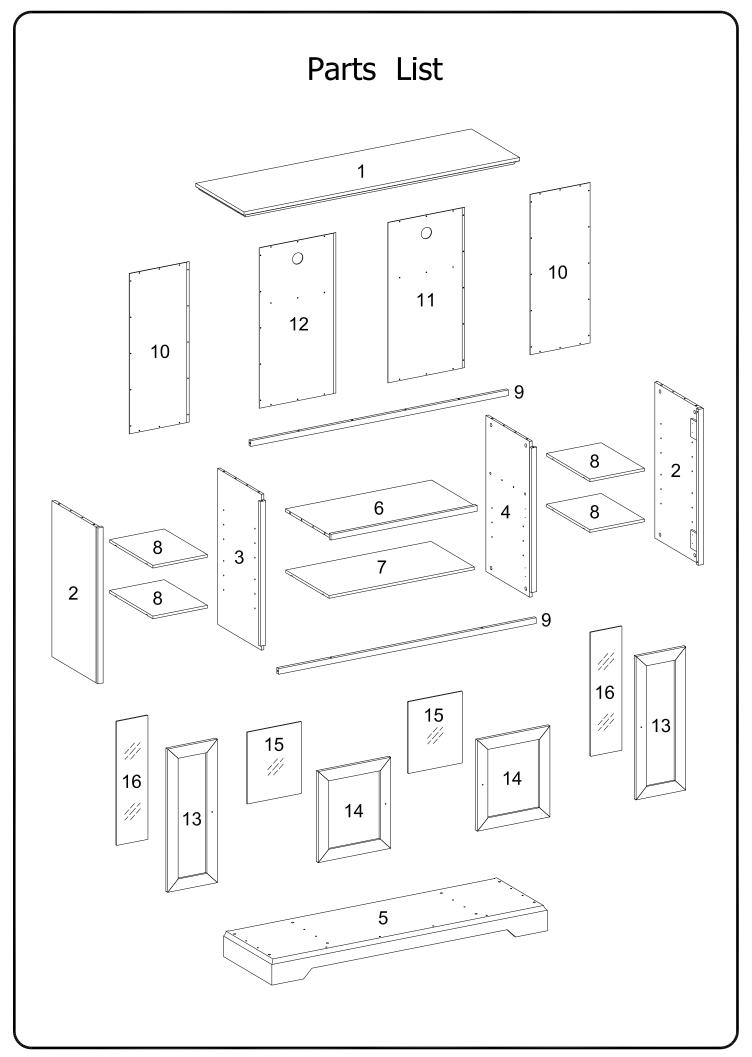


Hardware List


Α		Ø8x30mm	Wood dowel	32	pcs
В		Ø6x30mm	Wood dowel	4	pcs
С		Ø6x32mm	Cam bolt	20	pcs
D		Ø15x9.5mm	Cam lock	20	pcs
E	O	Ø24x21mm	Handle	4	pcs
F		Ø9mmx5/32"x3/4"	Bolt	4	pcs
G		Ø12x0.5mm	Metal washer	32	pcs
Н			Hinge	8	pcs
J		Ø4x12mm	Screw	32	pcs
K	(B) mmmm>	Ø4x2.5x8mm	Screw	32	pcs
L		Ø7x3x12mm	Screw	50	pcs
M		Ø8x5x16mm	Shelf support pin	20	pcs
N			Sticker	16	pcs
Р			Glue tube	3	pcs
Q			Touch-up marker	1	рс


The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

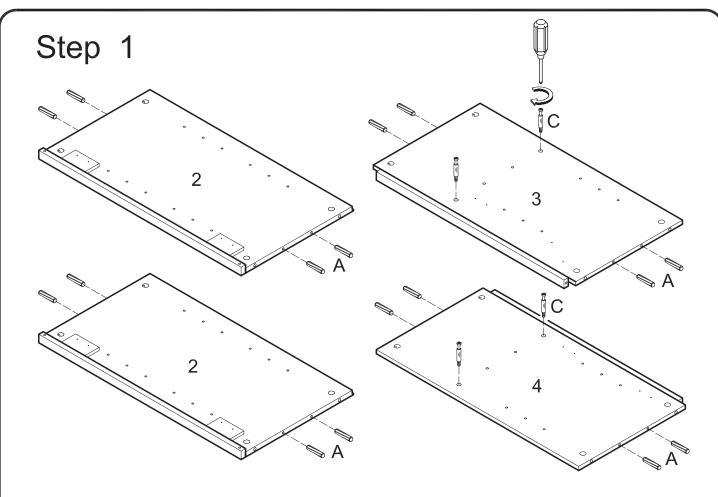


Insert dowels (A) into panels (2,3,4). Screw cam bolts (C) into panels (3,4).

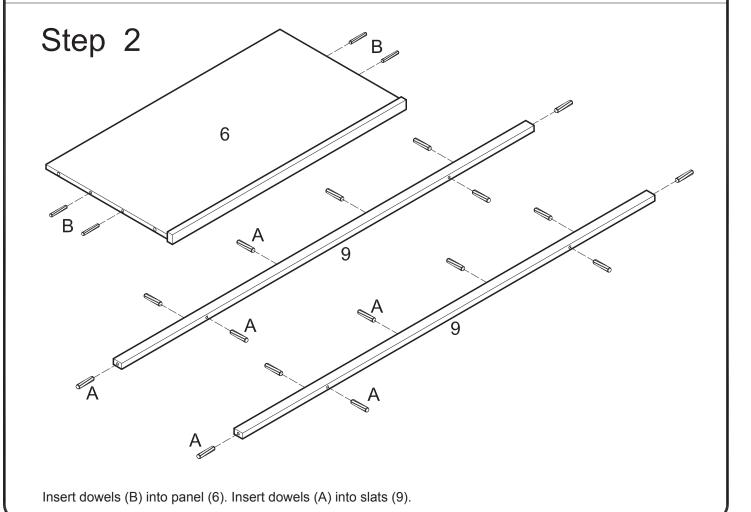


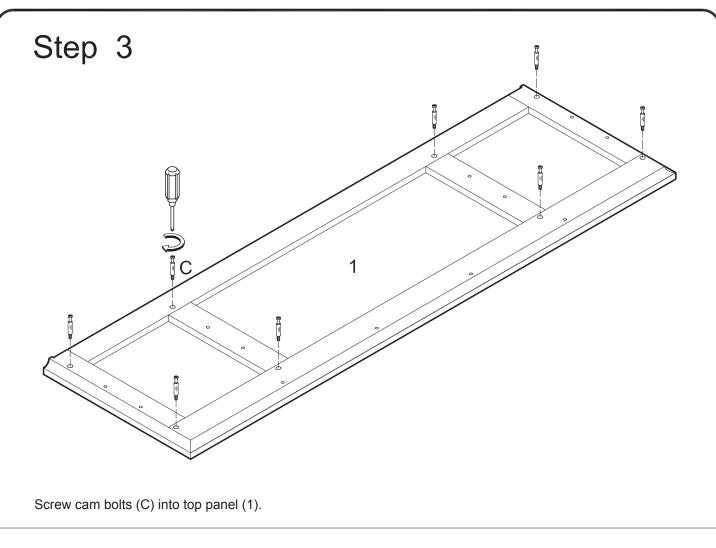


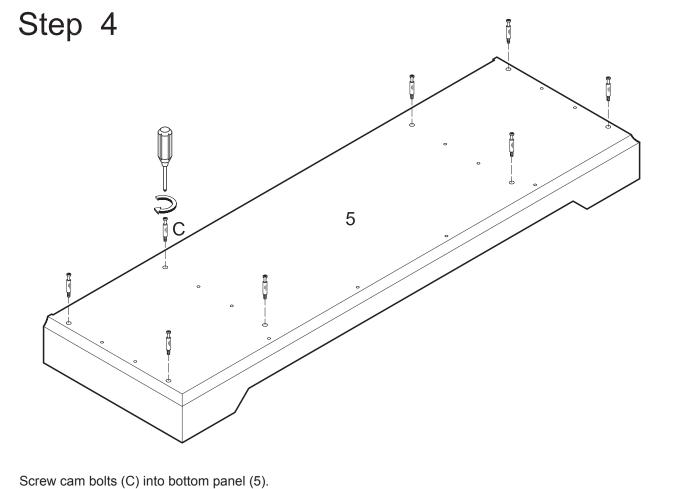


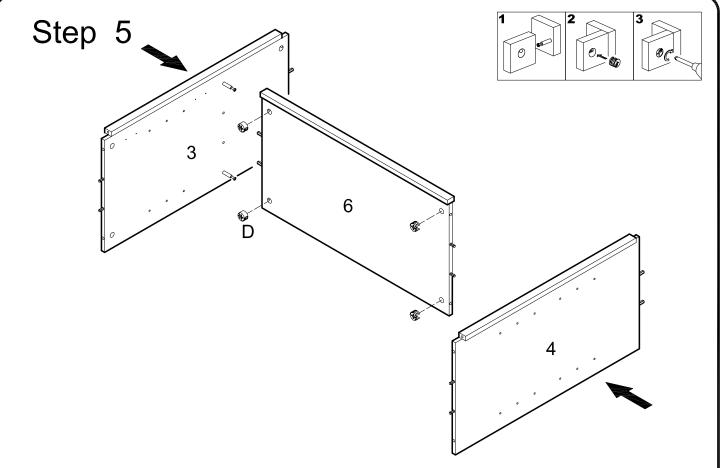


Attach panels (3,4) to panel (6) using cam bolts and dowels as guides. Secure panels (3,4) to panel (6) using cam locks (D). Tighten cam locks (D) with a screwdriver.

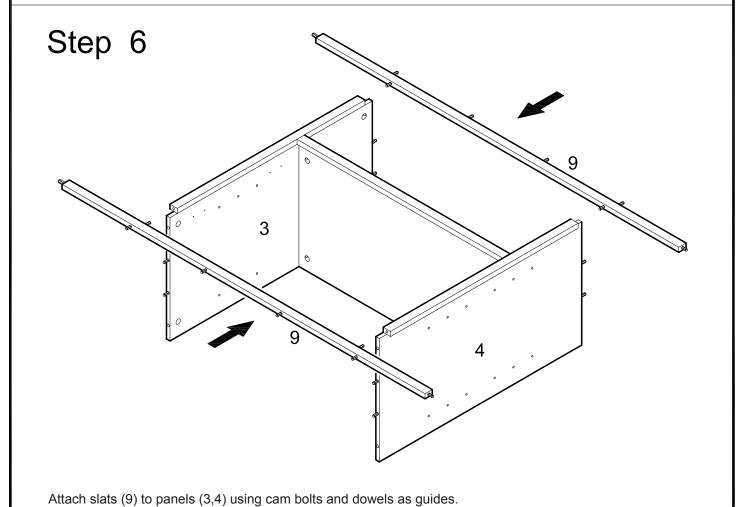

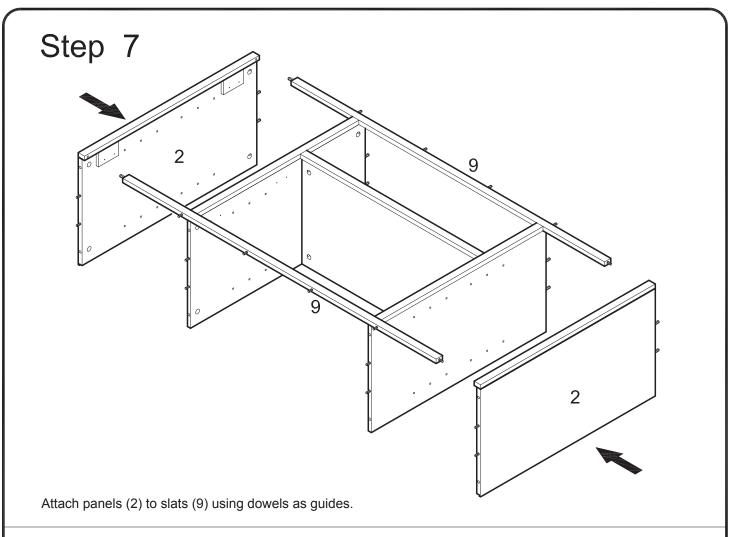


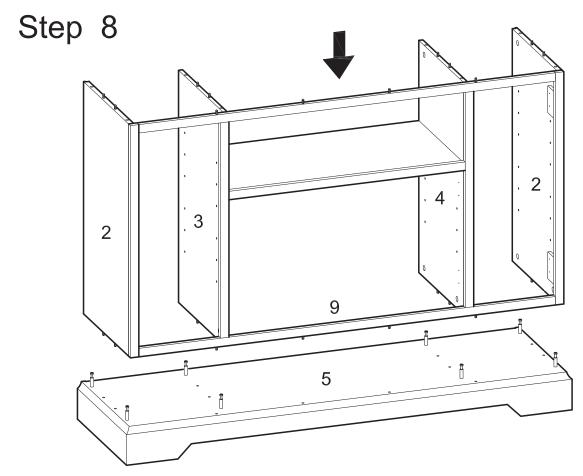


Attach the assembly from the previous step to bottom panel (5) using cam bolts and dowels as guides.

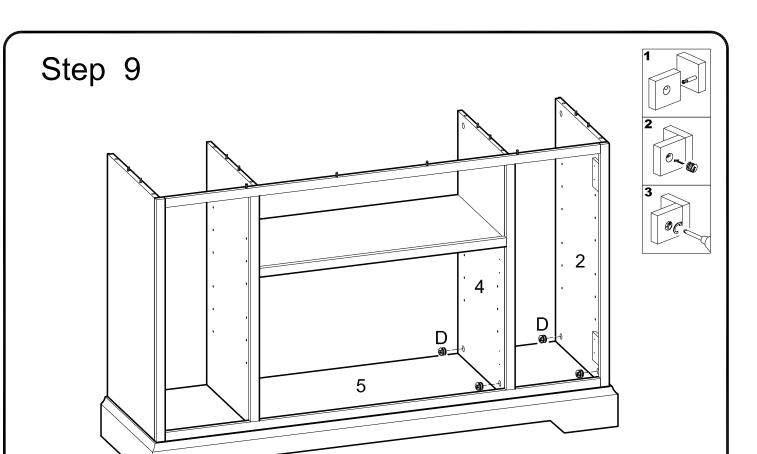


 
Secure panels (2,4) to bottom panel (5) using cam locks (D). Tighten cam locks (D) with a screwdriver.

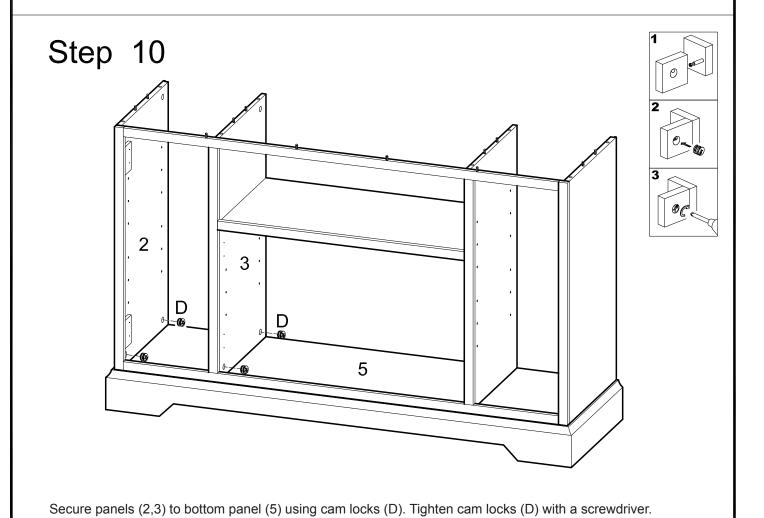

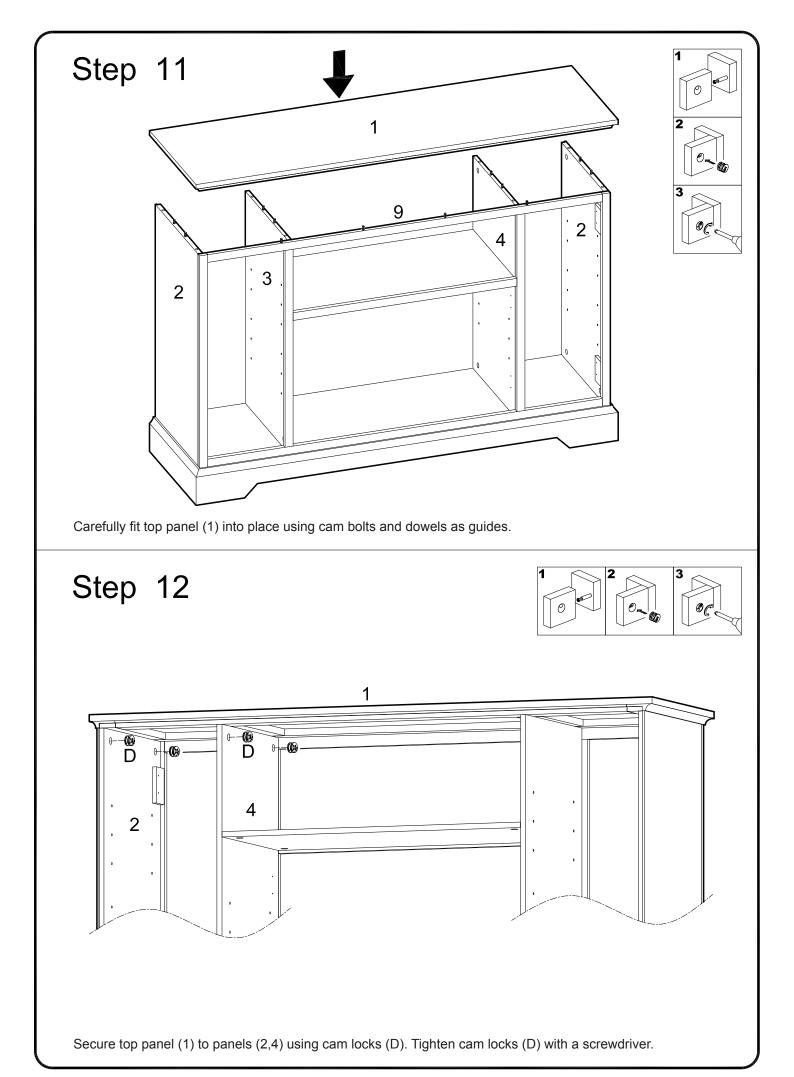







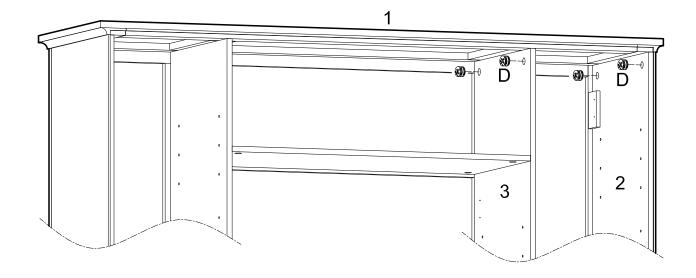

Secure top panel (1) to panels (2,3) using cam locks (D). Tighten cam locks (D) with a screwdriver.

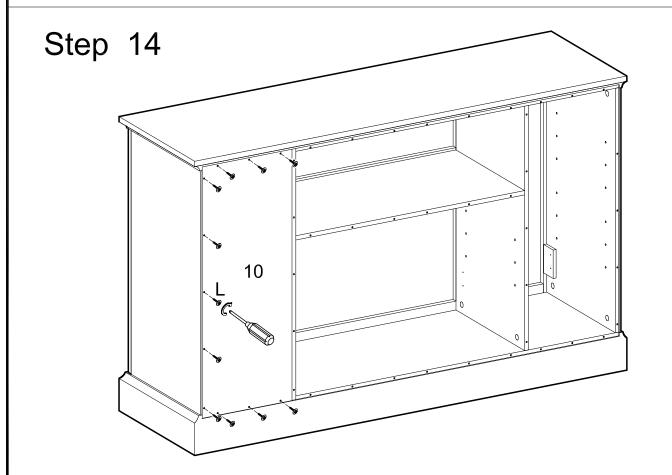



Attach panel (10) to the back of the console using screws (L).

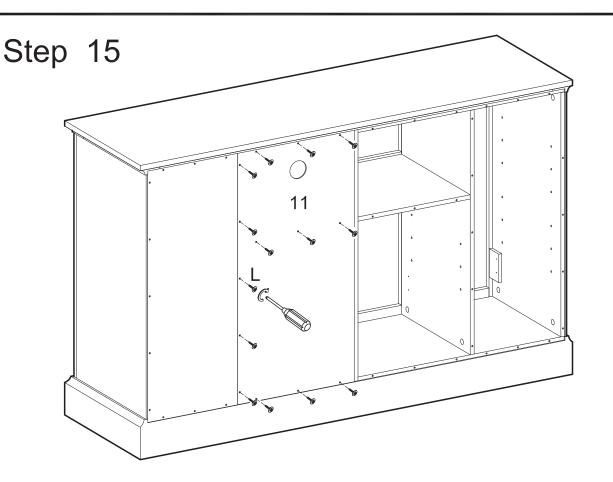


Attach panel (11) to the back of the console using screws (L).

Attach panel (12) to the back of the console using screws (L).

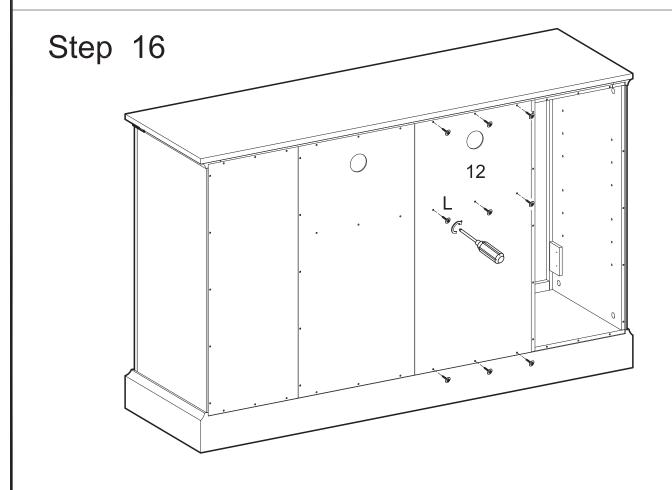

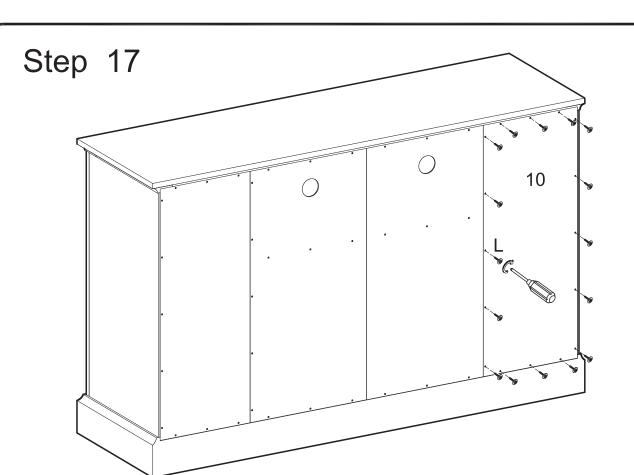


Attach second panel (10) to the back of the console using screws (L).

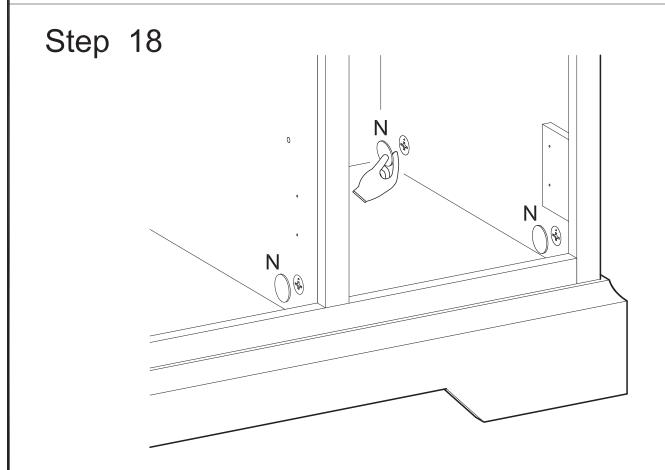


Cover all visible cam locks with stickers (N) as desired.



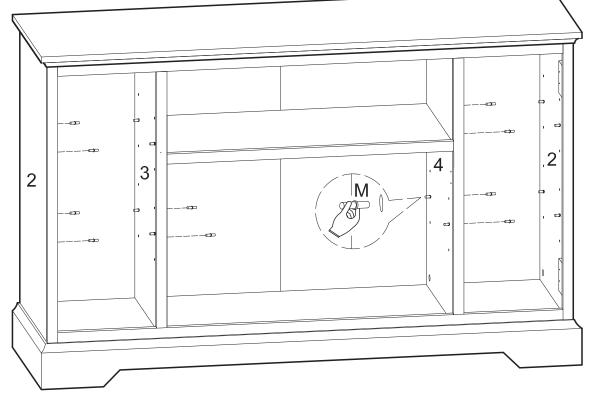


Insert shelf support pins (M) into panels (2,3,4) at desired shelf heights.


Step 20

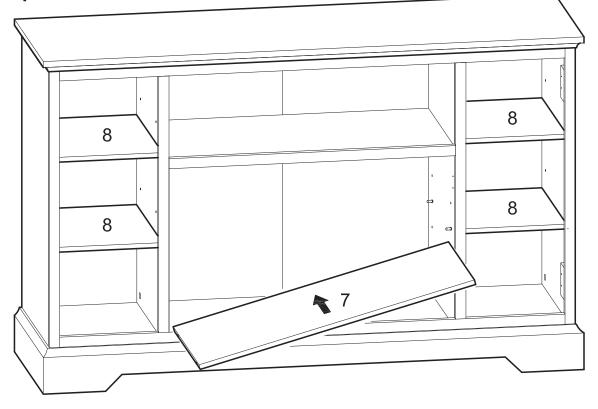


Carefully place shelves (7,8) in console. Shelves (7,8) will rest on the shelf support pins.

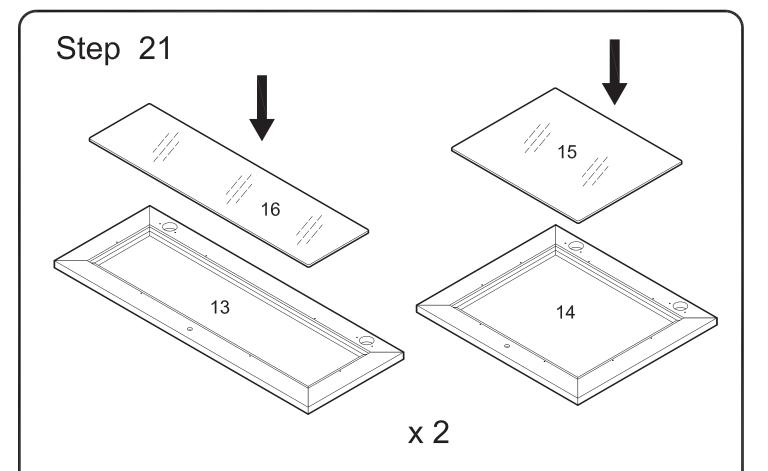


Carefully lay glass pane (16) into door (13) and glass pane (15) into door (14). Repeat this step for the second set of glass panes and doors.

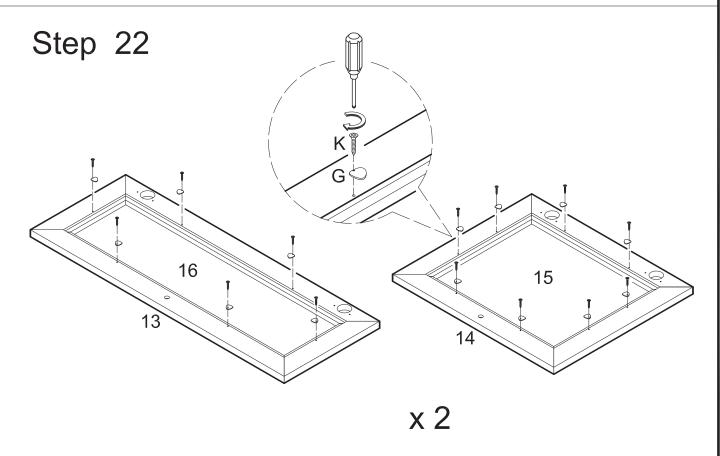


Secure glass pane (16) to door (13) and glass pane (15) to door (14) using metal washers (G) and screws (K). Repeat this step for the second set of glass panes and doors.

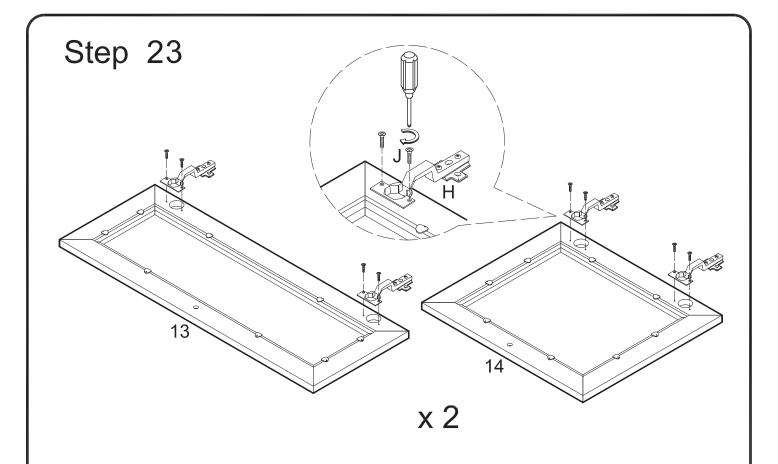


Attach hinges (H) to doors (13,14) using screws (J). Repeat this step for the second set of doors.

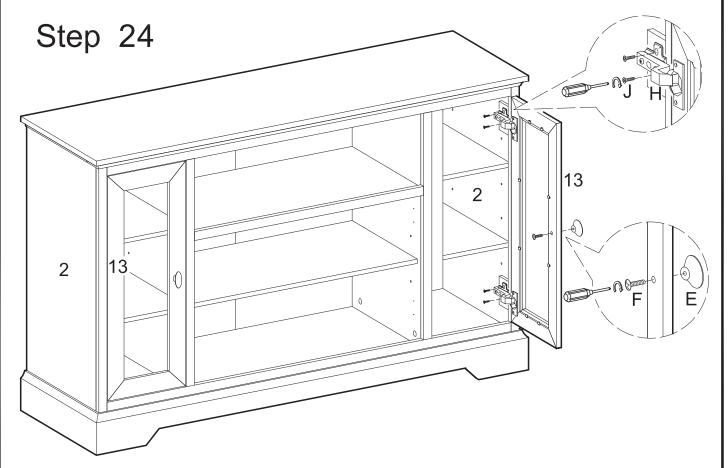

Attach doors (13) to panels (2) using screws (J) at hinges (H). See page 2 for specific instructions on how to adjust hinges so doors are aligned with console as desired. Attach handles (E) to doors (13) using bolts (F).

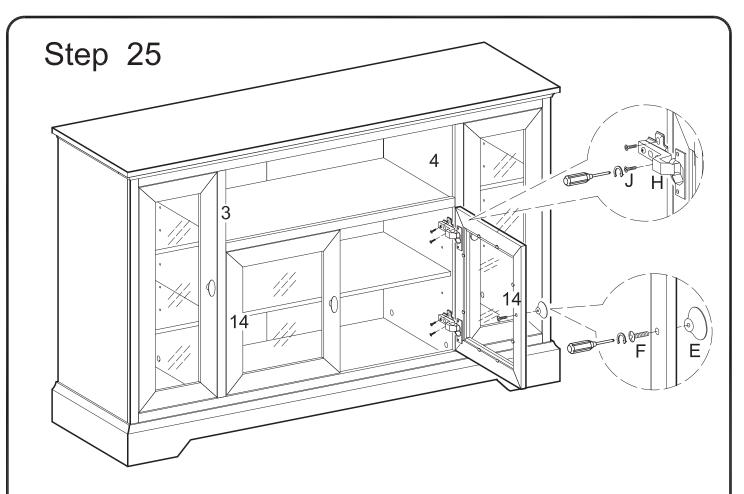

Attach doors (14) to panels (3,4) using screws (J) at hinges (H). See page 2 for specific instructions on how to adjust hinges so doors are aligned with console as desired. Attach handles (E) to doors (14) using bolts (F).

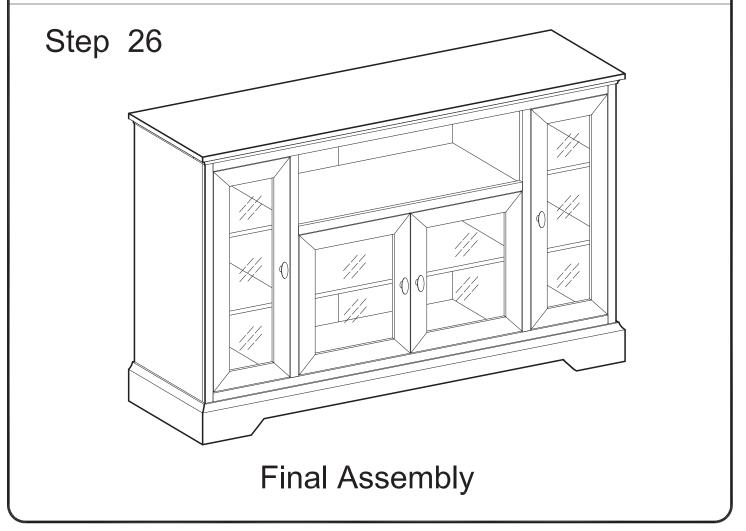

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com