 


WARING PRO™

Cordless Wine Chiller

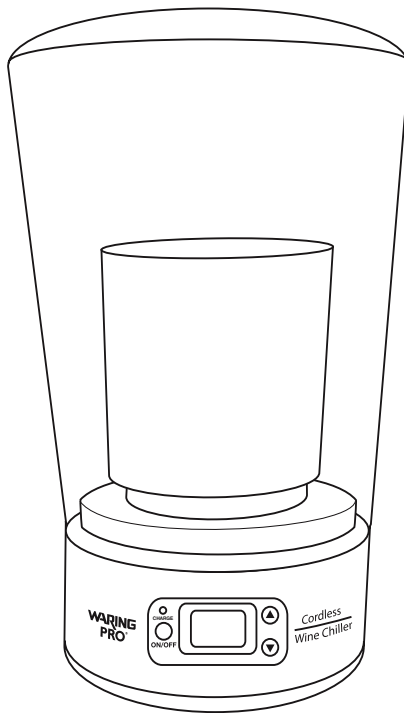

PC50

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

CONTENTS

Important Safeguards.....	1
Parts	4
Operation.....	4
Recommended Chilling Times	7
Care and Maintenance	8

Serve wine at its flavorful best with your new Waring Pro™ Cordless Wine Chiller. The timer takes the guesswork out of chilling a bottle of red, white or Champagne wine, and the cordless operation takes the cord off your table or buffet. Elegant and easy, it's Waring Pro™ at its best. Cheers!

IMPORTANT SAFEGUARDS

All the safety and operating instructions should be read and followed before the unit is operated.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

WARNING

1. Use this unit only for its intended use as described in this manual.
2. Unplug the battery charger during lightning storms or when unused for long periods of time.
3. Never drop or insert an object into any opening.
4. Protect the power cord from being walked on or pinched, particularly at plug outlets, convenience receptacles and the point where it exits the unit.
5. Do not allow battery charger cord to touch hot surfaces.
6. The unit should be situated away from direct sunlight or heat sources such as radiators, electric heaters, heat

registers, stoves, or other units (including amplifiers) that produce heat. Avoid placing on top of stereo equipment that radiates heat.

7. Never block the air opening of the unit with materials such as clothing, plastic bags or papers, or place it on a soft surface such as a bed or couch, where the air openings may be blocked.
8. Do not overload electrical outlet. Use only the power source as indicated.
9. Do not carry this unit by cord or use cord as handle.
10. Never operate this unit if it has a damaged cord or plug, if it is not working properly, or if it has been dropped into water, or if the unit's power supply cord or plug is damaged or dropped into water. If the unit's power supply cord or plug is damaged, do not attempt to fix it yourself.
11. To avoid the risk of electric shock, do not disassemble or attempt to repair the unit. Incorrect repair can cause risk of electric shock or injury to persons when unit is used.
12. Do not operate in the presence of explosive and/or flammable fumes.

 
DANGER

To reduce the risk of electric shock, burns, fire or injury:

1. Always unplug the battery charger from the electrical outlet immediately after using.
2. Do not use while bathing or in a shower.
3. Do not place or store unit where it can fall or be pulled into a tub or sink.
4. Do not place or drop into water or other liquid.
5. Do not reach for unit that has fallen into water. Unplug it immediately.
6. Care should be taken so that objects do not fall and liquids are not spilled onto the unit.

CAUTION

- TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK. THERE ARE NO USER-SERVICEABLE PARTS INSIDE.
- TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS UNIT TO WATER OR MOISTURE.

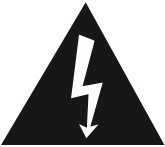


The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the unit's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the unit.

 PARTS

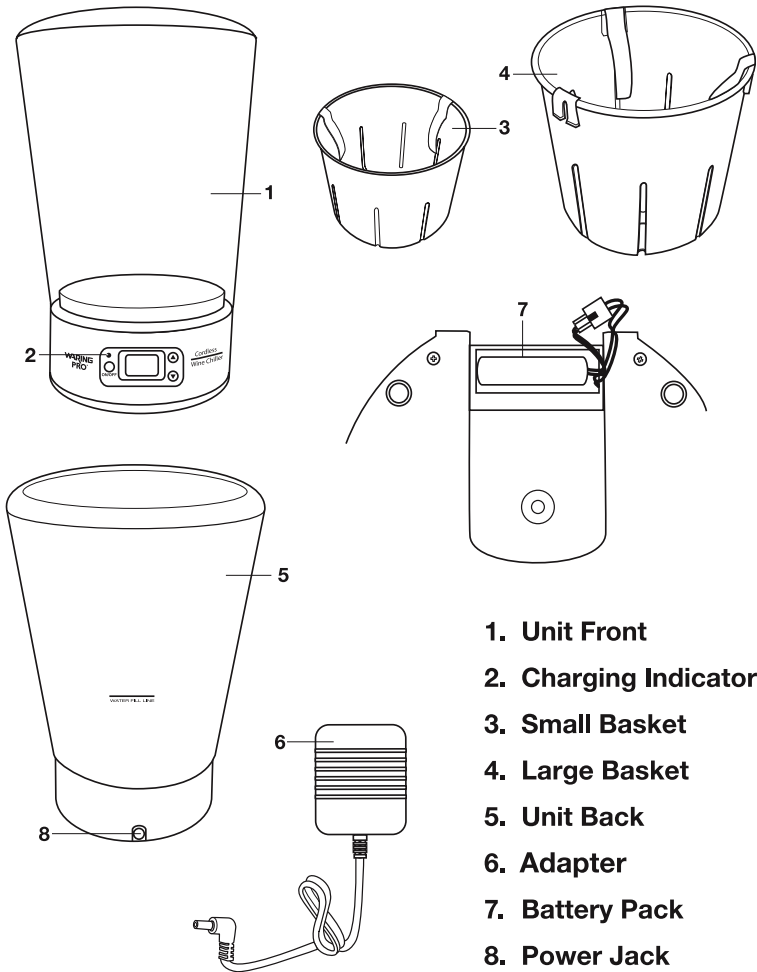

1. Unit Front
2. Charging Indicator
3. Small Basket
4. Large Basket
5. Unit Back
6. Adapter
7. Battery Pack
8. Power Jack

WINE CHILLER OPERATION

To Charge Battery

1. Pull tab and remove battery cover located on bottom of wine chiller. Insert battery pack into battery compartment. Connect battery jack with battery connector located in battery compartment. (See above #7.) Replace cover and secure tab.
2. Plug battery adapter into receptacle located in back of wine chiller. (See above #8.)

3. Plug electric cord into electrical outlet.
4. The battery will automatically begin charging.
5. Full battery charge will take approximately 15 hours.
6. Once charged, the battery will last for 80 minutes of use.

NOTE: While battery is charging the charging indicator located on the front of the unit will be lighted red to indicate charging in process. The charging indicator will remain red as long as adapter is plugged into the electric outlet.

BATTERY CAUTION

To reduce the risk of fire or injury to persons, read and follow these instructions.

1. Use only the following type and size batteries in the cordless wine chiller: Self-contained 3-cell Nickel-Metal-Hydride rechargeable battery supply AA 3.6V, 800mAh.
2. Do not dispose of the battery/batteries in a fire. The cell(s) may explode. Check with local codes for possible special disposal instruction.
3. Do not open or mutilate the battery/batteries. Released electrolyte is corrosive and may cause damage to the eyes or skin. It may be toxic if swallowed.
4. Handle batteries carefully in order to prevent short-circuiting the battery with conducting material such as rings, bracelets and keys. The battery or conductor may overheat and cause burns.
5. Charge the battery/batteries provided with or identified for use with this product only in accordance with the instructions and limitations specified in this manual.
6. Do not mix old and new batteries in this product (applies to products employing more than one user-replaceable second battery).

7. Do not mix batteries of different sizes or from different manufacturers in this product (applies to products employing more than one user-replaceable secondary battery).
8. Do not attempt to recharge the battery/batteries provided with or identified for use with this product. The batteries may leak corrosive electrolyte or explode.
9. Do not attempt to rejuvenate the battery/batteries provided with or identified for use with this product by heating them. Sudden release of the battery electrolyte may occur causing burns or irritation to the eyes or skin.
10. When inserting batteries into this product, the proper polarity or direction must be observed. Reverse insertion of batteries can cause reverse charging, and that may result in leakage or explosions (applies to product employing more than one separately replaceable primary battery).
11. Remove the batteries from this product if the product will not be used for a long period of time (several months or more), since during this time the battery could leak into the product.
12. Discard “dead” batteries as soon as possible since dead batteries are more likely to leak into a product.
13. Do not store this product, or the batteries provided with or identified for use with this product, in high temperature areas. Batteries that are stored in freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature, prior to use after cold storage.

Operation

1. The wine chiller can be used with a fully charged battery (cordless) or you can use the wine chiller with the adapter. Please note: if you use the wine chiller before the battery is fully charged, you will have less than 80 minutes of use.

2. Note: there are two plastic baskets that come with your wine chiller to accommodate different size wine bottles. Insert the plastic basket that fits your wine bottle into the wine chiller and twist clockwise to secure into place.
3. Place wine or champagne bottle in plastic basket.
4. Fill wine chiller with cold water up to the water level line (approximately 5 cups of water). Colder water decreases the chilling time. Next, add approximately 6 cups of ice up to the max level.
5. Press the On/Off button. The timer display will automatically show a starting time of 10 minutes and the unit will begin revolving. To increase or decrease time, press the up or down arrow until the desired chilling time is shown on the timer display. See recommended chilling times below. The wine chiller will revolve for 30 seconds in a counterclockwise direction and 30 seconds in a clockwise direction. The timer display will count down in minutes. For the last minute, the timer will count down in seconds remaining for chilling time. Once the programmed chilling time has been reached, the unit will stop and beep 3 times before turning off.
6. During the chilling time, you can press the up or down key to increase or decrease the chilling time.
7. During the chilling time, you can press the power key to turn the unit off. When the power key is pressed to the off position, the unit will beep 3 times.

RECOMMENDED CHILLING TIMES

Red wine 8 minutes

White wine 12 minutes

Champagne 15 minutes

At this point, you may insert another bottle of wine to be chilled. Follow instructions above. **NOTE:** You may use the water from first cycle but you may need to reduce the amount of water to the water level mark. Add 6 cups of fresh ice and press the ON button.

When Battery Is Low

1. When battery is low, the unit will give one long beep and timer will display “LO”.
2. If the unit is in operation and the battery is low, the unit will stop and emit one long beep sound.
3. Plug battery adapter into receptacle located in back of wine chiller (see page 4, #8).
4. Plug electric cord into electrical outlet.
5. The battery will automatically begin charging.
6. Full battery charge will take approximately 15 hours.
7. The battery is rated at 3.6v 800mAh 3 AA size cell.
8. A replacement battery can be purchased at any electronics supply store. Do not substitute any other type of battery in this unit.

CARE AND MAINTENANCE

Empty water from unit and wipe with a damp cloth, and then dry. Do not use abrasive cleaning agents.



©2007 Waring Consumer Products
Division of Conair Corporation
150 Milford Road
East Windsor, NJ 08520
www.waringproducts.com

Printed in China
PC50IB

07WR32050

IB-7477A

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>