

Datexx DF0063

CLOCK TORCH

TIME setting -

Press the TIME KNOB & turn anti-clockwise
switch on by lifting up the ALARM SWITCH
Push down the ALARM SWITCH to stop alarm.

User-friendly operations of Clock Light & Torch.

(SLIDE SWITCH on right side of unit):

Place the SLIDE SWITCH to middle position, the clock light
and torch are ON instantly by lifting up the unit.

Put down unit on desk (or any flat surface) to switch OFF.

You may choose to turn on the TORCH only when lifting up the

unit, then place the SLIDE SWITCH to lower position

The clock light and torch are OFF permanently when
SLIDE SWITCH is in the upper position.

Switch Position	Clock Light	Torch
Upper (A)	OFF	OFF
Middle (B)	ON	ON
Lower (C)	OFF	ON

BATTERY replacement - Open the BATTERY COVER
and insert / replace 1 piece AA size battery for the clock
(inner most of battery compartment) + 2 pieces AA size battery
for the torch.

OBSERVE the correct polarities as indicated.

Light BULB replacement - In case torch bulb is burnt, open
the base cover by releasing the two screws and
replace a new 2.4V 0.5A prefocus bulb.

TELEDEX Limited U.S.A. Warranty

TELEDEX INC. warrants these products to the original purchaser to
be free from defective material and workmanship. The product will
be repaired or replaced at our option, for up to one year when
returned with proof of purchase to the address below. Include a
check or money order for \$3.00 to cover postage.

TELEDEX INC. 1 Atlas st. Kenilworth, NJ 07033

Warranty valid only in the U.S.A.

Printed in China 6/02

www.datexx.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>