

users guide



B120D

line powered
speakerphone
with Caller ID

TELEDEx

B120D TELEPHONE DIAGRAM

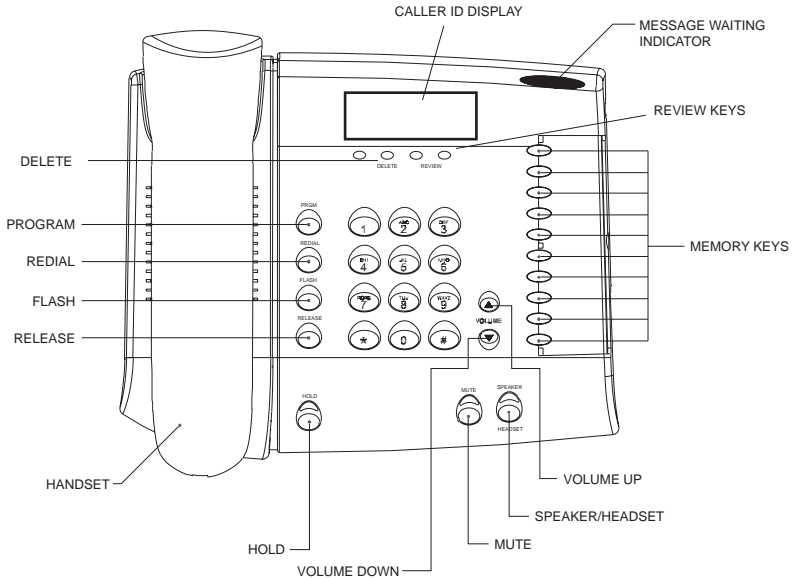 


FIGURE 1

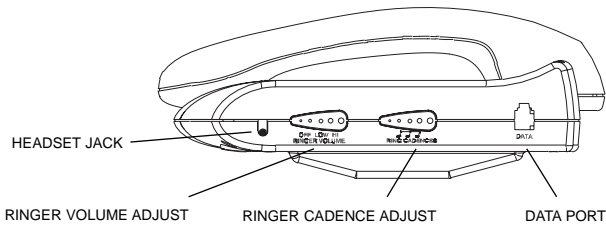 


FIGURE 1A

CONGRATULATIONS AND THANK YOU!

Congratulations on your purchase of this quality Teledex analog business telephone. If you have any questions concerning this telephone or its operation, please contact us via one of the methods at right. We appreciate your purchase!

p/n 600-0480-68

CONTACTING TELEDIX

Telephone: +1 (408) 363-3100
 Address: 6311 San Ignacio Avenue
 San Jose, CA 95119 USA

Internet: www.teledex.com
 email: sales@teledex.com

TABLE OF CONTENTS

1) FEATURES.....	2
2) UNPACKING THE B120D.....	2
3) IMPORTANT CALLER ID INFORMATION.....	3
4) IMPORTANT NOTICE BEFORE INSTALLATION.....	3
5) INSTALLATION.....	4
5.1 DESKTOP INSTALLATION.....	4
5.2 WALL MOUNTING.....	4
5.3 WALL MOUNT CLIP.....	5
6) USING THE DATA PORT.....	5
7) ADJUSTING THE RINGER VOLUME	5
8) OPERATION	6
8.1 PLACING AND ANSWERING CALLS WITH THE HANDSET.....	6
8.2 HANDSET VOLUME CONTROL.....	6
8.3 USING THE SPEAKERPHONE.....	6
8.4 SWITCHING BETWEEN THE HANDSET AND THE SPEAKERPHONE.....	6
8.5 ADJUSTING THE SPEAKERPHONE VOLUME.....	6
8.6 USING A HEADSET.....	6
8.7 USING REDIAL.....	6
8.8 USING FLASH.....	6
8.9 USING HOLD.....	6
8.10 USING MUTE.....	7
8.11 STORING A NUMBER IN MEMORY.....	7
8.11 DIALING A STORED NUMBER.....	7
9) CALLER ID	7
9.1 REVIEWING CALLER ID RECORDS	7
9.2 CALLER ID MESSAGES	8
9.2 DELETING CALLER ID RECORDS.....	8
10) MESSAGE WAITING.....	8
11) CARE.....	8
12) REQUIREMENTS OF PART 68 – FCC RULES.....	9
13) REQUIREMENTS OF PART 15 – FCC RULES.....	9
14) INDUSTRY OF CANADA REQUIREMENTS.....	9
15) IMPORTANT SAFETY INSTRUCTIONS.....	10

1. FEATURES

The Teledex B120D is a line-powered display speakerphone with ten one-touch programmable feature buttons.

Your B120D has these useful features:

- SPEAKERPHONE** – For convenient hands-free conversations
- 3-LINE LCD** – Displays caller ID, call progress and directory information
- LAST NUMBER REDIAL** – Lets you quickly dial the last number dialed
- MUTE** – Mutes the handset microphone and speakerphone
- HOLD** – Places the call on hold
- FLASH** – Sends an electronic hook-switch signal for use with special phone services such as call waiting
- PROGRAMMABLE MEMORY KEYS** – For quick access to frequently dialed numbers or PBX/Centrex services and features
- RELEASE** – Allows you to re-access the line quickly for another dial tone, without pressing the hook switch or placing the handset back in its cradle
- VOLUME CONTROL** – Lets you control the volume of the sound you hear through the handset and speakerphone
- DATA JACK** – For connecting an additional phone, laptop/desktop computer or answering machine to the B120D on the same line
- CALLER ID** – Stores up to 60 Caller ID records
- CALL SUMMARY** – Displays the number of calls you receive
- NEW CALL SUMMARY** – Displays the number of new calls you receive
- REVIEW SCROLLING** – Allows you to easily scroll through Caller ID records
- DELETE BUTTON** – To delete call records individually, or all at once
- HEARING AID COMPATIBLE** – Interfaces with all common hearing aids

The B120D is ETL listed to UL standards and meets all applicable FCC standards and requirements.

2. UNPACKING YOUR B120D

Inside the box, you will find all of the items needed for installation, as shown below:

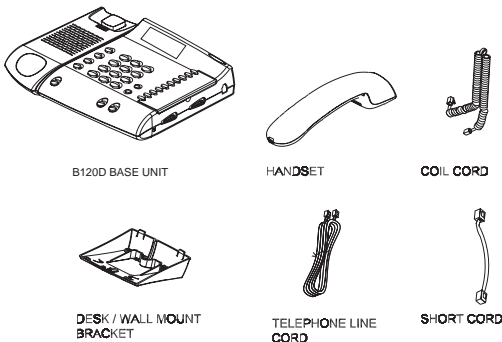 


FIGURE 2

Check to be sure that your package includes all the above items. If any items are missing or damaged, please contact the distributor where you purchased the phone.

3. IMPORTANT CALLER ID INFORMATION

To use the phone's Caller ID and call waiting features, you must be in an area where the services are available, and you must subscribe to the services. Where Caller ID is offered, one or more of the following options are generally available:

- a) Caller's number only
- b) Caller's name only
- c) Caller's name and number

4. IMPORTANT NOTICE BEFORE INSTALLATION

Each device that you connect to the phone line draws power from the phone line. This power draw is referred to as the device's *ringer equivalence number*, or REN. The REN for the B120D is located on the bottom of the telephone.

If you are using more than one phone or other devices on the same line, add up the value of all the RENs. If the total is greater than five (three in rural areas), your phone might not ring. If the ringer operation is impaired, the problem can often be rectified by removing a device from the line to reduce the total REN to the number allowed.

FCC STATEMENT

Your B120D complies with Part 68 of FCC Rules. You must, upon request, provide the FCC Registration Number and the REN to your telephone company or other service provider. Both of these numbers are located on the bottom of the B120D. You must not connect your B120D to either coin-operated systems or party-line systems.

The B120D also complies with the limits for a Class B device as specified in Part 15 of the FCC Rules. These limits provide reasonable protection against radio and TV interference in a residential area. However, your telephone might cause TV or radio interference, even when it is operating properly. To eliminate interference, you can try one or more of the following corrective measures:

- a) Reorient or relocate the TV or radio's reception antenna
- b) Increase the distance between the telephone and the radio or TV

Consult your local dealer or service center if the problem persists.

5. INSTALLATION

5.1 DESKTOP INSTALLATION

- 1) Plug one end of the handset coiled cord into the handset. Plug the other end of the cord into the handset jack located on the left side of the phone base.
- 2) Place the handset in the handset cradle.
- 3) Plug one end of the supplied line cord into the LINE jack on the bottom of your phone. Then route the line cord through the left slot of the desk/wall mount bracket.
- 4) Plug the other end of the modular cord into the wall jack.

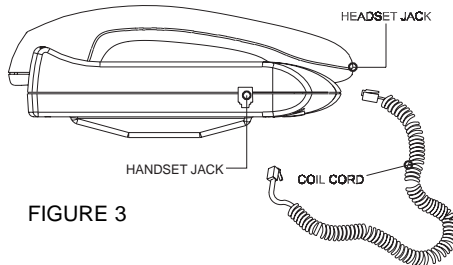 


FIGURE 3

5.2 WALL MOUNTING

- 1) Plug one end of the handset coiled cord into the handset. Plug the other end of the cord into the handset jack located on the left side of the phone base (please refer to figure 3.)
- 2) Place the handset in the handset cradle.
- 3) Remove the desk/wall mount bracket from the bottom of the B120D. Rotate the bracket 180° and reinstall it into the four slots the bottom of the B120D.
- 4) Connect the short line cord into the LINE jack on the bottom of your phone. Connect the other end of the line cord to the line jack on the wall mount plate.
- 5) Slip the phone onto the wall plate jack, lining up the wall mounting holes, and then slide the telephone down so it is firmly in place.

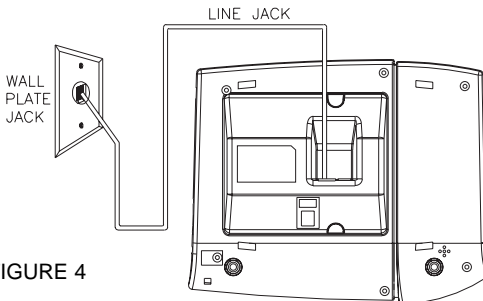 


FIGURE 4

5.3 WALL MOUNTING CLIP

- 1) Located on the front of the telephone, above the speaker grill, is the wall mounting clip. Remove this clip by firmly pushing it upward, in the direction of the hook switch.
- 2) Rotate the clip 180° so that the side with the protruding edge is towards the top. This edge will hold the handset (please refer to figure 5.)

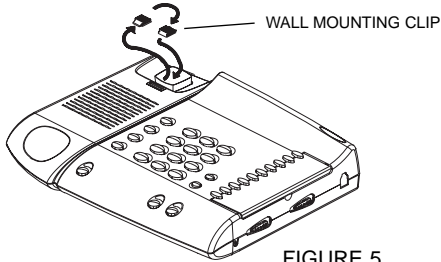 


FIGURE 5

6. USING THE DATA PORT

The data port is located on the right hand side of the telephone, as it is facing you. Use this jack to connect a laptop or desktop computer, answering or fax machine in parallel to the same phone line to which the telephone is connected.

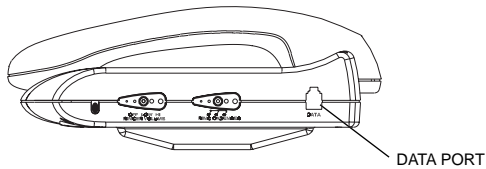 


FIGURE 6

7. ADJUSTING THE RINGER VOLUME

Your B120D has three ringer volume levels: Off, Low and High. To adjust, slide the switch located along the right hand side of the telephone to the desired ringing level.

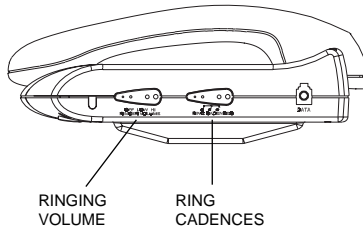 


FIGURE 7

7.1 RING CADENCES

Your phone has three ring cadences, or patterns. To change the cadence, slide the switch located along the right hand side of the telephone to one of the musical notes icons located beneath the switch (please refer to Figure 7.)

8. OPERATION

8.1 PLACING AND ANSWERING CALLS USING THE HANDSET

To make a call, pick up the handset. When you hear the dial tone, dial the desired number. To answer an incoming call, pick up the handset or press the SPEAKER key. To end a call, place the handset back on the cradle or press the SPEAKER key again.

8.2 HANDSET VOLUME CONTROL

There are three (3) volume levels for the handset volume. To increase or decrease the handset volume, press the VOLUME UP or DOWN keys.

8.3 USING THE SPEAKERPHONE

To place or answer a call using the speakerphone, press the SPEAKER key. The SPEAKER indicator will light and the phone will go off hook.

To end a speakerphone call, press the SPEAKER key again. The SPEAKER indicator light turns off.

8.4 SWITCHING BETWEEN HANDSET AND SPEAKERPHONE

To switch from the handset to the speakerphone during a call, press the SPEAKER key, and place the handset on the base.

To switch from the speakerphone to the handset, lift the handset and the speakerphone will automatically turn off.

8.5 ADJUSTING THE SPEAKERPHONE VOLUME

There are three (3) volume levels for the speakerphone. To increase or decrease the speakerphone volume level, press the VOLUME UP or DOWN keys.

8.6 USING A HEADSET

Plug a standard 2.5 mm headset plug into the headset jack on the right hand side of the telephone. You may place and receive calls by pressing the SPEAKER key.

8.7 USING REDIAL

The redial function allows you to redial the number that was last dialed. Pick up the handset, or press the SPEAKER button, and press the REDIAL key. The number will be dialed automatically.

8.8 USING FLASH

The FLASH key supports feature such as call waiting. For example, if you have subscribed to call waiting, press FLASH to answer an incoming call without disconnecting the current call. Press FLASH again to return to the first call.

8.9 USING HOLD

To place a call on hold, press the HOLD key. The HOLD indicator flashes. You can now hang up the handset without disconnecting the call.

To resume the call, press the HOLD key or SPEAKER key. This will remove the call from hold and make the call active.

8.10 USING MUTE

To temporarily switch off the microphone of either the speakerphone or handset, press MUTE. The MUTE indicator lights and the microphone turns off, but you can still hear person on the other end of your conversation. Press MUTE again to resume your conversation.

8.11 STORING A NUMBER IN MEMORY

Follow these steps to program up to ten memory locations, for one touch access to frequently dialed numbers or special PBX/Centrex services or features. Each memory location can store up to sixteen (16) digits.

- 1) Lift the handset, then press PGM.
- 2) Enter the telephone number or string of digits you wish to store. Once you have entered the entire number or string, press the memory button corresponding to the location where you would like the number stored.

8.12 DIALING A STORED NUMBER

Lift the handset or press the SPEAKER key, then press the desired memory key. The telephone will automatically dial the stored number.

9. CALLER ID

Caller ID is a service provided by your telephone company or service provider. When you subscribe to this service, the telephone company sends the incoming caller's telephone number (and name, if available), and the call's date and time, between the first and second rings. The CID display receives and displays this information for each call, and updates the display with the current date and time. The display also shows if the caller information is not available, or if the sender blocks that information. Your B120D will save up to sixty (60) call records, after which it replaces the oldest call record with each new one.

9.1 REVIEWING CALLER ID RECORDS

Each time you receive a call, your B120D stores a Caller ID record that you can review later. A Caller ID record includes:

- Call number (in the order the calls are received)
- The time and date of the call
- Caller's telephone number (if available)
- Caller's name (if available)

To review all the Caller ID records, press REVIEW ↑ or REVIEW ↓.

NOTES: The display shows up to twelve (12) digits of a phone number. If an incoming phone number is longer, the display shows only the last 12 digits.

The B120D returns to the time and date display after about fifteen (15) seconds, if you do not press a key during that time.

The number of new calls and the number of total calls received is also displayed.

9.2 CALLER ID MESSAGES

The chart below explains some common messages that may appear in the display:

# TOTAL # NEW	Appears as new calls are received. (#) indicates the number of total calls and new calls.
PRIVATE CALLER	The caller is blocking the name and/or phone number from being sent.
PRIVATE NAME	The caller is blocking just the name from being sent.
PRIVATE CALL	The caller is blocking just the number from being sent.
UNKNOWN CALLER	The caller is not within a Caller ID service area. No caller name and number appear.
UNKNOWN NAME	The caller is not within a Caller ID service area. Only the number appears, but the name is unknown.
UNKNOWN CALL	Appears when the caller is not within a Caller ID service area. The number is unknown.
NO CALLS	No new call records are in the Caller ID's memory.
MSG WAITING	You have a message waiting.

9.3 DELETING CALLER ID RECORDS

The B120D allows you to delete individual Caller ID records, or all Caller ID records that have been reviewed. It will not allow the deletion of Caller ID records that have not been reviewed. You cannot delete Caller ID records during a call.

To DELETE A SINGLE CALLER ID RECORD:

- 1) Press REVIEW ↑ or REVIEW ↓ to select a record, then press DELETE. The display will show the prompt "DELETE?"
- 2) Press the delete key once again. The name and number will be deleted from the phone book log. If there are no other records, "EMPTY LIST" will appear on display. To press the delete function, press REVIEW ↑ or REVIEW ↓.

To DELETE ALL CALLER ID RECORDS:

- 1) Hold down the DELETE key for approximately four seconds. "DELETE ALL?" appears in the display.
- 2) Release and then press again the DELETE key to delete all call records.

10. MESSAGE WAITING

There is an oval-shaped LED at the top of the telephone that provides you with a visual indication that you have a message. Consult your service provider or system administrator for instructions on how to access these messages.

11. CARING FOR YOUR B120D

Your B120D telephone is an example of superior design and craftsmanship. These suggestions will help you care for your phone so you can enjoy trouble-free service for many years.

- 1) Keep the phone dry. If it gets wet, wipe it dry immediately. Liquids might contain minerals that can corrode the electronic circuits.

- 2) Use and store the phone only in normal temperature environments. Extreme temperatures can shorten the life of electronic devices and distort or melt plastic parts.
- 3) Keep the phone away from dust and dirt, which can cause premature wear of parts.
- 4) Handle the phone gently and carefully. Dropping it can damage internal circuit boards or external parts, and can cause the phone to work improperly.

Modifying or tampering with the phone's internal components can cause a malfunction. If your phone is not performing as it should, see your distributor for assistance. If the trouble is affecting the telephone lines, the phone company or service provider may ask you to disconnect the phone until the problem is resolved.

12. REQUIREMENTS OF PART 68- FCC RULES

This device has been granted a registration number by the Federal Communications Commission, under Part 68 rules and regulations for direct connection to the telephone lines. In order to comply with these FCC rules, the following instructions must be carefully read and applicable portions followed completely:

1. Direct connection to the telephone lines may be made only through the standard modular cord furnished, to the utility installed jack. No connection may be made to party or coin phone lines. On the bottom of the phone is a label that contains among other information, the FCC Registration Number and the Ringer Equivalence number (REN) for this equipment. If requested this information must be provided to the telephone company. The USOC lack for this equipment is RJ1C.
2. The telephone company, under certain circumstances, may temporarily discontinue and make changes in Facilities and services, which may affect the operation of the users' equipment. However, the user shall be given adequate notice in writing to allow the user to maintain uninterrupted service.
3. In certain circumstances, it may be necessary for the Telephone Company to request information from you concerning the equipment which you have connected to your telephone line. Upon request of the telephone company, provide the FCC registration number and the ringer equivalence number of the equipment which is connected to your line; this information will be found on the device.
4. If any of your telephone equipment is not operating properly, you should immediately remove it from the telephone line. It may cause harm to the telephone network.
5. If the telephone company notes a problem, they may temporarily discontinue service. When practical, they will notify you in advance of a disconnection. If advance notice is not feasible, the telephone company must: promptly notify you of such temporary discontinuance; afford the opportunity to correct the condition; inform you of your rights to bring a complaint to the FCC under their rules.
6. Repairs to the device may be made only by the manufacturer or an authorized service agency. This applies at any time during and after warranty. If unauthorized repair is performed, registration, connection to the telephone lines and remainder of warranty period all becomes null and void.
7. This equipment is hearing aid compatible.
8. This telephone must be connected behind a PBX.

13. REQUIREMENTS OF PART 15 - FCC RULES

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction, may cause harmful interference to radio communications. However, there is not a guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: 1) Move the telephone away from the receiver. 2) Consult the dealer or an experienced radio/TV technician for help. Any changes made by the user not approved by the manufacturer can void the user's authority to operate the telephone.

14. INDUSTRY OF CANADA REQUIREMENTS

NOTICE: The Industry Canada label identifies certified equipment. This certification means that the equipment meets certain telecommunications network protective operational and safety requirements as prescribed in the appropriate Terminal Equipment Technical Requirements documents. The department does not guarantee the equipment will operate to the user satisfaction. Before installing this equipment, users should ensure that it is permissible to be connected to the facilities of the local Telecommunications Company. The equipment must also be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations. Repairs to certified equipment should be coordinated by a representative designated by the supplier. Any repairs or

alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment. Users should ensure for their own protection that the electrical ground connections of the power utility, Telephone lines, and internal metallic water pipe systems, if present, are connected together. This precaution may be particularly important in rural areas. Caution: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority or electrician, as appropriate. The Ringer Equivalence Number (REN) of this device is Z.

Notice: The Ringer Equivalence Number (REN) assigned to each terminal device provides an indication of the maximum number of terminals allowed to be connected to a telephone interface. The termination on an interface may consist of any combination of devices subject only to the requirement that the sum of the Ringer Equivalence Numbers of all the devices does not exceed 5. This telephone connects to the telephone network under the connecting arrangement code CA11A.

15. IMPORTANT SAFETY INSTRUCTIONS

WHEN USING YOUR TELEPHONE EQUIPMENT, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK AND INJURY TO PERSONS, INCLUDING THE FOLLOWING:

1. READ AND UNDERSTAND ALL INSTRUCTIONS.
2. FOLLOW ALL WARNINGS AND INSTRUCTIONS MARKED ON THE PRODUCT.
3. UNPLUG THE PRODUCT FROM THE WALL OUTLET BEFORE CLEANING. DO NOT USE LIQUID CLEANER OR AEROSOL CLEANERS. USE A DAMP CLOTH FOR CLEANING.
4. DO NOT USE THIS PRODUCT NEAR WATER, FOR EXAMPLE: NEAR A BATHTUB, WASH BOWL, KITCHEN SINK OR LAUNDRY TUB, IN A WET BASEMENT, OR NEAR A SWIMMING POOL.
5. DO NOT PLACE THIS PRODUCT ON AN UNSTABLE CART, STAND OR TABLE. THE PRODUCT MAY FALL, CAUSING SERIOUS DAMAGE TO THE PRODUCT.
6. SLOTS AND OPENINGS IN THE CABINET AND THE BACK OF BOTTOM ARE PROVIDED FOR VENTILATION. THESE OPENINGS MUST NOT BE BLOCKED OR COVERED. THE OPENINGS SHOULD NEVER BE BLOCKED BY PLACING THE PRODUCT ON A BED, SOFA, RUG OR ANY OTHER SIMILAR SURFACE. THIS PRODUCT SHOULD NEVER BE PLACED NEAR OR OVER A RADIATOR OR HEAT REGISTER. THIS PRODUCT SHOULD NOT BE PLACED IN A BUILT-IN INSTALLATION UNLESS PROPER VENTILATION IS PROVIDED.
7. NEVER PUSH OBJECTS OF ANY KIND INTO THIS PRODUCT THROUGH CABINET SLOTS AS THEY MAY TOUCH DANGEROUS VOLTAGE POINTS OR CAUSE A SHORT CIRCUIT THAT COULD RESULT IN A FIRE OR ELECTRIC SHOCK. NEVER SPILL LIQUID OF ANY KIND ON THE PRODUCT.
8. TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT DISASSEMBLE THIS PRODUCT. IF SERVICE IS NECESSARY, SEND OR TAKE THE TELEPHONE TO A QUALIFIED SERVICE FACILITY. OPENING OR REMOVING COVERS MAY EXPOSE YOU TO DANGEROUS VOLTAGES OR OTHER RISKS. INCORRECT REASSEMBLY CAN CAUSE ELECTRIC SHOCK WHEN THE APPLIANCE IS SUBSEQUENTLY USED.
9. UNPLUG THIS PRODUCT FROM THE WALL OUTLET AND REFER SERVICING TO QUALIFIED SERVICE PERSONNEL UNDER THE FOLLOWING CONDITIONS:
 - IF THE POWER SUPPLY CORD OR PLUG IS DAMAGED OR FRAYED
 - IF LIQUID HAS BEEN SPILLED INTO THE PRODUCT
 - IF THE PRODUCT HAS BEEN EXPOSED TO RAIN OR WATER
 - IF THE PRODUCT DOES NOT OPERATE NORMALLY BY FOLLOWING THE OPERATING INSTRUCTIONS. ADJUST ONLY THOSE CONTROLS THAT ARE COVERED BY THE OPERATING INSTRUCTIONS, AS IMPROPER ADJUSTMENT OF OTHER CONTROLS MAY RESULT IN DAMAGE AND WILL OFTEN REQUIRE EXTENSIVE WORK BY A QUALIFIED TECHNICIAN TO RESTORE THE PRODUCT TO NORMAL OPERATION.
 - IF THE PRODUCT HAS BEEN DROPPED OR THE CABINET HAS BEEN DAMAGED.
 - IF THE PRODUCT EXHIBITS A DISTINCT CHANGE IN PERFORMANCE.
10. AVOID USING THE TELEPHONE DURING AN ELECTRICAL STORM. THERE MAY BE A REMOTE RISK OF ELECTRIC SHOCK FROM LIGHTNING.
11. DO NOT USE THE TELEPHONE TO REPORT A GAS LEAK IN THE VICINITY OF THE LEAK.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>