

**POWERED BY**



**TI4676**

# **MICRO POWER UNIT**



**Tesla Industries Inc.**

109 CenterPoint Blvd.

New Castle, DE 19720

(302)324-8910 Phone

(302) 324-8912 Fax

**[www.TESLAind.com](http://www.TESLAind.com)**

**WARNING**



IMPROPER USE/FAILURE TO FOLLOW INSTRUCTIONS IN OPERATORS MANUAL CAN RESULT IN UNIT FAILURE AND/OR POSSIBLE INJURY, OR DEATH, BY ELECTRICAL SHOCK.

THE **TI4676** IS A MAINTENANCE FREE, SEALED UNIT

NO REPAIRS ARE AUTHORIZED.

WARRANTY WILL BE **VOID** IF

UNIT IS TAMPERED WITH.

FOR TECHNICAL SUPPORT CONTACT:

**TESLA INDUSTRIES INC.**

**109 CENTERPOINT BLVD.**

**CENTERPOINT INDUSTRIAL PARK**

**NEW CASTLE, DELAWARE 19720**

**PH. (302)324-8910**

**FAX (302)324-8912**

**[www.teslaind.com](http://www.teslaind.com)**

**WARNING**



ATTEMPTS TO OPEN OR ENTER THE INSIDE OF THIS UNIT (BY USING ANY TOOL OR DEVICE; i.e. PROBE, BORESCOPE, etc.) CAN RESULT IN UNIT FAILURE AND/OR POSSIBLE INJURY BY ELECTRICAL SHOCK. THIS UNIT IS MAINTENANCE FREE AND SHALL NOT BE OPENED OR DISASSEMBLED FOR ANY REASON.

\*\*\*SHIPPING HAZARDS\*\*\*

**NONE**

"DRY" Non-spillable, POWER CELL (battery),

No Free liquids, to leak or toxic gases.

Always protect unit from short circuit.

Return Power cells to Tesla for Recycling.

## TABLE OF CONTENTS

TITLE		Page
CHAPTER 1	INTRODUCTION	1-1
CHAPTER 2	UNIT DESCRIPTION AND OPERATION	2-1
Section I	Unit	2-1
Section II	Description	2-2
CHAPTER 3	OPERATING LIMITS AND RESTRICTIONS	3-1
Section I	General	3-1
Section II	Operational Restrictions and Safety Limits	3-1
CHAPTER 4	OPERATING AND INSTALLATION PROCEDURES	4-1
Section I	Installation Procedures	4-1
Section II	Unit Operation	4-1
Section III	Operating Procedures	4-2
Section IV	Functional Check Procedures	4-5
CHAPTER 5	PERFORMANCE DATA	5-1
Section I	Introduction	5-1
Section II	Data Criteria	5-2
CHAPTER 6	CARE AND MAINTENANCE	6-1
Section I	Unit Care	6-1
Section II	Maintenance	6-2
CHAPTER 7	Push to Test Operation	7-1
INDEX		Index 1

### **LIST OF ILLUSTRATIONS**

Figure	Title	Page
2-1	Dimensions	2-3
2-2	Fuse Setting Procedures	2-4
5-1	Temperature Conversion Chart	5-3
5-2	Discharge Load Curve	5-4
5-3	Maximum Output Current	5-5

# CHAPTER 1

## INTRODUCTION

### 1-1. GENERAL

These instructions are for use by the owner/operator. They apply to handling and operation of the TI4676 Micro Power Unit (MPU).

### 1-2. WARNING, CAUTION, AND NOTE DEFINED

A warning, caution, or note is used to emphasize important and critical instructions as defined for the following conditions:

#### WARNING



An operating procedure, practice, etc., which, if not correctly followed, could result in personal injury or loss of life.

#### CAUTION



An operating procedure, practice, etc., which, if not strictly observed, could result in damage to or destruction of equipment.

#### NOTE

An operating procedure, condition, etc., which is essential to highlight.

### 1-3. DESCRIPTION

This manual contains the complete operating instructions and procedures for the TI4676 MPU. The TI4676 is intended to provide an on-board battery along with DC electrical ground power for aircraft systems and maintenance ground support operations. The unit is designed to provide 24 volt DC electrical power output for aircraft engine starting and 24 or 28.5 volts DC electrical support for ground maintenance, avionics/ electrical trouble shooting and testing. The unit also has a built in capacity tester (push to test button), and recharge rate indicator. The TI4676 MPU has a internal, independent, intelligent recharger that will enable the MPU to be rapidly recharged from either the aircraft generator or any 120-240 50/60 Hz VAC common power source. The observance of procedures, limitations and performance criteria is essential to ensure peak operating efficiency and to maximize operational capabilities and life of the TI4676 MPU.


## 1-4. INDEX

The index lists, in alphabetical order, every titled paragraph and figure contained in this manual.

## 1-5. ABBREVIATIONS AND SYMBOLS

Abbreviations and symbols are used within text, headings and titles. Unless otherwise indicated, the following list of abbreviations and symbols are used in this manual:

### LIST OF ABBREVIATIONS AND SYMBOLS

<b>Abbreviation</b>	<b>Definition</b>
Amp	Ampere
AC	Alternating Current
C	Celsius
cont	Continuous
DC	Direct Current
F	Fahrenheit
Ft	Feet
FWD	Forward
MPU	Micro Power Unit
Hr	Hour
Hz	Hertz
Kg	Kilograms
KW	Kilowatts
°	Degree
LED	Light Emitting Diode
MAX	Maximum
MIN	Minimum
VAC	Volts, Alternating Current
VDC	Volts, Direct Current
	Explosion Hazard Potential
	Shock Hazard Potential
	Guard from moisture
	Guard from incorrect power source

**1-6. FORMS AND RECORDS**

NONE REQUIRED.

**1-7. USE OF WORDS SHALL, SHOULD, AND MAY.**

Within this technical manual the word "**shall**" is used to indicate a mandatory requirement for proper operation and warranty purposes. The word "**should**" is used to indicate a non-mandatory but preferred method of accomplishment. The word "**may**" is used to indicate an acceptable method of accomplishment.

## CHAPTER 2

### UNIT DESCRIPTION AND OPERATION

#### SECTION I. UNIT

##### 2-1. GENERAL

The TI4676 (Figure 2-1) is a compact, portable and highly versatile 24/28.5 VDC electrical MPU. The unit incorporates a 120-240 50/60 Hz to 28.5 VDC converter, a 24 volt unique (dry) power cell and an internal intelligent 120-240 50/60 Hz VAC charger to recharge the power cells. In addition the MPU incorporates a push to test button which gives the user the ability to test the capacity of the power cells. These built-in features give the TI4676 self-sufficiency in an aircraft battery, and long term ground operations with AC electrical power. Aircraft battery operations rely on the unique dry-cell batteries that can be rapidly recharged from the aircraft generator or any common 120-240 50/60 Hz VAC source. Ground operations incorporate the continuous 12 Amp output of the 120-240 50/60 Hz VAC to 28.5 VDC converter, or a combination of converter and power cell output to provide 24 VDC output. The following are the unit's five (5) main operational support capabilities:

- a. 24 VDC 1500 amp peak power output for engine starting or constant (one hour) rated power output (without a 120-240 50/60 Hz VAC power source) for short-term trouble shooting.
- b. 24 VDC constant (one hour) rated power output or variable high load demand output (less than one hour) with a 120-240 50/60 Hz VAC power source for extended maintenance (hangar) and routine flight line maintenance, ground support power.
- c. 28.5 VDC continuous rated (AC to DC converter) power output with a 120-240 50/60 Hz VAC power source for hangar and routine flight line maintenance support.
- d. Rapid recharge of the unit's power cells from aircraft generator or any 120-240 50/60 Hz VAC common power source. This feature eliminates the need for special recharge equipment and dedicated maintenance support man-hours.
- e. Built in Capacity tester and state of recharge indicator.

## WARNING



Check fuse holder window to ensure the fuse setting reads either **120** or **240** prior to connecting recharge cord to AC power source. Fuse setting (120/240) must match AC power source (hangar wall, flight line AC power) prior to connecting MPU for recharging.



**120 VAC Setting**



**240 VAC Setting**

(SEE PAGE 2-4 FOR DETAILS ON FUSE SETTING PROCEDURES)

## SECTION II DESCRIPTION

### 2.2. GENERAL SPECIFICATIONS

#### WEIGHT

UNIT: 48.2 lbs. (21.8 Kg)

AC POWER CORD: 0.4 lbs. (0.18 Kg)

#### INPUT POWER AC

**TI4676:** 110-240 VAC 50/60 Hz 6.50 amps max.

#### OUTPUT POWER DC

CONVERTER: 28.5 VDC TO 12 AMPS, 24 VDC 15 AMPS AND ABOVE.

POWER CELLS: 24 VDC 23 AMP Hour

PEAK OUTPUT: 1500 AMPS

#### POWER CELL

DRY, HIGH RATE DISCHARGE, RECHARGEABLE, MAINTENANCE-FREE

### OPTIONAL ACCESORIES

#### SHIPPING CASES

Used for shipping and storage.



Part # TI7000-023



# UNIT DESCRIPTION / DIMENSIONS

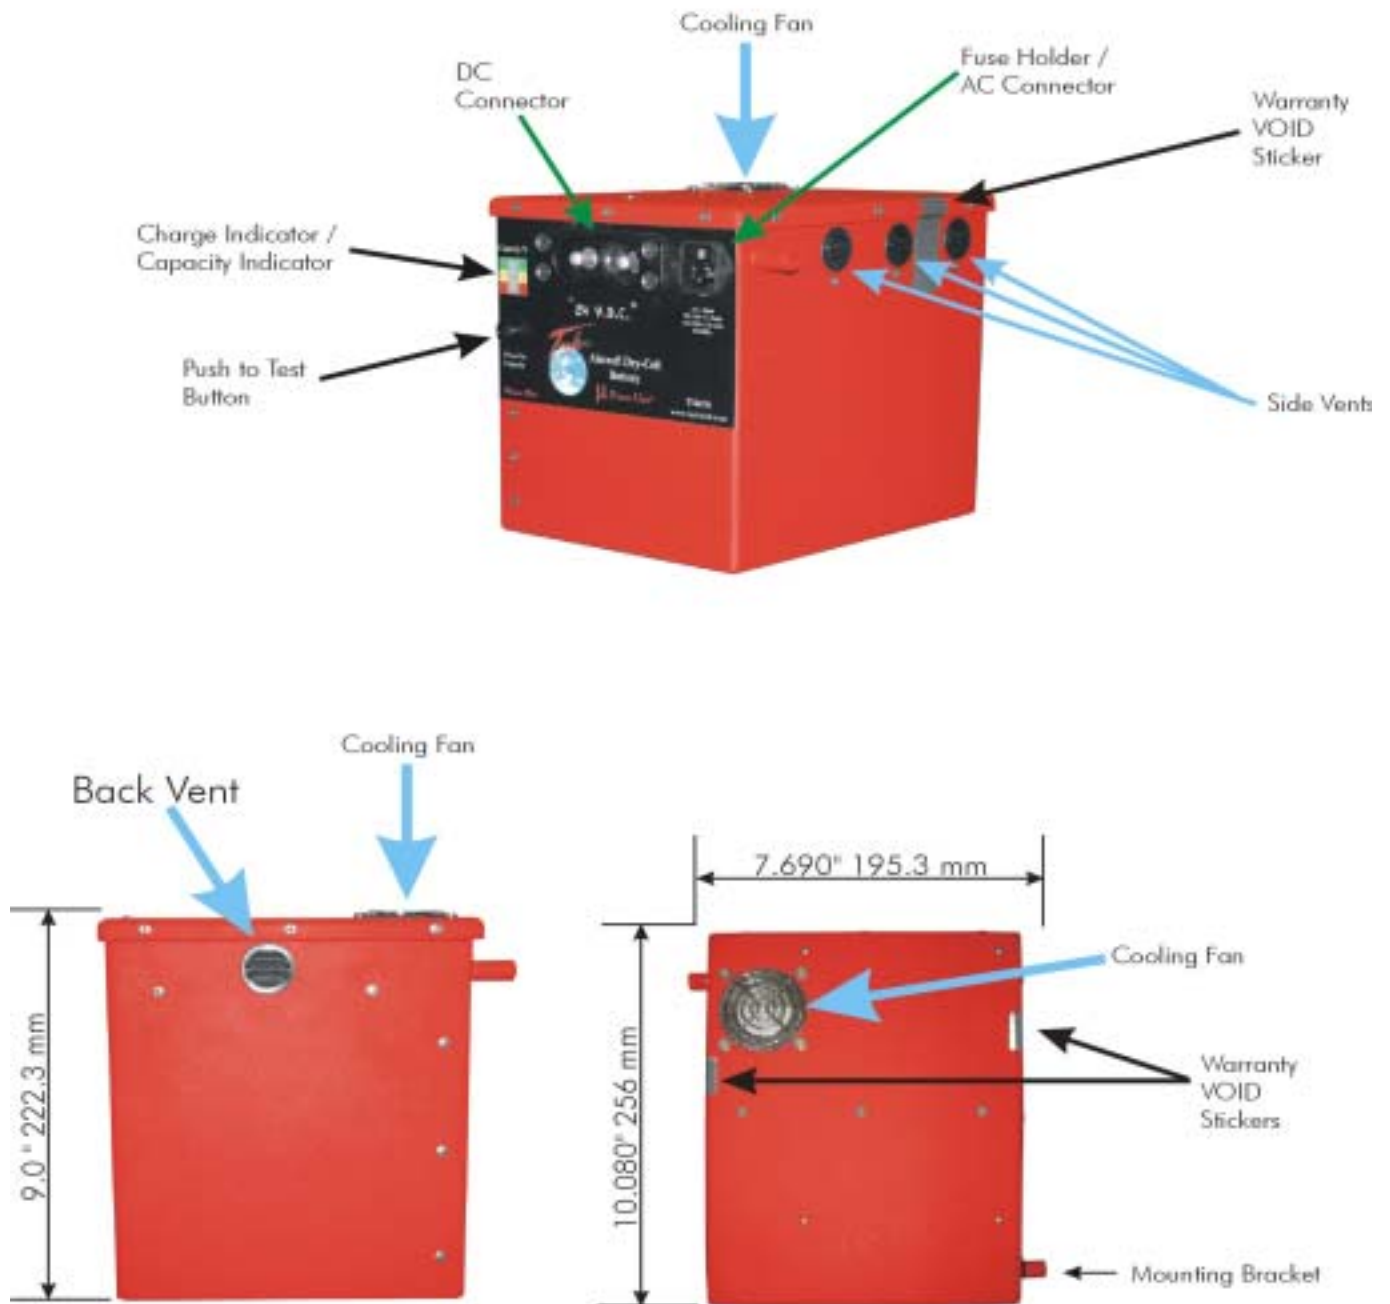


Fig 2-1

## Fuse Setting Procedures for Switching Voltages or Changing Blown Fuses



1) Grab both tabs on left and right side of the fuse clip. Press tabs inward and pull fuse clip out of housing GENTLY.




2) Completely pull fuse clip from housing, being careful not to drop the fuses from the fuse clip.



3) Note: The fuses are not fastened into the fuse clip, they are loose. Take care to ensure fuses are not dropped or lost.



4) GENTLY pull the white clip from the fuse clip, taking care not to bend any of the tabs. (See enlargement 1)

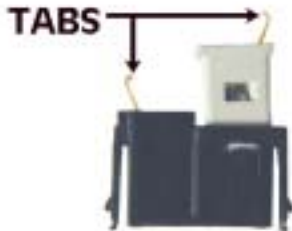

5) Completely remove the white clip from the fuse clip.



6) Ensure that the proper voltage is selected on the white clip. (See Enlargement 2 & 3)



7) Replace the white clip back into the fuse clip. Take care not to damage the tabs.



8) Completely insert white clip in to fuse clip (GENTLY) until it snaps into place.



9) Insert fuse clip back into fuse housing EVENLY on both sides. DO NOT FORCE, if fuse clip does not go in easy, it means fuses are misaligned, realign fuses and insert again.



10) Snap fuse clip back into the housing (GENTLY). **DOUBLE CHECK VOLTAGE WINDOW PRIOR TO PLUGGING UNIT INTO AC POWER**

# CHAPTER 3

## OPERATING LIMITS AND RESTRICTIONS

### SECTION I. GENERAL

#### 3-1. PURPOSE

Chapter 3 includes all important operating limits and restrictions that must be observed for proper and safe operation of the TI4676 micro power unit.

#### 3-2. GENERAL

The operating limitations set forth in this chapter are the direct result of design analysis, testing, and operating experience. Compliance with these limitations and restrictions will ensure that owners/operators obtain maximum continued capability from the TI4676 ground power unit.

### SECTION II. OPERATIONAL RESTRICTIONS AND SAFETY LIMITS

#### 3-3. POWER CELL RECHARGE LIMITS

Any time the unit's power cells are fully discharged the unit shall be recharged within 24 hours to prevent performance degradation and ensure maximum life.

#### CAUTION

Unit's power cells may be damaged if recharged by NiCad or Lead Acid-type battery chargers. Power cells should only be charged by either the TI4676 MPU internal charger and the AC power cord furnished with the equipment, or off the aircraft generator when installed on the aircraft.

### 3-4. 120-240 50/60 Hz VAC CHARGER AND AC TO DC CONVERTER LIMITS

The unit is designed with a single point AC receptacle for external power to operate both the internal charger and converter. The unit's AC voltage range can be factory set from 105 to 250 VAC at 50 to 60 Hz depending upon customer requirements. The AC power cord provided with the unit is the mechanism that ensures the specified AC power source is properly supplied to the unit (see paragraph 3-5). Use no others.

INTERNAL CHARGER: NO LIMIT AC power cord can remain connected when power cells are fully charged. When the power cells are fully charged the unit's intelligent charger will go to a stand-by mode, LED will stay green or flicker, monitor the power cells state of charge and only charge the power cells to ensure they stay at maximum capacity.

INTERNAL AC TO DC CONVERTER: LIMITED (see paragraph 3-6, 3-8 and 3-10). AC power cord does not have to be disconnected when converter power output is no longer required. Once DC power demand is terminated the unit's intelligent charger will remain on line to ensure power cells are charged to maximum capacity.

#### CAUTION




Unit will be damaged if unapproved AC power is applied.

### 3-5 AC POWER CORD LIMITS


The AC power cord governs which AC power source the unit is set to operate from. The TI4676 is supplied with a single customer specified AC power cord. Some customers may specify a non North American AC option (for worldwide mobility see appendix A). Each power cord is marked accordingly.

FOR MORE INFORMATION ON POWER CORDS SEE APPENDIX A


### AC Line Cords

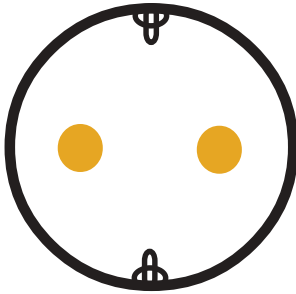


North American

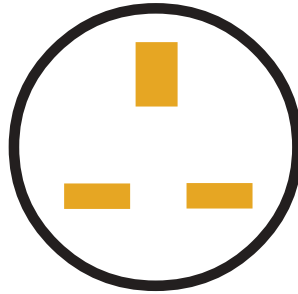

Old British

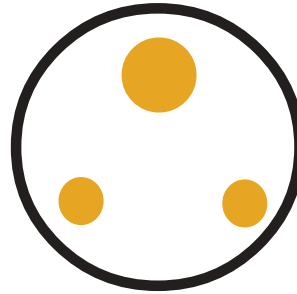

U.K

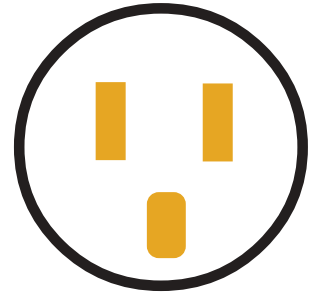

Cont. Europe

(more examples in appendix or call factory for information)

### CAUTION



Unit will be damaged if unapproved AC power is applied by fitting 120 or 240 VAC power cord with any kind of unapproved modification or adapter that changes the specified input power characteristics.

### WARNING



\*\*\*\*\*SHOCK HAZARD POTENTIAL\*\*\*\*\*



Failure to use proper grounding can cause a potential shock hazard! In different countries, the 240 VAC 50 Hz power cord may require the use of a plug adapter to achieve plug style compatibility for 240 VAC 50 Hz operation. Use only adapters with proper grounding mechanism.

### 3-6. ONE (1) HOUR RATE, 24 VDC CONSTANT OUTPUT

23 amp hour (without AC power connected), power cell output.

(see Figure 5-2)

35 amp hours (with AC power connected), both power cell and AC to DC converter output.

### NOTE

If power output is greater than rated amp hour rate, power cell discharge rate will increase correspondingly.

### 3-7. RATED PEAK OUTPUT (ENGINE STARTING)

1500 peak amps at 25°C (77°F) (See Figure 5-3).

### 3-8. CONTINUOUS OUTPUT RATE, 28.5 VDC CONSTANT OUTPUT

35 Amps at 1 hour (with AC power connected)

#### NOTE

If current demand exceeds 12 amps, converter output voltage will drop below 28.5 VDC and two or more LED status indicator bars will illuminate. If all LED status indicator bars illuminate, both the converter and power cells are supplying 24 VDC power output (see paragraph 3-4 and 4-7)

### 3-9. ENGINE STARTING POWER

Operators should always ensure the unit is charged above 80% prior to ground support engine starting. However, circumstances may exist during use where unit recharge is not readily available and immediate external engine starting power is required. The following provides minimum states of charge necessary to provide ample power for an efficient engine start under specific current load demands.

<u>ENGINE START CURRENT LOAD DEMAND</u>	<u>MINIMUM CHARGE</u>
Under 650 peak starting amps	40% charged
650 - 850 peak starting amps	50% charged
850 - 1000 peak starting amps	60% charged
1000 - 1200 peak starting amps	70% charged
1200 - 1500 peak starting amps	80% charged

### 3-10. TEMPERATURE

Temperatures refer to the unit's cold/heat soaked temperature. The ambient temperature that a unit is exposed to for one (1) hour or more shall establish a unit's cold/heat soaked temperature. If unit's cold/heat soaked temperature exceeds operating temperature range, unit shall be stabilized prior to operation as follows: COLD SOAKED, warmed for a minimum of 3 hours above +10C<sup>o</sup> (+41<sup>o</sup>F) or 2 hours above +20C<sup>o</sup> (+68<sup>o</sup>F); WARMED SOAKED, cooled for 1 hour below +38C<sup>o</sup> (+100<sup>o</sup>F).

#### **Operating range:**

*without* AC power -40C<sup>o</sup> (-40<sup>o</sup>F) TO +60C<sup>o</sup> (+140<sup>o</sup>F)

*with* AC Power -30C<sup>o</sup> (-22<sup>o</sup>F) TO +50C<sup>o</sup> (+124<sup>o</sup>F)

#### **Storage range:**

60C<sup>o</sup> (-76<sup>o</sup>F) TO +60C<sup>o</sup> (+140<sup>o</sup>F)

**(CONTINUED ON NEXT PAGE)**

### CAUTION

Unit may be damaged if operated when unit's cold or heat soaked temperature exceed the specified limit. If unit is operated when cold or heat soaked temperature limit is exceeded; a full functional check should be accomplished prior to continued use.

### NOTE

If unit should overheat, an over-temperature sensor will shut down 120-240 50/60 Hz AC functions (charger and converter) until unit cools to normal operating temperatures.

### 3-11. ENVIRONMENTAL

Operating any electrical equipment in the presence of moisture creates possible safety hazards and/or potential for equipment damage. Every effort has been made, within the scope of existing technology to prevent foreseeable safety hazards and make the TI4676 moisture resistant to prevent damage or failure. If the TI4676 is exposed to moisture, preventive measures and precautions shall be taken to:

a. Prevent accumulation of moisture on AC and DC connectors/receptacles

b. Minimize moisture entering FWD inlet and AFT outlet cooling fan vent ports

The limits and operational constraints listed below shall apply for the following environmental (weather) conditions during recharging process:

Heavy or steady rain: OPERATION NOT RECOMMENDED DURING RECHARGING PROCESS

Light rain, drizzle: NO CONVERTER OR CHARGER 120-240 50/60 Hz VAC

Fog, snow or sleet: POWER SHALL BE APPLIED.

Unit inlet and outlet vent ports shall be covered from exposure. Unit shall be kept horizontal.

## WARNING



\*\*\*\*\*SHOCK HAZARD POTENTIAL\*\*\*\*\*



Severe injury, or Death, from electrical shock is possible when personnel and/or TI4676 are wet during use and when 120-240 50/60 Hz VAC power is being supplied to unit.

## CAUTION



Damage may occur if unit is operated after exposure to moisture (rain, drizzle, fog, sleet or snow) or moisture contamination is suspected. DO NOT USE until unit's exterior and receptacles are dried. Operation shall be restricted to use *without 120 or 240 power cord*. DO NOT CONNECT 120 or 240 VAC power cord until unit has been dried for a MINIMUM of one (1) hour, prior to use.

Blowing sand or dust: Minimize exposure to sand and dust when 120-240 50/60 Hz AC power is used. Unit shall be kept horizontal during use.



**CAUTION**

Unit damage may occur if inlet and outlet vent ports are obstructed and/or cooling airflow is restricted.



Back Vent



Side Vents



Cooling Fan

**3-13. UNIT OPERATION DURING AIRCRAFT FUELING/DEFUELING**

Power output is restricted to 24 VDC power cell output only. DO NOT CONNECT 120 or 240 VAC POWER SUPPLY. 120-240 50/60 Hz VAC power (charger or AC-DC converter) functions of unit shall not be operated during any aircraft fuel handling operation.

**WARNING**



\*\*\*\*\*FIRE/EXPLOSION HAZARD POTENTIAL\*\*\*\*\*



Severe injury, or Death, may occur from fire or explosion, as a result of electrical sparks produced near fuel vapors.

## **CHAPTER 4**

### **OPERATING AND INSTALLATION PROCEDURES**

#### **SECTION I. UNIT INSTALLATION**

##### **4-1. INSTALLATION**

1. Remove original aircraft battery and dispose of properly (follow your aircraft's manual for proper removal and disposal of aircraft battery).
2. Ensure that the TI4676 MPU is fully charged. Remove AC cord and place the TI4676 MPU in the same position of the original battery (ensure that the DC receptacle is oriented in the same position as the original battery).
3. Position the TI4676 MPU so that the aircraft battery tie-down bolts are aligned with the bracket on the MPU. Secure the aircraft tie-down bolts so that the MPU is securely fastened.
4. Attach the aircraft DC plug so that it is fully seated into the MPU receptacle.
5. Because the TI4676 MPU uses monolithic dry-cell batteries, there is no need to attach the ventilation tubes to the MPU.
6. Because there is no hazardous materials or liquids in the cells, there is no risk of thermal runaway, and therefore no need to hook up temperature sensors.

#### **SECTION II. OPERATING PROCEDURES**

##### **4-2. GENERAL**

Correct operation of the TI4676 includes both pre-use and operational checks of the unit. Knowledge of the operating limits, restrictions, performance, unit capabilities and functions is fundamental to correct and safe operation. The operator shall ensure compliance with the instructions in this manual that affect operational safety and the warranty of the unit.

##### **4-3. OPERATING LIMITS AND RESTRICTIONS**

The minimum, maximum and normal operating ranges result from careful engineering and evaluation of test data. These limitations must be adhered to during all phases of operation. Refer to Chapter 3, Section II, OPERATING LIMITS AND RESTRICTIONS, for detailed information.

##### **4-4. PERFORMANCE**

Refer to Chapter 5, PERFORMANCE DATA to determine the capability of the TI4676. Consideration must be given to changes in performance resulting from variations in ambient temperature, mode of operation, state of charge (with or without 120 or 240 VAC power), and aircraft DC bus system inefficiency (voltage drops).

## SECTION II. OPERATING PROCEDURES (cont.)

### 4-5. OPERATING PROCEDURES

This section deals with normal procedures, and includes all steps necessary to ensure safe and efficient operation of the TI4676. As experience is gained with the TI4676, the user will be able to maximize the unit's unique capabilities to enhance the flexibility of aircraft maintenance and support operations.

#### NOTE

When the TI4676 is not in use, it should always remain plugged into a suitable AC power source to insure operational readiness at all times. REMEMBER, when the AC line cord is plugged in, the unit must be placed in a position to allow the cooling fan to operate unobstructed!












 






### 4-6. BEFORE OPERATION CHECK

1. CHECK FUSE WINDOW FOR PROPER SETTING (120/240) BEFORE PLUGGING UNIT INTO THE AC POWER SOURCE TO BE USED.

#### NOTE:

Under a full charge the LED indicator should show a single steady green bar or the entire LED will be flickering. The fan will also exhibit ratcheting but will not come on. This is normal operation and the unit will go into standby mode, the unit is ready for use.

Capacity %


		100
		90
		80
		70
		60
		50
		40
		30
		<20

2. CHECK UNIT FOR EVIDENCE OF DAMAGE - Check for dents, punctures, case distortion or misalignment, cracked or loose connectors, and that cooling fan is functioning ( cooling fan can be checked by pressing push to test button ).

### CAUTION

REMEMBER, when the AC line cord is plugged in, the unit must be placed in a position to allow the cooling fan to operate properly!

Unit may overheat if cooling fan fails. Do not operate if cooling fan fails. (More than one green bar is present on bar graph)

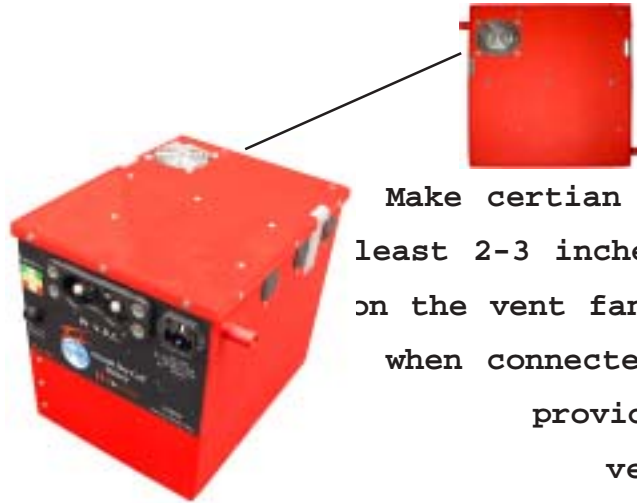

Make certain there is at least 2-3 inches clearance on the vent fan of the MPU when connected to AC, to provide sufficient ventilation.

3. CHECK AIRCRAFT PLUG AND MPU CONNECTORS FOR DAMAGE - Check cable for cuts, chafing or evidence of being crushed. Check connectors for cracks, cuts, distortions, excessive wear, broken/loose fasteners or loose cable attachment.

#### **4-7 POWER CELL RECHARGE**

1. CONNECT AC POWER CORD TO UNIT (CHECK FUSE WINDOW FOR PROPER SETTING). - Ensure 120 or 240 VAC power cord is properly connected to an approved AC power supply. Unit shall be in an upright position according to aircraft specifications to ensure unit's vent ports are free from blockage. After approximately 5-8 seconds, ensure unit's LED status indicator illuminates indicating power cell state of charge and cooling fan is operating.

**CAUTION**

Unit may overheat if cooling fan fails.

Do not operate if cooling fan fails.



2. CHECK FOR FULL CHARGE INDICATION - After 1 HR 15 minutes, LED charge indicator should show a single steady or flickering LED bar when fully charged. AC power may be left connected to unit when power cells are fully charged.

**NOTE:**

Under a full charge the LED indicator should show a single steady green bar or the entire LED will be flickering. The fan will also exhibit ratcheting but will not come on. This is normal operation and the unit will go into standby mode, the unit is ready for use.

## SECTION III.

### FUNCTIONAL CHECK PROCEDURES AND TROUBLE SHOOTING

#### 4-8. FUNCTIONAL CHECK PROCEDURES

This section deals with normal functional check procedures, and includes all steps necessary to ensure the TI4676 is functioning within specific operational parameters prior to operational use. As users gain experience with the TI4676, they will incorporate these functional checks as a routine practice.

#### 4-9. REQUIRED EQUIPMENT FOR FUNCTIONAL CHECK.

FLUKE OR EQUIVALENT TYPE DIGITAL MULTIMETER.

#### 4-10. DC FUNCTIONAL CHECK.

1. CHECK UNIT FOR EVIDENCE OF DAMAGE - Check for dents, punctures, case distortion or misalignment, cracked or loose connectors. If no damage is evident proceed to step two.

IF DAMAGE IS EVIDENT contact distributor or manufacturer.

2. ENSURE UNIT IS NOT PLUGGED INTO 120 OR 240 VDC. Unplug AC power if plugged in.

3. CHECK UNIT INTERNAL RESISTANCE (TEST FOR SHORTS) - Better than 10 Mega-ohms. Ensure no short exists.

Negative (-) DC receptacle terminal and unit case.

Positive (+) DC receptacle terminal and unit case.

4. CHECK DC VOLTAGE READING AT DC RECEPTACLE TERMINALS.

24 to 25.5 VDC depending on state of charge.

5. PLUG IN 120 OR 240 POWER CORD. (CHECK FUSE WINDOW FOR PROPER SETTING). - Ensure power unit is connected to a suitable AC power source (120 USA or 240 European).

6. CHECK UNIT FOR STATE OF CHARGE - Unit shall be in a position to ensure unit's vent ports are free from blockage. After approximately 5-8 seconds, unit LED status indicator shall illuminate indicating power cell state of charge. Ensure LED status indicator and cooling fan is operational. Prior to continuing to step 7, the LED status indicator should show a single green bar (last LED bar) or a flickering LED status bar to indicate the unit's power cells are fully charged. Also under full charge the fan will ratchet but not enable.

#### **NOTE:**

Under a full charge the LED indicator should show a single steady green bar or the entire LED will be flickering. The fan will also exhibit ratcheting but will not come on. This is normal operation and the unit will go into standby mode, the unit is ready for use.

7. CHECK DC VOLTAGE READING AT DC RECEPTACLE TERMINALS. Ensure power cells are fully charged (see step 6.)

28.5 ( $\pm 0.57$  VDC) with power cells at full state of charge.

8. FUNCTIONAL CHECK COMPLETE - Unit should remain plugged in to AC power until ready for installation in aircraft.

# CHAPTER 5

## PERFORMANCE DATA

### SECTION 1. INTRODUCTION

#### 5-1. PURPOSE

This chapter provides performance data for the TI4676. Continual reference to this information will enable the user to obtain maximum performance, utilization and service life from the TI4676. Although maximum performance is not always required, regular referral to this chapter is recommended for the following reasons:

- a. To generate knowledge of unit's performance margins to enable the operator to make sound judgment when unexpected conditions or alternate operational requirements are encountered.
- b. To enable the user to readily recognize situations requiring maximum performance.
- c. To gain experience in accurately estimating the effects of variables for which data is not presented.
- d. To help the operator determine if an aircraft system malfunction exists by comparing actual performance with expected performance.

#### NOTE

The information provided in this chapter is primarily intended for operational planning and is most useful when planning operations under unfamiliar conditions or environmental extremes. The data may also be used to establish local operating procedures and to ensure unit's operational life is maximized.

#### 5-2. GENERAL

The data presented covers the maximum range of conditions and performance that can reasonably be expected. In each area of performance, the effects of temperature and DC electrical load demand relating to the ground power support requirements are presented. Wherever practical, data is presented conservatively. However, NO GENERAL CONSERVATISM HAS BEEN APPLIED. All performance data presented is within the applicable limits of the TI4676 MPU.



## **SECTION II**

### **DATA CRITERIA**

#### **5-3 DATA BASIS**

The type of data used is indicated at the bottom of each performance chart under DATA BASIS. The applicable report and date of the data are also given. The data provided generally are based on one of three categories:

- a. *Derived From Actual Controlled Testing.* Controlled test data obtained on a similar unit type.
- b. *Calculated Data.* Data based on tests, but not on a similar unit type placed under a controlled test.
- c. *Estimated Data.* Data based on estimates using rules of physics, mathematics, and electrical engineering principles and concepts, but not verified by tests.

#### **5-4. SPECIFIC CONDITIONS**

The data presented are accurate only for specific conditions listed under the title of each chart or graph. Variables for which data are not presented, but which may affect that phase of performance, are discussed in associated text. Where data is available or reasonable estimates can be made the amount that each variable affect performance will be given.

#### **5-5. GENERAL CONDITIONS**

In addition to the specific conditions, the following general conditions are applicable to the performance data.

- a. *Variation in Aircraft.* Power demand differences between individual aircraft of the same make and model are known to exist due to variations in DC electrical system efficiency. These differences, however, are considered insignificant and are not individually accounted for.
- b. *Aircraft Instrument Variations.* The data shown in the performance charts do not account for instrument tolerance differences or inaccuracies.

#### **5-6. DEFINITIONS OF ABBREVIATIONS**

Unless otherwise indicated, the abbreviations defined in Chapter 1 will be applicable to all charts and graphs in this chapter.

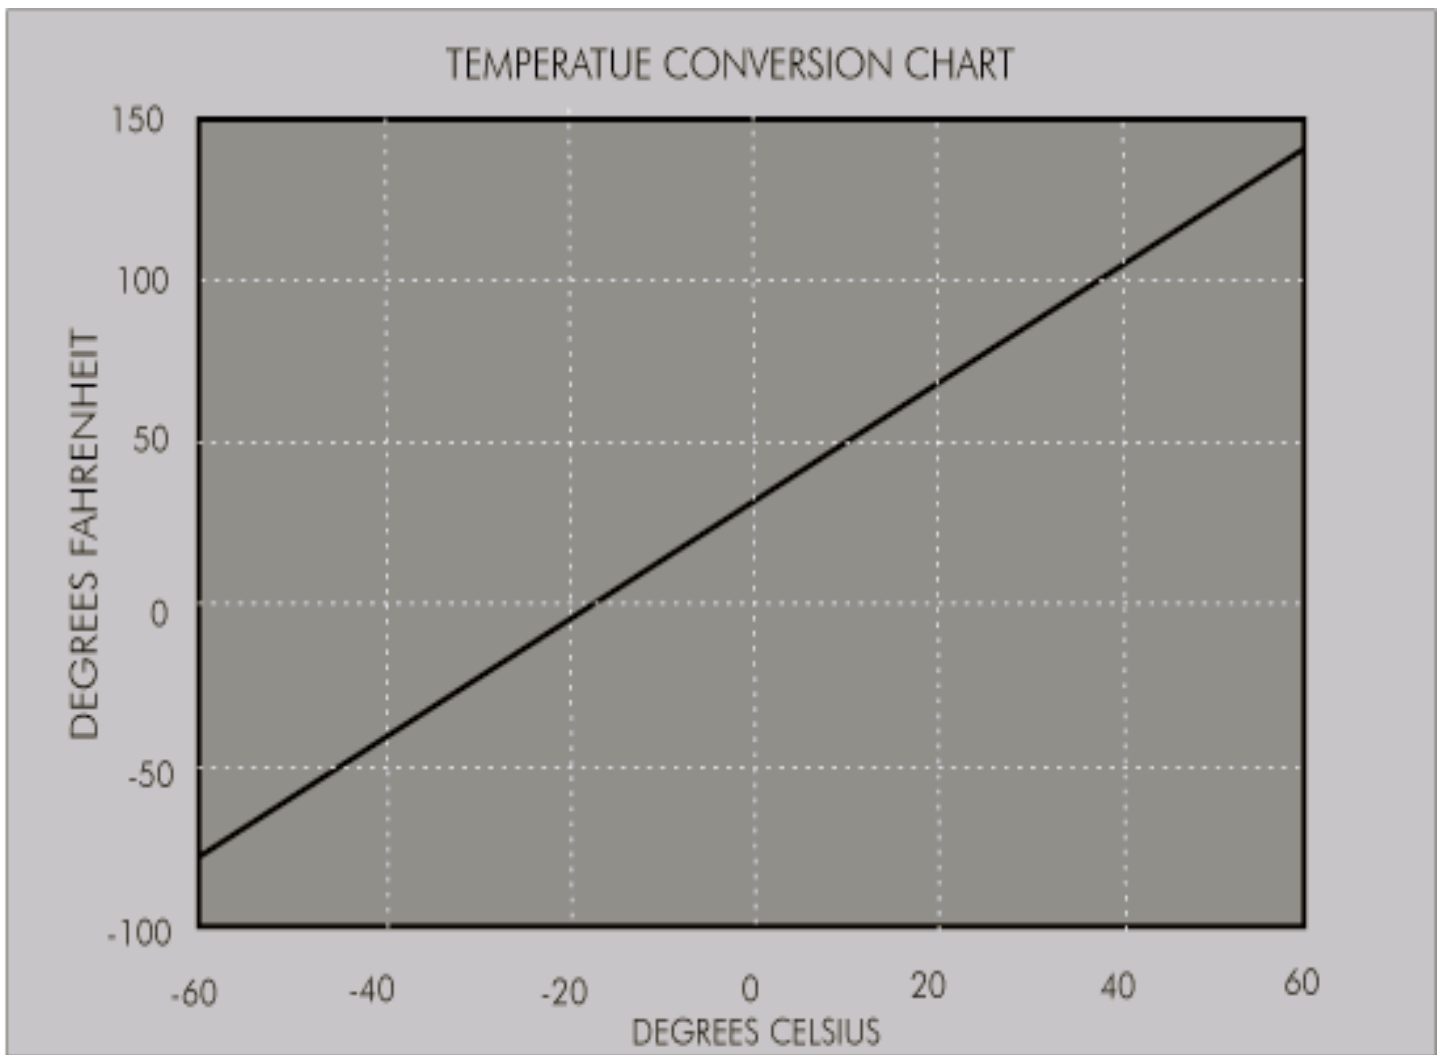


FIGURE 5-1

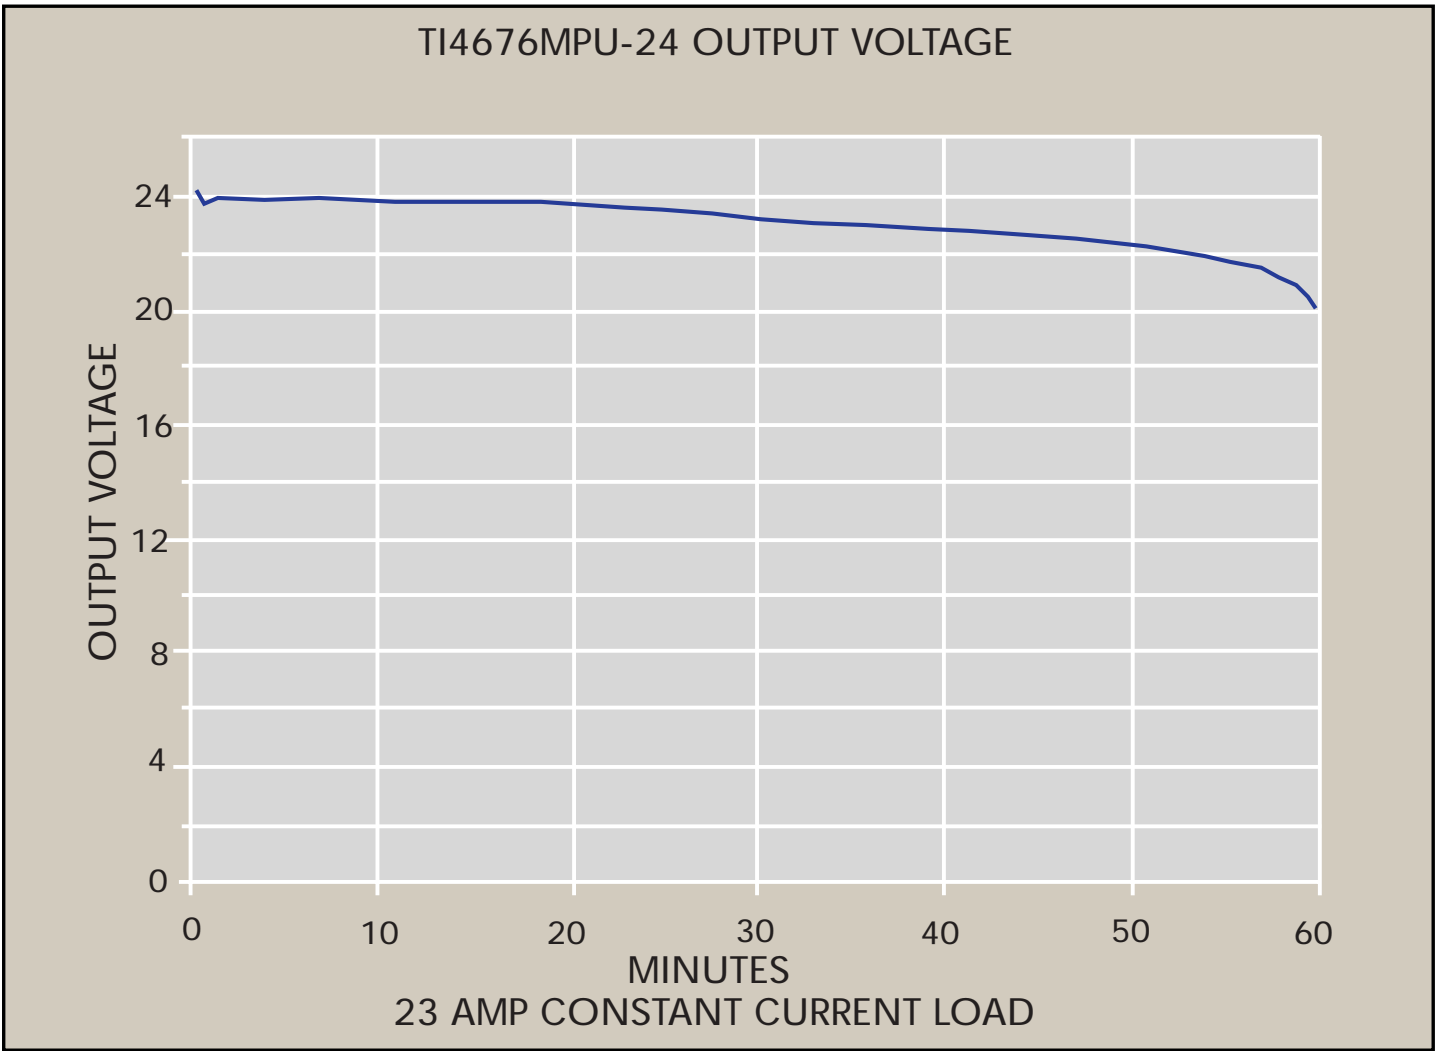


FIGURE 5-2

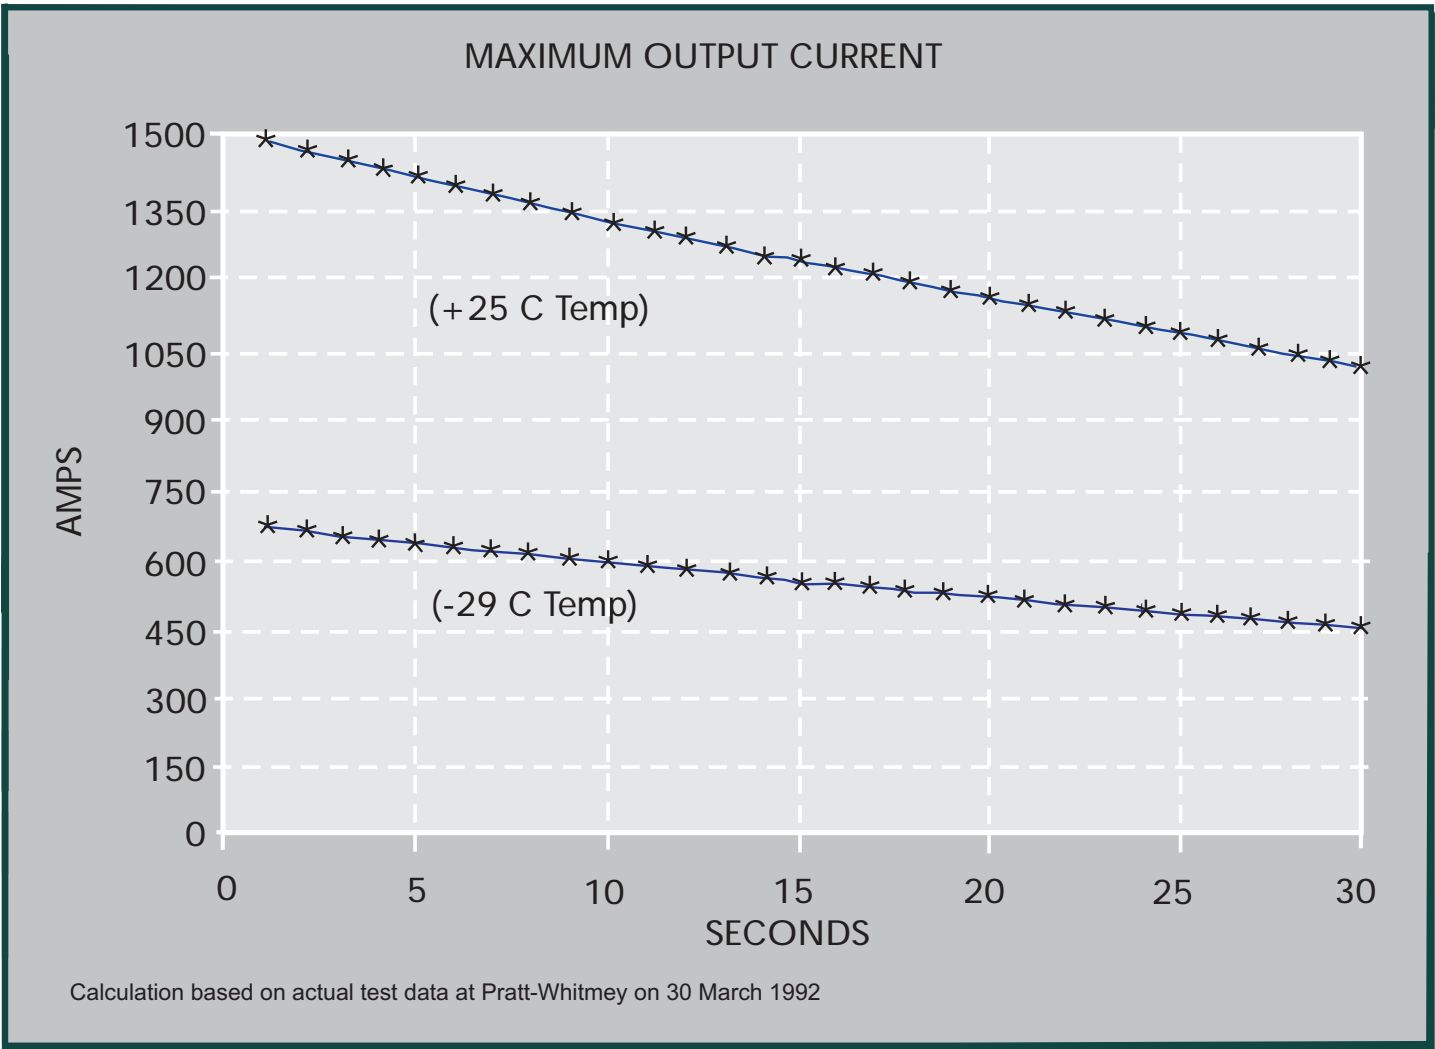


FIGURE 5-3

## CHAPTER 6

### CARE AND MAINTENANCE

#### SECTION I. UNIT CARE

##### 6-1. GENERAL



Although the TI4676 has been ruggedized and made weather resistant within the scope of unit's intended use, it is essential that good general care be taken to maintain unit in good operating condition and to maximize unit's operational life.

**6-2. AFTER USE** - Unit should be protected from the environmental elements and man made hazards. Ideally unit should be secured in the aircraft or hanger. Most importantly, unit shall be fully covered if stored exposed to environmental elements.

1. KEEP UNIT RECEPTACLES AND OUTER CASE CLEAN - wipe with dry cloth.
2. KEEP FOREIGN OBJECTS OUT OF UNIT - Cover unit to prevent foreign objects, water, and dirt from entering vent ports and receptacles. Keep a/c compartment closed when not in use.
3. AFTER USE PLUG UNIT INTO AC POWER SUPPLY WHEN NOT IN USE. (*CHECK FUSE WINDOW FOR PROPER SETTING*). To maximize life of power cells and to ensure unit is always ready for use, unit should remain plugged in to AC power when not installed in aircraft. **NEVER LET DISCHARGED UNIT SIT FOR MORE THAN 24 HOURS WITHOUT FULLY RECHARGING POWER CELLS.**
4. PROTECT AC POWER CORD FROM DAMAGE - Prevent from being cut, gouged, crushed, dragged or otherwise abused.

#### SECTION II.

#### MAINTENANCE

**6-3. MAINTENANCE OF UNIT** - The TI4676 MPU is a maintenance-free unit, no repairs are authorized. Warranty will be **void** if sticker is tampered with. If unit fails to operate contact Manufactures Warranty Claim (see unit warranty).

# Chapter 7

## *Push To Test Modification*


### *General Information And Operation*

#### 7-1. General

THIS MODIFICATION HAS BECOME STANDARD EQUIPMENT FOR EACH OF OUR UNITS. BOTH MILITARY AND CIVILIAN CLIENTS HAVE FOUND THIS MODIFICATION TO BE CRITICAL TO THEIR OPERATION. THE PUSH TO TEST BUTTON IS USED TO INDICATE THE CAPACITY OF THE POWER CELLS WITHOUT APPLYING AC INPUT POWER. IT ALLOWS THE END USER TO CHECK THE STATUS OF THE POWER CELLS. THIS LETS THE OPERATOR KNOW IF THERE IS ENOUGH POWER TO PERFORM ANOTHER ENGINE START, OR IF THE UNIT HAS TO BE RETURNED TO AC POWER TO ALLOW IT TO RECHARGE.

#### 7-2. OPERATION

- 1) IF UNIT WAS PLUGGED IN MAKE SURE THAT YOU WAIT AT LEAST 2 MINUTES AFTER AC POWER IS REMOVED, OR DC POWER IS EXTRACTED FROM THE UNIT, BEFORE YOU DEPRESS THE PUSH TO TEST BUTTON. THIS WILL ENSURE A CORRECT READING.
- 2) WITHOUT AC POWER INPUT OR DC POWER OUTPUT, SIMPLY DEPRESS THE PUSH TO TEST BUTTON ON THE FACE PLATE AND HOLD FOR APPROXIMATELY 10-15 SECONDS.
- 3) AT THIS TIME THE LED BAR GRAPH SHOULD LIGHT UP INDICATING THE STATUS OF THE POWER CELLS.
- 4) THE FAN SHOULD ALSO OPERATE AT THIS TIME. IF YOU DO NOT HEAR THE FAN RUNNING, STOP DEPRESSING THE BUTTON AND CHECK FOR ANY OBSTRUCTIONS TO THE FAN.
- 5) NEVER DEPRESS THE PUSH TO TEST BUTTON WHILE THE UNIT IS PLUGGED INTO AC POWER FOR RECHARGE. IF UNIT IS PLUGGED INTO THE AIRCRAFT MAKE CERTAIN THERE IS NO LOAD APPLIED TO THE DC SYSTEM WHILE USING THE PUSH TO TEST BUTTON, OTHERWISE A FALSE READING WILL OCCUR.
6. NEVER DEPRESS THE PUSH TO TEST BUTTON FOR MORE THAN 30 SECONDS. THIS MAY CAUSE A TEMPERATURE SENSOR TO TEMPORARILY DISRUPT PUSH TO TEST FUNCTION. (IF THIS SENSOR IS TRIPPED, ALLOW FIVE MINUTES FOR UNIT TO COOL BEFORE OPERATING PUSH TO TEST BUTTON.)

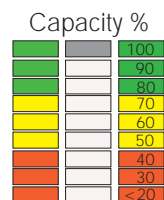

PUSH TO TEST BUTTON/  
CHARGE INDICATOR

## PARAGRAPH INDEX

120-240 50/60 Hz VAC Charger and AC to DC Converter Limits, 3-4  
Abbreviations, 1-5  
AC Power Cord Limits, 3-5  
After Use, 6-2  
Appendix A Line Cord Table  
  
Before Operation Check, 4-6  
  
Continuous Output Rate, 28.5 VDC Constant Output, 3-8  
  
Data Basis, 5-3  
DC Functional Check, 4-10  
Definitions of Abbreviations, 5-6  
Dimensions, Figure 2-1  
Discharge Load Curve, Figure 5-2  
Description 1-3  
  
Engine Starting Power, 3-9  
Environmental, 3-11  
  
Functional Check Procedures, 4-8  
Forms and Records, 1-6  
  
General, Chapter 1, 1-1  
General, Chapter 2, 2-1  
General, Chapter 3, 3-2  
General, Chapter 4, 4-2  
General, Chapter 5, 5-2  
General, Chapter 6, 6-1  
General Conditions, 5-5  
General Details, Figure 2-2  
General Specifications, 2-2

## PARAGRAPH INDEX

Index, 1-4  
Installation, 4-1  
  
Maintenance of Unit, 6-3  
Maximum Output Current, Figure 5-3  
  
One (1) Hour Rate, 24 VDC Constant Output, 3-6  
  
Operating Limits and Restrictions, 4-3  
Operating Procedures, 4-5  
Operating Position, 3-12  
  
Performance, 4-4  
Power Cell Recharge, 4-7  
Power Cell Recharge Limits, 3-3  
Purpose, Chapter 3, 3-1  
Purpose, Chapter 5, 5-1  
Push to test modification, 7-1  
  
Rated Peak Output (Engine Starting), 3-7  
Required Equipment for Functional Check, 4-9  
  
Specific Conditions, 5-4  
  
Temperature, 3-10  
Temperature Conversion Chart, Figure 5-1  
  
Unit Operation During Aircraft Fueling/De-fueling, 3-13  
Use of Word Shall, Should and May, 1-7  
Warning, Caution and Notes Defined, 1-2



## APPENDIX A

### OPTIONAL LINE CORDS FOR WORLDWIDE OPERATIONS

<u>COUNTRY</u>	<u>VOLTS</u>	<u>HZ</u>	<u>TESLA PART #</u>
Afganistan	220	50	TI25000-004 Old British Line Cord Set
Algeria	220	50	TI25000-004 Old British Line Cord Set
American Samoa	240	60	TI25000-011 Australian Line Cord Set
Angola	220	50	TI25000-100 Europlug Line Cord Set
Anguilla (U.K.)	240	50	TI25000-005 United Kingdom Line Cord Set
Antigua	230	60	TI25000-005 United Kingdom Line Cord Set
Argentina	220	50	TI25000-011 Australian Line Cord Set
Aruba	115	60	TI25000-001 North American Line Cord Set
Australia	240	50	TI25000-011 Australian Line Cord Set
Austria	220	50	TI25000-003 Cont. European Line Cord Set
Azores (Portugal)	220	50	TI25000-004 Old British Line Cord Set
Bahamas	120	60	TI25000-001 North American Line Cord Set
Bahrain	220	50	TI25000-005 United Kingdom Line Cord Set
Bangladesh	220	50	TI25000-004 Old British Line Cord Set
Barbados	115	50	TI25000-001 North American Line Cord Set
Belguim	220	50	TI25000-003 Cont. European Line Cord Set
Belize (Br. Hond.)	110	60	TI25000-001 North American Line Cord Set
Benon	220	50	TI25000-004 Old British Line Cord Set
Bermuda	120	60	TI25000-005 United Kingdom Line Cord Set
Bolivia	220	50	TI25000-003 Cont. European Line Cord Set
Botswana	220	50	TI25000-005 United Kingdom Line Cord Set
Brazil	110	60	TI25000-001 North American Line Cord Set
Bulgaria	220	50	TI25000-003 Cont. European Line Cord Set
Burkina Faso	220	50	TI25000-100 Europlug Line Cord Set
Burma (Now Myanmar)	230	50	TI25000-005 United Kingdom Line Cord Set
Burundi	220	50	TI25000-003 Cont. European Line Cord Set
Cambodia	220	50	TI25000-100 Europlug Line Cord Set
Cameroon	230	50	TI25000-003 Cont. European Line Cord Set
Canada	120	60	TI25000-001 North American Line Cord Set
Canary Islands (Spain)	220	b	TI25000-003 Cont. European Line Cord Set
Cape Verde, Rep. of	220	50	TI25000-003 Cont. European Line Cord Set
Cayman Islands	120	60	TI25000-001 North American Line Cord Set
Central African Republic	220	50	TI25000-100 Europlug Line Cord Set
Chad	220	50	TI25000-003 Cont. European Line Cord Set
Channel Islands	240	50	TI25000-005 United Kingdom Line Cord Set
Chile	220	50	TI25000-002 Italian Line Cord Set
China, Peoples Republic of	220	50	TI25000-011 Australian Line Cord Set
Christmas Island (Australia)	240	50	TI25000-011 Australian Line Cord Set
Cocos Islands (Australia)	240	50	TI25000-011 Australian Line Cord Set
Columbia	220	60	TI25000-100 Europlug Line Cord Set
Congo, Republic of	220	50	TI25000-100 Europlug Line Cord Set
Cook Island (New Zealand)	240	50	TI25000-011 Australian Line Cord Set
Costa Rica	120	60	TI25000-001 North American Line Cord Set
Curacao Islands	110	60	TI25000-001 North American Line Cord Set
Cyprus	240	50	TI25000-005 United Kingdom Line Cord Set
Czech, Republic of	220	50	TI25000-003 Cont. European Line Cord Set
Denmark	220	50	TI25000-300 Denmark Line Cord Set
Djibouti, Republic of	220	50	TI25000-003 Cont. European Line Cord Set
Dominica	230	50	TI25000-005 United Kingdom Line Cord Set
Dominican Republic	110	60	TI25000-001 North American Line Cord Set

## APPENDIX A (Cont.)

### OPTIONAL LINE CORDS FOR WORLDWIDE OPERATIONS

<u>COUNTRY</u>	<u>VOLTS</u>	<u>HZ</u>	<u>TESLA PART #</u>
Ecuador	120	60	TI25000-001 North American Line Cord Set
Egypt	220	50	TI25000-100 Europlug Line Cord Set
El Salvador	115	60	TI25000-001 North American Line Cord Set
England	240	50	TI25000-005 United Kingdom Line Cord Set
Equatorial Guinea	220	50	TI25000-100 Europlug Line Cord Set
Estonia	220	50	TI25000-003 Cont. European Line Cord Set
Ethiopia	220	50	TI25000-003 Cont. European Line Cord Set
Fiji	240	50	TI25000-011 Australian Line Cord Set
Finland	220	50	TI25000-003 Cont. European Line Cord Set
France	220	50	TI25000-003 Cont. European Line Cord Set
French Guiana	220	50	TI25000-003 Cont. European Line Cord Set
Gabon	220	50	TI25000-003 Cont. European Line Cord Set
Gambia	220	50	TI25000-005 United Kingdom Line Cord Set
Georgia	220	50	TI25000-003 Cont. European Line Cord Set
Germany	220	50	TI25000-003 Cont. European Line Cord Set
Ghana	220	50	TI25000-005 United Kingdom Line Cord Set
Gibraltar	240	50	TI25000-005 United Kingdom Line Cord Set
Greece	220	50	TI25000-003 Cont. European Line Cord Set
Greenland (Denmark)	220	50	TI25000-300 Denmark Line Cord Set
Grenada	230	50	TI25000-005 United Kingdom Line Cord Set
Guadeloupe	220	50	TI25000-003 Cont. European Line Cord Set
Guam	110-120	60	TI25000-001 North American Line Cord Set
Guatemala	120	60	TI25000-001 North American Line Cord Set
Guinea	220	50	TI25000-003 Cont. European Line Cord Set
Guinea-Bissau	220	50	TI25000-003 Cont. European Line Cord Set
Guyana	110	50/60	TI25000-001 North American Line Cord Set
Haiti	110-120	50-60	TI25000-001 North American Line Cord Set
Honduras	110	60	TI25000-001 North American Line Cord Set
Hong Kong	220	50	TI25000-005 United Kingdom Line Cord Set
Hungary	220	50	TI25000-003 Cont. European Line Cord Set
Iceland	220	50	TI25000-003 Cont. European Line Cord Set
India	220-250	50	TI25000-004 Old British Line Cord Set
Indonesia	220	50	TI25000-003 Cont. European Line Cord Set
Iran	220	50	TI25000-003 Cont. European Line Cord Set
Iraq	220	50	TI25000-005 United Kingdom Line Cord Set
Ireland, Republic of	220	50	TI25000-005 United Kingdom Line Cord Set
Isle of Man	240	50	TI25000-005 United Kingdom Line Cord Set
Israel	230	50	TI25000-200 Israel Line Cord Set
Italy	220	50	TI25000-002 Italy Line Cord Set
Ivory Coast	220	50	TI25000-100 Europlug Line Cord Set
Jamaica	110	50	TI25000-001 North American Line Cord Set
Japan	110	50/60	TI25000-001 North American Line Cord Set
Jordan	220	50	TI25000-005 United Kingdom Line Cord Set
Kenya	240	50	TI25000-005 United Kingdom Line Cord Set
Korea, South	220	60	TI25000-003 Cont. European Line Cord Set
Kuwait	240	50	TI25000-005 United Kingdom Line Cord Set

## APPENDIX A (Cont.)

### OPTIONAL LINE CORDS FOR WORLDWIDE OPERATIONS

<u>COUNTRY</u>	<u>VOLTS</u>	<u>HZ</u>	<u>TESLA PART #</u>
Laos	220	50	TI25000-001 North American Line Cord Set
Latvia	220	50	TI25000-003 Cont. European Line Cord Set
Lebanon	220	50	TI25000-100 Europlug Line Cord Set
Lesotho	240	50	TI25000-004 Old British Line Cord Set
Liberia	120	60	TI25000-005 United Kingdom Line Cord Set
Liechtenstein	220	50	TI25000-006 Switzerland Line Cord Set
Lithuania	220	50	TI25000-003 Cont. European Line Cord Set
Luxembourg	220	50	TI25000-003 Cont. European Line Cord Set
Libya	230	50	TI25000-002 Italy Line Cord Set
Macao	220	50	TI25000-004 Old British Line Cord Set
Madagascar	220	50	TI25000-003 Cont. European Line Cord Set
Maderia (Portugal)	220	50	TI25000-004 Old British Line Cord Set
Majorca	220	50	TI25000-003 Cont. European Line Cord Set
Malawi	230	50	TI25000-005 United Kingdom Line Cord Set
Malaysia	240	50	TI25000-005 United Kingdom Line Cord Set
Maldives	230	50	TI25000-004 Old British Line Cord Set
Mali, Republic of	220	50	TI25000-003 Cont. European Line Cord Set
Malta	240	50	TI25000-005 United Kingdom Line Cord Set
Martinique	220	50	TI25000-003 Cont. European Line Cord Set
Mauritania	220	50	TI25000-100 Europlug Line Cord Set
Mauritius	230	50	TI25000-005 United Kingdom Line Cord Set
Mexico	127	60	TI25000-001 North American Line Cord Set
Monaco	220	50	TI25000-003 Cont. European Line Cord Set
Mongolia	220	50	TI25000-100 Europlug Line Cord Set
Montseurrat	230	60	TI25000-005 United Kingdom Line Cord Set
Morocco	220	50	TI25000-003 Cont. European Line Cord Set
Mozambique	220	50	TI25000-003 Cont. European Line Cord Set
Namibia (W.S. Africa)	220-250	50	TI25000-004 Old British Line Cord Set
Nepal	220	50	TI25000-004 Old British Line Cord Set
Neth. Antilles	220	50/60	TI25000-003 Cont. European Line Cord Set
Netherlands	220	50	TI25000-003 Cont. European Line Cord Set
New Caledonia	220	50	TI25000-003 Cont. European Line Cord Set
New Zealand	230	50	TI25000-011 Australian Line Cord Set
Nicaragua	120	60	TI25000-001 North American Line Cord Set
Niger	220	50	TI25000-100 Europlug Line Cord Set
Nigeria	230	50	TI25000-005 United Kingdom Line Cord Set
Norfolk Islands (Australia)	240	50	TI25000-011 Australian Line Cord Set
North Ireland	220	50	TI25000-005 United Kingdom Line Cord Set
North Mariana Islands (U.S.)	115	60	TI25000-001 North American Line Cord Set
Norway	220	50	TI25000-003 Cont. European Line Cord Set
Okinawa	100-120	60	TI25000-001 North American Line Cord Set
Oman	240	50	TI25000-005 United Kingdom Line Cord Set
Pakistan	230	50	TI25000-004 Old British Line Cord Set
Panama	110	60	TI25000-001 North American Line Cord Set
Papua New Guinea	240	50	TI25000-011 Australian Line Cord Set
Paraguay	220	50	TI25000-100 Europlug Line Cord Set
Peru	110	50/60	TI25000-001 North American Line Cord Set
Philippines	115	60	TI25000-001 North American Line Cord Set]
Piccairn Islands (U.K.)	240	50	TI25000-004 Old British Line Cord Set
Poland	220	50	TI25000-003 Cont. European Line Cord Set
Portugal	220	50	TI25000-003 Cont. European Line Cord Set
Puerto Rico	120	60	TI25000-001 North American Line Cord Set
Qatar	240	50	TI25000-005 United Kingdom Line Cord Set

## APPENDIX A (Cont.)

### OPTIONAL LINE CORDS FOR WORLDWIDE OPERATIONS

<u>COUNTRY</u>	<u>VOLTS</u>	<u>HZ</u>	<u>TESLA PART #</u>
Romania	220	50	TI25000-003 Cont. European Line Cord Set
Russia	220	50	TI25000-003 Cont. European Line Cord Set
Rwanda	220	50	TI25000-100 Europlug Line Cord Set
Saudia Arabia	220	50/60	TI25000-003 Cont. European Line Cord Set
Scotland	220	50	TI25000-005 United Kingdom Line Cord Set
Senegal	220	50	TI25000-003 Cont. European Line Cord Set
Seychelles	240	50	TI25000-005 United Kingdom Line Cord Set
Sierra Leone	230	50	TI25000-005 United Kingdom Line Cord Set
Singapore	230	50	TI25000-005 United Kingdom Line Cord Set
Slovakia	220	50	TI25000-003 Cont. European Line Cord Set
Somalia	220	50	TI25000-003 Cont. European Line Cord Set
South Africa	220-250	50	TI25000-004 Old British Line Cord Set
Spain	220	50	TI25000-003 Cont. European Line Cord Set
Sri Lanka	230	50	TI25000-004 Old British Line Cord Set
St. Pierre & Miquelon (France)	115	60	TI25000-001 North American Line Cord Set
St. Kitts & Nevis	230	60	TI25000-005 United Kingdom Line Cord Set
St. Lucia	240	50	TI25000-005 United Kingdom Line Cord Set
St. Vincent	230	50	TI25000-005 United Kingdom Line Cord Set
Sudan	240	50	TI25000-005 United Kingdom Line Cord Set
Surinam	115	60	TI25000-003 Cont. European Line Cord Set
Svalbard (Norway)	220	50	TI25000-003 Cont. European Line Cord Set
Swaziland	230	50	TI25000-004 Old British Line Cord Set
Sweden	220	50	TI25000-003 Cont. European Line Cord Set
Switzerland	220	50	TI25000-006 Switzerland Line Cord Set
Syria	220	50	TI25000-100 Europlug Line Cord Set
Tahiti	220	50	TI25000-003 Cont. European Line Cord Set
Taiwan	110	60	TI25000-001 North American Line Cord Set
Tanzania	230	50	TI25000-005 United Kingdom Line Cord Set
Thailand	220	50	TI25000-100 Europlug Line Cord Set
Togo	220	50	TI25000-003 Cont. European Line Cord Set
Tonga	115	60	TI25000-004 Old British Line Cord Set
Trinidad & Tobango	230	60	TI25000-005 United Kingdom Line Cord Set
Tunisia	220	50	TI25000-100 Europlug Line Cord Set
Turkey	220	50	TI25000-003 Cont. European Line Cord Set
Uganda	220	50	TI25000-004 Old British Line Cord Set
United Arab Emir.	220	50	TI25000-005 United Kingdom Line Cord Set
United Kingdom & Ireland	240	50	TI25000-005 United Kingdom Line Cord Set
United States	120	60	TI25000-001 North American Line Cord Set
Uraguay	220	50	TI25000-011 Australian Line Cord Set
Venezuela	120	60	TI25000-001 North American Line Cord Set
Vietnam	220	50	TI25000-003 Cont. European Line Cord Set
Virgin Islands	120	60	TI25000-001 North American Line Cord Set
Wales	220	50	TI25000-005 United Kingdom Line Cord Set
Western Samoa	230	50	TI25000-005 United Kingdom Line Cord Set
Yemen	220	50	TI25000-005 United Kingdom Line Cord Set
Yugoslavia	220	50	TI25000-003 Cont. European Line Cord Set
Zaire, Republic of	220	50	TI25000-003 Cont. European Line Cord Set
Zambia	220	50	TI25000-005 United Kingdom Line Cord Set
Zimbabwe	220	50	TI25000-005 United Kingdom Line Cord Set

## APPENDIX A (Cont.)

### *UNIVERSAL LINE CORD KIT FOR WORLDWIDE OPERATIONS*

NOTE: TESLA UNIVERSAL AC LINE CORD KIT, P/N: TI25000-U00, IS FOR UNITS ORIGINALLY BUILT WITH THE UNIVERSAL AC LINE CORD OPTION ONLY. THE AC ADAPTER OPTION IS TESLA P/N TI16000-19 AND MUST BE ORDERED WITH THE ORIGINAL PROCUREMENT OF UNIT(S). UNIT(S) MAY BE RETURNED TO TESLA INDUSTRIES, FOR A NOMINAL COST, AND MODIFIED TO ALLOW OPERATION WITH THE UNIVERSAL AC LINE CORD KIT.

TESLA UNIVERSAL AC LINE CORD KIT, P/N: TI25000-U00, IS COMPRISED OF THE FOLLOWING FOUR PART NUMBERS:

TI25000-U01	NORTH AMERICAN LINE CORD
TI25000-U04	OLD BRITISH LINE CORD
TI25000-U03	EUROPEAN 10A/250V
TI25000-U05	ENGLAND 10A/250V

TESLA REPLACEMENT 8 FOOT DC POWER CORD, P/N: TI2006-501, IS AVAILABLE UPON REQUEST. (CUSTOM LENGTHS ARE ALSO AVAILABLE TO SUIT THE CUSTOMERS OPERATIONAL REQUIREMENTS.)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>