

90- DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (TIGER) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship. During this 90-day warranty period, the product will either be repaired or replaced (at TIGER'S option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to TIGER.

Product returned to TIGER without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at TIGER'S option) for a service fee of U.S. \$6.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

THE FOREGOING STATES THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY WITH RESPECT TO THE PRODUCT.

All product returned must be shipped prepaid and insured for loss or damage to:

TIGER REPAIR DEPARTMENT
1000 N. Butterfield Road, Unit 1023,
Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at: www.tigertoys.com

TIGER
ELECTRONICS, LTD.



Software Code, Technology & Product Design
©, TM & © 2000 Tiger Electronics, Ltd.
All rights reserved.

980 Woodlands Parkway
Vernon Hills, Illinois 60061, U.S.A.

PRINTED IN CHINA



*© & © NELVANA †™ Kids Can Press
© P. Bourgeois & B. Clark All Rights Reserved.



Franklin the Turtle's 1-2-3 Tri-Language Learner

INSTRUCTION MANUAL



TIGER
ELECTRONICS, LTD.

Download from www.Somanuals.com. All Manuals Search And Download.

Ages 2 and Up
Item No. 67918

FRANKLIN THE TURTLE'S 1-2-3 TRI-LANGUAGE LEARNER

 
Welcome to the friendly world of Franklin. Franklin makes learning so much FUN – in three different languages! The Franklin the Turtle's 1-2-3 Tri-Language Learner teaches the numbers one (1) through ten (10) in English, French and Spanish. Franklin will help your children build vocabulary and develop word/image association.

INSTALLING THE BATTERIES


IMPORTANT INFORMATION:

Battery installation should always be done by an adult.

1. Open the battery compartment door on the back of the unit using a screwdriver. (Illustration 1)

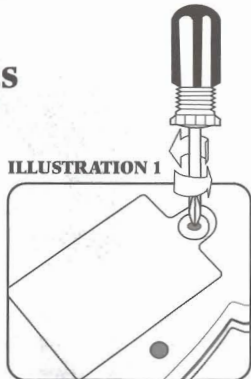

 2. Insert 3 "AAA"/UM4/LR03 batteries. Be sure to match the "+" and "-" as shown. (Illustration 2)

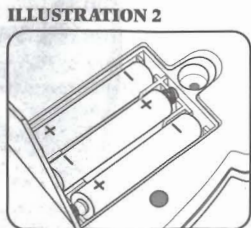


3. Close the battery compartment door and fasten the screw.
4. Battery installation should be done by an adult.

CAUTION:

To ensure proper function and avoid battery leakage:

- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Batteries should be installed by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity, following the toy and battery manufacturer's instruction.
- Exhausted or dead batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

 CAUTION: The batteries included with this toy should be kept away from small children.

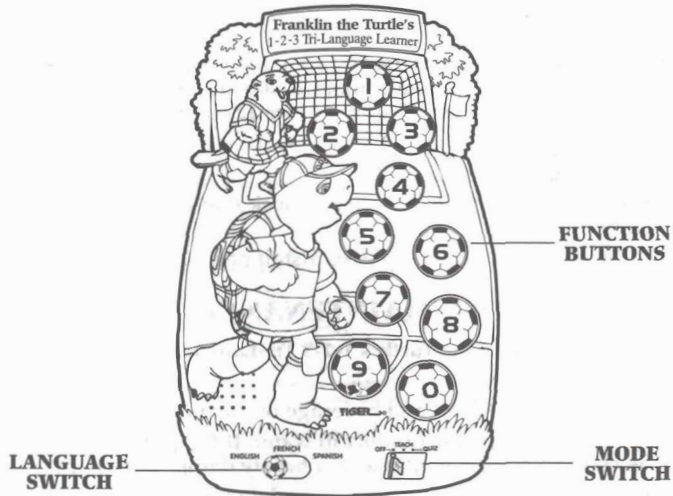

KEY FUNCTIONS

MODE SWITCH -

Slide the mode switch from the OFF position to select one of two different methods of learning: **TEACH** or **QUIZ**.

LANGUAGE SWITCH -

Slide the language switch to study and play the Teach and Quiz methods in **ENGLISH**, **FRENCH**, and **SPANISH**.

FUNCTION BUTTONS -

Use these buttons (numbers 1-10) to play & learn.

HOW TO PLAY

Note: The unit will automatically shut off after 45 seconds of non-use.

1. Slide the **Language Switch** to any of the three languages of **English**, **French**, or **Spanish**. This is the language you will study first. You can change to another language any time you want.
2. To activate your **Franklin the Turtle's 1-2-3 Tri-Language Learner**, slide the mode switch to **TEACH** or **QUIZ**. You will hear Franklin say, **HELLO MY NAME IS FRANKLIN**.
3. Your **Franklin the Turtle's 1-2-3 Tri-Language Learner** will begin to play in the mode selected. If you wish to play the other learning mode, slide the mode switch to the other setting. You can change the learning activity (or the language!) at any time during play.

TEACH MODE:

(LEARNING IN ENGLISH)

Slide the mode switch to **TEACH** position (with the language switch set at **ENGLISH**). Franklin will ask your child to press a button. Your child can respond to the prompt by pressing one of the function buttons (1-10). Franklin will then say the number pressed.

(LEARNING IN FRENCH OR SPANISH)

Slide the mode switch to **TEACH** position (with the language switch set at either **FRENCH** or **SPANISH**)

In English, Franklin will say **PRESS A BUTTON**. Your child can respond to the prompt by pressing one of the function buttons (1-10). Franklin will then say which number was pressed, first in English and then in the selected language.

QUIZ MODE

(LEARNING IN ENGLISH)

Slide the mode switch to **QUIZ** position (with the language switch set at **ENGLISH**). Franklin will ask you to find a number. Your child can respond to the prompt by pressing one of the function buttons (1-10). Franklin will then say the number pressed. If the correct button is pressed, then Franklin will ask you to find another number. If the button pressed is incorrect, then Franklin will repeat the question. He will give you three different tries to select the correct number. After the third try, he will ask you to find a different number.

(LEARNING IN FRENCH OR SPANISH)

Slide the mode switch to **QUIZ** position (with the language switch set at either **FRENCH** or **SPANISH**.) Franklin will ask you to find a number in the language you selected. Your child can respond to the prompt by pressing one of the function buttons (1-10). Franklin will then say the number in the language selected.

If you are correct, he will ask you to find another number in the selected language. But if you pressed an incorrect button, Franklin will ask the same number question again – but this time he will ask you first in the selected language and then in English. Then when you press a button, he will say the number pressed in the selected language – and then he will say it in English.

If you are correct, he will ask you to find a different number, asking the new question to you in the language you selected. But if you were incorrect a second time, he will repeat the question again – and again he will repeat it first in the selected language and then in English.

After this third try, whether you are correct or not, Franklin will move on and ask you to find a different number in the language you selected.

OFF MODE

If you wish to conserve batteries, slide the mode switch to the **OFF** position when you have finished playing. Otherwise the unit will automatically shut off after **45** seconds of non-use.

TROUBLESHOOTING

1. If the **unit does not work**, please check that the batteries have been inserted correctly.
2. If the **volume is too low**, please install new batteries.

CARE AND USE/MAINTENANCE

To protect Franklin the Turtle's 1-2-3 Tri-Language Learner follow these instructions:

- Prevent spills of food and beverage on the unit.
- Do not submerge the product in water. If the product needs to be cleaned, wipe it gently with a barely damp, soft, cloth.
- Do not throw or kick the product, and do not push sharp objects through the speaker opening.
- Designed for children 2 and up.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>