

## INSTRUCTIONS

Silly Friends operate with three "AA" batteries. Batteries should be inserted by an Adult. Alkaline batteries are recommended for longer life.

2. Use a Philips head screwdriver to loosen the screw on the battery door. Insert the three "AA" batteries,

following the polarity markings engraved into the module. (See drawing B & C)

DE "AA" SIZE C


"AA" SIZE TO "AA" SIZE @ OO

1. To insert batteries, remove the sound module from the Silly Friend. (See drawing A)




4. Replace the module into the Silly Friend, with the

arrow facing you, but pointing down, and seal the opening with the fabric closure. (See drawing E)

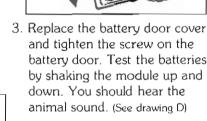

Wood

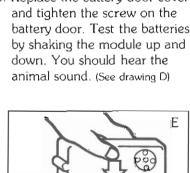



## **90 DAY LIMITED WARRANTY**

Tiger Toys warrants to the original consumer purchaser of Silly Friends™ that the product will be free from defects in material or workmanship for 90 days (unless otherwise specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date-of-purchase, postage prepaid to Tiger Electronic Toys, 980 Woodlands Parkway, Vernon Hills, IL60061, USA for replacement or refund at our option. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty does not cover damage resulting from accident, misuse or abuse. Valid only in U.S.A.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com