MODEL 60-053 ш WORLD CHAMPIONSHIP WRESTLING 600530001IWTI-02 Download from Www.Scmanuals.com All Manuals Search And Download

INTRODUCTION

The fight is on for the WCW Heavyweight Championship belt and you're in control. The biggest names in wrestling are colliding to settle their feuds. Each pair are starring in their own unit- Hollywood Hogan Vs. Goldberg, Raven Vs. Diamond Dallas Page, and Scott "Big Poppa Pump" Steiner Vs. Rick Steiner. Collect them all and become the Champ. Each wrestler has their own unique moves. Master them all and you master the game.

SCOTT "BIG POPPA PUMP" STEINER

ш

Scott Steiner is one of the strongest wrestlers ever. His incredible size and speed help him to finish off most opponents with ease. He was once a wrestler people looked up to. Now he has joined the NWO

and follows Hogan's orders. Big Download from Www.Somanuals.com. All Manuals Search And Download


Poppa Pump has become an NWO thug and has targeted his brother Rick as his biggest threat.

RICK STEINER

Rick Steiner was part of the greatest tag team ever, with his brother Scott. Ever since Scott joined the NWO, they have been locked in a constant feud, each trying to pound their beliefs into the other. Rick isn't as strong as his

brother but has superior wrestling skills that he will use to finally show he is the better Steiner. Take the belt and Scott's pride with the Bulldog.

Scott Steiner and Rick Steiner have a score to settle. After many confrontations without a clear winner, they will step in the ring to settle their differences once and for all. Choose your wrestler and enter a tournament that lasts best of 7 matches. You don't have to win all 7 matches to win the belt but you do have to win at least 4. If you just win 4, there will be some debate on whether you deserved the belt. If you win all 7, it just proves that you are the better man and a true Champion.

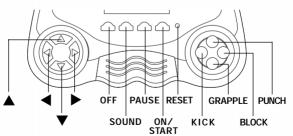

OFF	- Press to turn OFF the unit. The unit also
	shuts off after three minutes of no action.

SOUND Press to turn the SOUND ON. Press to turn the SOUND OFF.

PAUSE Press to PAUSE Game.

ON/START - Press to turn the unit ON.

Press to start the game.

Press to start each new match.

- Press to exit pause.

- If your opponent is on the ground, press A, A to attack your opponent off the ropes.

- If your opponent is on the ground, press ∇ to go for the pin.

choose SCOTT STEINER.

 When selecting your wrestler, press ► to Choose RICK STEINER.

Download from Www.Somanuals.com. All Manuals Search And Download.

 Press to make the wrestler punch their opponent. After grappling, press this repeatedly to do a power move (see pages 9 & 11).
 It will make the wrestler kick their opponent. After grappling, press this repeatedly to do a power move (see pages 9 & 11).
 BLOCK enemy's punches and kicks. Note: The wrestler can still be grappled while blocking. After grappling, press this repeatedly to do a power move (see page 10).
 Grapples with opponent. Note: The wrestler must grapple before performing any power moves. After grappling, press this repeatedly to do a power move (see page 10).

ENERGY

METER

▲ 30 6

STARTING A NEW GAME

Press the ON/START button to power on the game. Both wrestlers will now appear with Scott Steiner flashing. Whichever wrestler is flashing will be your wrestler in the ring. If you want to switch between the two wrestlers, simply press left or right. When your favorite wrestler is flashing, press ON/START to begin your first match. Now you can step in the ring, wrestle through a best of 7-match tournament to win the WCW Heavyweight Championship Belt, and prove to the world who the better wrestler is.

ENERGY METER

Each wrestler has an energy meter made up of five bars. It appears right next to their picture at the top of the screen. Every time you hit your opponent their meter will decrease and yours will increase. Beware, you lose more energy each time you get hit than you get back when you hit them. So,

keep on the offense if you want to win.

Download from Www.Somanuals.com, All Manuals Search And Download.

POWER METER

There is a power meter that will come on screen when the wrestlers are in a grapple. Your goal is to fill up your half of the meter to get off your move instead of your opponent. It will seem like a tug of war when you grapple with your opponent to fill your half of the meter. To fill the meter and get your moves off, tap the move button of your choice



(see below under POWER MOVES) as quickly as possible. Tap it fast enough and you're on your way to victory. Not fast enough, you're going home empty handed.

MOVES

Scott and Rick Steiner have a variety of moves. Your job is to learn when to use each move to finish off your opponent the quickest. Each wrestler has both basic and power moves. Read the moves listed below to learn how to inflict some

heavy damage. Downgoad from Www.Somanuals.com. All Manuals Search And Download. BASIC MOVES - COMMON TO BOTH WRESTLERS

PUNCH - PUNCH button

KICK - KICK Button

GRAPPLE - GRAPPLE button

BLOCK - BLOCK button

PIN - ▼ when your opponent is on the ground

POWER MOVES - SCOTT "BIG POPPA PUMP" STEINER

GERMAN SUPLEX - From Grapple, press PUNCH rapidly





ATOMIC DROP - From Grapple, press KICK rapidly

POWER BOMB - From Grapple press GRAPPLE rapidly






THROW OPPONENT INTO ROPES - From grapple, press BLOCK rapidly. Press punch when Rick is coming back at you to clothesline him to the mat.

ATTACK OFF THE ROPES - press ▲ , ▲ when your opponent is on the ground

POWER MOVES-RICK STEINER

BULLDOG -From Grapple press PUNCH rapidly

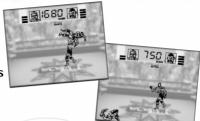



STANDING DROP KICK - From Grapple press KICK rapidly

SHOULDER BREAKER -From Grapple press GRAPPLE rapidly



I

0 ≶

HINTS FOR VICTORY

- Attack, Attack, Attack You can't win if you don't inflict some damage.
- Warm them up with punches and kicks. Then move in and do some real damage with your power moves from the grapple.
- Learn to use the Block Knowing when and when not to use the block will separate the champs from the chumps.
- When they're down, keep 'em down After you knock them down, go off the ropes to inflict some extra damage.
- Initiate the Grapple If you grapple your opponent before he grapples you, you have a better chance of getting your move off.
- Visit our main website at www.tigertoys.com for info on the rest of our fun toys.

 
5

2

 α

INSERTING THE BATTERIES

To insert the batteries, have an adult open the battery compartment cover at the back of the game. (To remove cover, press and push battery cover upward.) Insert 2"AA" /LR6 batteries (not included), making sure to align "+" and "-" as shown. CAUTION: Batteries should be replaced by an adult. Not suitable for children under 36 months, may contain small parts.



TO ENSURE PROPER FUNCTION:

- Do not mix old and new batteries.
- Do not mix alkaline, standard, or rechargeable batteries.
- Battery installation should be done by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

RESET BUTTON:

After battery insertion, the RESET switch may be pushed only if the game doesn't work properly. (Use a ball-point pen.) The display should appear as should an adding an Aryme Som anuals.com. All Manuals Search And





-

т

刀

U

CAUTION



High temperature will destroy the unit. Do not leave unit in direct sunlight.



Do not use a pencil or pin to press the RESET switch. Use a ball-point pen.



Do not press the liquid crystal display and avoid heavy shock or the display may fail.



Clean only with a piece of soft dry cloth.

Replace with new batteries at the first sign of erratic operation. Remember, your game will reset once you've replaced or removed the batteries.

DEFECT OR DAMAGE

If a part of your game is damaged or something has been left out, DO NOT RETURN THE GAME TO THE STORE. The store doesn't have replacement parts. Instead, write to us at:

> Tiger Repair Department 1000 N. Butterfield Road, Unit 1023, Vernon Hills, Illinois 60061, U.S.A.

In your note, mention the name of your game, the game's model number, and tell us briefly what the problem is. Also include sales slip, date, place of purchase and price paid. We will do our best to help.

90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S. \$10.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

J

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to: Tiger Repair Department

1000 N. Butterfield Road, Unit 1023, Vernon Hills, Illinois 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our Web Site at: www.tigertoys.com

© 1999 World Championship Wrestling, Inc. All characters depicted, are trademarks of or used under License to World Championship Wrestling, Inc.

®, TM, & © 1999 Tiger Electronics, Ltd. All Rights Reserved. 980 Woodlands Parkway, Vernon Hills, Illinois 60061, USA.

®, TM & © 1999 TIGER ELECTRONICS UK LTD. All Rights Reserved. Belvedere House. Victoria Avenue.

Harrogate, North Yorkshire, HG1 1EL, England www.tigertovs.com

U.S. Pat. D397,369 PRINTED IN CHINA

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com