



**INSTRUCTION MANUAL**


**INSTRUCTIONS**

The Rugrats Hot Potato Game uses the traditional hot potato type game play in a portable electronic version that was designed specifically for preschooler's. Led lights, simple game play and a sliding Tommy control work together to make a game that is fun and easy for preschooler's to play. The object of the game is to try to keep the light, which represents the ball, away from Tommy so that he is not "holding" the ball when the music stops. Use your sliding Tommy control to "throw" the ball back to the other Rugrats. If Tommy can "throw" the ball 10 times, without being caught with the ball when the music stops, he wins the game!

**INSTALLING THE BATTERIES**

**NOTE:**  
An adult should do battery installation. Always install the batteries correctly according to the positive (+) and negative (-) signs on the batteries.

1. Open the battery compartment door using a UNIVERSAL screwdriver.
2. Insert 3 "AA"/LR6 batteries. Be sure to match the "+" and "-" signs as shown.

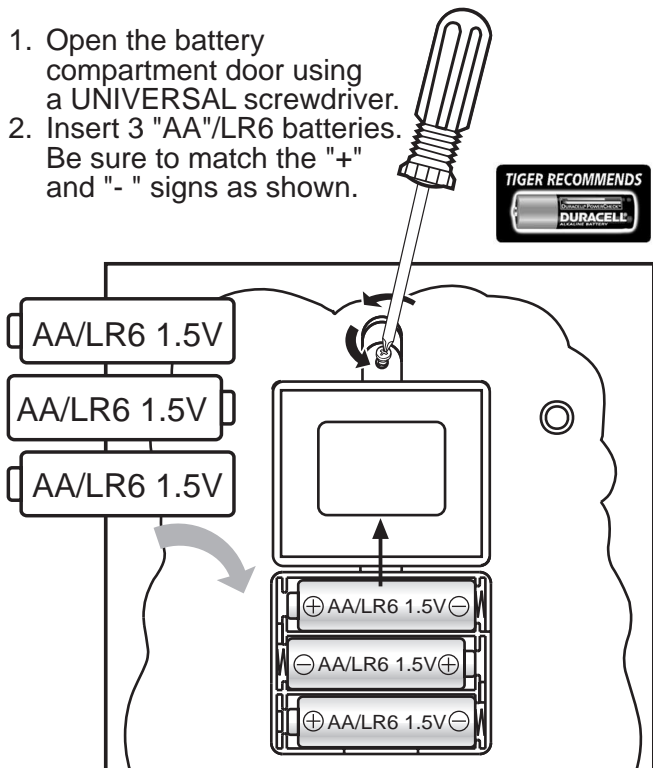


3. Close the battery compartment door and replace the screw using a UNIVERSAL screwdriver.

**CAUTION**

To ensure proper function and avoid battery leakage:

- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity, and follow the toy and battery manufacturer's instruction.
- Exhausted or dead batteries are to be removed from the toy.
- The supply terminals are not to be short circuited.
- Remove the batteries if you won't be using the unit for a long period of time.


**FUNCTION BUTTONS**

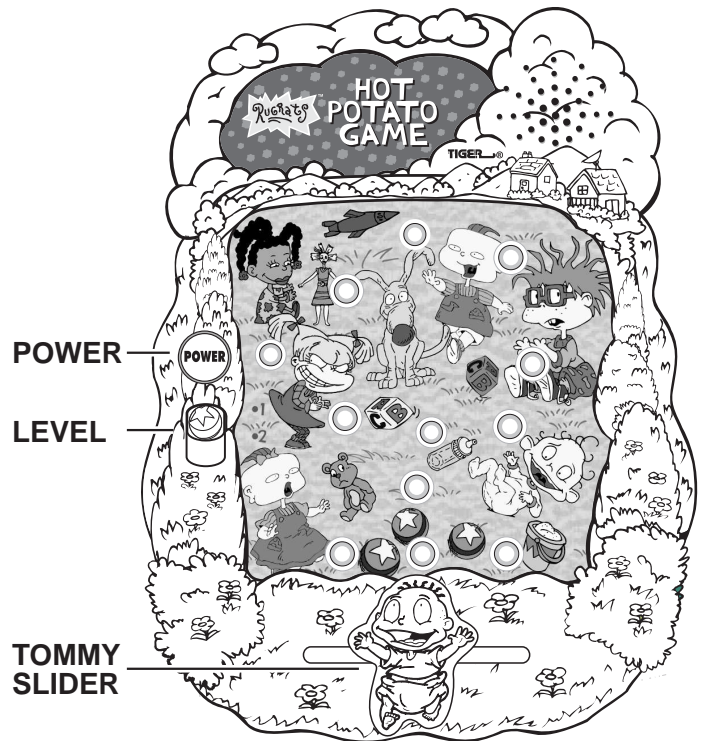

- POWER button** - Press this button to turn the game ON and OFF. The game will shut off automatically after 3 minutes of inactivity.
- LEVEL button** - Slide the switch to Level 1 if you want to play Level 1 and slide it to Level 2 if you want to play Level 2. The lights will move slightly faster in Level 2 than in Level 1 making the game more challenging.
- TOMMY SLIDER** - This switch is used to throw the light "balls" back to the other Rugrat characters by simply sliding it to the left or right.

## GETTING STARTED

1. Choose a level by sliding the level switch to 1 for Level 1 or 2 for Level 2.
2. Press the POWER button.
3. You will hear an opening tune and see a sequence of lights flashing.
4. When the sequence of lights stop flashing, the game will begin. You will begin to see lights randomly flashing around the game area and you will hear the Rugrats theme song playing.
5. When a light gets to the row closest to Tommy move your slider to the light that is lit before it goes out and before the music stops. If you have successfully "thrown" the "ball" back out, you will see it moving back up.
6. If Tommy is caught with the ball when the music stops, you will hear "uh oh" and the game will start from the beginning again.
7. Keep playing until you have successfully "thrown" 10 "balls". After 10 successful throws, all the lights will flash and then another round will begin.

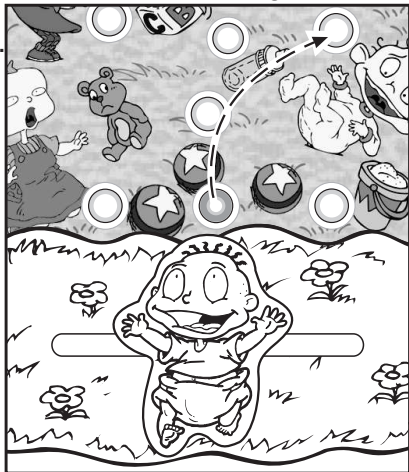

## TROUBLESHOOTING

1. If the unit does not work, please check that the batteries have been inserted correctly.
2. If the volume is too low, please install new batteries.
3. If the lights do not appear to be very bright, please install new batteries.
4. Check the battery compartment cover to make certain it is securely shut.

If you are still having trouble after checking all of these things, please call our toll-free number at 1-888-TIGER SOS and a representative will be happy to help you.

## CARE AND MAINTENANCE

To protect the product, follow these instructions:

- Prevent spills of food and beverage on the product.
- Do not submerge the product in water. If the product needs to be cleaned, wipe it gently with a barely damp, soft cloth.
- Do not throw or kick the product and do not push sharp objects through the speaker opening.
- Do not put the product in direct sunlight or near any source of heat.
- Designed for children 2 and up.

Adults should examine this product periodically. If there is any damage, this product must not be used until the damage has been properly removed or repaired by Tiger Electronics, Ltd.

## 90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S.\$5.00. Payments must be by check or money order payable to Tiger Electronics, Ltd.

**The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.**

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Repair Department  
1000 N. Butterfield Road, Unit 1023  
Vernon Hills, IL 60061, U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

**THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.**

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

**For more information about Tiger Electronics, our products and special promotions, please visit our Web Site at: [www.tigertoys.com](http://www.tigertoys.com)**

**TIGER**  
ELECTRONICS, LTD.

© 1999 VIACOM INTERNATIONAL INC. All Rights Reserved.  
NICKELODEON, RUGRATS and all related titles, logos and characters are trademarks of Viacom International Inc.  
Created by: Klasky/Csupo Inc.

©, TM, & © 1999 Tiger Electronics, Ltd. All rights reserved.  
980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.

©, TM, & © 1999 Tiger Electronics UK Ltd. All rights reserved.  
Belvedere House, Victoria Avenue, Harrogate,  
North Yorkshire HG1 1EL, England.  
[www.tigertoys.com](http://www.tigertoys.com)

MADE AND PRINTED IN CHINA



642120001IWTI-01

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>