

# eFortunes™


ELECTRONIC FORTUNE COOKIE

**WARNING:**  
CHOKING HAZARD-SMALL PARTS  
NOT FOR CHILDREN UNDER 3 YEARS

## INSTRUCTION MANUAL


Thanks for choosing the eFortunes™ electronic fortune cookie. We are sure you will enjoy hours of fun asking pressing questions and getting fun responses from the cookie.

To activate your eFortunes™ cookie, simply slide the cookie halves apart. The message will scroll across the LCD screen twice. Each time you close and open the cookie, a different message will appear.

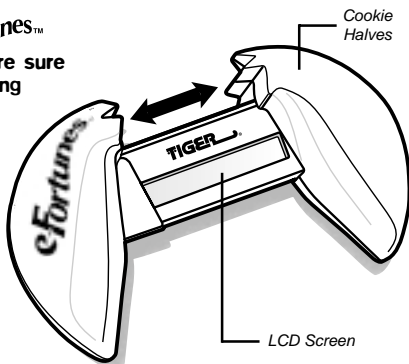

## INSTALLING THE BATTERIES

1. Pull the cookie open.
2. Open the battery compartment door on the back of the unit using a screwdriver. (Illustration 1)
3. Insert 2 "LR44" batteries. Be sure to match the "+" and "-" as shown. (Illustration 2)
4. Close the battery compartment door and replace the screw.
5. Press the reset button on the back of the unit using the tip of an ink pen or a paperclip.
6. Battery installation should be done by an adult.

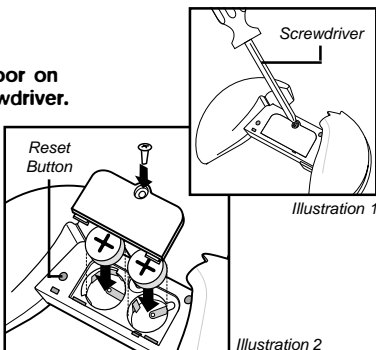

## TROUBLESHOOTING

1. If the unit does not work, please check that the batteries have been inserted correctly.
2. If the letters on the screen appear dim, please install new batteries.

## CARE AND USE/MAINTENANCE

To protect your eFortunes™ cookie, follow these instructions:

- Prevent spills of food and beverage on the unit.
- Do not submerge the product in water. If the product needs to be cleaned, wipe it gently with a barely damp, soft, cloth.
- Do not throw or kick the product, and do not push sharp objects through the LCD screen.
- Designed for children 5 and up.

**CAUTION:** The batteries included with this toy should be kept away from small children.

## CAUTION:

To ensure proper function and avoid battery leakage:

- Do not mix old and new batteries.
- Do not mix alkaline, standard or rechargeable batteries.
- Batteries should be installed by an adult.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity, following the toy and battery manufacturer's instruction.
- Exhausted or dead batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

## 90-DAY LIMITED WARRANTY

Tiger Electronics, Ltd. (Tiger) warrants to the original consumer purchaser of this product that the product will be free of defects in material or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S.\$5.70. Payments must be by check or money order payable to Tiger Electronics, Ltd.

**The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.**

All product returned must be shipped prepaid and insured for loss or damage to:

Tiger Repair Department  
1000 N. Butterfield Road, Unit 1023  
Vernon Hills, IL 60061 U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

**THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.**

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

For more information about Tiger Electronics, our products and special promotions, please visit our web site at: [www.tigertoys.com](http://www.tigertoys.com).

**TIGER**  
**ELECTRONICS, LTD.**

®, TM, & © 2000 Tiger Electronics, Ltd.  
All rights reserved.  
980 Woodlands Parkway  
Vernon Hills, Illinois 60061, U.S.A.

© 2000 Tiger Electronics - UK LLC.  
Belvedere House, Victoria Avenue  
Harrogate, North Yorkshire  
England HG1 1EL



PRINTED IN CHINA

031400001IWTI-02

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>