

TIMEX®

Model T035

Color Changing Alarm Clock



For additional information, online
registration, and exclusive special
offers please visit our website:

www.timexaudio.com

Introduction

Thank you for selecting this Timex Model T035 Color Changing Alarm Clock with Soothing Sounds. This model includes:

- A large LCD display with momentary Indiglo® color changing back light.
- A programmable Auto-Snooze alarm.
- Wake to one of 4 Soothing Sounds or a buzzer alarm.
- Sleep to Soothing Sounds with auto-shutoff.
- A 24-hour reminder/nap timer.

Please take the time to review this manual completely and carefully to insure that you are getting the maximum benefit from all of the unique features included in this Timex product.

Once again, thank you for selecting Timex.

Table of Contents

Controls And Indicators	1
Main Display	2
Installing the Batteries	2
Operating Instructions	3-6
Limited 90-day Warranty Information	7

Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzene, thinner or similar materials can damage the surface of the unit.

FCC Information

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Battery Warning

For models that require more than one battery

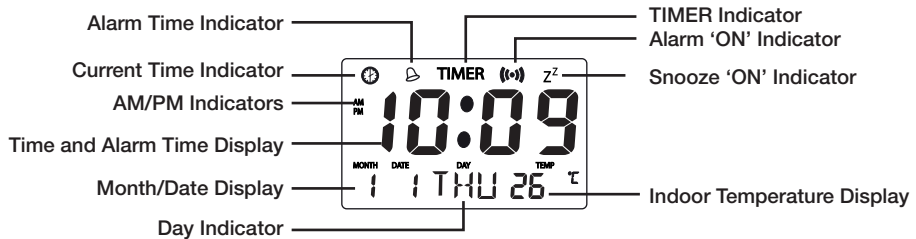
- Do not mix with used or other battery types/brands
- Do not heat above 75°C (167°F)
- Replace all batteries at the same time
- Do not expose contents to water
- Do not open batteries
- Do not charge or recharge
- Do not dispose of in fire
- Do not install backwards

Controls and Indicators

Front Panel



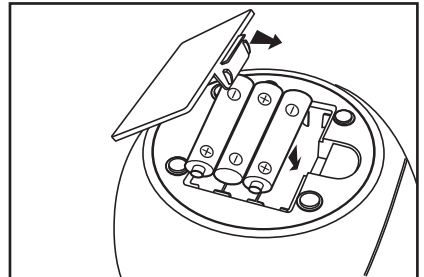
Main Display



Installing the Batteries



- Press down on the battery door locking tab and remove the door.
- Install 3 fresh alkaline "AAA" batteries in the compartment. Be sure to follow the polarity (+ / -) markings engraved in the battery compartment. If the batteries are inserted incorrectly the unit will not work.
- Replace the battery door.


When the batteries are installed for the first time the clock will 'beep' once and the display will appear as shown below:"



Operating Instructions

Setting The Clock To The Correct Time of Day

The clock symbol  in the upper left corner of the display indicates that the display is showing current time. The bell symbol  in the upper left corner of the display indicates that the display is showing the wake-up time. Pressing the MODE button cycles the display between the current time and wake-up time.

1. If necessary press the MODE button to change the display to the current time mode.  appears in the display.
2. Press the SET button. The lighting turns on briefly and the hour digits begin to flash. Press the UP or DOWN buttons to adjust the hour. Be sure to set correctly for AM or PM.
3. Press the SET button again. The minutes begin to flash. Press the UP or DOWN buttons to adjust the minutes.
4. Press the SET button again. The Year begins to flash at 2011. Press the UP button to adjust the year if necessary.
5. Press the SET button again. The Month display begins to flash. Press the UP or DOWN buttons to adjust the month (1 = January, 2 = February, etc)
6. Press the SET button again. The Date display begins to flash. Press the UP or DOWN buttons to adjust the date. The DAY indicator changes automatically to match the Year, Month, and Date display.

When you are finished with the above settings you can press the SET button again to exit the setting mode and start the clock running. Or, after 60 seconds the clock automatically exits the setting mode and begins to run. Note: The flashing colon between the hour and minute digits acts as a seconds counter.

Indoor Temperature Display

This clock includes a built in temperature sensor and indoor temperature display. The indoor temperature can be displayed in Centigrade (C°) or Fahrenheit (F°). The initial default setting when the batteries are installed is Centigrade. To switch the display between Centigrade and Fahrenheit press the DOWN button. Note: If you place this clock on a windowsill or similar location where it may be exposed to direct sunlight or cold winter temperatures you will not get an accurate room temperature reading.

12/24-Hour Time Display

This clock can display the time in 12-hour format with AM/PM indicators, or in 24-hour format, often referred to as 'military time'. To switch the display between 12 and 24-hour time formats, press the UP button.

Momentary Lighting System


Each time you press any front panel button to make adjustment the lighting will turn on for approximately 5 seconds and the shut off automatically to extend the battery life.

Operating Instructions

Setting the Wake-up Time, Auto Snooze Time, and Wake-up Sound

 
 
This clock features a programmable Snooze/ Repeat Alarm that you may turn 'On' or 'Off'. If the Snooze function is turned 'On' the alarm will automatically enter the Snooze mode and shut 'Off' after two minutes, and then turn 'On' again one minute later. You may adjust the amount of Snooze time between one minute and 60 minutes. The initial default setting is one minute.

You may also choose which of the 4 soothing sounds or the electronic buzzer alarm you want to turn on at the wake-up time.

1. Press the MODE button to change the display from current time mode to wake-up time mode. The bell symbol  appears in the display. The initial alarm setting is 12:00 AM.
2. Press the SET button. The wake-up hour digits begin to flash. Press the UP or DOWN buttons to adjust the wake-up hour. Be sure to set correctly for AM or PM.
3. Press the SET button again. The wake-up minutes begin to flash. Press the UP or DOWN to adjust the wake up minutes.
4. Press the SET button again. The Snooze Indicator **Z^Z** and Snooze time display (01) begin to flash. Press the UP or DOWN button to select the desired amount of Snooze time. For example, if you select 5 minutes of Snooze time, the alarm will automatically turn on again in 5 minutes.
5. Press the SET button again. The number "1" begins flashing in the Time display. Press the UP or DOWN buttons to hear and select from among the 4 soothing sounds or the electronic buzzer as your wake-up alarm sound.
6. Press the SET button once more and the clock will return to the wake-up time mode, then press the MODE button to change to current time mode, or if you do not press any button for 1 minute the clock will return to the current time display automatically.

Activating the Alarm and the Auto Snooze Time

After you have set the desired wake-up time, Snooze time, and wake-up sound as described in Steps 1 through 6 above you must still activate the alarm and snooze functions as follows:

1. If the display is showing current time press the MODE button to change the display to your desired wake-up time.
2. While the wake-up time is showing on the display press the DOWN button once to activate the alarm. The alarm indicator  appears in the display to confirm that the alarm is activated.
3. While the wake-up time is showing on the display press the DOWN button once more to activate the snooze function. The snooze indicator **Z^Z** appears in the display to confirm that the snooze function is activated.
4. To deactivate the alarm and the auto-snooze functions press the DOWN button once more. Both the alarm indicators  and the snooze indicators **Z^Z** disappear from the display.

At the selected wake-up time if only the alarm is activated the alarm will turn on to the selected soothing sound or buzzer alarm. The alarm sound starts softly and gradually increases in volume. The alarm will continue for 2 minutes and then shut off and reset itself for the following day. To stop the alarm sooner press any of the front panel buttons except the SOUND button.

Operating Instructions

At the selected wake-up time if both the alarm and the auto-snooze functions are activated the alarm will turn on for 2 minutes and then enter the auto snooze mode. The alarm will turn off for the number of snooze minutes that you selected above and then turn on again for 2 minutes. During snooze operation the snooze indicator **Z^Z** flashes in the display. The alarm/snooze cycle can be repeated a total of 3 times, but after the third time the alarm resets for the following day and the snooze indicator **Z^Z** stops flashing. When the alarm turns on you may press any button on the front panel (except the SET button) to stop the alarm sooner and begin the auto snooze cycle immediately. The alarm will turn on again in 2 minutes.

Remember that if only the alarm indicator **(🔔)** appears in the display the alarm will turn on at the selected time for 2 minutes and can be stopped and reset by pressing any button on the front panel except the SOUND button.

If both the alarm indicator **(🔔)** and the snooze indicators **Z^Z** appear in the display the alarm will turn on for 2 minutes and then enter the auto snooze mode for the number of minutes that you selected. This cycle can be repeated up to 3 times and then the alarm will reset for the same time the following day.

Sleep to Soothing Sounds with Auto-Shutoff

You may program the soothing sounds to play for up to 60 minutes and then shut off automatically.

1. Press the TIME button. The display will show "0:10" which is the initial default Sleep Timer setting. Continue to press the TIME button to increase the Sleep Timer setting as follows: 0:10 -> 0:20 -> 0:30 -> 0:40 -> 0:50 -> 1:00 -> 0:10 -> etc.
2. When the display is showing the desired amount of Sleep Time Press the SOUND button to begin playback of the soothing sound. To change to a different soothing sound press the SOUND button once to stop playing the current sound and press again to begin playing the next sound. Repeat this process until you hear the desired sound. The number of the selected sound will appear in place of the Date indicator.
3. Press the UP or DOWN button to adjust the volume level of the soothing sound.
4. The display will begin counting down from the time you selected. The remaining minutes and seconds will appear in the display. As the soothing sounds are playing the color of the display and inside the cabinet will change every 5 seconds. To pause the soothing sounds press the SOUND button once. To resume playback of the soothing sound Press the SOUND button again.
5. When the display counts down to "0:00" the soothing sounds shut off automatically. To shut off the soothing sound before the display counts down to 0:00, press the MODE button. The soothing sound stops and the display returns to current time.

Countdown / Reminder / Nap Timer

This clock includes a countdown timer that can be used to remind you of an appointment, meeting, or any other event, or when taking a nap, without disturbing your normal wake-up alarm setting. The countdown timer can be set for up to 24 hours in advance. When the timer counts down to "00" the alarm turns on for one minute.

Operating Instructions

To program the countdown timer:

1. Press the TIMER button. The display will show 23 Hours, 59 Minutes, and 59 Seconds which is the initial default setting for the timer. The TIMER indicator also appears.
2. Press the SET button. The Hour display begins to flash. Press the UP or DOWN buttons to set the number of hours before the alarm turns 'On'.
3. Press the SET button again. The Minute display begins to flash. Press the UP or DOWN buttons to set the number of minutes before the alarm turns 'On'.
4. Press the SET button again. The Seconds display begins to flash. Press the UP or DOWN buttons to set the number of seconds before the alarm turns 'On'.
5. When the display is showing the desired Hours, Minutes, and Seconds, press the TIMER button once to enter the new timer setting in the memory, and once more to start the countdown timer. The display will begin counting down. Note: If you want to pause the countdown at any time press the TIMER button again. Press the TIMER button once more to resume the countdown.
6. When the countdown has started you can press the MODE button to change the display back to the current time, or after 60 seconds the display will change back to the current time automatically. To review the amount of countdown time remaining, press the TIMER button at any time, and then press the MODE button to return to current time.
7. When the timer counts down to "00" the alarm will turn on and continue for one minute. To stop the alarm sooner, press any button on the front panel.

NOTES:

- When you change the timer from the 23:59:59 default setting to a new setting, the new setting becomes the new default. For example, if you program the alarm to turn on after 90 minutes, this becomes the new default setting. The next time you press the TIMER button the new default setting on the display will be 90 minutes.
- When the timer begins counting down the display and cabinet lighting will remain 'On' for 5 seconds and then shut off automatically to extend the battery life.

Replacing the Batteries

When the display becomes dim and begins to fade and the volume of the sounds becomes weak you should replace the batteries as soon as possible. If weak or exhausted batteries are left in the battery compartment they will eventually leak and cause damage to the unit and possible damage to the surface below the unit as well.

Always replace all 3 batteries at the same time and do not mix different types of batteries.

IMPORTANT: Make sure you have the 3 new batteries removed from their package and ready to install before you remove the old batteries from the unit. If you can replace the batteries within one minute you will not need to reset the clock. But if there are no batteries in the battery compartment for more than one minute it will be necessary to reset all clock functions after the new batteries are installed.

Limited 90-Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should service be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$2.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$4.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase.
3. Enclose a check or money order payable to the order of SDI Technologies, Inc. for the sum of \$2.00 (or \$4.00 if after the warranty period or without proof of purchase).
4. Send the unit prepaid to the Factory Service Center listed below:

Consumer Repair Department

SDI Technologies Inc.
Timex Audio Products Division
1330 Goodyear Drive
El Paso TX 79936-6420

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

© 2011 SDI Technologies, Inc. All rights reserved

TIMEX is a registered trademark of Timex Corporation the United States and other countries

TIMEX®

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>