 


TIMEX®

Model T152

Rotating Alarm Clock with Nature Sounds

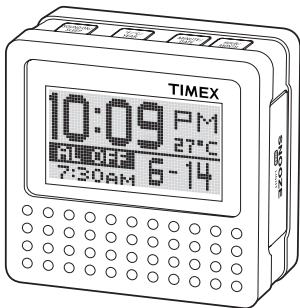

For additional information, online registration,
and exclusive special offers visit our website:

www.timexaudio.com

For questions or comments regarding this or other products,
please call our toll-free number 1-800-888-4491.

Para instrucciones en Español, llame al 1-800-888-4491.

Downloaded from www.Somanuals.com. All Manuals Search And Download

A Consumer Guide to Product Safety

IMPORTANT SAFETY INSTRUCTIONS

This unit has been designed and manufactured to assure your personal safety. Improper use can result in potential electrical shock or fire hazards. Please read all the safety and operating instructions carefully before installation and use. Keep these instructions handy for future reference. Take special note, adhere to all warning, and always follow the instructions on the unit and in the instructions and service manuals.

- 1. Water and Moisture** - The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- 2. Ventilation** - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 3. Heat** - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
- 4. Power Sources** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 5. Grounding or Polarization** - This product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other). As a safety feature this plug will fit into the power outlet only one way. If you are unable to fit the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 6. Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
- 7. Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 8. Non-Use Periods** - The power cord of the unit should be unplugged from the outlet when it is to be left unused for a long period of time.
- 9. Objects and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- 10. Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 11. Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 12. Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
- 13. Damage Require Service** - The unit should be serviced by qualified service personnel when:
 - A. The power supply cord or plug has been damaged.
 - B. Objects have fallen into or liquid has been spilled into the enclosure.
 - C. The unit has been exposed to rain.
 - D. The unit has been dropped or the enclosure damaged.
 - E. The unit does not appear to operate normally or exhibits a marked change in performance.
- 14. Servicing** - The user should not attempt to service the unit beyond that described in the user's operating instructions. All other servicing should be referred to qualified service personnel.
- 15. Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 16. Antenna** - Do not connect to an external antenna.
- 17.** If you have any questions, call SDI Technologies Inc. Timex Audio Products Division Customer Service.

Limited 90-Day Warranty Information

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase. Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$5.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$10.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$5.00 (\$10.00 after warranty period).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

Consumer Repair Department
SDI Technologies Inc.
Timex Audio Products Division
1401 Pullman Drive, Suite A
El Paso, TX 79936-7726

 
NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.

TIMEX is a registered trademark of Timex Corporation in the U.S. and other countries.

Controls and Indicators

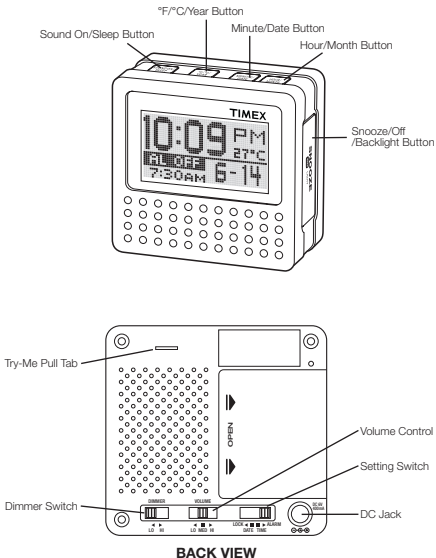

Installation and Maintenance

1. Place unit on a level surface away from sources of direct sunlight or excessive heat.
Note: Protect your furniture when placing your unit on a natural oil or lacquered finish. A cloth or other protective material should be placed between it and the furniture.
2. Open battery compartment and install batteries as *Getting Started*.
3. Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as Benzine, thinner or similar materials can mar the surface of the case.
4. If the unit is not to be used for a prolonged period, such as a month or longer, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace all the batteries.

 
Getting Started

Important! You may need to remove the **Try-Me Pull Tab** from the back of this unit. The Pull Tab is for in-store use only. Throw the plastic tab away.

The Rotating Temperature Alarm Clock operates either by AC adapter or batteries. It including 3 "AAA" batteries is meant for in-store demonstration use only, and should be replaced with fresh batteries when the Alarm Clock is brought home. Also, it needs a CR-2032 (not including) lithium battery for alarm clock setting backup. To replace or install the batteries, follow these instructions:


Install Backup Batteries:

1. The battery compartment is located on the back of the cabinet and opens the battery compartment door.
2. Take out all "AAA" batteries if necessary and then insert a flat-headed screwdriver into the slot on the back up battery compartment cover, gently pry off and remove the back up battery cover.
3. Install a "CR-2032" lithium battery into the back up battery compartment, making sure that the positive and negative polarities match up as indicated inside the battery box.
4. Close the back up battery compartment cover, making sure the cover latch clicks shut.

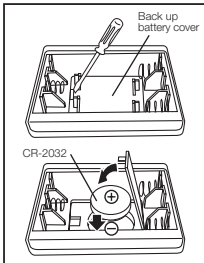

Install Operating Batteries:

 1. The battery compartment is located on the back of the cabinet and opens the battery compartment door.
2. Install 3 "AAA" batteries, making sure that the positive and negative polarities match up with the diagram inside the battery box.
3. Close the battery compartment door, making sure the door latch clicks shut.

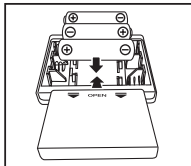

For the Best Possible Performance:

- We recommend using alkaline batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the clock before being charged (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Remove exhausted batteries from the clock.
- The supply terminals are not to be short-circuited.

For using AC adapter, you don't need to install "AAA" batteries but we recommend to install backup battery to prevent setting lost by power failure.

Install AC Adapter:

- Plug the included AC Adapter into the **DC Jack** located on the back of the unit, then plug the AC Adapter into a wall outlet.
- If you are using a different AC adapter than the one supplied, make sure that it is a DC 6V, 400mA Positive Center AC Adapter.

Setting Date, Time and Alarm Time

Setting Date

1. Slide the **Setting Switch** which is located on the back of the unit to **Date**. The display will show date setting on the screen and flash.
2. Press the **Hour/Month Button** to advance the month forward, the **Minute/Date Button** to advance the date forward, or **°F/°C/Year Button** to advance the year forward.

Note: While pressing and holding **Hour/Month**, **Minute/Date** or **°F/°C/Year Button** the month/date/year will advance at a moderate pace and then get faster. This will assist you in setting the date quickly and accurately.

Setting Clock Time

1. Slide the **Setting Switch** to **Time**. The display will show time setting on the screen and flash.
2. Press the **Hour/Month Button** to advance the hour forward, or the **Minute/Date Button** to advance the minute forward. Remember to set the correct AM or PM time.
Note: While pressing and holding either **Hour/Month** or **Minute/Date Button** the hour/minute will advance at a moderate pace and then get faster. This will assist you in setting the date quickly and accurately.
3. The clock has auto DST (day saving time) feature which will automatically adjust the clock time for DST. If your living area has no DST, please manually adjust.

Setting Alarm Time

1. Slide the **Setting Switch** to **Alarm**. The display will show alarm time setting screen and flashing.
2. Press the **Hour/Month Button** to advance the hour forward, or the **Minute/Date Button** to advance the minute forward. Remember to set the correct AM or PM alarm time.
Note: After all the settings, slide the **Setting Switch** to **Lock** to return to the normal display mode.

Operating the Alarm

1. Set alarm time as indicated in **Setting Alarm Time**.
2. Rotate the unit to vertical mode to active the alarm. **ALARM ON** will show on middle of the display to indicate alarm is activated.
3. To stop the alarm from sounding on the following day, just rotate the unit to horizontal mode. **ALARM OFF** will show on left side of the unit to indicate alarm is off.
4. If the alarm is not turned off after it sounds, it will play for approximately 5 minutes then turn off automatically. This cycle will repeat every 24 hours unless the controls are changed.

Listening to Nature Sounds

1. Press the **Sound On/Sleep Button** to listen to nature sounds. Press the **Hour/Month Button** or the **Minute/Date Button** to select the sounds.
2. Press the **Sound On/Sleep Button** again for sleep mode. Nature sound will turn off automatically after several minutes. Press the **Sound On/Sleep Button** again to change the amount of sleep time.
3. Adjust the **Volume Control** as desired.
4. When listening is completed, press the **Snooze/Off/Backlight Button** to turn it off.

Snooze/ Back-light Operation

1. Press the **Snooze/Off/Backlight Button** after the alarm came, the alarm will go off and will come on again in approximately 9 minutes (Adjustable). You may repeat this cycle during the one hour alarm cycle.
2. To adjust snooze period, slide the **Setting Switch** to **Alarm** and hold the **Snooze/Off/Backlight Button** until it show current snooze period. Then press **Hour/Month Button** to advance forward or **Minute/Date Button** to advance backward. Snooze period can be adjust from 1 to 15 minutes.
3. As normal condition, press the **Snooze/Off/Backlight Button** to active the 10 seconds Backlight in case you are using batteries only. For using AC adapter, backlight will be always turned on.

Dimmer Switch

Set the **Dimmer Switch** to **HI** or **LO** to adjust backlight brightness depending on the brightness in the room.

Thermometer

The unit has a built in thermometer which shows indoor temperature. Press the **°F/°C/Year Button** to set the °F or °C reading.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>