

# TIMEX®

Model T611  
**Stereo CD Clock Radio  
with Digital Tuning  
and Nature Sounds**



For additional information, online registration,  
and exclusive special offers visit our website:

[www.sdirect.com](http://www.sdirect.com)

For questions or comments regarding this or other products,  
please call our toll-free number 1-800-888-4491.  
Para instrucciones en Español, llame al 1-800-888-4491.



## CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**



**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER OR BACK OF UNIT. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



*The lightning flash with arrowhead in an equilateral triangle is intended to alert the user of the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.*



*The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.*

**The symbols above are located at the bottom of the cabinet.**

**CAUTION:** To prevent electric shock, do not use this polarized plug with an extension cord receptacle or other outlets unless the blades can be fully inserted to prevent blade exposure.

**ATTENTION:** Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur. Une prise de courant, ou une autre sortie de courant sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

**Note:** The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modification could void the user's authority to operate the equipment.

# Table of Contents

<b>A Consumer Guide to Product Safety</b> .....	4-6
Safety Instructions	
FCC Information	
Laser Safety	
<b>Installation and Maintenance</b> .....	7
Maintenance and Setup	
“Sure Alarm” Battery Backup Installation	
Battery Performance	
<b>Controls and Features</b> .....	8
<b>LCD Display with Indicators</b> .....	9
<b>Setting the Time and Date</b> .....	10
<b>Listening to Compact Discs</b> .....	10-11
Playing Compact Discs	
Using the Repeat Functions	
Using the Random Functions	
Performing a High-Speed Music Search	
<b>Listening to the Radio</b> .....	12
Operating the Radio	
Programming Radio Station Settings	
Antenna Information and Adjustment	
Last Station Memory	
<b>Operating the Alarms</b> .....	13-14
Setting Alarm-1 for CD Track or Buzzer	
Setting Alarm-2 for AM/FM Radio	
Setting Alarm-3 for Nature Sounds	
Checking Your Alarm Time Settings	
Turning Off the Alarms	
<b>Sleeping to Compact Discs</b> .....	15
<b>Sleeping to Radio with Timer</b> .....	15
<b>Sleeping to Nature Sounds with Timer</b> .....	16
<b>Adjusting the Display Brightness</b> .....	16
<b>Stereo Headphone Jack</b> .....	16
<b>Troubleshooting</b> .....	17-18
<b>Warranty Information</b> .....	20

# A Consumer Guide to Product Safety

---

## IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. **Water and Moisture** – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. **Ventilation** – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, that may impede the flow of air through the ventilation openings.
3. **Heat** – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. **Power Sources** – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
5. **Grounding or Polarization** – This product is equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). As a safety feature this plug will fit into the power outlet only one way. If you are unable to fit the plug into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of your polarized plug by forcing the plug into the outlet.
6. **Power Cord Protection** – Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cord exits the unit to where it is plugged into an AC outlet.
7. **Cleaning** – The unit should be cleaned only as recommended by the manufacturer. See the Maintenance section of this manual for cleaning instructions.

# A Consumer Guide to Product Safety

---

8. **Objects and Liquid Entry** – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
9. **Attachments** – Do not use attachments not recommended by the product manufacturer.
10. **Lightning and Power Surge Protection** – Unplug the unit from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
11. **Overloading** – Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
12. **Damage Requiring Service** – The unit should be serviced by qualified service personnel when:
  - A. the power supply cord or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
13. **Antenna** – Do not connect an external antenna to the unit.
14. **Periods of Nonuse** – If the unit is to be left unused for an extended period of time, such as a month or longer, the batteries should be removed and the power cord should be unplugged from the unit to prevent damage or corrosion.
15. **Servicing** – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

**For questions or comments regarding this or other products, please call our toll-free number: 1-800-888-4491.**

# A Consumer Guide to Product Safety

---

## FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with the limits for a Class B digital device as specified in Part 15 of FCC Rules. These limits provide reasonable protection against radio and TV interference in a residential area.

However, your equipment might cause TV or radio interference even when it is operating properly. To eliminate interference you can try one or more of the following corrective measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the radio or TV.
- Use outlets on different electrical circuits for the equipment and the radio or TV.

Consult your dealer or an experienced radio/television technician if the problem still exists.

Modifying or tampering with your system's internal components can cause a malfunction and might invalidate the system's warranty and void your FCC authorization to operate it. If your system is not performing as it should, call SDI Technologies Inc., Timex Audio Products Consumer Services, 1-800-888-4491 for assistance.

## Laser Safety

This unit employs a laser. Only a qualified person should remove the cover or attempt to service this device, because of possible eye injury.

**CAUTION:** USE OF CONTROLS, ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

**DANGER:** INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK FAILED OR DEFEATED, AVOID DIRECT EXPOSURE TO BEAM.

**CAUTION:** HAZARDOUS LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED.

# Installation and Maintenance

## Maintenance and Setup

1. Place the clock on a level surface away from direct sunlight or sources of excessive heat.
2. Protect your furniture when placing the unit on natural wood or wood with a coated finish. A cloth or other protective material should be placed between the unit and the furniture.
3. Clean the casing with a soft cloth moistened only with mild soap and water. Stronger cleaning agents are not recommended, as they may damage the surface of the case.
4. If the unit is not to be used for a prolonged period, such as a month or longer, remove the batteries to prevent possible corrosion. Should the battery compartment become corroded or dirty, clean the compartment thoroughly and replace all the batteries.

## “Sure Alarm” Battery Backup Installation


It is strongly recommended that 3 “AAA” batteries be installed into the unit, as directed below, in order to activate the “Sure Alarm” Battery Backup. In the event that the power cord is disconnected or a power interruption occurs, the “Sure Alarm” Battery Backup will maintain clock and alarm settings for the life of the battery, ensuring that the alarm (buzzer only) will sound at the set time. Note: the backlight will not function while on battery power.

1. Gently turn the unit over and remove the battery compartment door.
2. Install 3 “AAA” batteries (alkaline is recommended for longer life), while making sure that the + and – ends match up with those inside the battery compartment.
3. Slide the compartment door back on, making sure the door locks into place, and gently turn the unit over.



The display’s **Battery Low Indicator** will flash when no batteries are installed, or when the batteries are weak or installed incorrectly.

## For the Best Battery Performance

- We recommend using alkaline batteries.
- Non-rechargeable batteries are not to be recharged.
- Remove rechargeable batteries (if removable) from the clock before charging.
- Rechargeable batteries are only to be recharged under adult supervision.
- Do not mix different types of batteries, including new and used batteries.
- Only use batteries of the same or equivalent type.
- Remove exhausted batteries from the clock.
- Do not short-circuit the supply terminals.

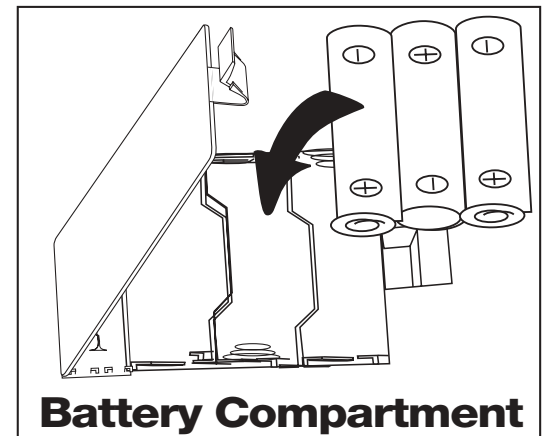

# Controls and Features

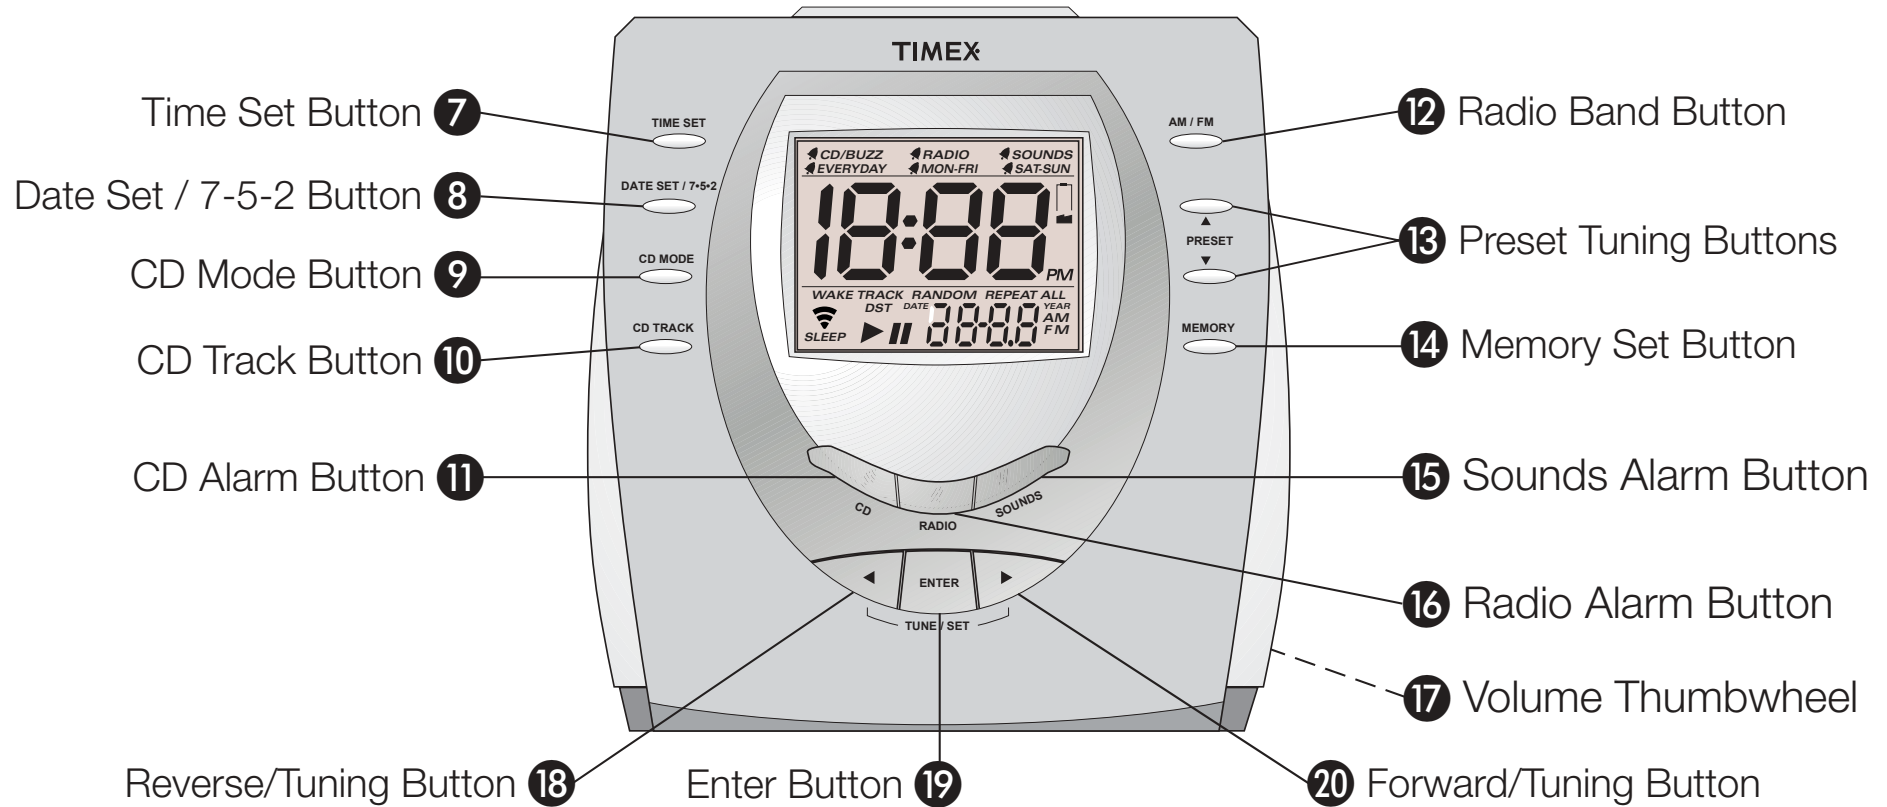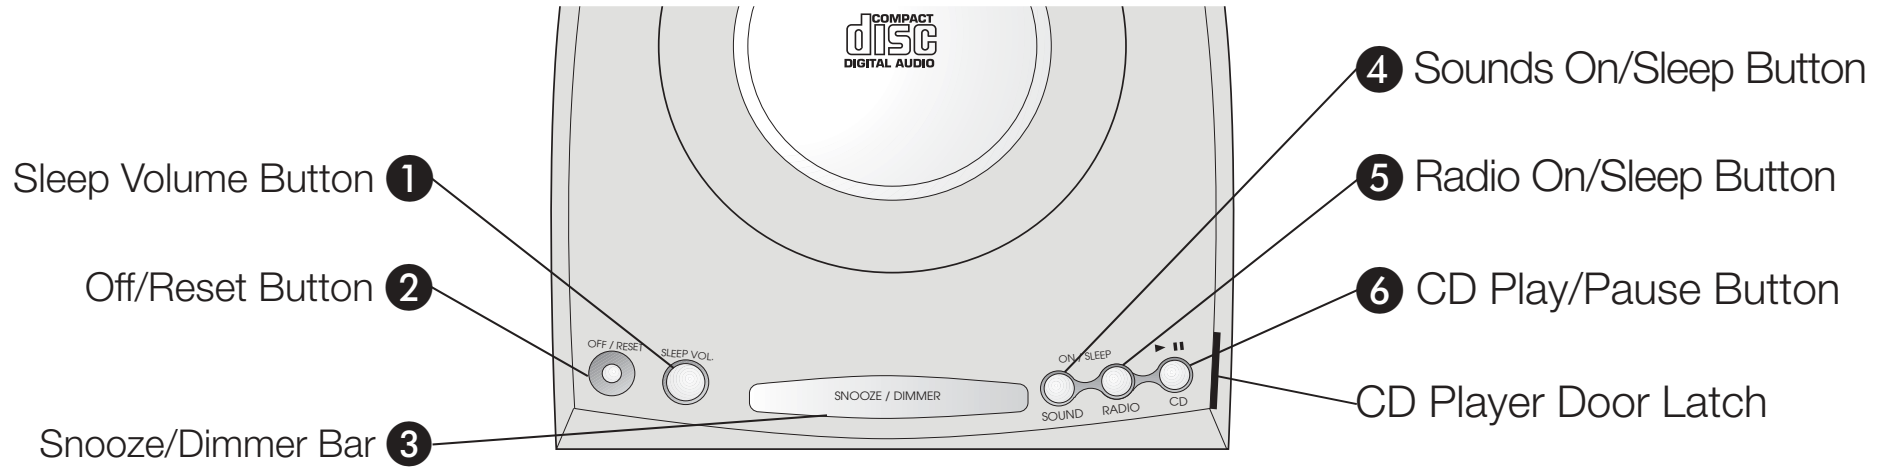



# LCD Display With Indicators


Alarm-1 (CD/Buzzer) Indicator

Alarm-2 (Radio) Indicator

Alarm-3 (Sounds) Indicator

7-5-2 Alarm Settings

7-5-2 Alarm Settings

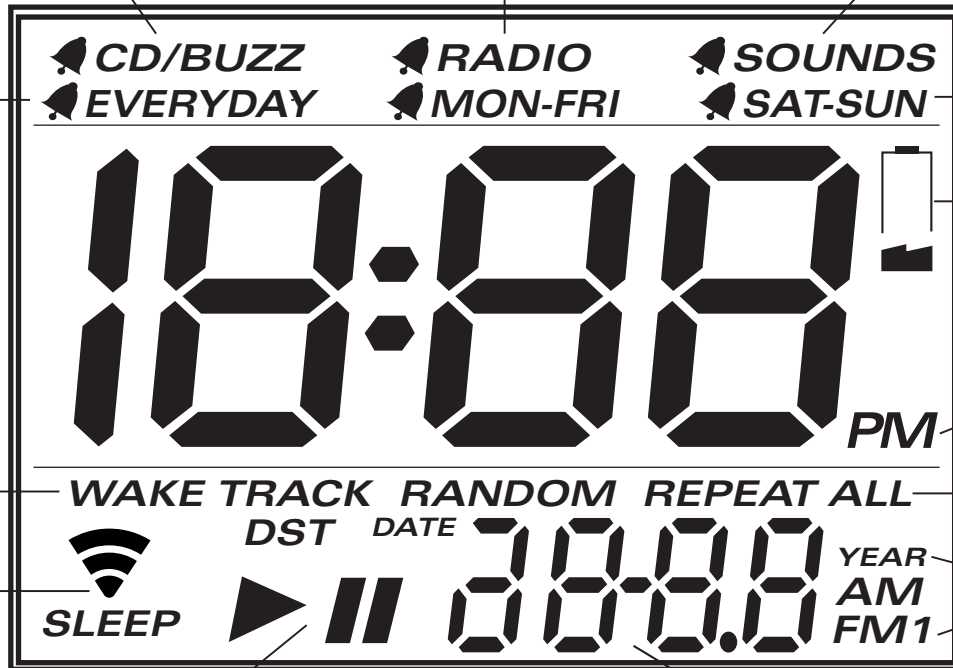

Battery Low Indicator

PM Indicator

Wake Track Indicator

CD Random/  
Repeat Indicators

Sleep Volume Indicator

AM/FM Indicator

CD Play/Pause  
Indicators

Radio Frequency /  
CD Track /  
Calendar Display /  
Nature Sounds Indicator

# Setting the Time and Date

---

## Setting the Clock

1. Press and hold the **7 Time Set Button** until the date disappears and the display begins flashing.
2. Press the **18 Reverse** or **20 Forward Button** to set the time. Holding a button for a few seconds will advance or reverse the time rapidly. Set the correct AM/PM time, shown by the **PM Indicator** on the display.
3. After setting the time, press the **19 Enter Button** or wait ten seconds to return to the normal display mode. The calendar will reappear and the unit will beep twice.

## Setting the Calendar

1. It is important to set the correct date in order to use the 7-5-2 Alarm, which lets you set the alarm in advance for the full week, weekdays, or the weekend. Press and hold the **8 Date Set / 7-5-2 Button** until the display flashes and the year replaces the month/day at the bottom of the display.
2. Press the **18 Reverse** or **20 Forward Button** to set the year, then press the **19 Enter Button**. The unit will beep and the display will show the date. Press the **18 Reverse** or **20 Forward Button** to set the date.
3. After setting the date, press the **19 Enter Button** or wait ten seconds to return to the normal display mode.

**Note:** The clock and calendar automatically adjust for daylight-saving time and leap years. If you live in an area that does not follow daylight-saving time, you will need to reset the clock when these adjustments occur.

# Listening to Compact Discs

---

## Playing Compact Discs

1. Lift the **CD Player Door Latch**, place a CD facing up on the spindle, then gently close the door.
2. Press the **6 CD Play/Pause Button** once. The display will show "On" before returning to the clock display. The first track will start playing and the bottom of the display will show the **CD Track Indicator**.
3. Adjust the volume using the **17 Volume Thumbwheel**. If you do not want to affect the alarm volume, you may also use the **1 Sleep Volume Button**. See *Sleeping to CD's* for more information regarding this feature.
4. To pause the CD, press the **6 CD Play/Pause Button** while the CD is playing. The display will show the **Pause Indicator (//)**. Press the **6 CD Play/Pause Button** again to continue play.
5. Press the **20 Forward Button** to skip to the next track. Press the **18 Reverse Button** to return to the beginning of the current track. Press the **18 Reverse Button** again to skip backwards to the previous track.
6. To stop play before the CD has ended, press the **2 Off/Reset Button**.

# Listening to Compact Discs (Continued)

---

## Using the Repeat Functions

1. Press the **9 CD Mode Button** once to repeat the track that is currently playing. The **Repeat Indicator** will appear on the display, indicating that this function has been activated.
2. Press the **9 CD Mode Button** again to repeat the entire CD. The **Repeat All Indicator** will appear, indicating that this function has been activated. When the CD is finished, it will start over from the beginning.
3. When a repeat function is activated, the CD will play until it is stopped or the function is cancelled. To cancel the repeat functions, press the **9 CD Mode Button** until no **Repeat Indicators** appear on the display.

## Using the Random Functions

1. To play CD tracks in a random order, press the **9 CD Mode Button** until the **Random Indicator** appears on the display. This can only be done while a CD is playing. All of the tracks on the CD will then play once, in a random order. After all the tracks have played, the CD will shut off.
2. To combine the Random and the Repeat functions, press the **9 CD Mode Button** until the display shows both the **Repeat** and **Random Indicators**. The CD Player will now continue to play tracks in a random order until the CD Player or the function is turned off.
3. To cancel the random functions, press the **9 CD Mode Button** until no **Random Indicators** appear on the display.

## Performing a High-Speed Music Search

Press and hold the **18 Reverse** or **20 Forward Button** to search for specific musical passages within a track. When you find the passage you are searching for, release the button. The high-speed search can only be performed while a track is playing.

# Listening to the Radio

---

## Operating the Radio

1. Press the **5 Radio On/Sleep Button** once to turn on the radio. The display will show “On” before returning to the clock display. The bottom of the display will continue to show the digital radio frequency.

**Note:** If the **5 Radio On/Sleep Button** is pressed more than once, the unit will enter the sleep mode, with the radio operating on a timer. See *Sleeping to Radio with Timer* for more information about this feature.

2. Press the **12 Radio Band Button** to select either the AM or FM band.

3. Press the **18 Reverse/Tuning** or **20 Forward/Tuning Button** to select a station. To scan the radio stations, hold a button for about three seconds. The radio will rapidly advance to the next strong signal.

4. You may also use the **13 Preset Tuning Buttons** to select a pre-programming radio station. See the *Programming Radio Station Settings* section below for instructions on setting station settings.

5. Adjust the volume using the **17 Volume Thumbwheel**.

6. Press the **2 Off/Reset Button** to turn the radio off. The bottom of the display will again show the calendar.

## Programming Radio Station Settings

The radio features 18 programmable station settings so you can access your favorite stations quickly. You will also need to program radio station settings in order to use the radio alarm.

1. Tune to the first station you wish to program into your preset station settings.

2. Press the **14 Memory Set Button**. The display will show the first memory setting, “P01.” Use the **13 Preset Tuning Buttons** to select one of the memory settings; there are six AM and 12 FM slots.

3. When the display shows the memory setting you wish to use, press the **14 Memory Set Button** to program the station into that setting. Continue programming up to 18 stations into memory.

## Antenna Information and Adjustment

**FM** – Extend the FM wire antenna to its full length and vary the direction to its strongest signal.

**AM** – The AM bar antenna is located inside the cabinet. Rotate the unit until you find the strongest AM signal.

## Last Station Memory

The tuner always remembers the last station selected before the radio was switched off, and automatically selects the station again when the radio is turned on.

# Operating the Alarms

---

This clock radio features a triple alarm system, with three alarms that can be operated independently. Alarm-1 features a choice of a CD tracks or a buzzer, Alarm-2 features a radio wake sound, and Alarm-3 features a choice of four nature wake sounds. You can set any combination of the three alarms. In addition, each alarm features a 7-5-2 setting that lets you set the alarm in advance for a full week, the workweek, or the weekend.

## Setting Alarm-1 for CD Track or Buzzer

1. Press and hold the **11 CD Alarm Button** until the Alarm-1 settings and **CD Alarm Indicator** appear on the flashing display. The display will flash for ten seconds before returning to the standard clock display.
2. Press the **18 Reverse** or **20 Forward Button** to set the wake time. Holding a button for a few seconds will advance the time rapidly. Be sure to set the correct AM/PM time, as shown by the display's **PM Indicator**.
3. After setting the Alarm-1 wake time, use the **10 Wake Track Button** to select the track that will play at the set time. Adjust the volume using the **17 Volume Thumbwheel**.
4. If you want to wake to the buzzer alarm, set Alarm-1 but do not load a CD into the player.
5. After setting the wake time and sound, you will need to select your 7-5-2 setting. The 7-5-2 setting lets you set the alarm for a full week, weekdays only, or the weekend. Before setting the alarm, be sure that you have set the correct date, as shown in the *Setting the Calendar* section of this manual. While the display is still flashing, press the **8 Date Set / 7-5-2 Button** until the desired setting is shown at the top of the display.
6. After you have programmed the Alarm-1 settings, press the **19 Enter Button** or wait ten seconds to return to the clock display. The **CD Alarm Indicator** will appear on the display, showing that the alarm is set.

## Setting Alarm-2 for AM/FM Radio

1. Press and hold the **16 Radio Alarm Button** until the Alarm-2 settings and frequency appear on the display.
2. Press the **18 Reverse** or **20 Forward Button** to set the Alarm-2 wake time.
3. Use the **12 Radio Band Button** and the **14 Memory Set Button** to select a radio station to wake to. For more information on programming radio stations into memory, see the *Programming Radio Station Settings* section of this manual. Adjust the volume using the **17 Volume Thumbwheel**.
4. See Note #4 in the previous section for instructions on setting the 7-5-2 setting for Alarm-2.
5. After you have programmed the Alarm-2 settings, press the **19 Enter Button** or wait ten seconds to return to the clock display. The **Radio Alarm Indicator** will appear on the display, showing that the alarm is set.

# Operating the Alarms (Continued)

---

## Setting Alarm-3 for Nature Sounds

1. Press and hold the **15 Sounds Alarm Button** until the Alarm-3 settings and frequency appear on the display.
2. Press the **18 Reverse** or **20 Forward Button** to set the Alarm-3 wake time.
3. Use the **4 Sounds On/Sleep Button** to select a nature wake sound, which will be shown at the bottom of the display. There is a choice of four sounds:
  - Sound #1: Ocean Surf**
  - Sound #2: Forest Spring**
  - Sound #3: Rushing Brook**
  - Sound #4: Summer Wind**
4. See Note #4 in the *Setting Alarm-1* section for instructions on setting the 7-5-2 alarm setting for Alarm-3.
5. After you have programmed the Alarm-3 settings, press the **19 Enter Button** or wait ten seconds to return to the clock display. The **Sounds Alarm Indicator** will appear on the display, showing that the alarm is set.

## Checking Your Alarm Time Settings

To check any of your alarm settings after you've set the alarm, press any Alarm Button twice so that the settings appear on the display. The display will return to the standard clock display after a few seconds. After you have checked the settings, be sure that the Alarm Indicator still appears on the display in order to ensure that the alarm will sound at the set time.

## Turning Off the Alarms

1. After the alarm sounds, press the **2 Off/Reset Button** to turn off the alarm while still maintaining the programmed 7-5-2 alarm settings. To turn off an alarm and cancel its 7-5-2 settings, press its Alarm Button so that its Alarm Indicator no longer appears on the display.
2. If it is not turned off, the alarm will sound for an hour before stopping. As long as an **Alarm Indicator** appears on the display, the alarm will sound at the set time, according to the 7-5-2 settings.
3. To activate the snooze feature, press the **3 Snooze/Dimmer Bar** when the alarm sounds. The alarm will shut off for approximately nine minutes before sounding again. The feature can be repeated several times during the one-hour snooze cycle.

## Sleeping to Compact Discs

---

**Note:** For more information about playing CD's, see the *Listening to Compact Discs* section of this manual.

1. Press the **6 CD Play/Pause Button** to begin playing the CD. Without any interference, the disc will play all the way through until the end, when the player will automatically shut off.
2. Use the **1 Sleep Volume Button** to adjust the volume level. The **Sleep Volume Indicator** on the display shows the sleep volume level. Adjusting the sleep volume will not affect the wake volume.

**Note:** If you use the **17 Volume Thumbwheel** to adjust the sleep volume, it will affect the wake volume level.

3. To turn the CD off before the disc has finished playing, press the **2 Off/Reset Button**.

## Sleeping to Radio with Timer

---

**Note:** For more information about playing the radio, see the *Listening to the Radio* section of this manual.

1. Press the **5 Radio On/Sleep Button** twice to enter the sleep mode. This sets the radio sleep timer to the 90-minute setting. The sleep timer setting remains active for approximately ten seconds before returning to the standard display. The **Sleep Indicator** will be visible in the display.
2. Continue pressing the **5 Radio On/Sleep Button** to select a 90-, 60-, 30-, or 15-minute sleep timer.
3. Use the instructions in the *Listening to the Radio* section to select a radio station.
4. Use the **1 Sleep Volume Button** to find a comfortable sleep volume level. The **Sleep Volume Indicator** on the display shows the sleep volume level. Adjusting the sleep volume will not affect the wake volume.

**Note:** If you use the **17 Volume Thumbwheel** to adjust the sleep volume, it will affect the wake volume level.

5. Press the **2 Off/Reset Button** to turn off the radio before the sleep time has elapsed.
6. To see the number of minutes remaining on the timer, press the **5 Radio On/Sleep Button** once. The display will show the sleep time for approximately ten seconds before returning to the normal mode.

## Sleeping to Nature Sounds with Timer

---

1. Press the **4 Sounds On/Sleep Button** twice to enter the sleep mode. This sets the radio sleep timer to the 90-minute setting. The sleep timer setting remains active for approximately ten seconds before returning to the standard display. The **Sleep Indicator** will be visible in the display.
2. Continue pressing the **4 Sounds On/Sleep Button** to select a 90-, 60-, 30-, or 15-minute sleep timer. See the *Setting Alarm-3 for Nature Sounds* section for a list of the four sounds.
3. Press the **18 Reverse** or **20 Forward Button** to choose from the four nature sounds.
4. Use the **1 Sleep Volume Button** to find a comfortable sleep volume level. The **Sleep Volume Indicator** on the display shows the sleep volume level. Adjusting the sleep volume will not affect the wake volume.

**Note:** If you use the **17 Volume Thumbwheel** to adjust the sleep volume, it will affect the wake volume level.

5. Press the **2 Off/Reset Button** to turn off the nature sounds before the sleep time has elapsed.

**Note:** To see the number of minutes remaining on the timer, press the **4 Sounds On/Sleep Button** once. The display will show the sleep time for approximately ten seconds before returning to the normal mode.

## Adjusting the Display Brightness

---

This alarm clock radio features an adjustable display backlight, with dim, medium, and bright settings. To select a backlight setting, press the **3 Snooze/Dimmer Bar** until the desired brightness is reached.

## Stereo Headphone Jack

---

Connect a pair of headphones (not included) to the **Headphones Jack**, located on the left side of the unit, for private listening. The built-in speakers will not operate while the headphones are connected.

**Note:** You must disconnect the headphones from the **Headphones Jack** before sleeping or no sounds will emit at the wake time from the built-in speakers.



# Troubleshooting

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>REMEDY</b>
The alarm does not sound	<ul style="list-style-type: none"> <li>• The alarm was not set correctly for AM/PM</li> <li>• Alarm icons are not on the display</li> <li>• Date or 7-5-2 settings programmed incorrectly</li> </ul>	<ul style="list-style-type: none"> <li>• Check the alarm time setting</li> <li>• Press one of the Alarm Buttons so that its Indicator appears on the display</li> <li>• Check and reprogram settings</li> </ul>
The alarm sounds at an incorrect time	<ul style="list-style-type: none"> <li>• The wrong alarm icon was on the display</li> <li>• The alarm was not set correctly for AM/PM</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure the alarm you wish to wake to is the only Alarm icon that appears on the display</li> </ul>
Buzzer alarm is heard when waking to CD	<ul style="list-style-type: none"> <li>• A CD was not inserted into the CD player</li> <li>• The CD was inserted incorrectly into the player</li> <li>• The CD Player door is not closed</li> <li>• There was a power failure</li> </ul>	<ul style="list-style-type: none"> <li>• When waking to CD, always make sure a CD has been inserted</li> <li>• Always insert the CD with the label surface facing out</li> <li>• Push the door gently until it is completely closed</li> <li>• All alarms default to buzzer during a power failure as long as working batteries are inserted correctly inside the battery compartment</li> </ul>
There is no display and the CD/radio will not play	<ul style="list-style-type: none"> <li>• The unit is disconnected from an AC outlet</li> <li>• The AC outlet has no power</li> <li>• The AC outlet is controlled by a wall switch that is off</li> </ul>	<ul style="list-style-type: none"> <li>• Connect to an AC outlet</li> <li>• Try the unit on another outlet</li> <li>• Do not use an outlet that is controlled by a wall switch</li> </ul>
CD skips while playing	<ul style="list-style-type: none"> <li>• Dirty or defective disc</li> <li>• Dirty lens</li> </ul>	<ul style="list-style-type: none"> <li>• Check the bottom of the disc and clean if necessary with a soft cleaning cloth, always wipe from the center out</li> <li>• Clean with a commercial lens cleaner</li> </ul>
<p>If you have any questions, call SDI Technologies Inc. Timex Audio Products Division Customer Service, 1-800-888-4491.</p>		

# Troubleshooting

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>REMEDY</b>
Poor FM reception on certain stations	<ul style="list-style-type: none"> <li>• Weak or distant station</li> </ul>	<ul style="list-style-type: none"> <li>• Try adjusting the direction of the FM wire antenna</li> </ul>
Poor AM reception on certain stations	<ul style="list-style-type: none"> <li>• Weak or distant station</li> </ul>	<ul style="list-style-type: none"> <li>• Rotate the unit to try and gain better reception</li> </ul>
Unit is on but there is low volume or no volume at all	<ul style="list-style-type: none"> <li>• Main volume has been turned all the way down</li> <li>• Headphones are connected to Headphone Jack</li> </ul>	<ul style="list-style-type: none"> <li>• Raise the volume with the volume dial</li> <li>• Disconnect the headphones</li> </ul>
Unit shuts off unexpectedly	<ul style="list-style-type: none"> <li>• Unit was in the Sleep Mode instead of Power On Mode</li> <li>• The unit was turned On by the alarm and the alarm time ended</li> </ul>	<ul style="list-style-type: none"> <li>• Press the Radio On Button once to turn the unit back on</li> </ul>
Cannot set the clock or alarm time	<ul style="list-style-type: none"> <li>• The display must be flashing in order to set the clock/alarm times</li> </ul>	<ul style="list-style-type: none"> <li>• Hold the Time Set Button or one of the Alarm Set Buttons until the display flashes</li> </ul>
<p>If you have any questions, call SDI Technologies Inc. Timex Audio Products Division Customer Service, 1-800-888-4491.</p>		

For additional information, online registration,  
and exclusive offers please visit our website:

[www.sdidirect.com](http://www.sdidirect.com)

For questions or comments regarding this or other products,  
please call our toll-free number: 1-800-888-4491.

Para instrucciones en Español, llame al 1-800-888-4491.

# Limited 90-Day Warranty Information

---

Timex Audio Products, a division of SDI Technologies Inc. (hereafter referred to as SDI Technologies), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of 90 days from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI Technologies will repair or, at its discretion, replace this product without charge (except for a \$10.00 charge for handling, packing, return UPS/postage, and insurance). This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center listed below. The product must include proof of purchase, including date of purchase. The fee for service after the warranty period or without proof of purchase is \$30.00.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Remove the batteries (if applicable) and pack the unit in a well padded, heavy corrugated box.
2. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period.
3. Enclose a check or money order payable to the order of SDI Technologies, for the sum of \$10.00 (\$30.00 after warranty period).
4. Send the unit prepaid and insured, to the Factory Service Center listed below.

Consumer Repair Department  
SDI Technologies Inc.  
Timex Audio Products Division  
1401 Pullman Drive, Suite A  
El Paso, TX 79936-7726

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product subsequent to the original purchaser. Any applicable implied warranties are also limited to 90 days, and SDI Technologies will not be liable for consequential damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**For questions or comments regarding this or other products, please call our toll-free number 1-800-888-4491.**

**TIMEX is a registered trademark of Timex Corporation in the U.S. and other countries.**

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>